

GROUP 70

 
COMPONENT  
LOCATIONS

CONTENTS

GROUNDING .....	70-2	INSPECTION TERMINAL.....	70-7
GROUNDING CABLE .....	70-4	SENSOR .....	70-8
FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR .....	70-5	CONTROL UNIT .....	70-12
RELAY .....	70-6	OTHER DEVICES .....	70-14
		SOLENOID AND SOLENOID VALVE	70-15





GROUNDING









M1701000300630




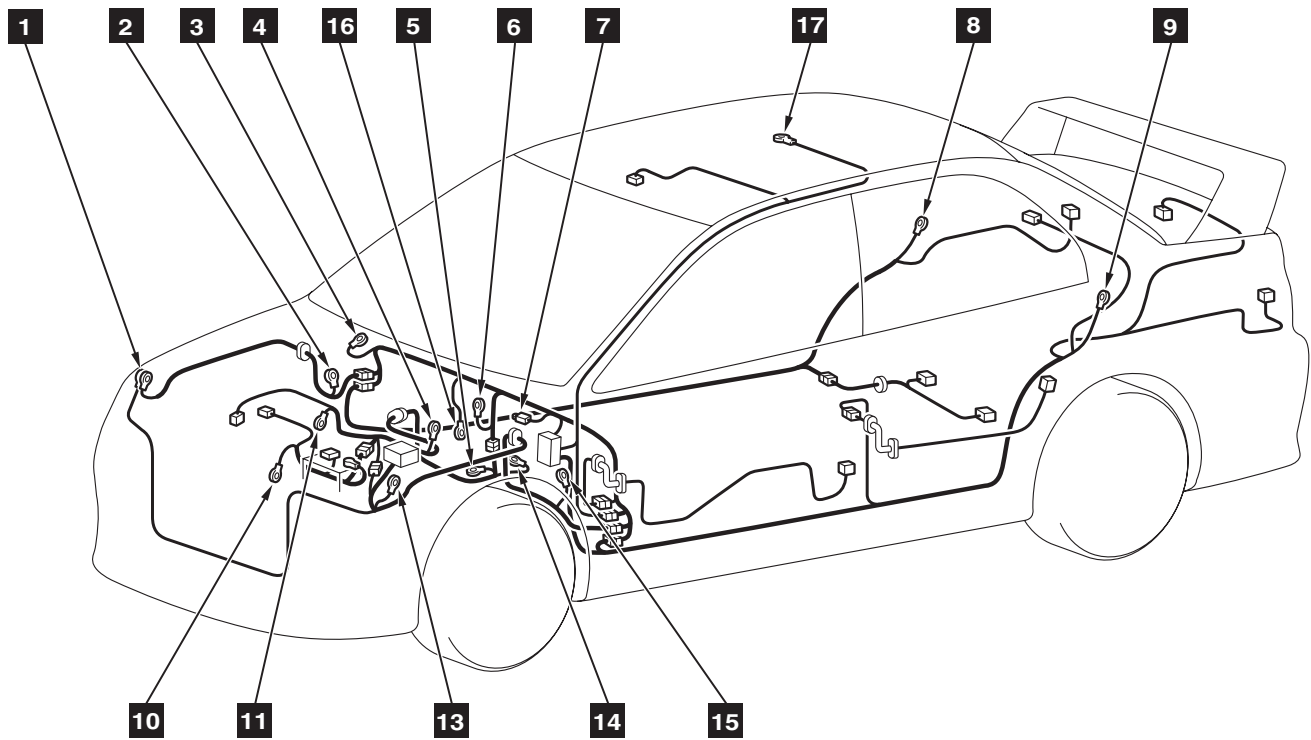


AC208856 AB

                NOTE: Numbers 1 to 17 correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

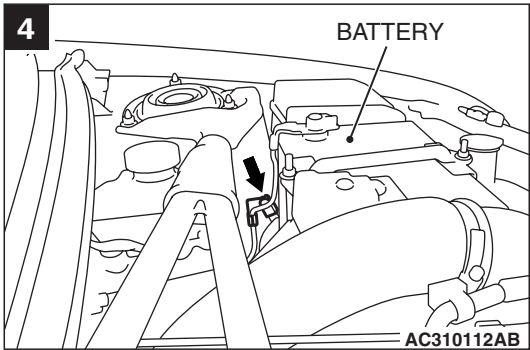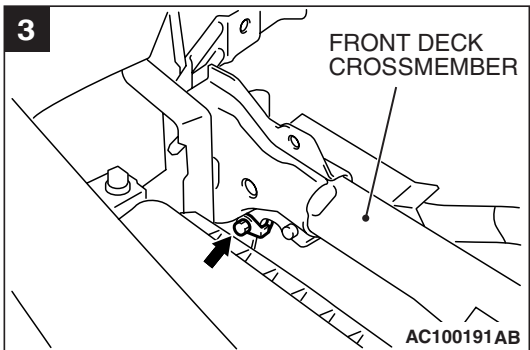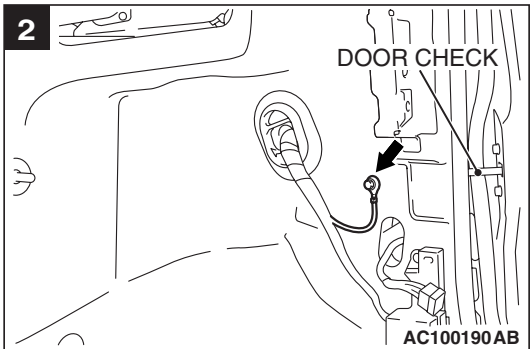
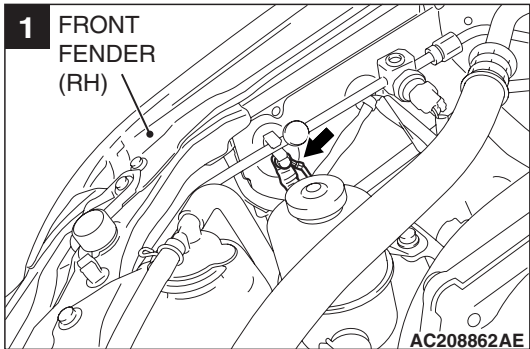


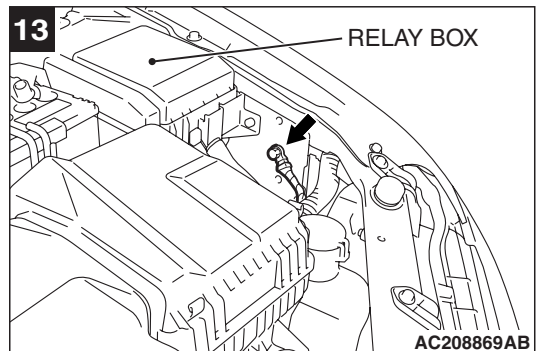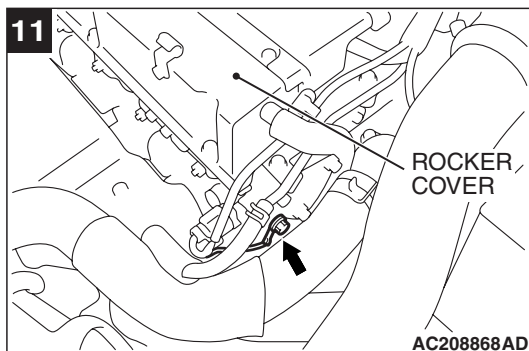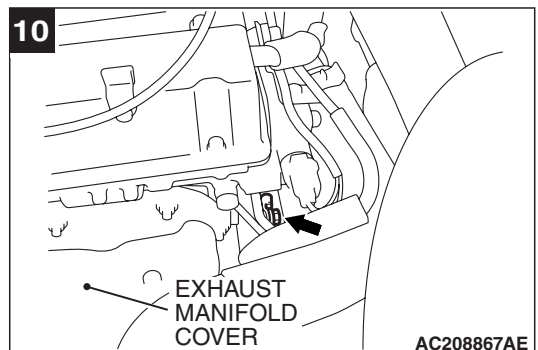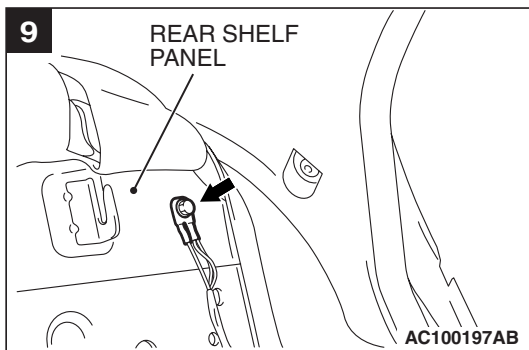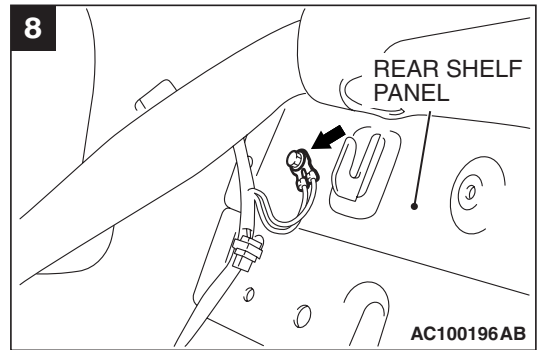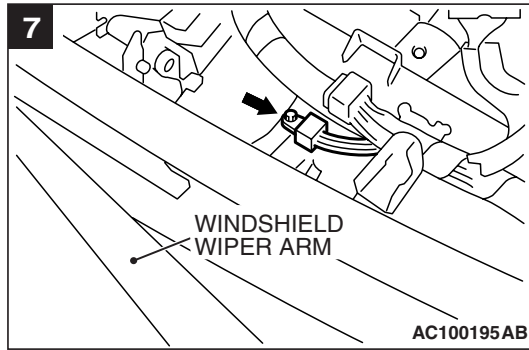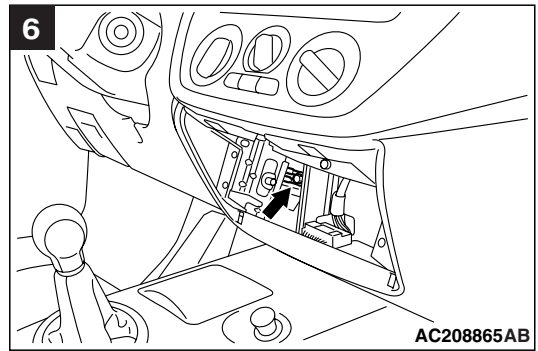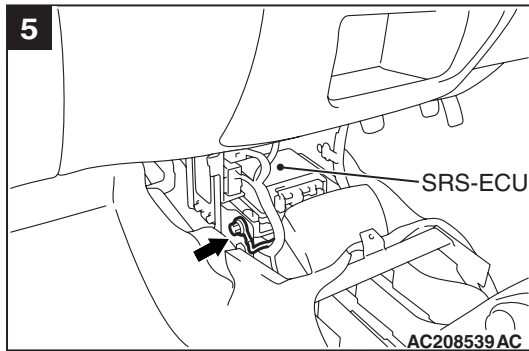

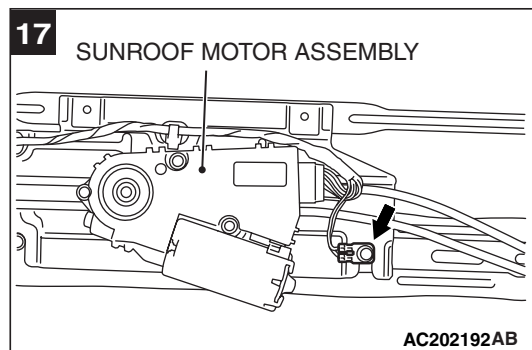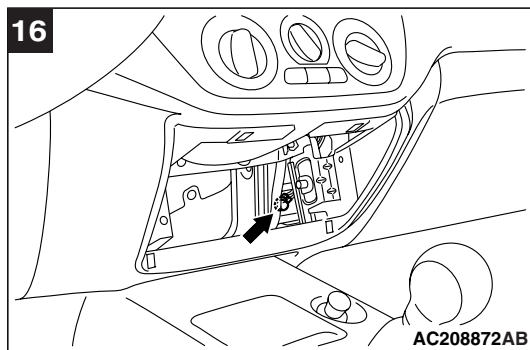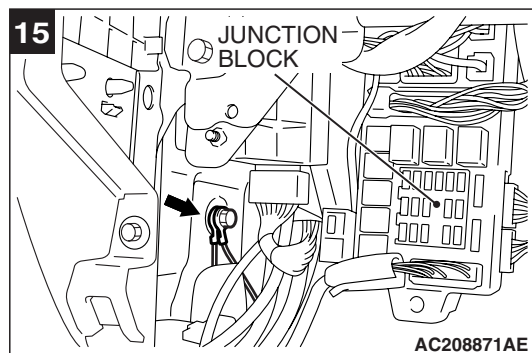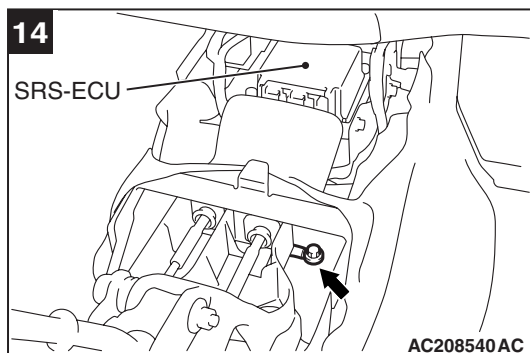

## GROUNDING CABLE

  M1701001000609

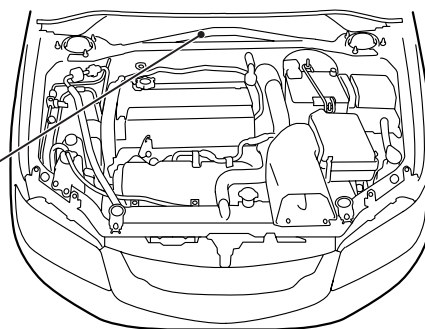
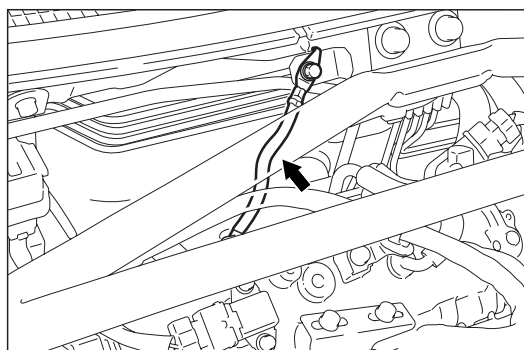


AC504943AB


# FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR

  M1701000100744


NAME	SYMBOL	NAME	SYMBOL
Fuse Nos.1 to 21 (Passenger compartment)	C	Fusible link Nos.26, 27 (Battery positive terminal)	A
Fuse Nos.6 to 25 (Engine compartment)	B	IOD or storage connector	B
Fusible link Nos.1 to 5 (Engine compartment)	B		

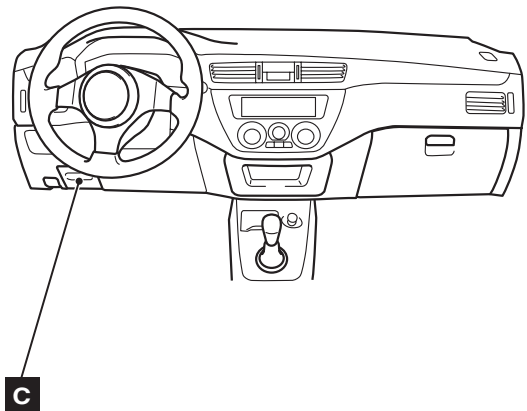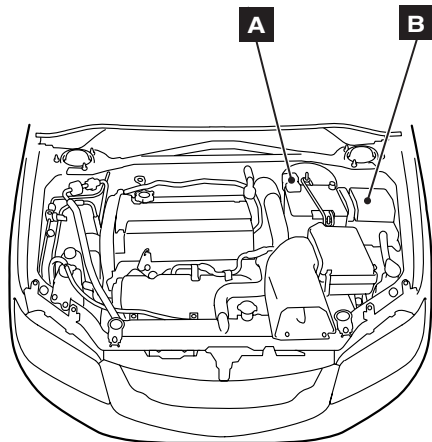


AC502143AB

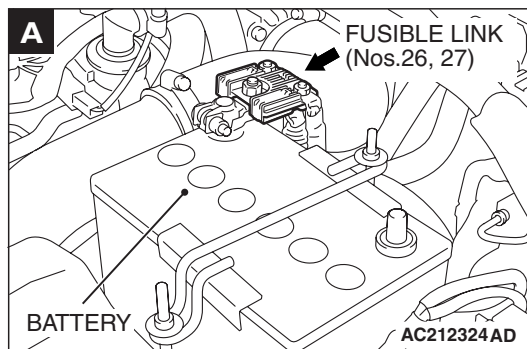 


AC212324AD

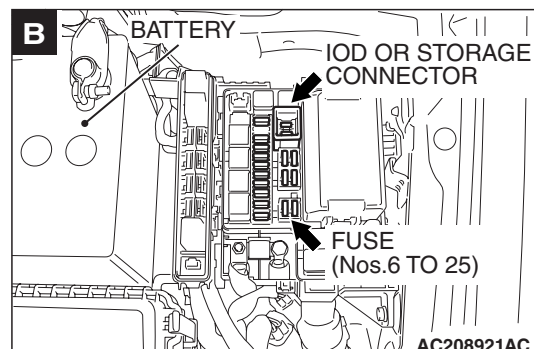 

AC208921AC

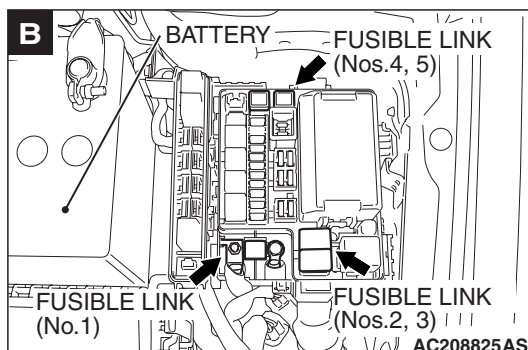 

AC208825AS


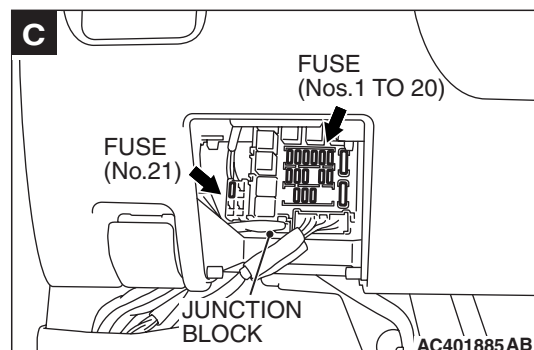 


AC401885AB


M1701000400745

RELAY


NAME	SYMBOL	NAME	SYMBOL
A/C compressor clutch relay	B	Fuel pump relay (2)	C
Blower relay	C	Fuel pump relay (3)	A
Condenser fan control relay (HIGH)	B	Horn relay	B
Condenser fan control relay (LOW)	B	MFI relay	B
Electric pump relay	A	Power window relay	C
Fan control relay	B	Rear window defogger relay	C
Fog light relay	B	Starter relay	B
Fuel pump relay (1)	C		

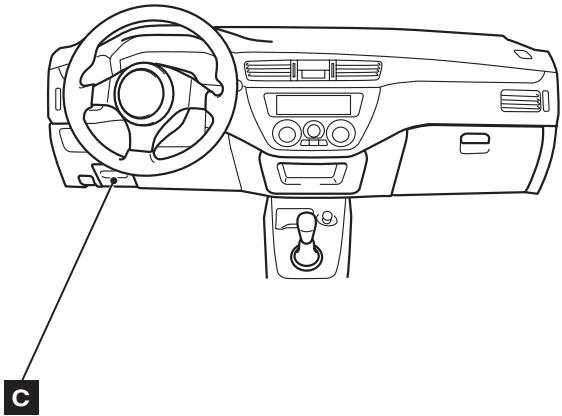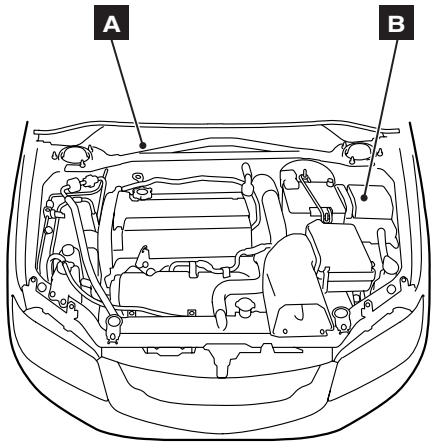  


AC502143AC

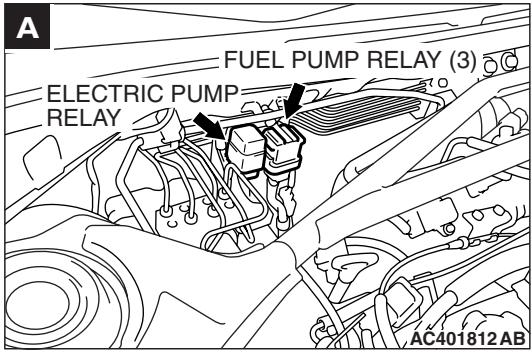 

AC401812AB

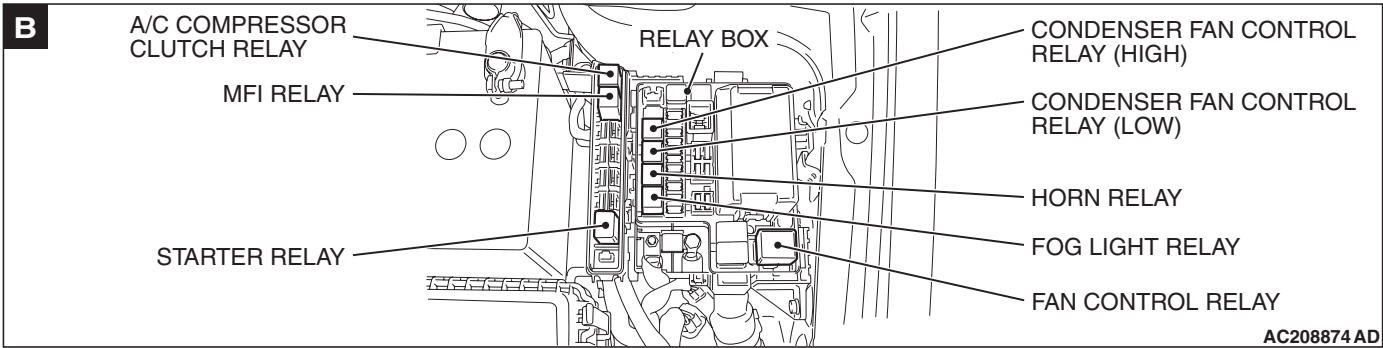 



AC208874AD

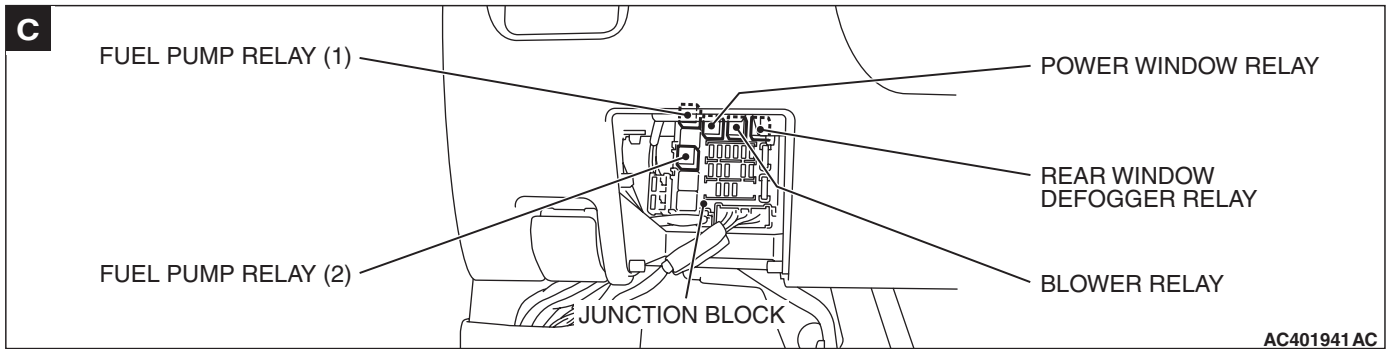 



## INSPECTION TERMINAL

M1701000200655

  NAME	SYMBOL	NAME	SYMBOL
Data link connector	B	Engine speed detection connector	A

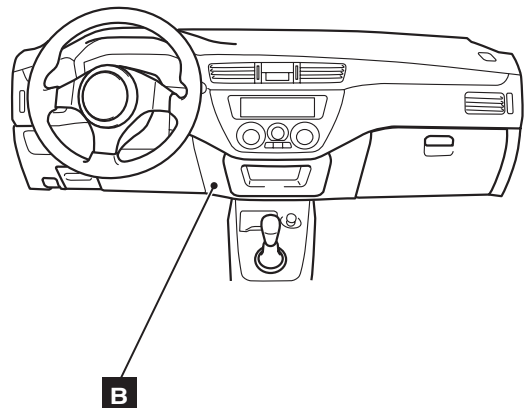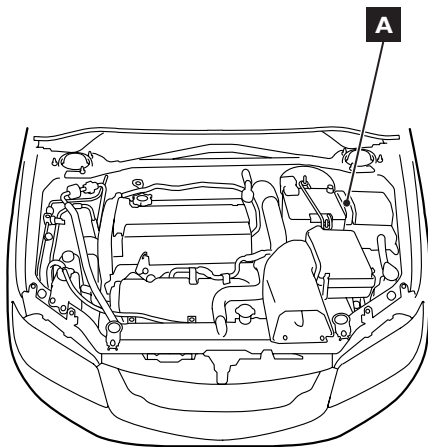

AC502143AD

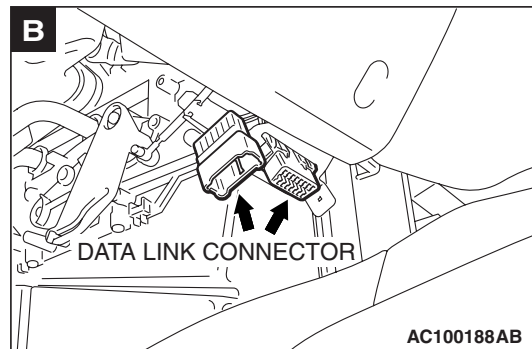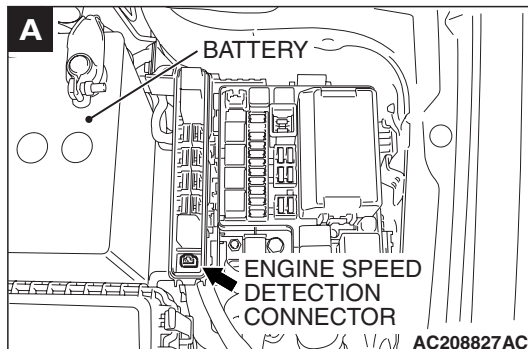  




SENSOR

M1701000600891







NAME	SYMBOL	NAME	SYMBOL
ABS sensor (front)	O	G-sensor (longitudinal)	M
ABS sensor (rear)	Q	Heated oxygen sensor (front)	G
Air thermo sensor	N	Heated oxygen sensor (rear)	P
Crankshaft position sensor	A	Intake camshaft position sensor	H
Engine coolant temperature sensor	E	Knock sensor	C
Exhaust camshaft positin sensor	H	Manifold absolute pressure sensor	B
Front impact sensor	J	Pressure sensor	K
Fuel level sensor (sub)	R	Steering angular velocity sensor	L
Fuel pump and level sensor (main)	R	Throttle position sensor	D
Fuel tank differential pressure sensor	R	Vehicle speed sensor	F
Fuel tank temperature sensor	R	Volume airflow sensor	I
G-sensor (lateral)	M		

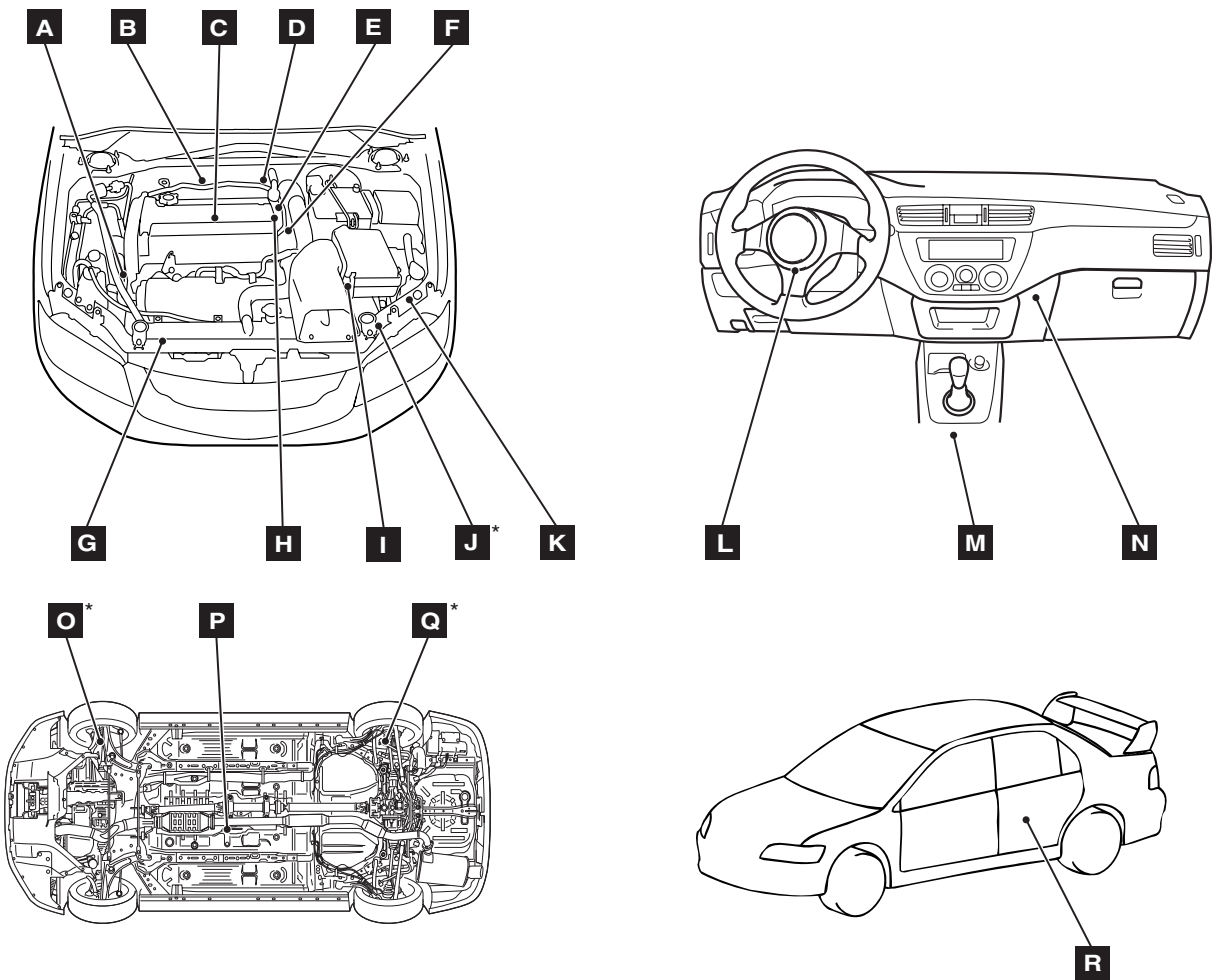 

AC502162AB

     
 
NOTE: The \* symbols indicate that the components is also equipped at the right side.



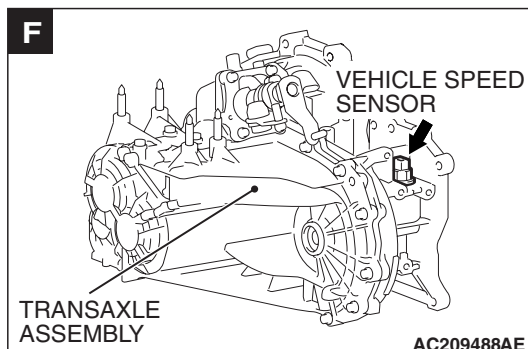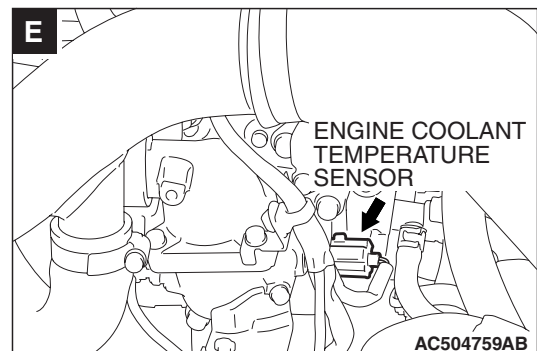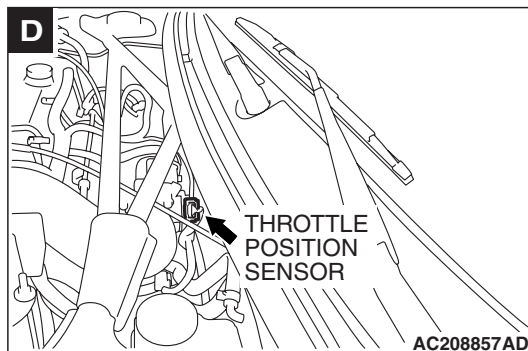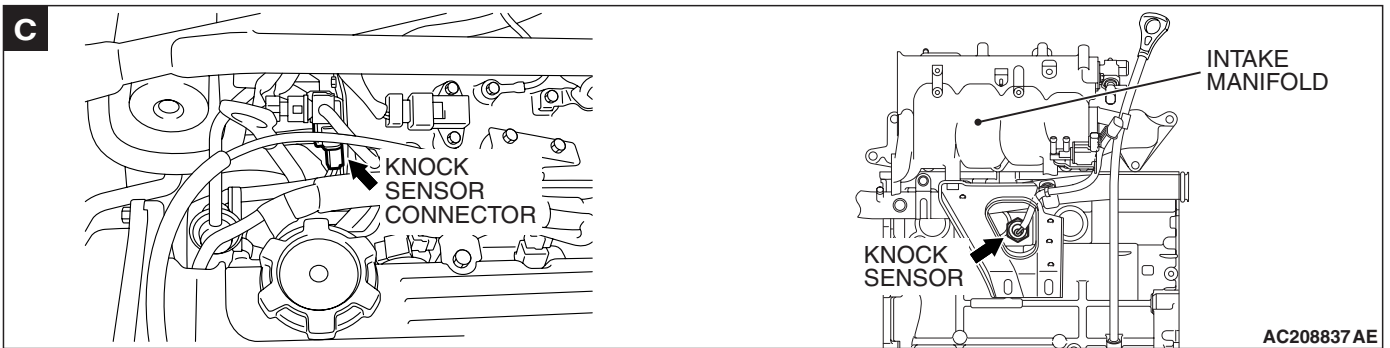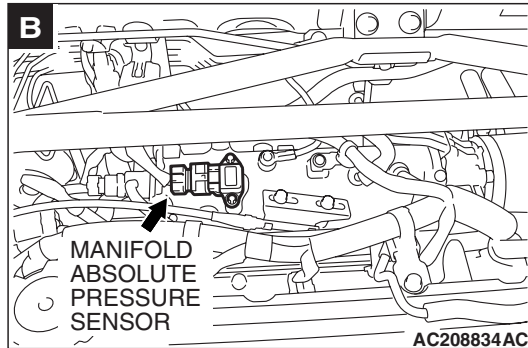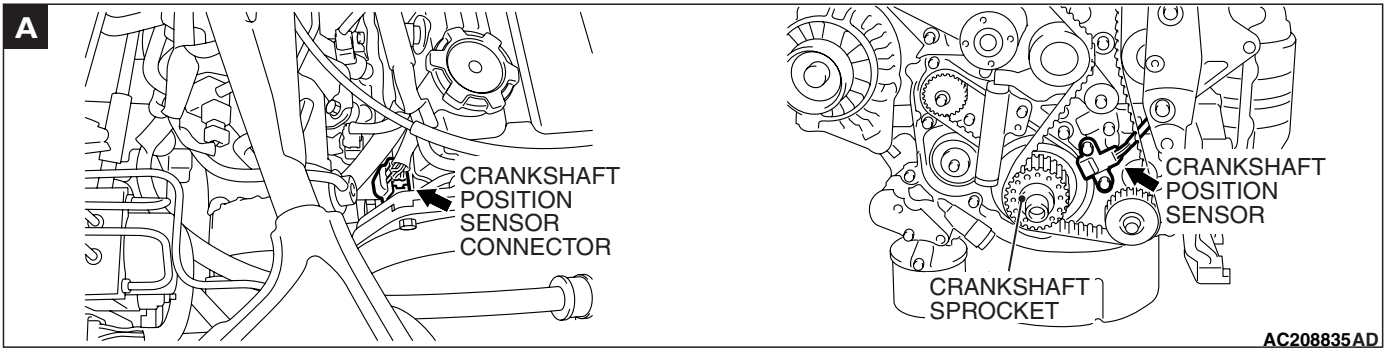

**G**

  HEATED OXYGEN  
SENSOR (FRONT)  
CONNECTOR

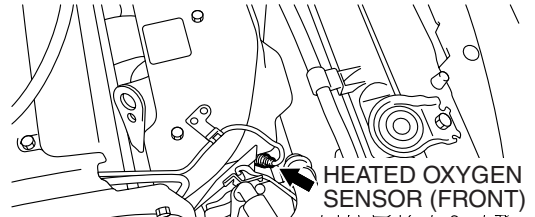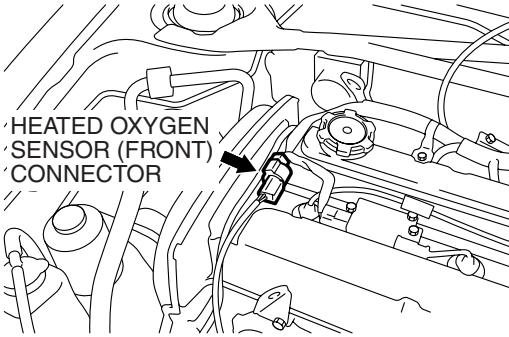


AC208841AF


**H**

 INTAKE CAMSHAFT  
POSITION SENSOR

EXHAUST CAMSHAFT  
POSITION SENSOR

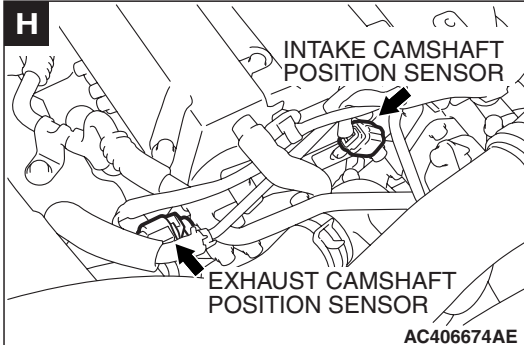

AC406674AE

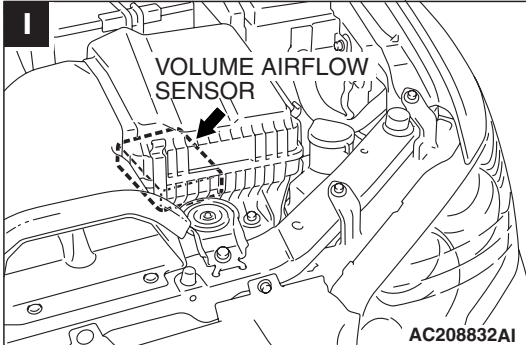 


AC208832AI


**J**

 BATTERY

FRONT IMPACT  
SENSOR

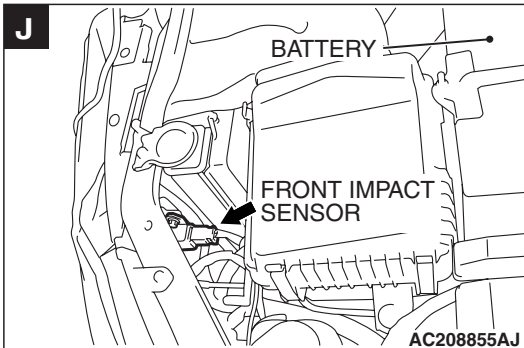


AC208855AJ

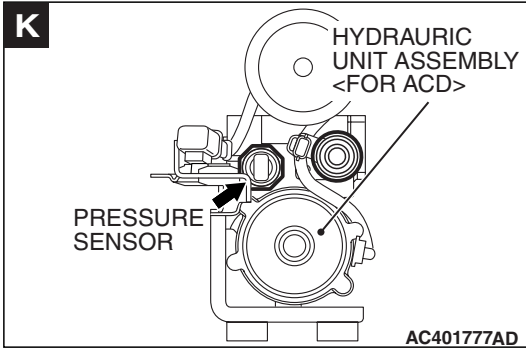 

AC401777AD

**L**

 STEERING  
ANGULAR  
VELOCITY  
SENSOR

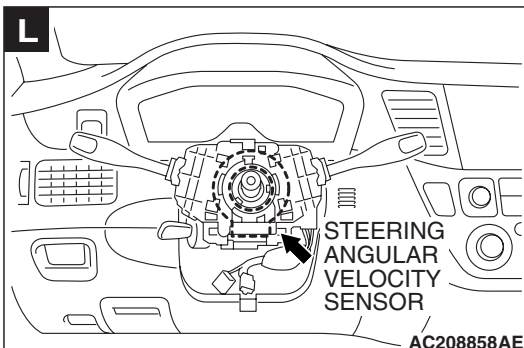


AC208858AE

**M**





 
PARKING BRAKE  
LEVER

G-SENSOR  
(LATERAL)

G-SENSOR  
(LONGITUDINAL)

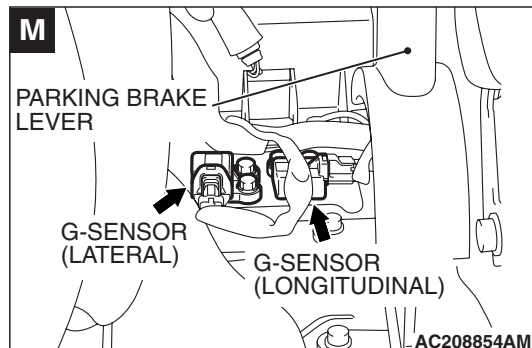


AC208854AM

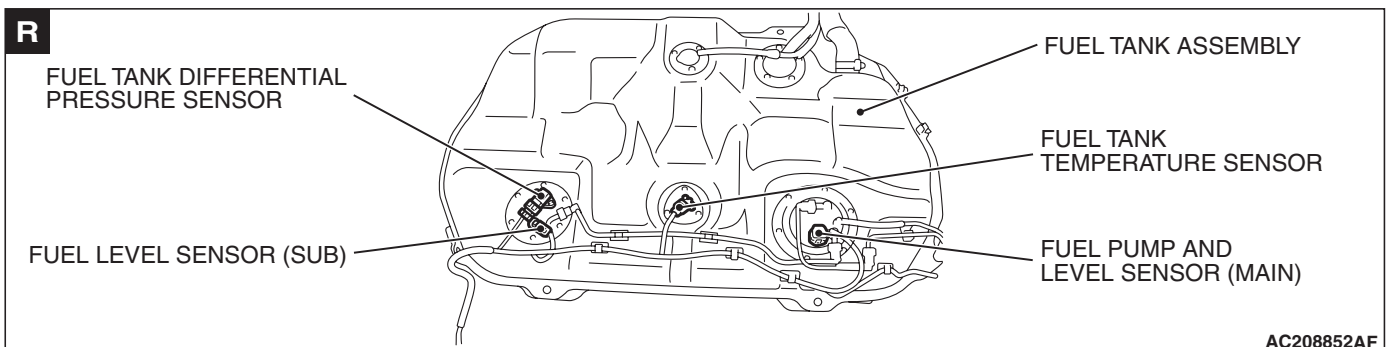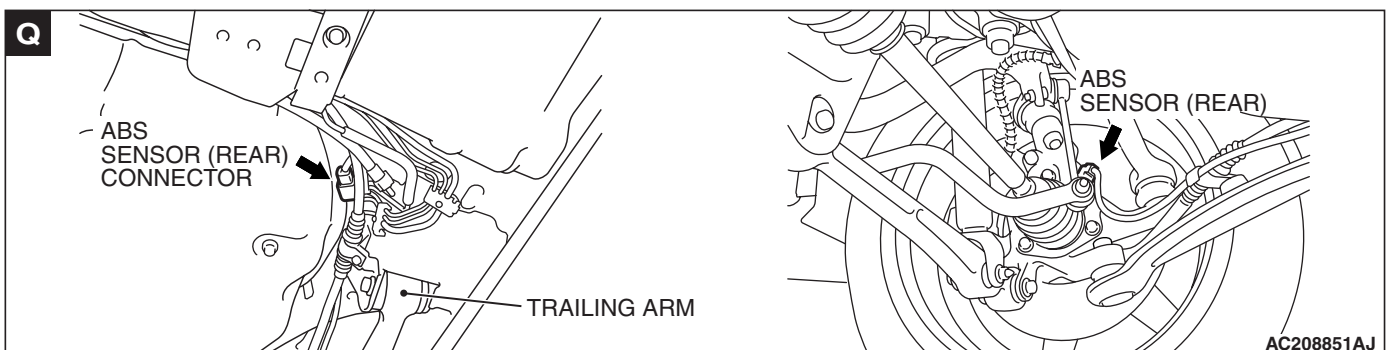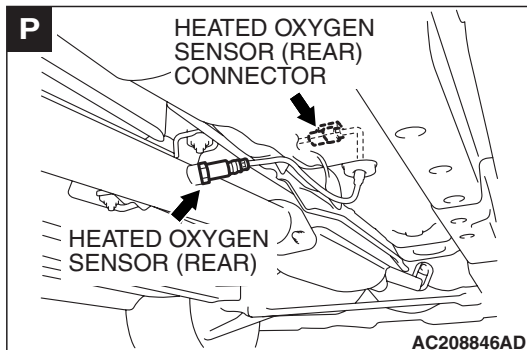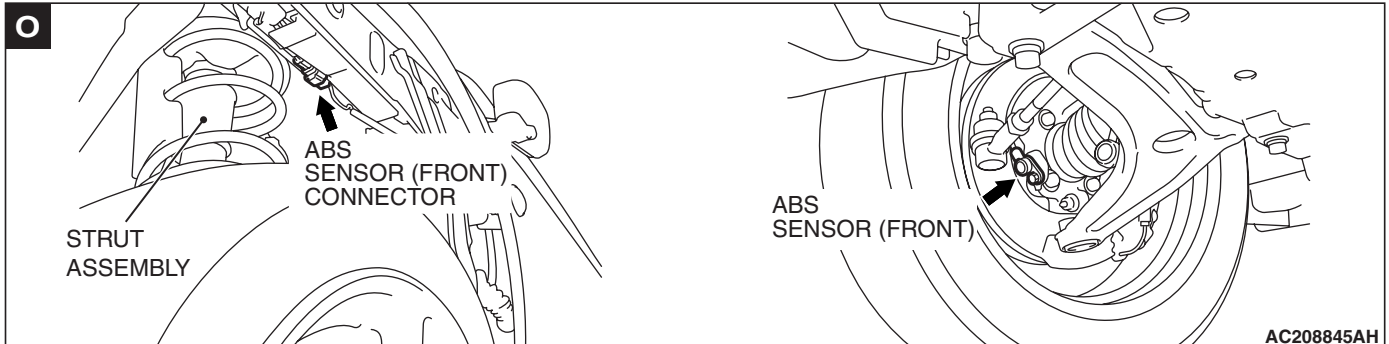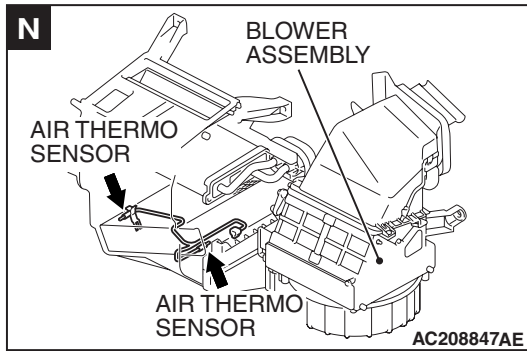     

CONTROL UNIT









M1701000700586





NAME	SYMBOL	NAME	SYMBOL
ABS-ECU	A	Headlight assembly (Incorporating discharge controller) <Discharge type headlight>	D
AWD-ECU	K		
Column switch (Incorporating column-ECU in wiper switch)	E	Heater control	G
Engine control module	J	Immobilizer-ECU	F
ETACS-ECU	H	SRS-ECU	I
Fan control module	C	Sunroof motor assembly (Incorporating ECU)	L
Front-ECU	B		

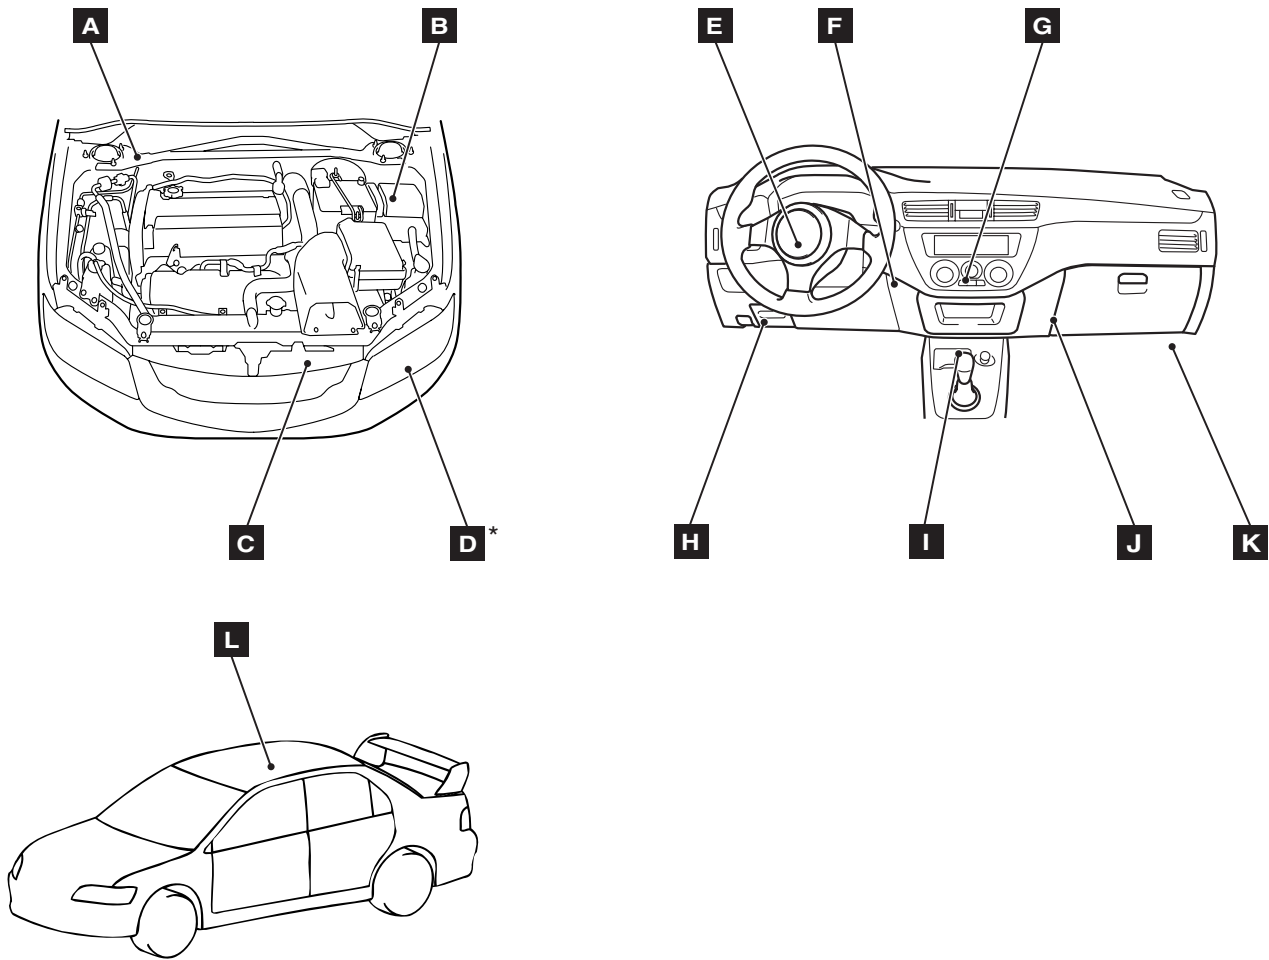 

AC502164AB

            NOTE: The \* symbols indicate that the components is also equipped at the right side.

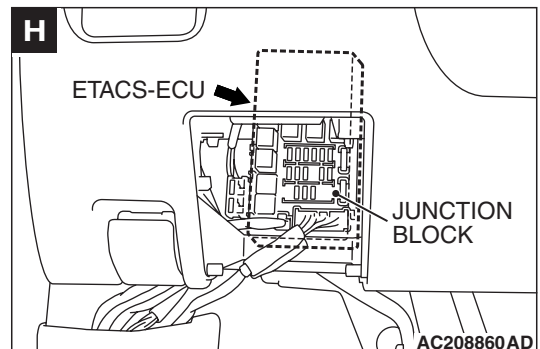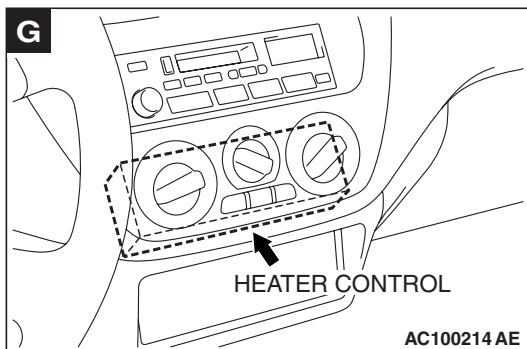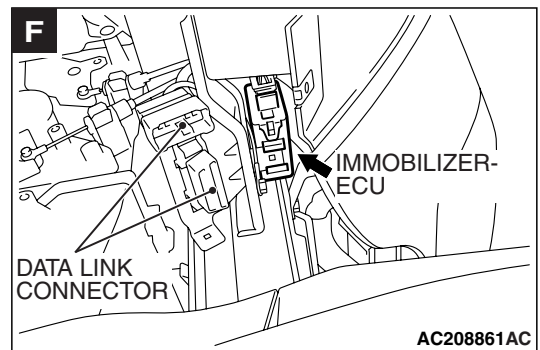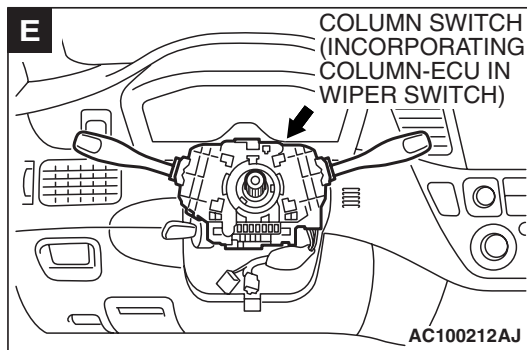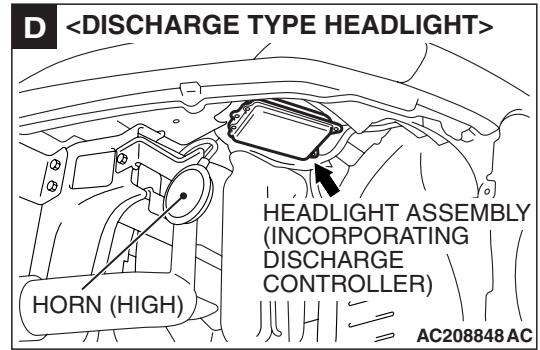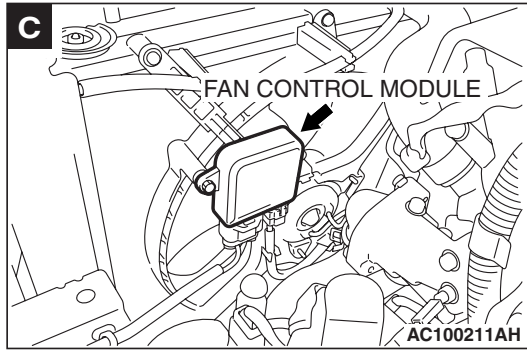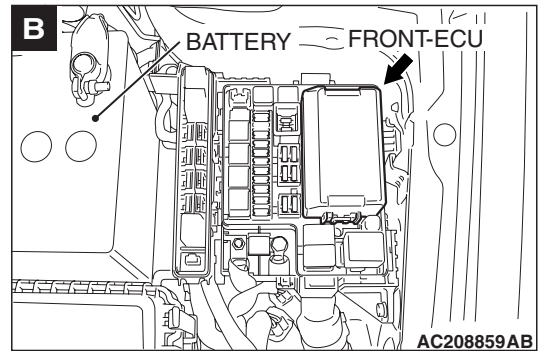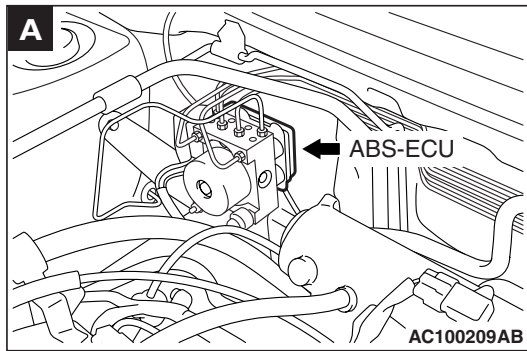


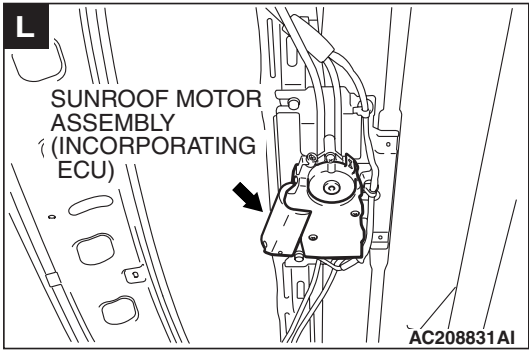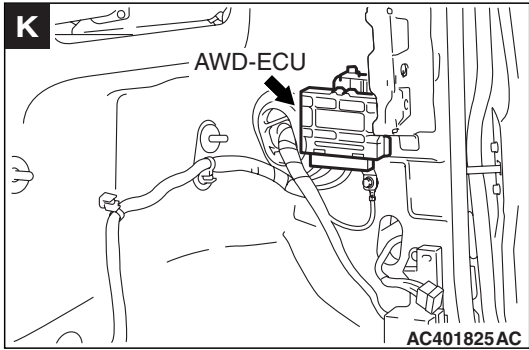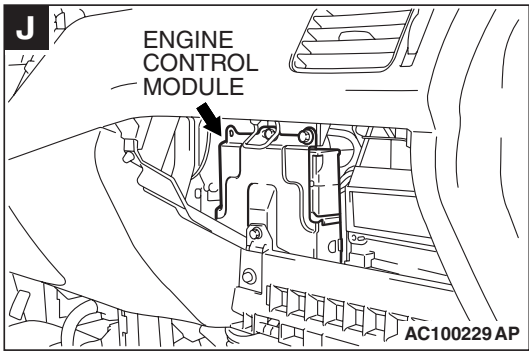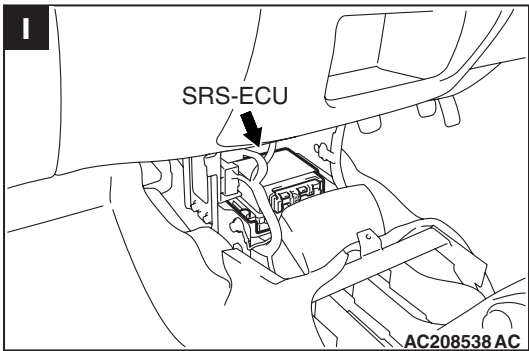

OTHER DEVICES





M1701005600432

NAME	SYMBOL	NAME	SYMBOL
A/C refrigerant temperature switch	D	Idle air control motor	B
Dual pressure switch	A	Power steering pressure switch	C

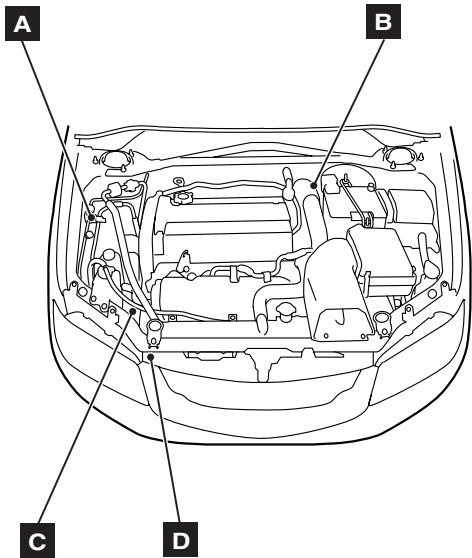 

AC502165AB




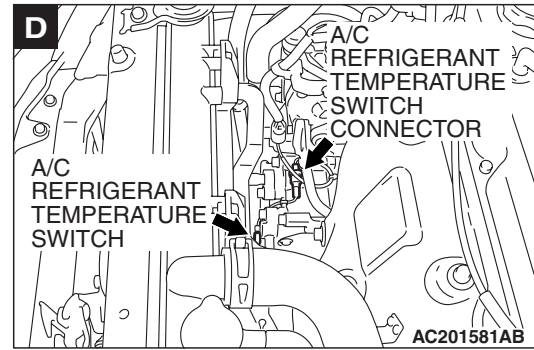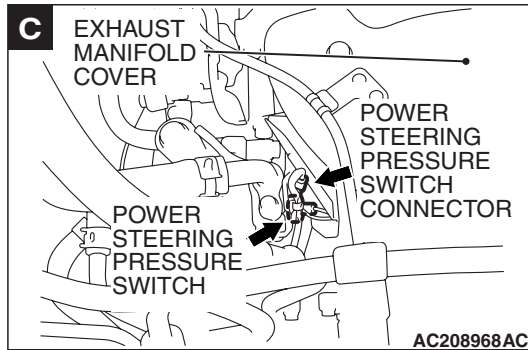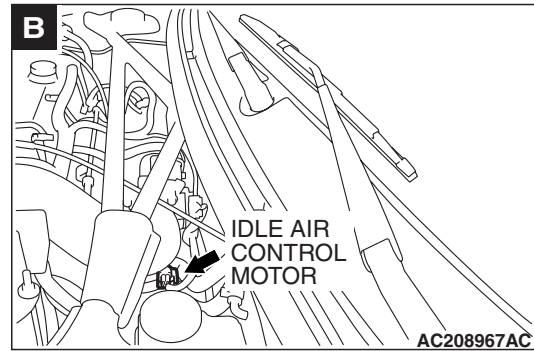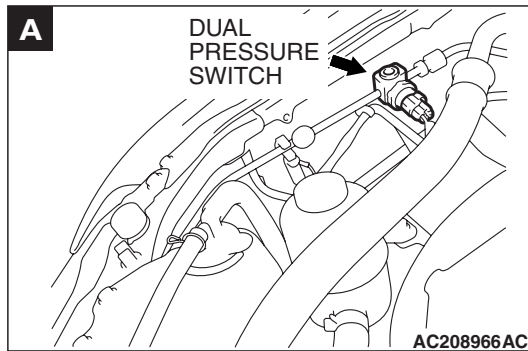    

## SOLENOID AND SOLENOID VALVE

M1701000800754

 NAME	SYMBOL	NAME	SYMBOL
EGR vacuum regulator solenoid valve	D	Hydraulic unit <for ABS (incorporating solenoid valve)>	B
Evaporative emission purge solenoid	C	Hydraulic unit assembly <for ACD (incorporating solenoid valve)>	F
Evaporative emission ventilation solenoid	G	Oil feeder control valve	A
Fuel pressure solenoid	C	Turbocharger wastegate solenoid	E

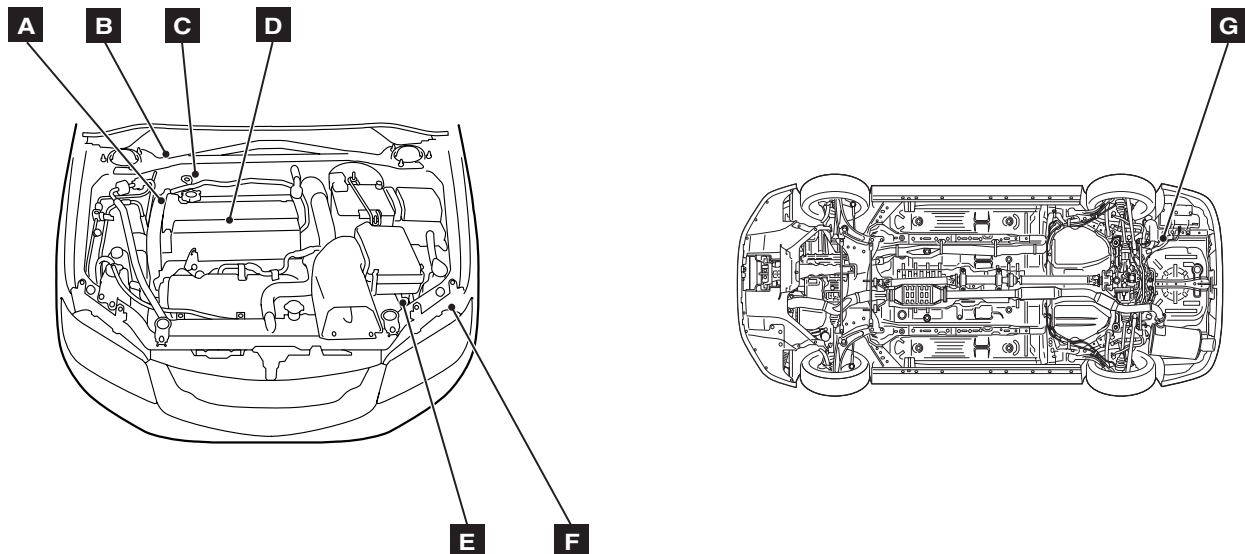

AC502166AB



