

GROUP 70

COMPONENT LOCATIONS

 
 
CONTENTS

FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR	70-2	INSPECTION TERMINAL.....	70-8
GROUNDING CABLE	70-3	SENSOR	70-8
GROUNDING	70-4	CONTROL UNIT	70-14
RELAY	70-6	OTHER DEVICES	70-18
		SOLENOID AND SOLENOID VALVE	70-17





FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR


M1701000100380

NAME	SYMBOL	NAME	SYMBOL
Fuses No.1 to 24 (Passenger compartment)	C	Fusible link No.27 (Engine compartment)	A
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.1 to 5 (Engine compartment)	B
		IOD or storage connector	B

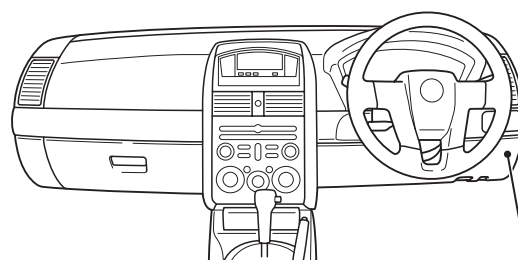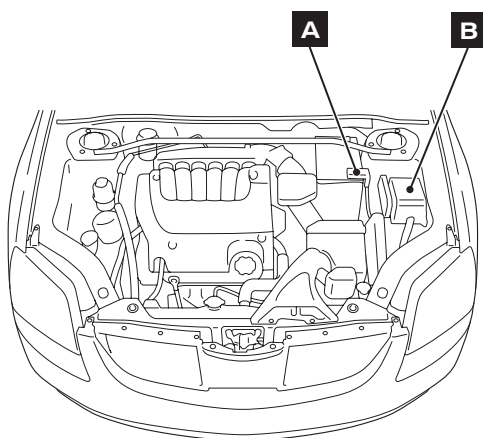


35DB063A

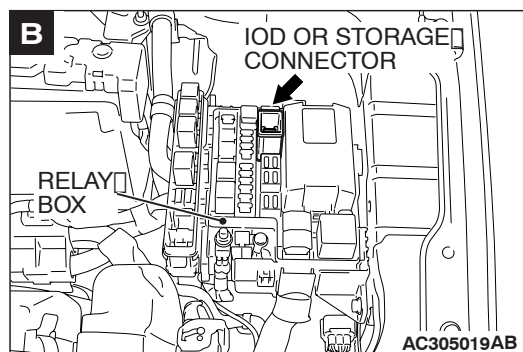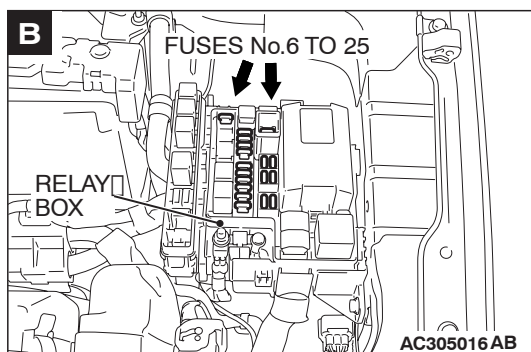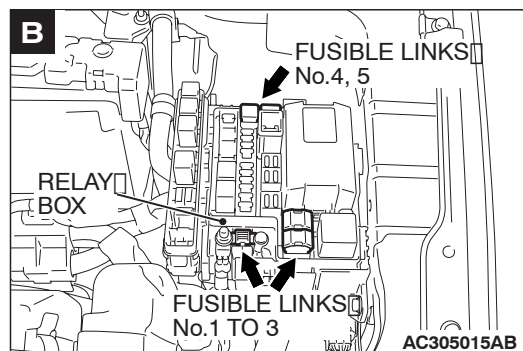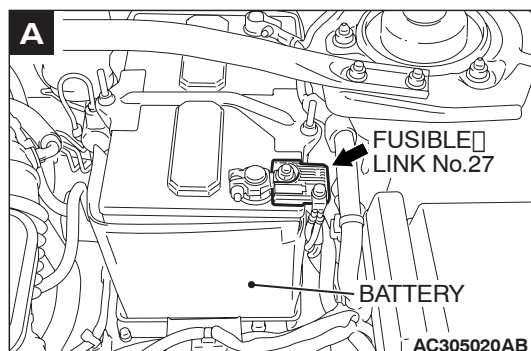    

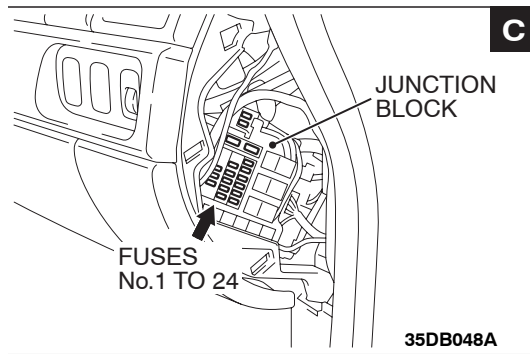 


GROUNDING CABLE

 M1701001000319

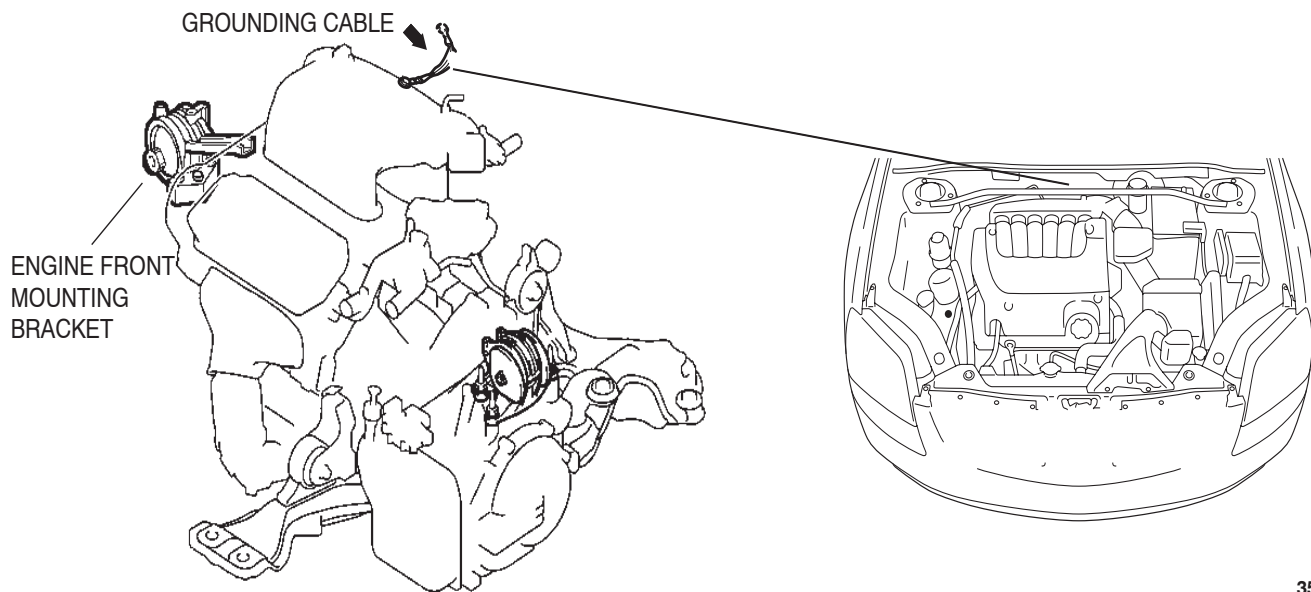



GROUNDING








 
M1701000300522



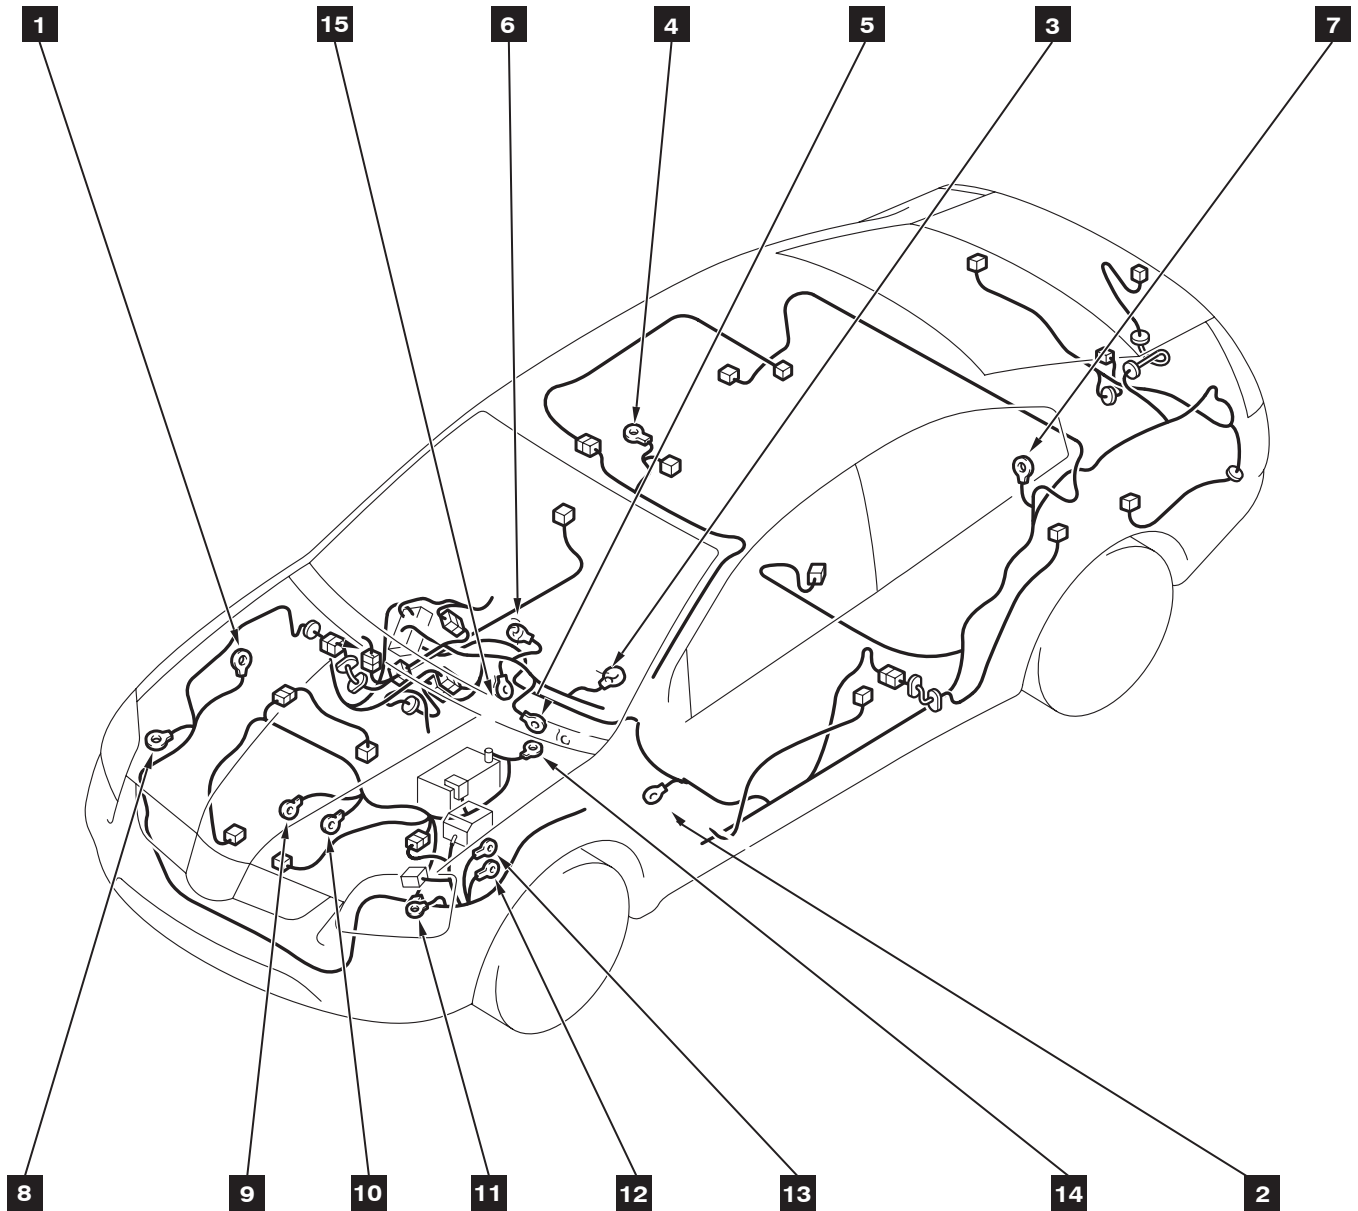


35DB066A

             NOTE: 1 to 15 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

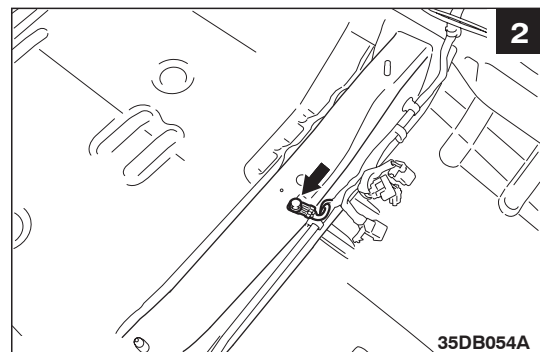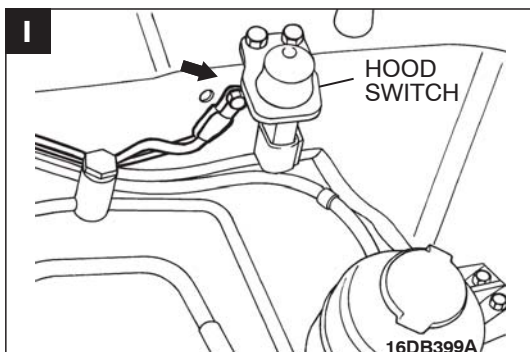

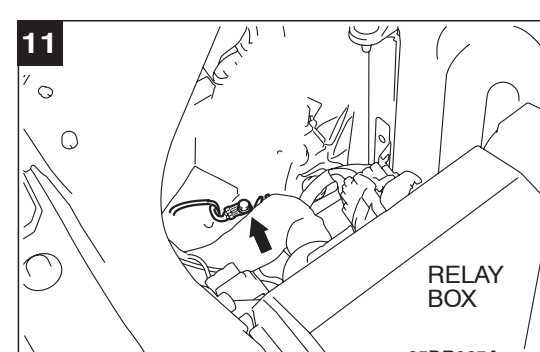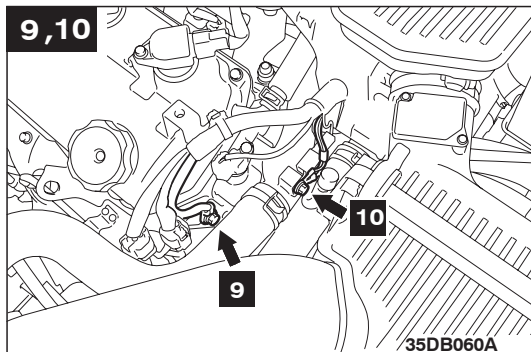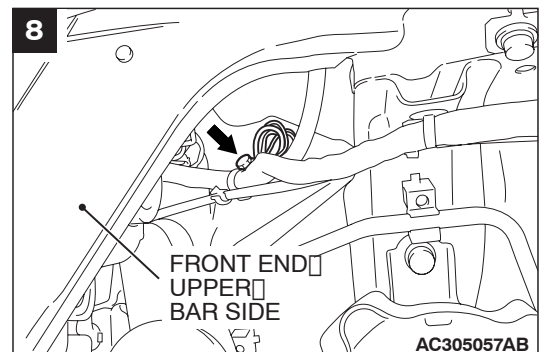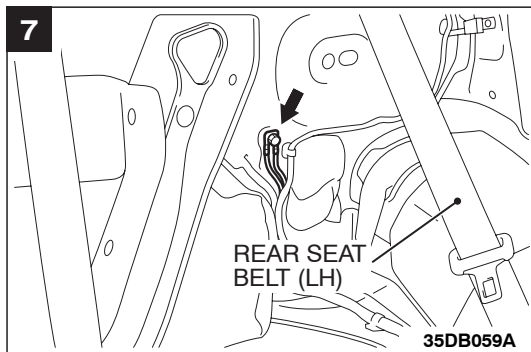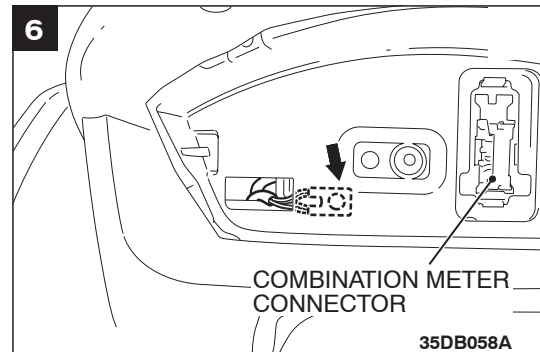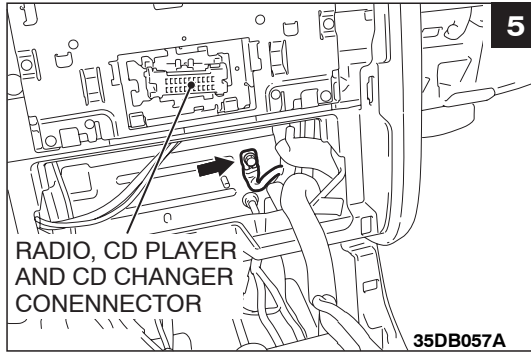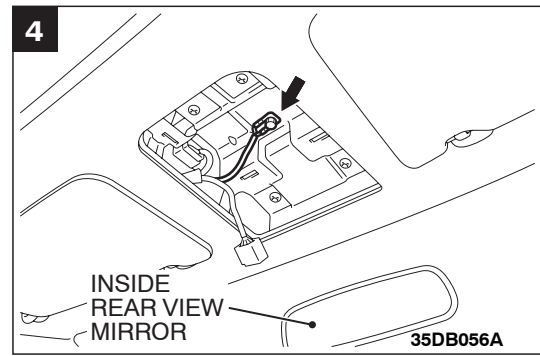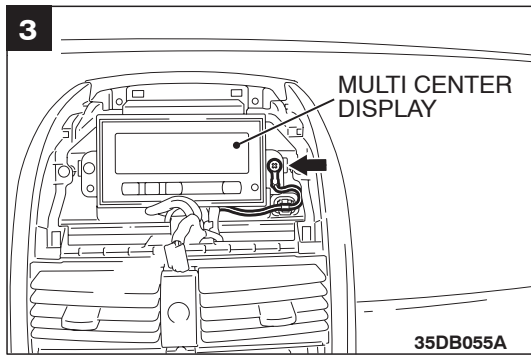


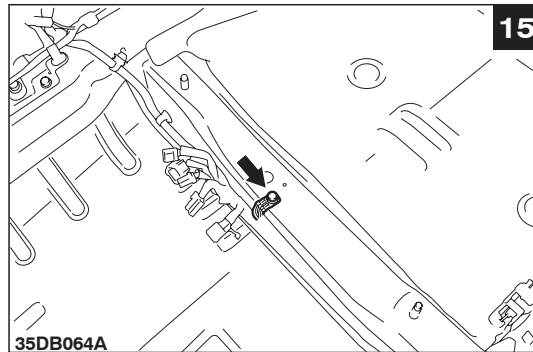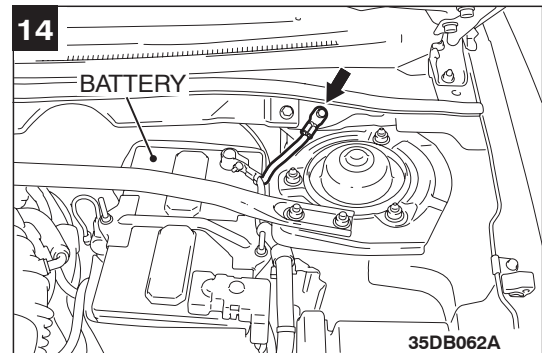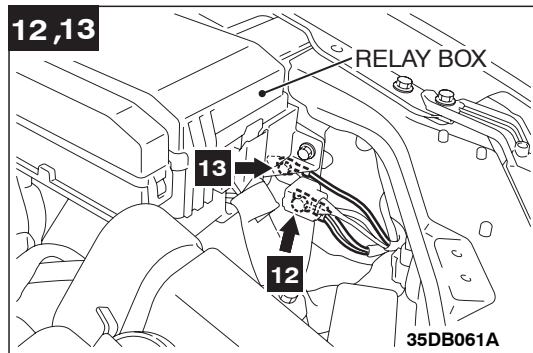


RELAY

M1701000400381


NAME	SYMBOL	NAME	SYMBOL
A/C compressor clutch relay	A	Fuel pump relay (2)	C
A/T control relay	A	Horn relay	A
Accessory socket relay	C	Rear window defogger relay	C
Blower relay	C	MPI relay	A
Fan control relay	A	Power window relay	C
Fog Lamp relay	A	Rear window defogger relay	C
Fuel pump relay (1)	C		

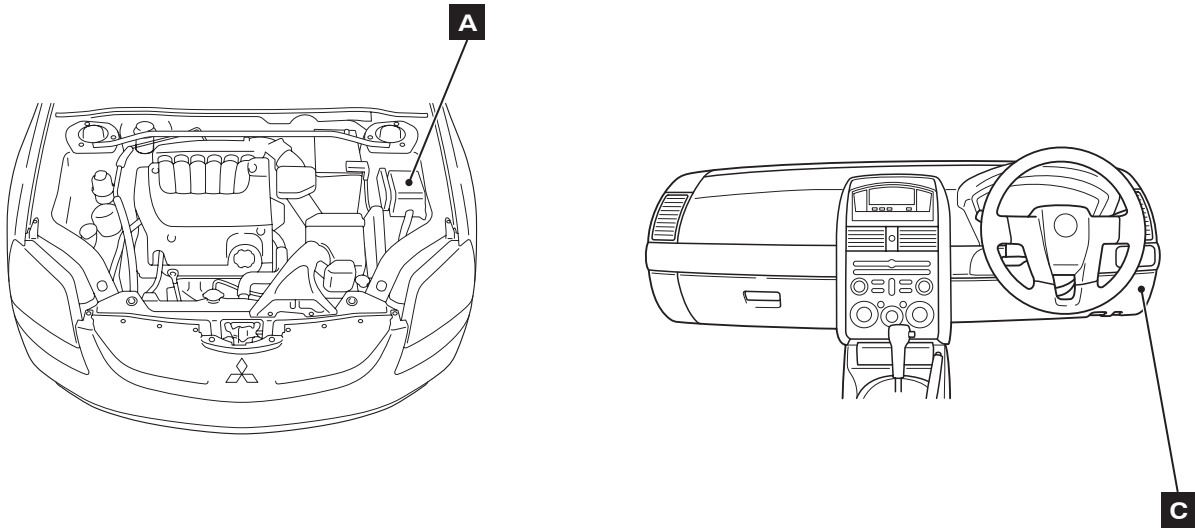 

35DB067A

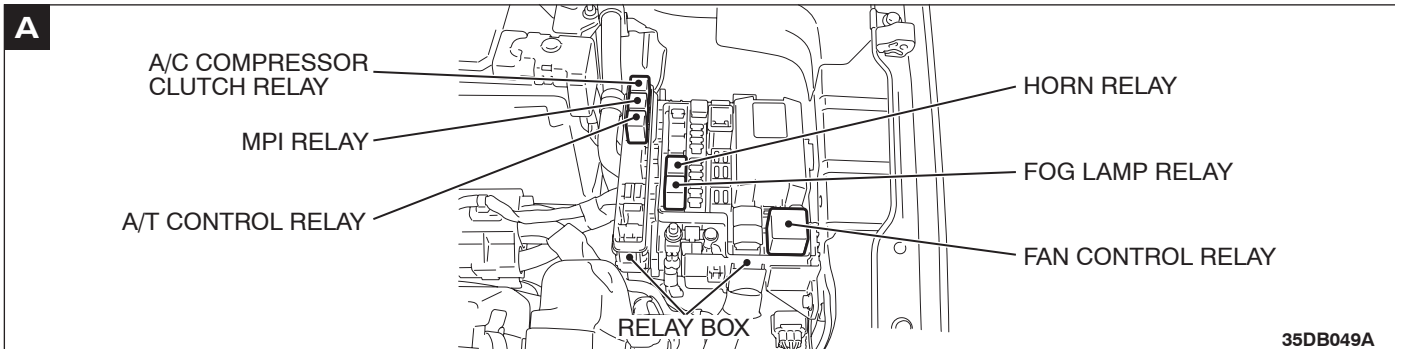 


35DB049A

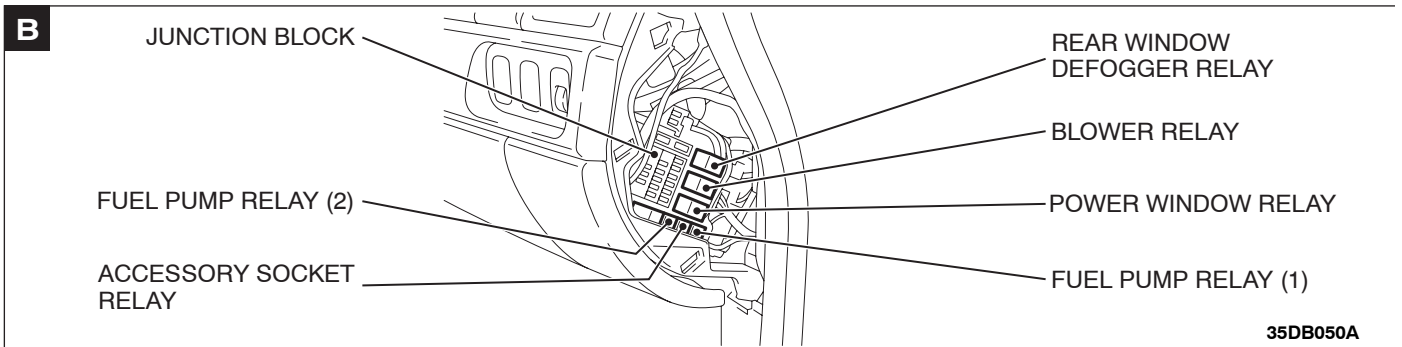 

35DB050A

INSPECTION TERMINAL

 M1701000200354

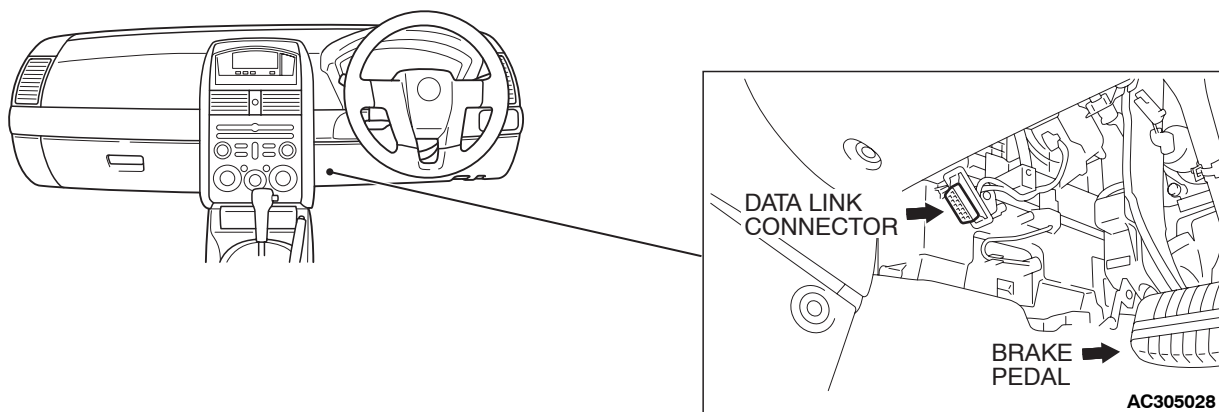

35DB051A



SENSOR

M1701000600415

NAME	SYMBOL	NAME	SYMBOL
A/C pressure sensor	I	Interior temperature sensor <Automatic A/C>	S
A/T control solenoid valve assembly (Incorporating transmission fluid temperature sensor)	N	Knock sensor	C
Accelerator pedal position sensor	R	Left bank heated oxygen sensor (front) <3.8L Engine>	P
Air thermo sensor	T	Left bank heated oxygen sensor (rear) <3.8L Engine>	P
Ambient temperature sensor	L	Manifold absolute pressure sensor	B
Camshaft position sensor	D	Mass airflow sensor	G
Crankshaft position sensor	A	Sunroof assembly (Incorporating pulse sensor)	U
Fuel pump module (Incorporating fuel level sensor (main) and fuel tank temperature sensor)	W	Output shaft speed sensor	H
Fuel level sensor (sub)	V	Photo sensor <Automatic A/C>	Q
		Right bank heated oxygen sensor (front) <3.8L Engine>	O
Input shaft speed sensor	K	Right bank heated oxygen sensor (rear) <3.8L Engine>	O


NAME	SYMBOL	NAME	SYMBOL
Engine coolant temperature sensor	F	Throttle body assembly (Incorporating throttle position sensor)	E
Front impact sensor	M	Wheel speed sensor (front) <ABS>	Y
Side impact sensor <Side air bag>	a	Wheel speed sensor (rear) <ABS>	b






 
 
<3.8L ENGINE>





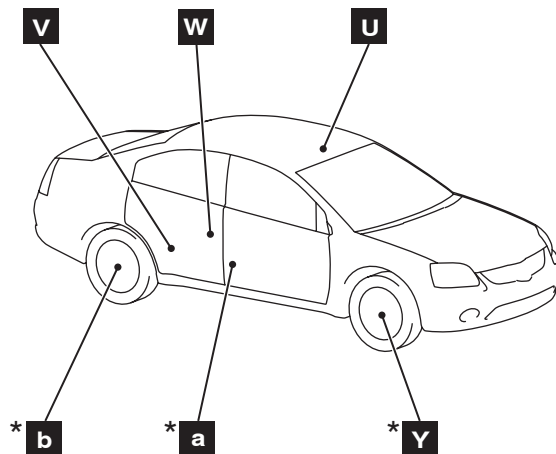
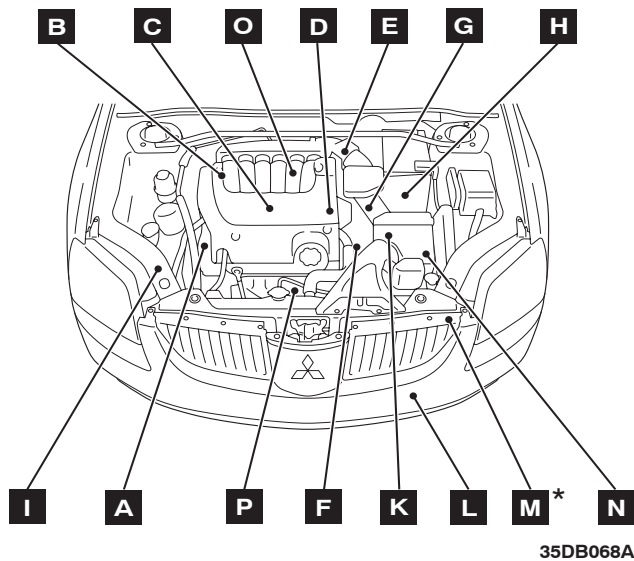







35DB052A

                   NOTE: The * symbols indicate equipped at both sides.

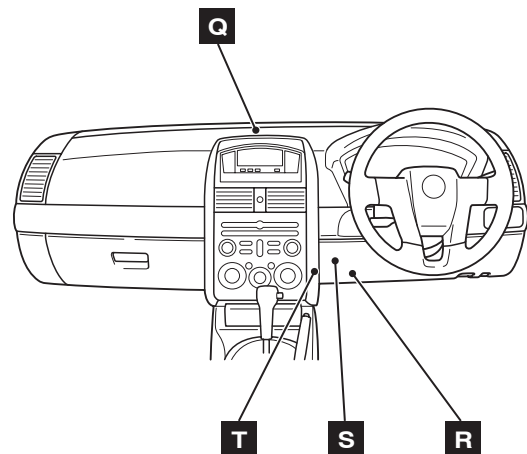

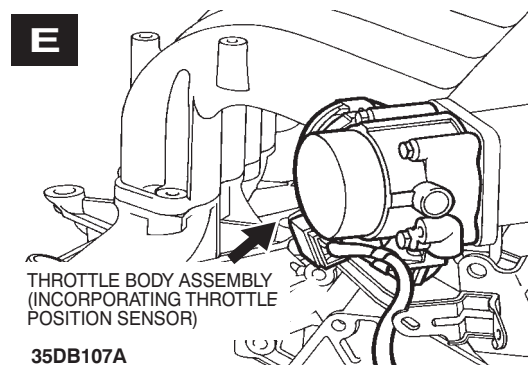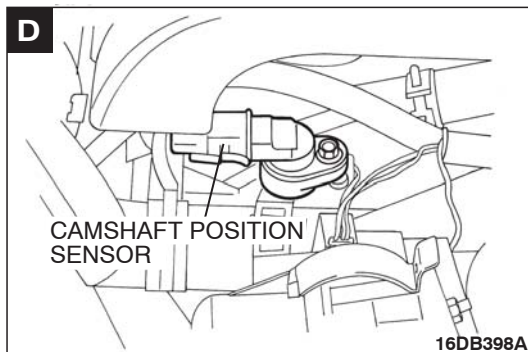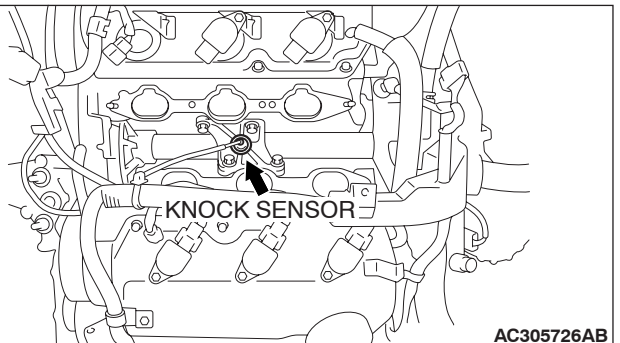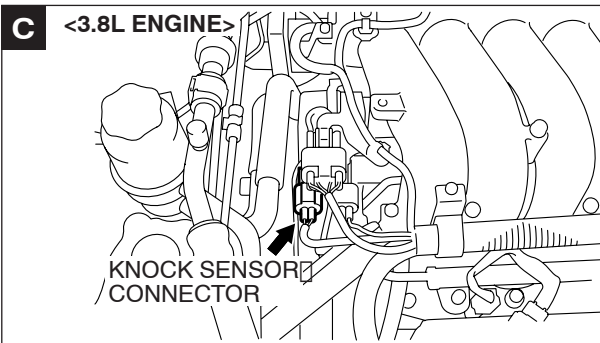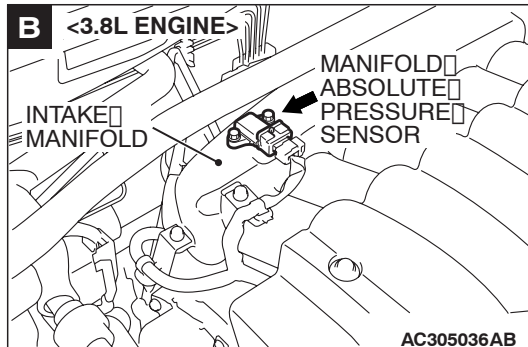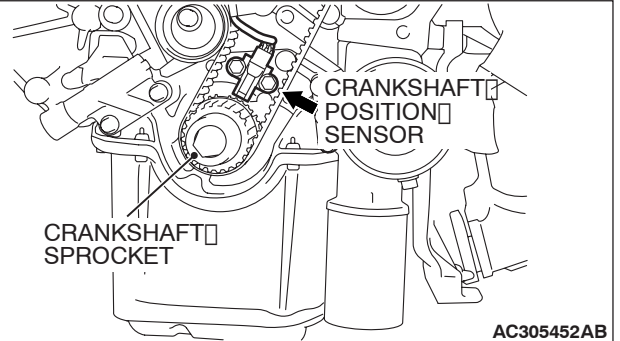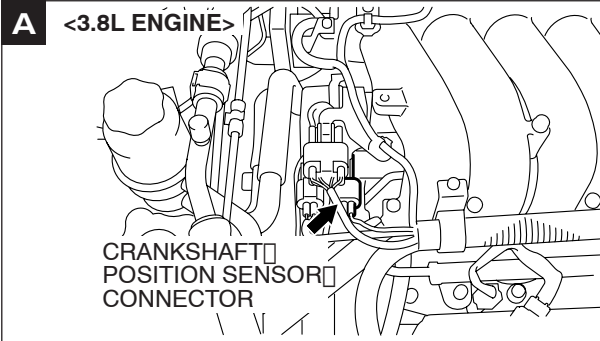


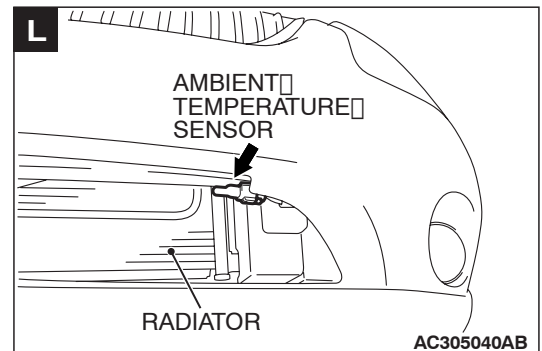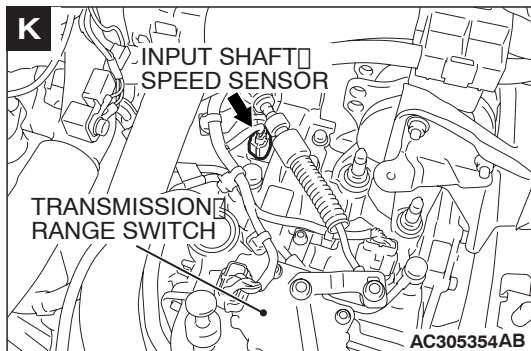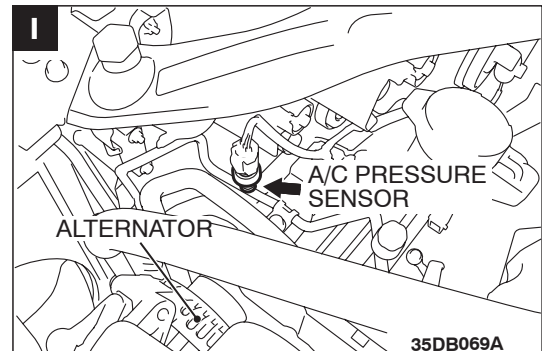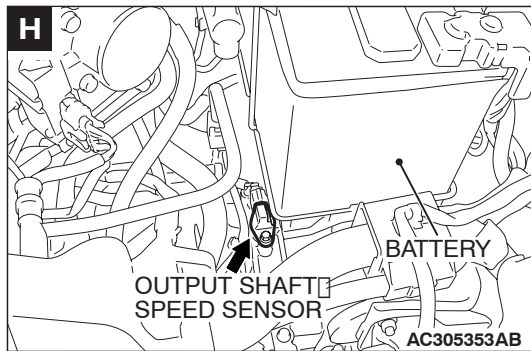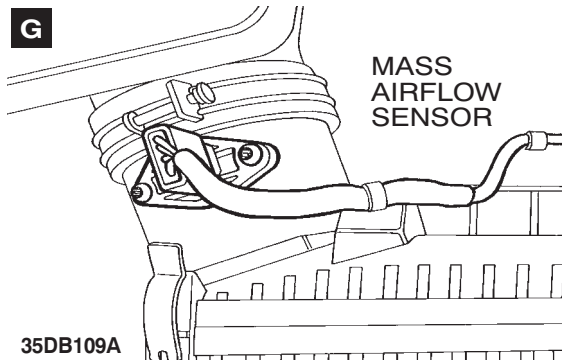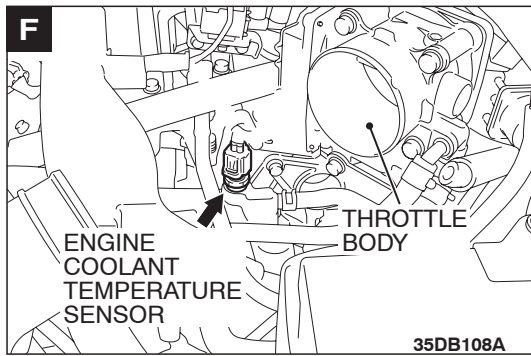

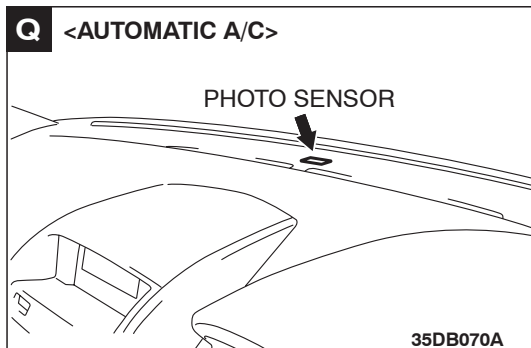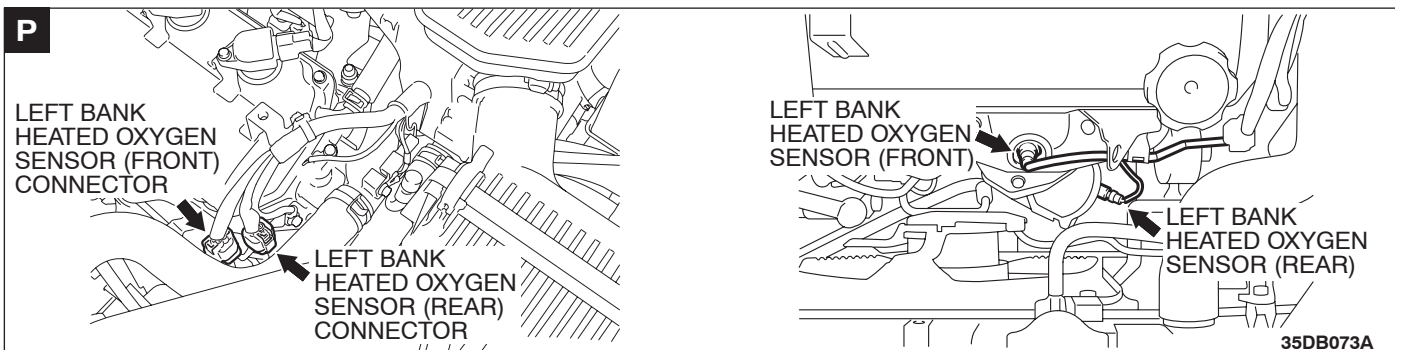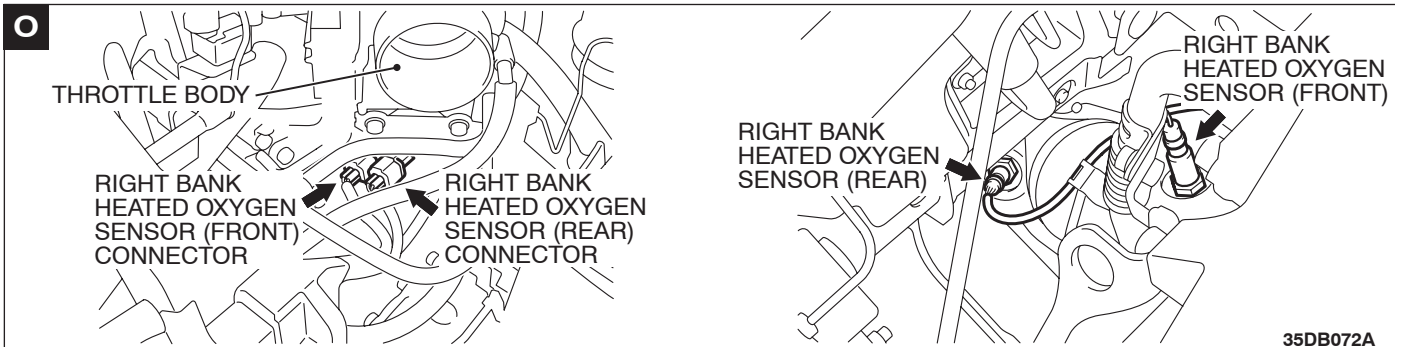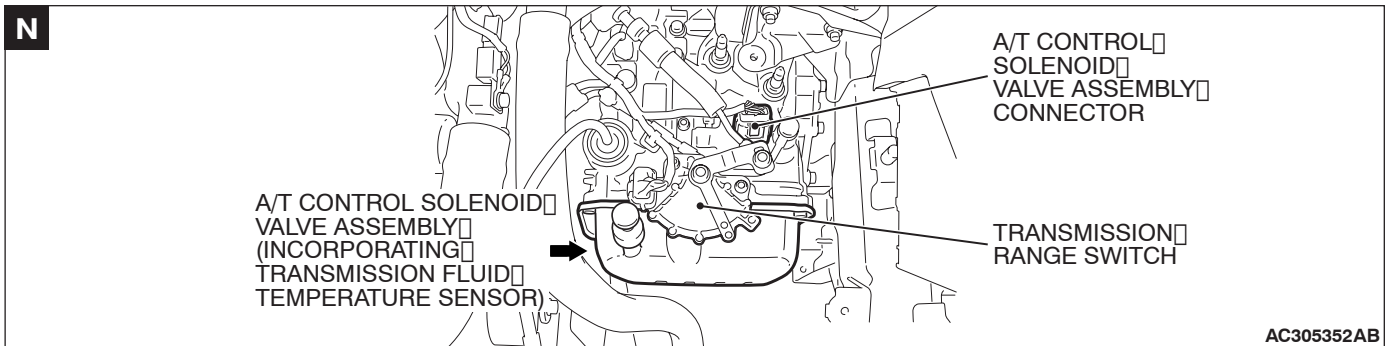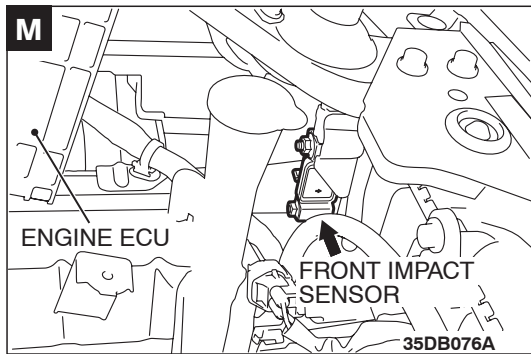


R

 
ACCELERATOR PEDAL
ASSEMBLY[BUILT-IN ACCELERATOR
PEDAL POSITION SENSOR (APS)]

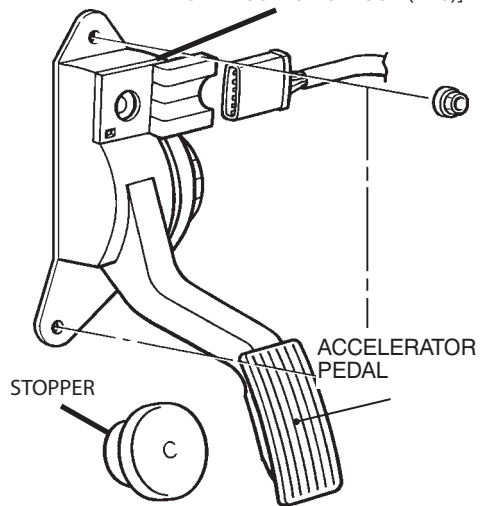


35DB110A

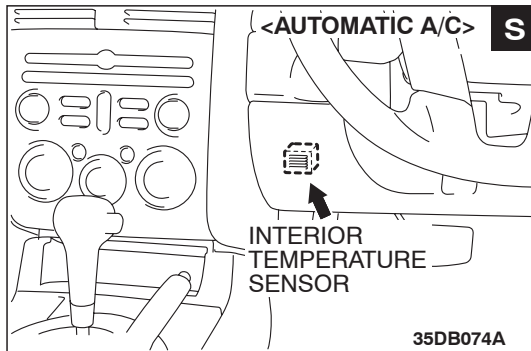 


35DB074A

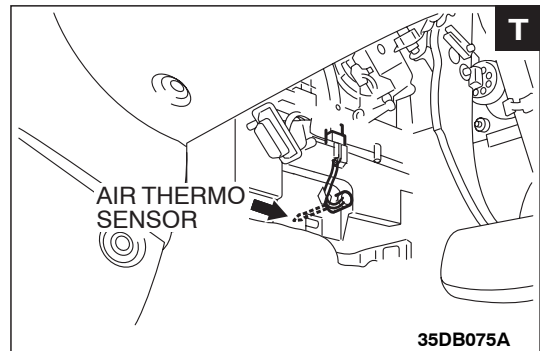 


35DB075A

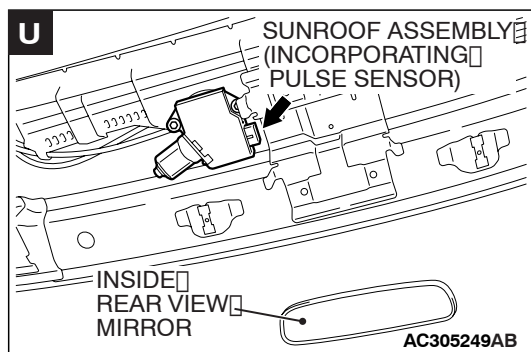 




AC305249AB

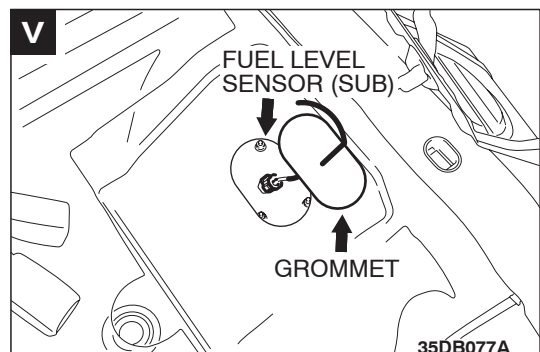 

35DB077A

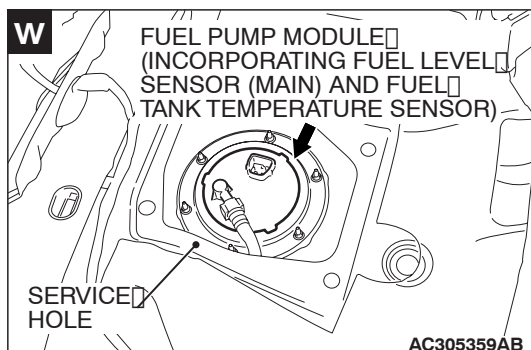 




AC305359AB

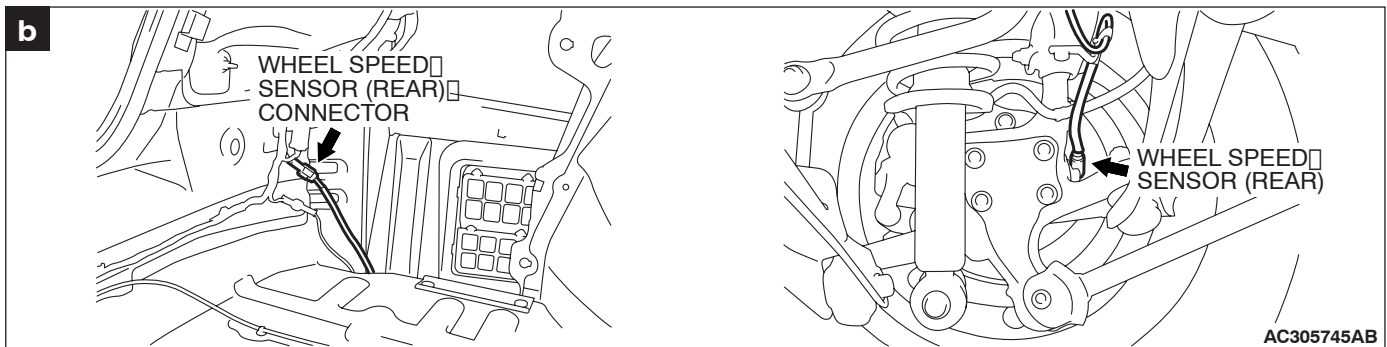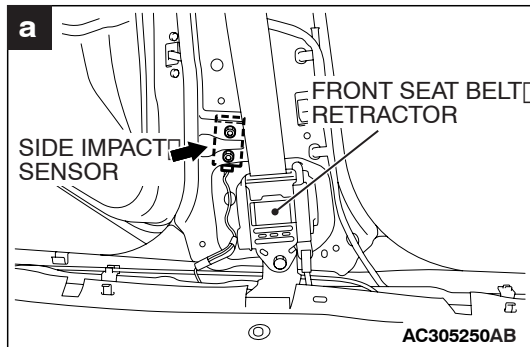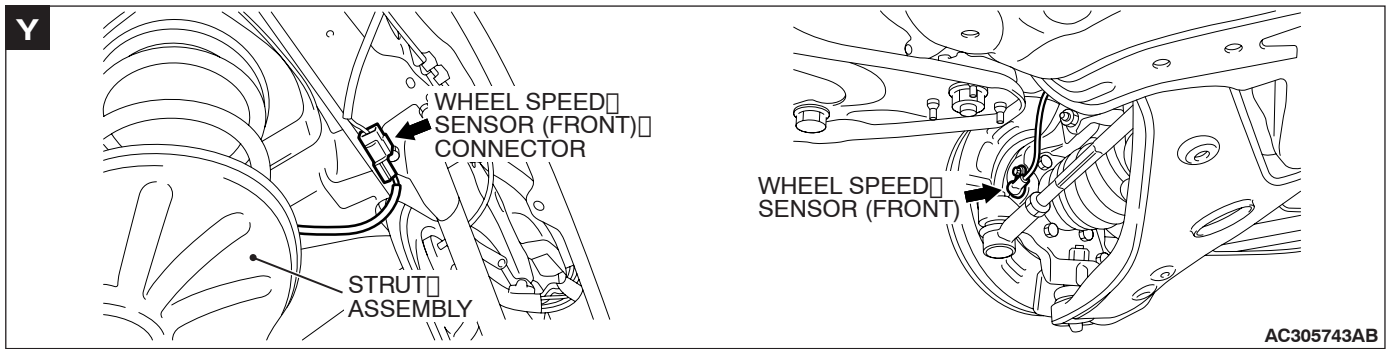   

CONTROL UNIT



M1701000700360

NAME	SYMBOL	NAME	SYMBOL
ABS-ECU or ABS/TCL-ECU	A	Multi center display unit	F
A/C-ECU	J	Engine-ECU	B
Column switch (incorporating column-ECU)	D	Power window main switch (incorporating CPU)	M
Combination meter (incorporating CPU)	E	SRS-ECU	I
ETACS-ECU	G	Sunroof assembly (incorporating sunroof-ECU)	K
Front-ECU	C	A/T-ECU	L





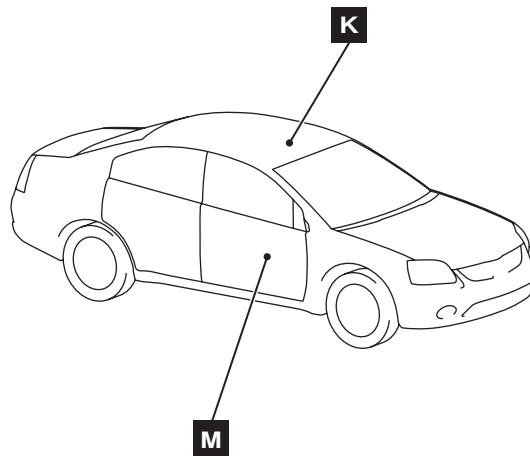 
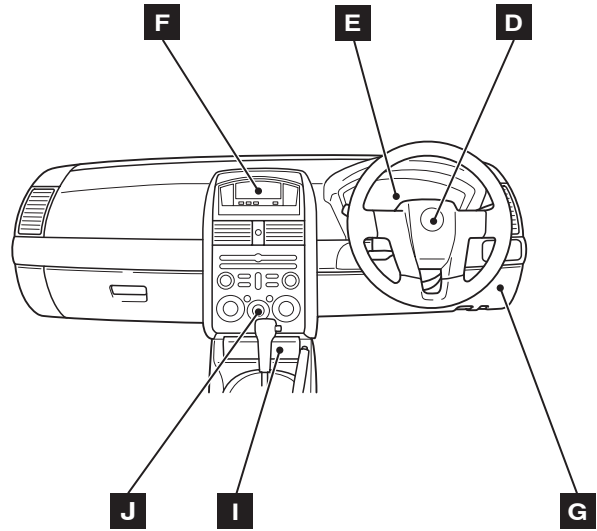 
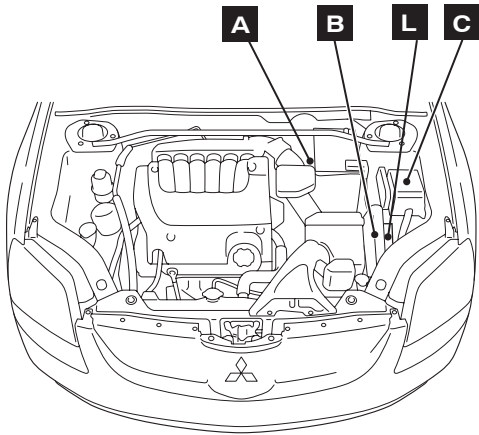 





35DB078A

  A

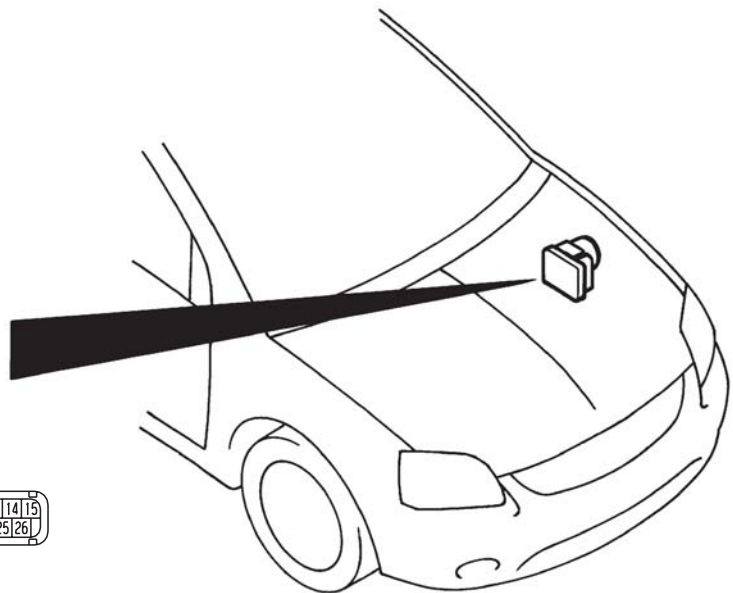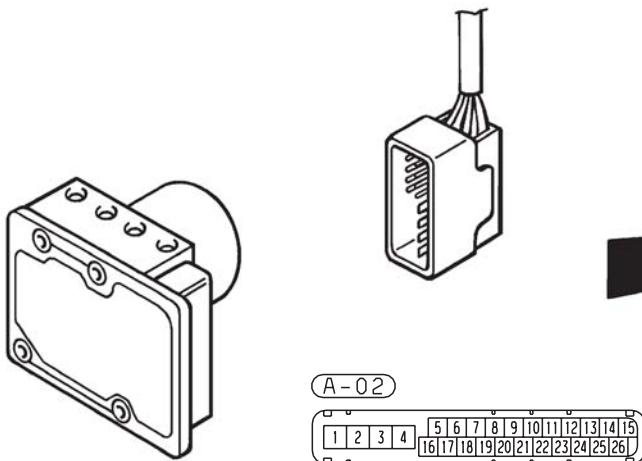

35DB090A

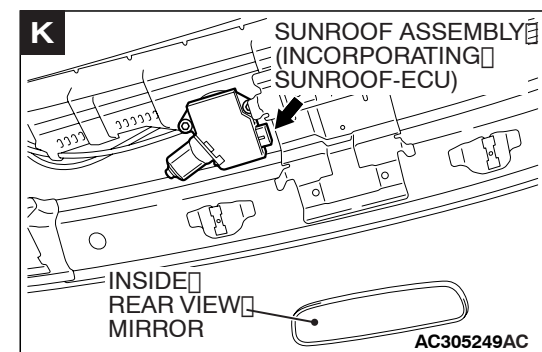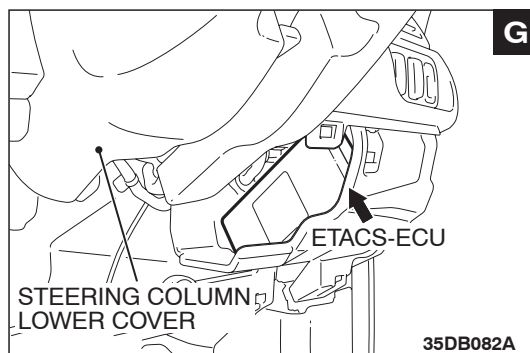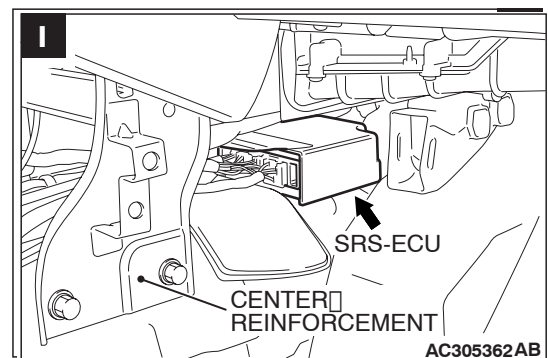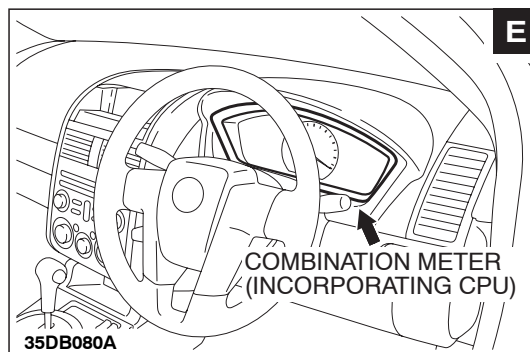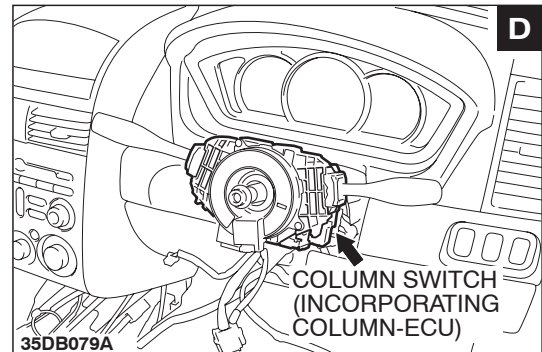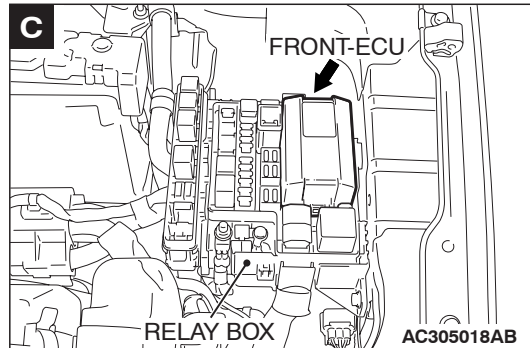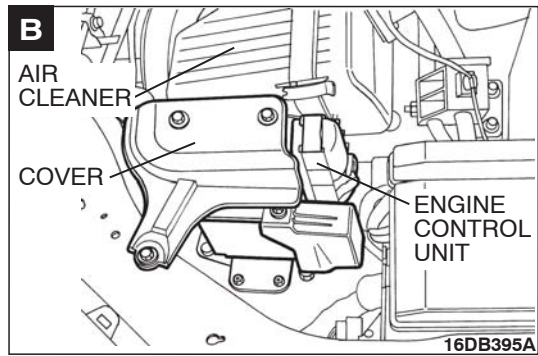       


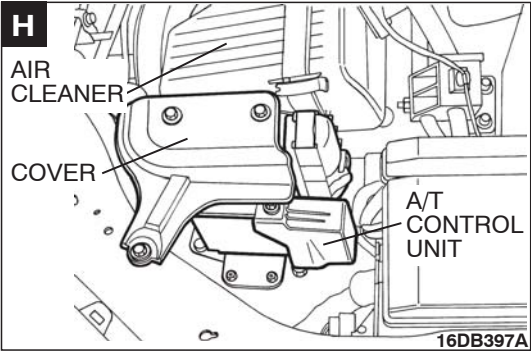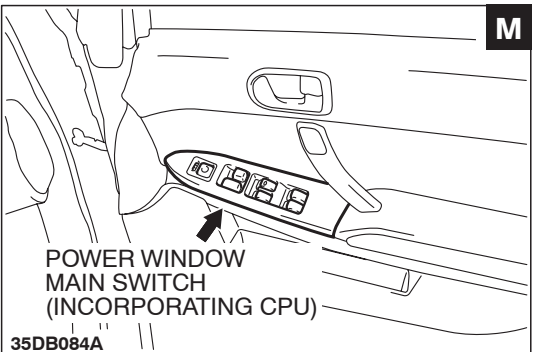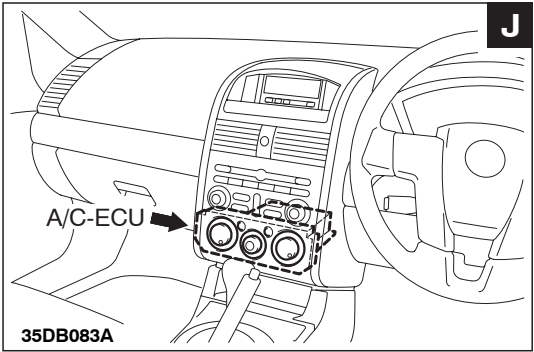   


SOLENOID AND SOLENOID VALVE

M1701000800378

NAME	SYMBOL	NAME	SYMBOL
A/T control solenoid valve assembly	E		
Evaporative emission purge solenoid	B	Hydraulic unit (incorporating ABS solenoid valve)	A

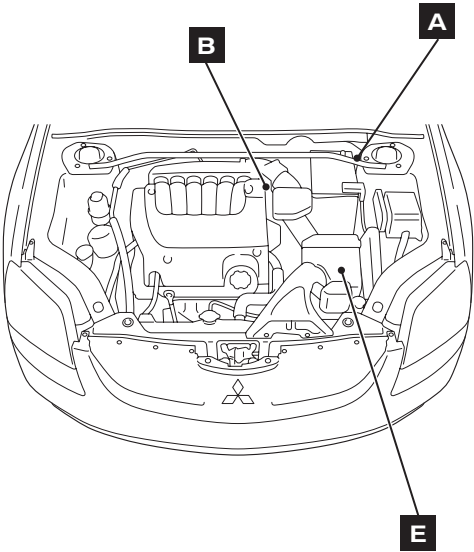 


A

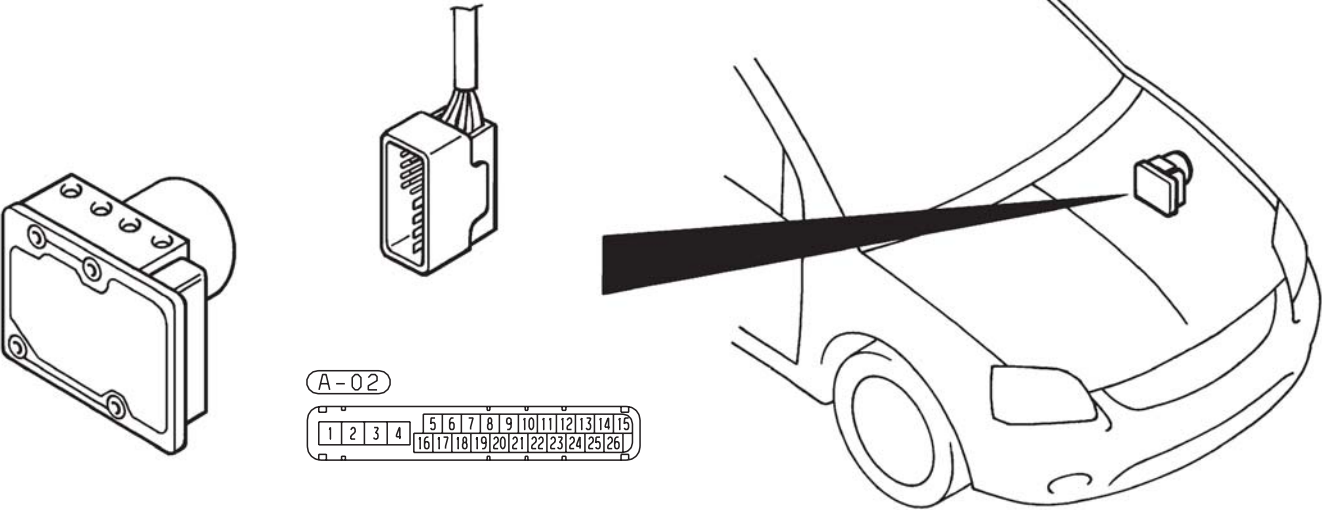 


35DB090A

 B

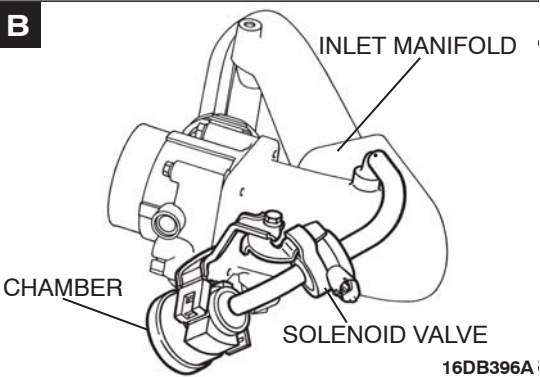

16DB396A

 E

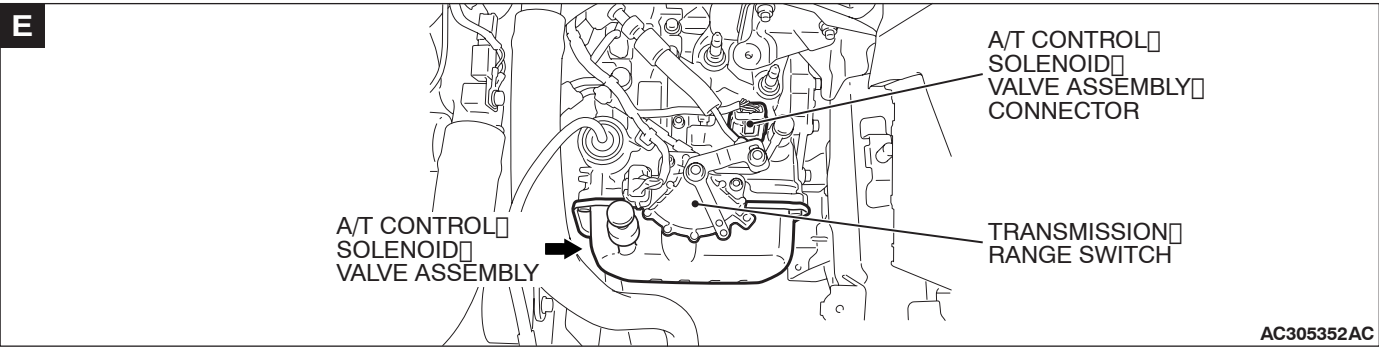


AC305352AC


OTHER DEVICES

M1701005600302

NAME	SYMBOL	NAME	SYMBOL
		Power steering pressure switch	A

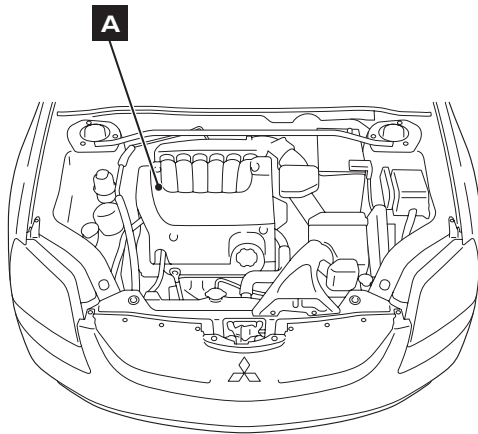 

35DB085A

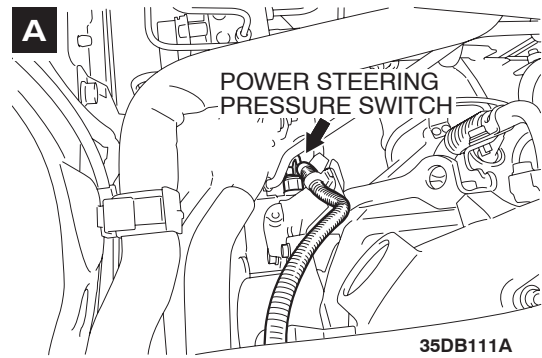 

NOTES