

GROUP 70

COMPONENT  
LOCATIONS

 
 
CONTENTS

FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR .....	70-2	SENSOR .....	70-8
GROUNDING CABLE .....	70-3	CONTROL UNIT .....	70-16
GROUNDING .....	70-4	OTHER DEVICES .....	70-19
RELAY .....	70-6	SOLENOID AND SOLENOID VALVE.....	70-20
INSPECTION TERMINAL .....	70-8		


FUSIBLE LINK, FUSE AND IOD OR STORAGE CONNECTOR

M1701000101468


NAME	SYMBOL	NAME	SYMBOL
Fuses No.1 to 24 (Passenger compartment)	D	Fusible link No.27 (Engine compartment)	A
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.1 to 5, 28 (Engine compartment)	B
Fusible link No.26 (Engine compartment)	C	IOD or storage connector	B

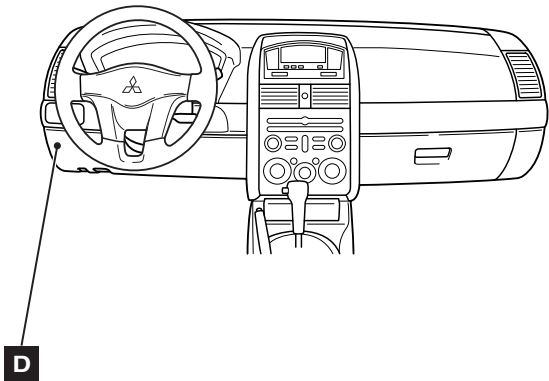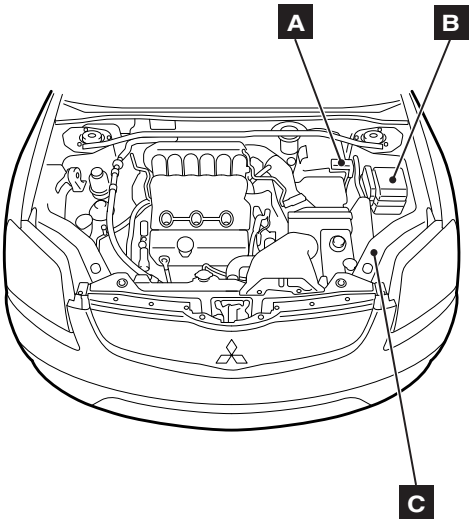


AC808894AB

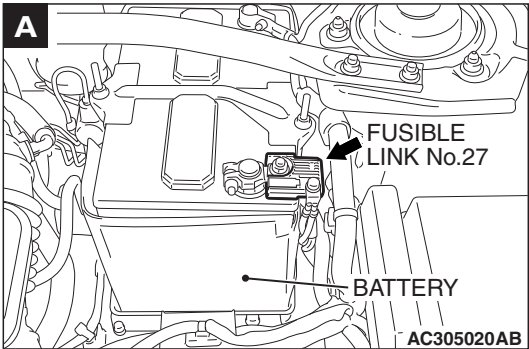 


AC305020AB

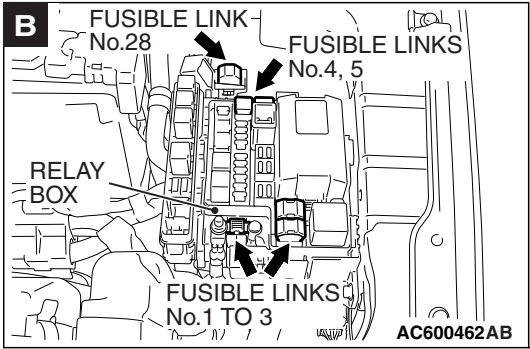 



AC600462AB

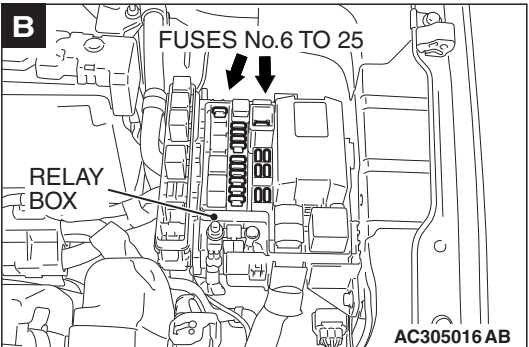 

AC305016AB

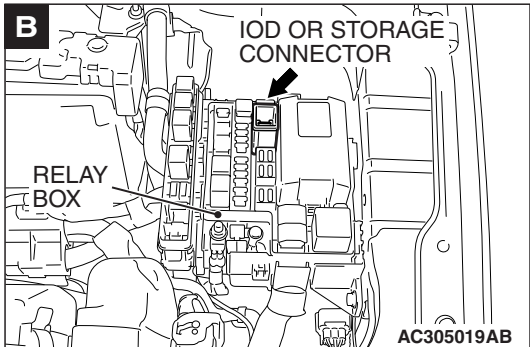 



AC305019AB

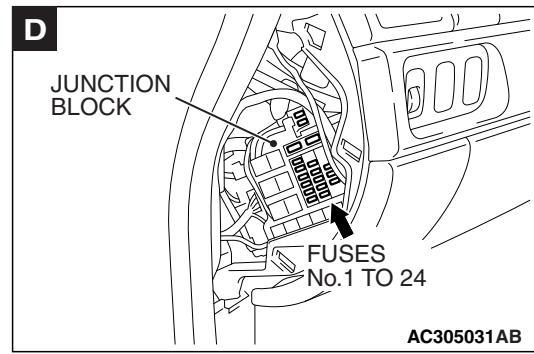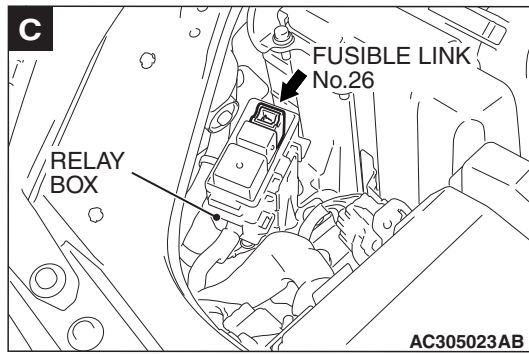  



## GROUNDING CABLE

M1701001001293
  
### <2.4L ENGINE>

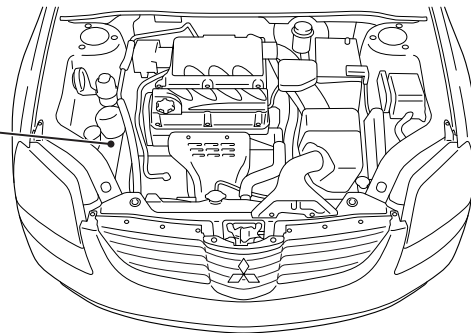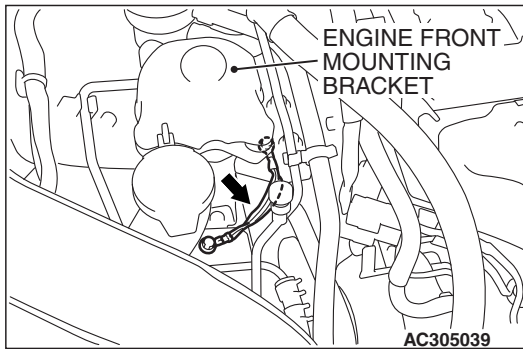


### <3.8L ENGINE>

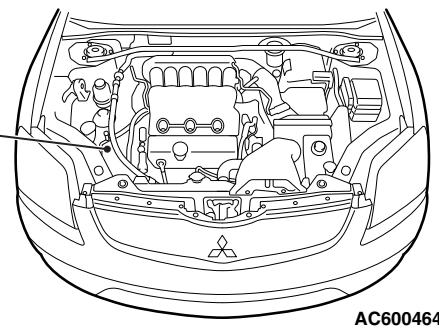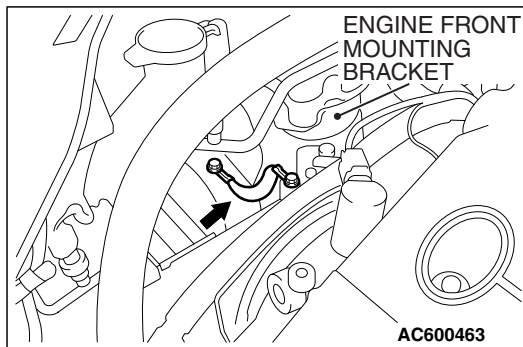  

AC600501AC



## GROUNDING








 
M1701000301763






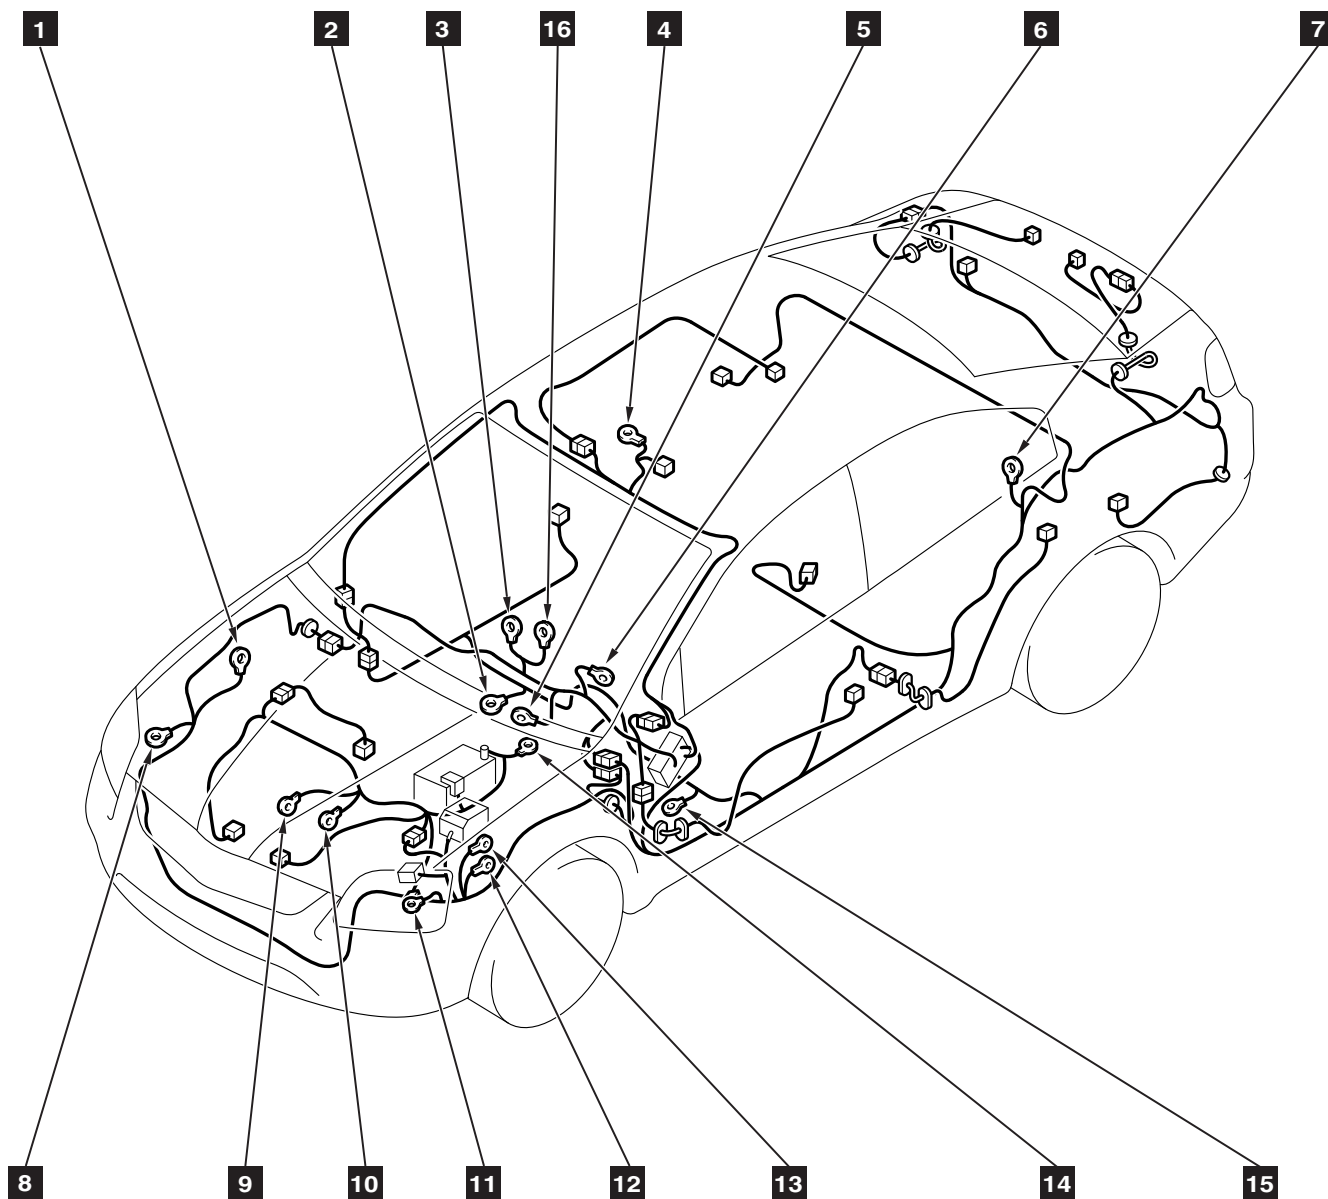


AC712434AB

                NOTE: 1 to 16 numbers correspond to the body ground point numbers in CIRCUIT DIAGRAMS.

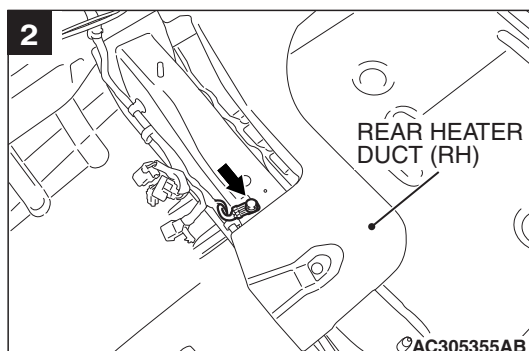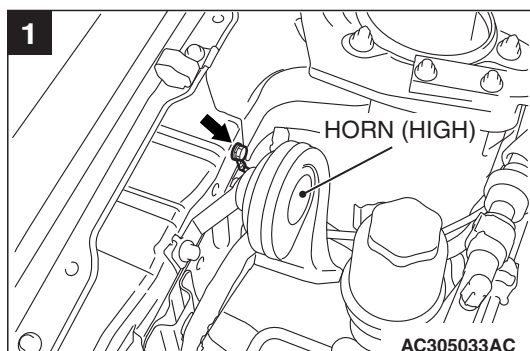

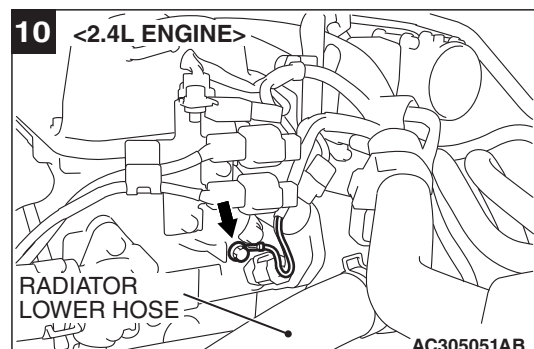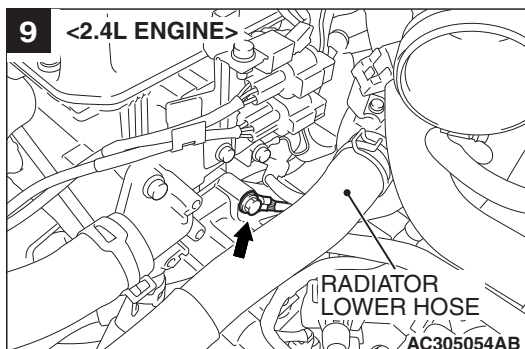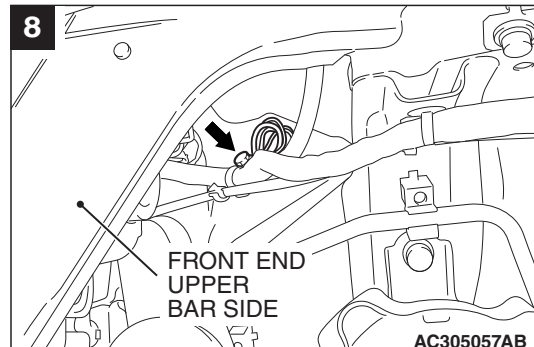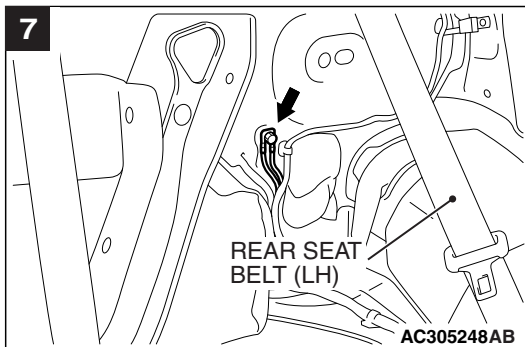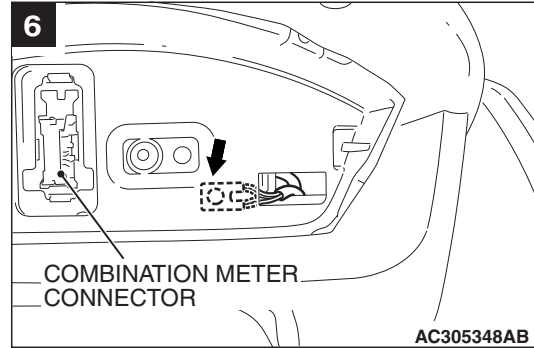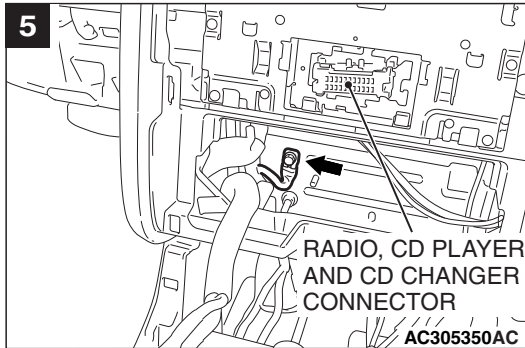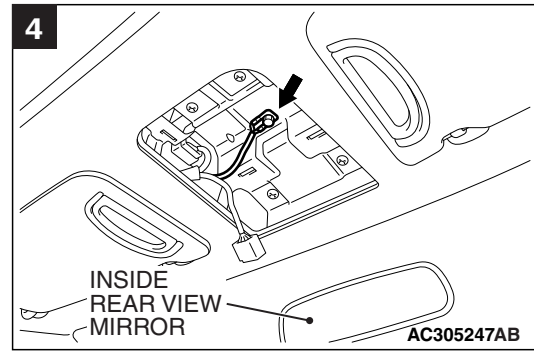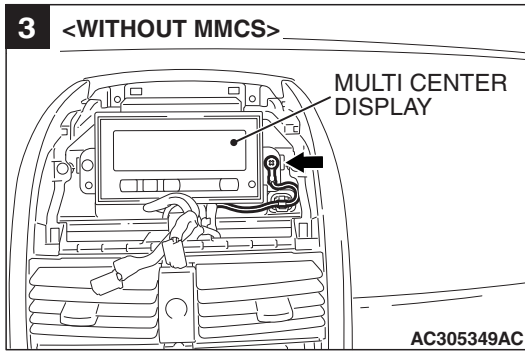

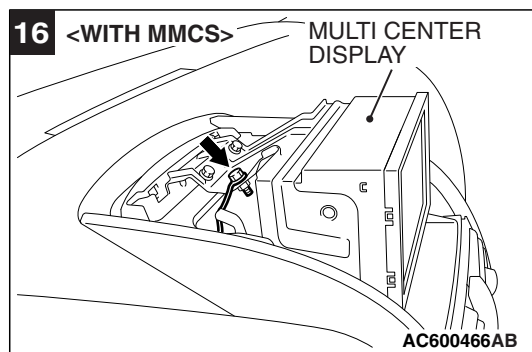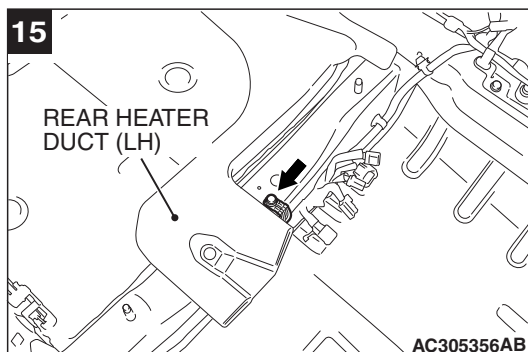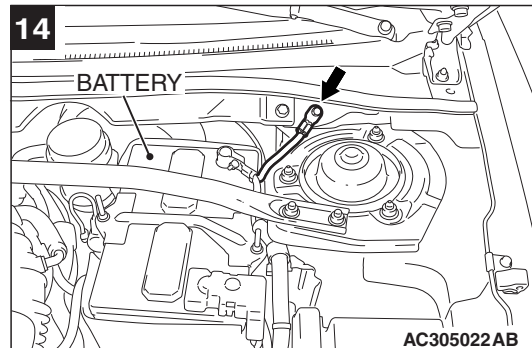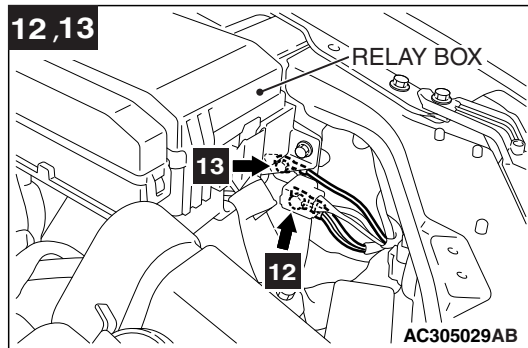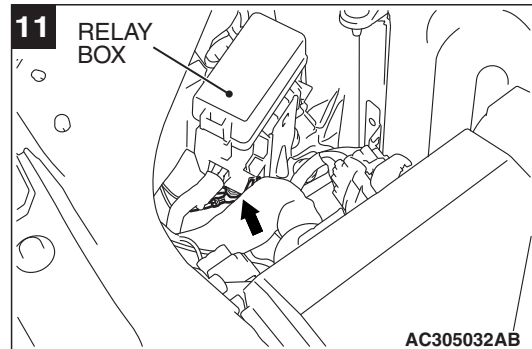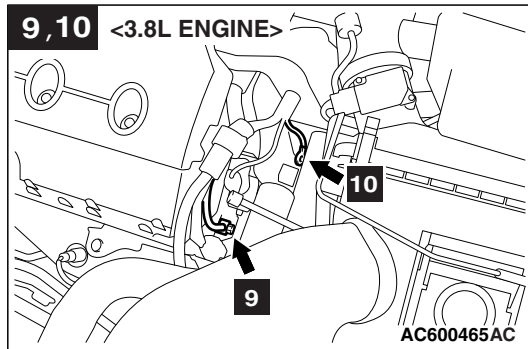


## RELAY




M1701000401890

 NAME	SYMBOL	NAME	SYMBOL
A/C compressor clutch relay	A	Fuel pump relay (2)	C
A/T control relay	A	Heated seat relay	C
Accessory socket relay	C	Horn relay	A
Blower relay	C	MFI relay	A
Condenser fan relay	B	Power window relay	C
Fan control relay	A	Radiator fan relay	B
Fog light relay	A	Rear window defogger relay	C
Fuel pump relay (1)	C	Throttle actuator control motor relay	A




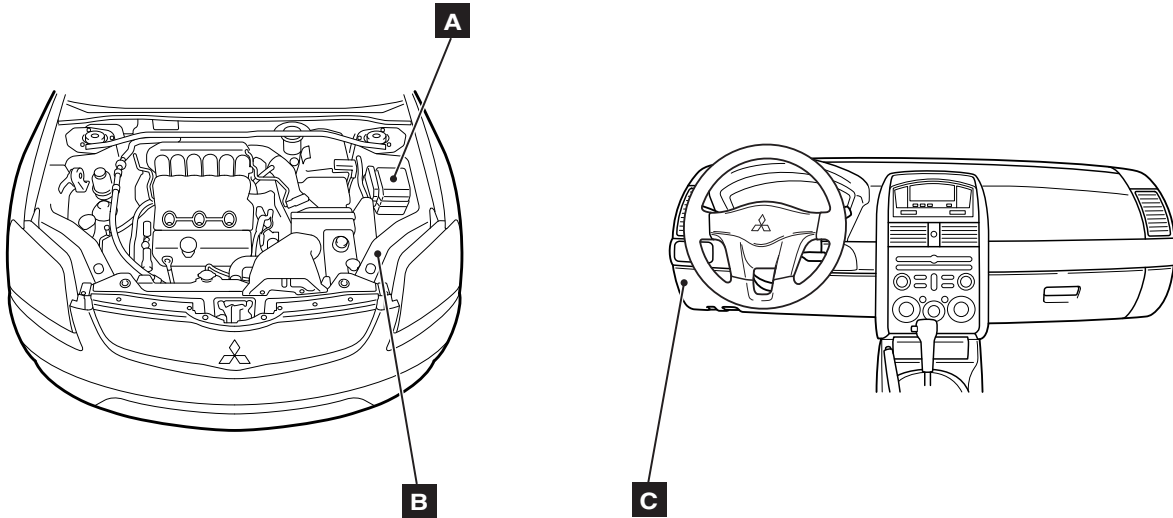


AC808894AC

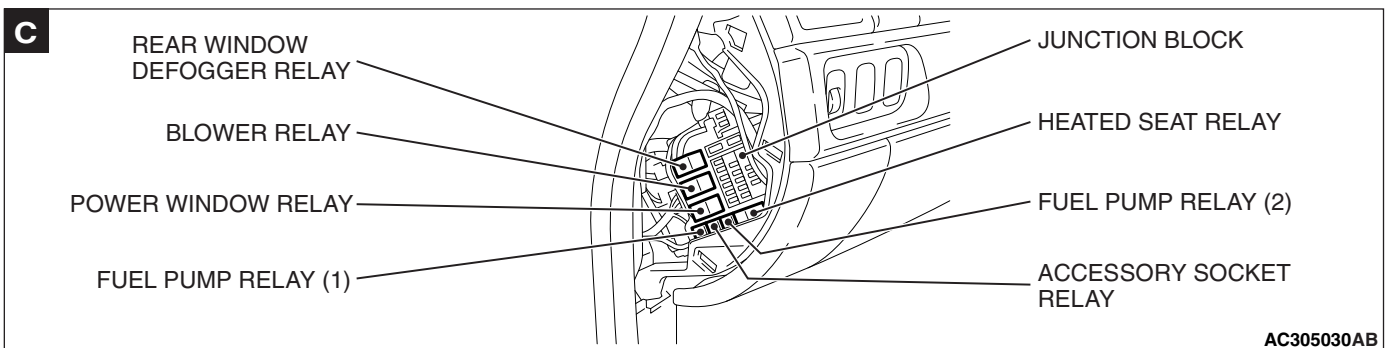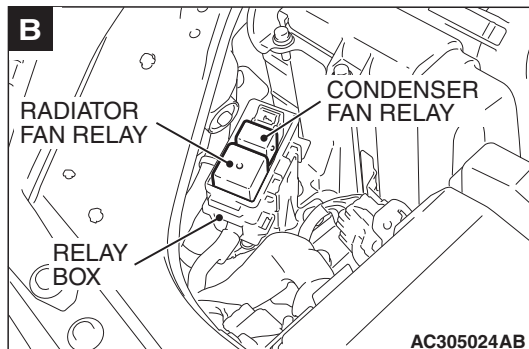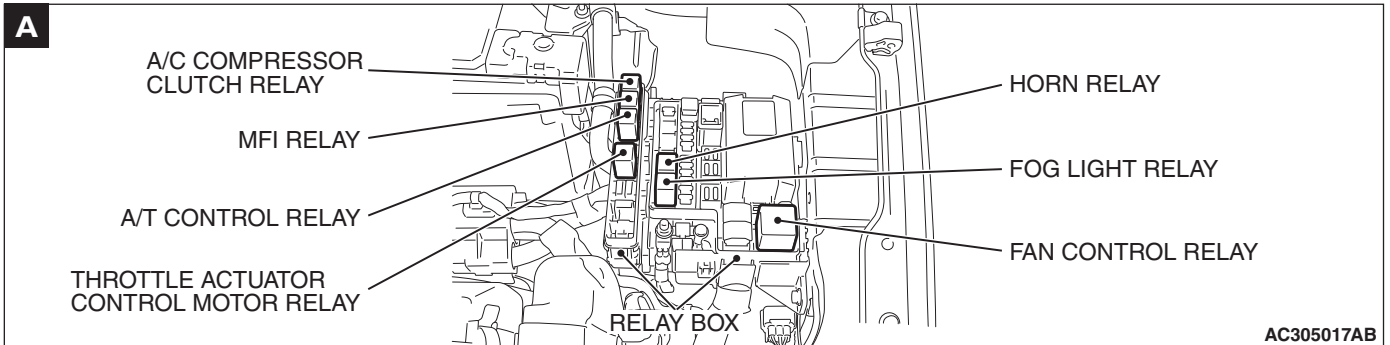   

## INSPECTION TERMINAL

  M1701000200774

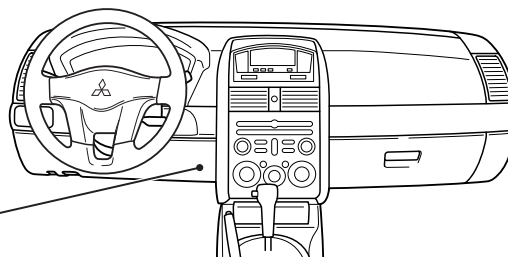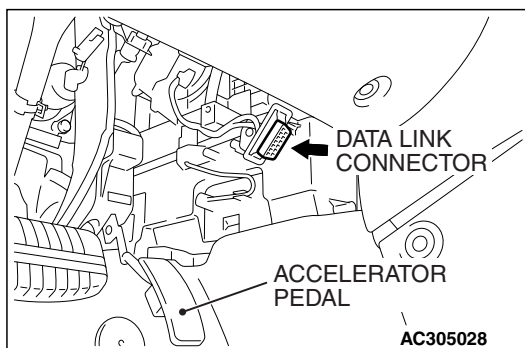

AC600983AB

## SENSOR

 
M1701000602358

NAME	SYMBOL	NAME	SYMBOL
A/C pressure sensor	I	Knock sensor	C
A/T control solenoid valve assembly (Incorporating transmission fluid temperature sensor)	O	Left bank heated oxygen sensor (front) <3.8L Engine>	Q
Accelerator pedal position sensor	S	Left bank heated oxygen sensor (rear) <3.8L Engine>	Q
Air thermo sensor	U	Manifold absolute pressure sensor	B
Ambient temperature sensor	M	Mass airflow sensor	G
Camshaft position sensor	D	Occupant classification sensor (LH), (RH)	a
Crankshaft position sensor	A	Output shaft speed sensor	H
Cylinder 1, 4 heated oxygen sensor (front) <2.4L Engine>	J	Radiator sensor <2.4L Engine (Vehicles for California)>	K
Cylinder 1, 4 heated oxygen sensor (rear) <2.4L Engine>	J	Rear light sensor <Automatic anti-dazzling mirror>	V
Cylinder 2, 3 heated oxygen sensor (front) <2.4L Engine>	J	Right bank heated oxygen sensor (front) <3.8L Engine>	P
Cylinder 2, 3 heated oxygen sensor (rear) <2.4L Engine>	J	Right bank heated oxygen sensor (rear) <3.8L Engine>	P
Engine coolant temperature sensor	F	Seat slide sensor	d
Front impact sensor	N	Side impact sensor (Front)	f
Front light sensor <Automatic anti-dazzling mirror>	V	Side impact sensor (Rear)	Z




NAME	SYMBOL	NAME	SYMBOL
Fuel level sensor (sub)	X	Steering wheel sensor	R
Fuel pump module (Incorporating fuel level sensor (main) and fuel tank temperature sensor)	Y	Sunroof assembly (Incorporating pulse sensor)	W
Fuel tank differential pressure sensor	Y	Throttle body assembly (Incorporating throttle position sensor)	E
G and yaw rate sensor	e	TPMS transmitter (Incorporating tire pressure sensor)	b
Input shaft speed sensor	L	Wheel speed sensor (front)	c
Interior temperature sensor <Automatic A/C>	T	Wheel speed sensor (rear)	g



<2.4L ENGINE>

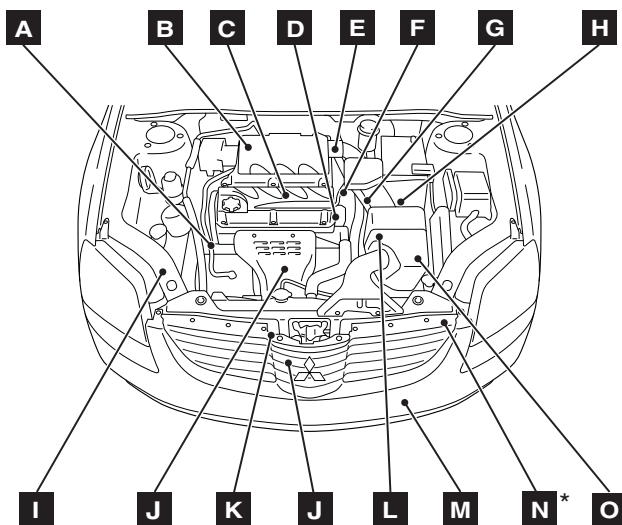

<3.8L ENGINE>

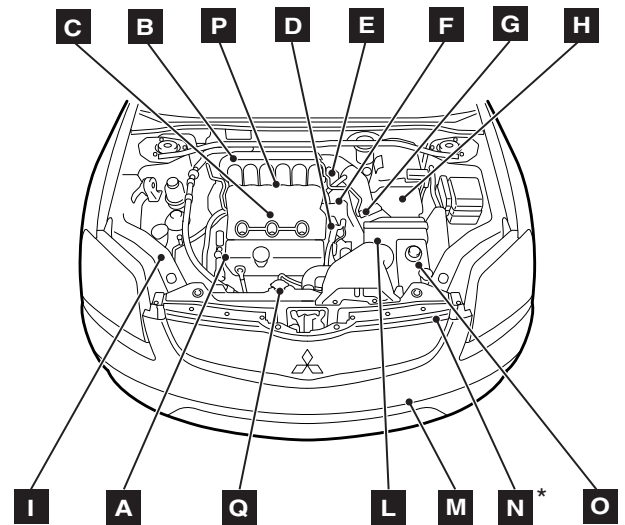 

AC80887AB

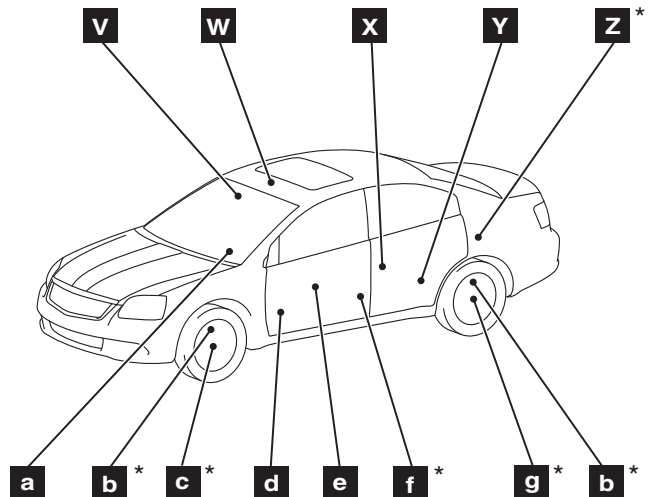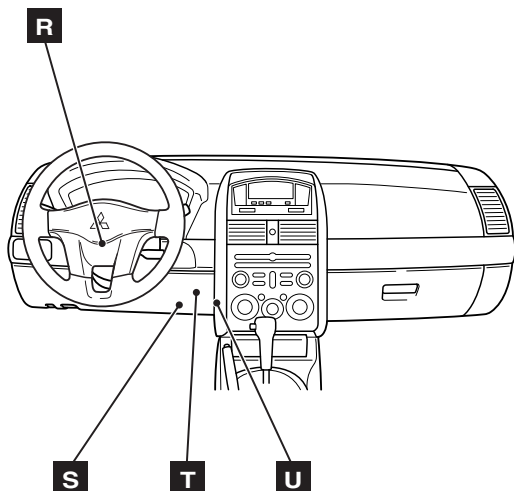  


AC80888AB

NOTE: The \* symbols indicate equipped at both sides.

**A** <2.4L ENGINE>CRANKSHAFT  
POSITION SENSOR  
CONNECTOR

 
GENERATOR

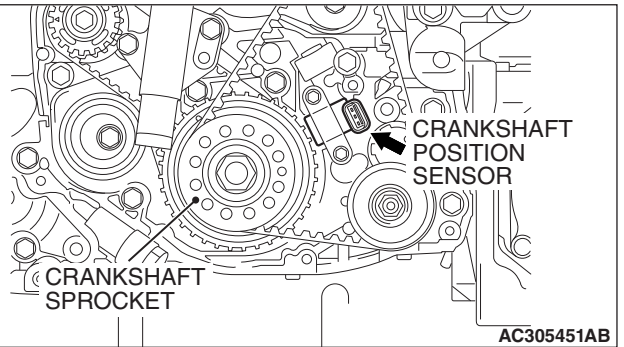

AC305451AB

**A** <3.8L ENGINE>CRANKSHAFT  
POSITION SENSOR  
CONNECTOR

 
AC600468

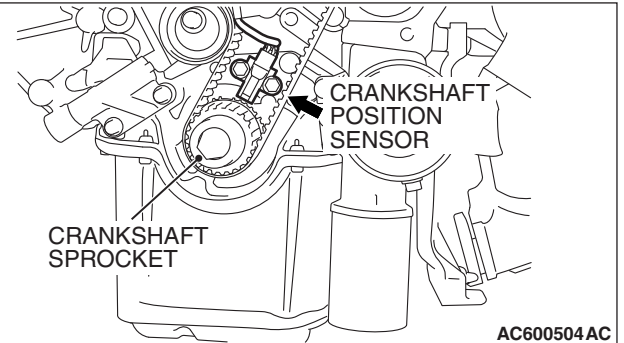


AC600504AC

**B** <2.4L ENGINE>INTAKE  
MANIFOLDMANIFOLD  
ABSOLUTE  
PRESSURE  
SENSOR

 AC305037AB


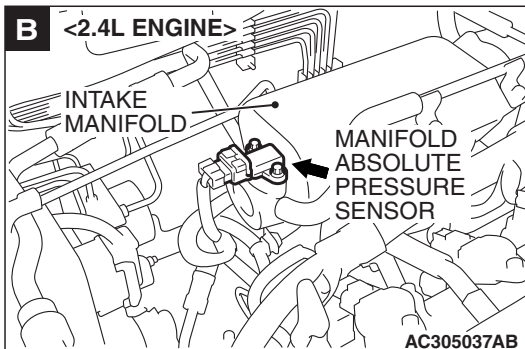
**B** <3.8L ENGINE>MANIFOLD  
ABSOLUTE  
PRESSURE  
SENSORINTAKE  
MANIFOLD

 AC600469AC


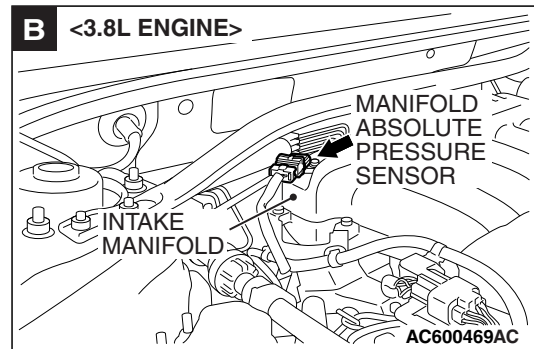
**C** <2.4L ENGINE>INTAKE  
MANIFOLDKNOCK SENSOR  
CONNECTORINTAKE  
MANIFOLD

KNOCK SENSOR







 
 
AC305453AB









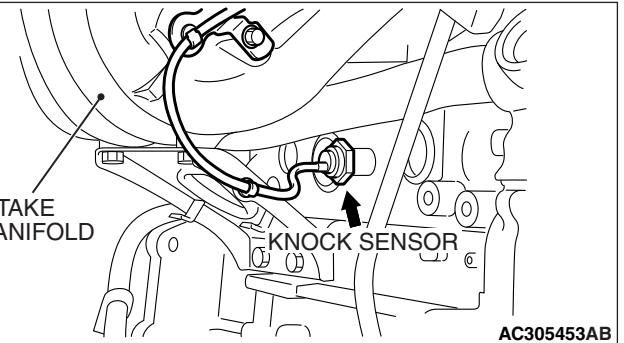
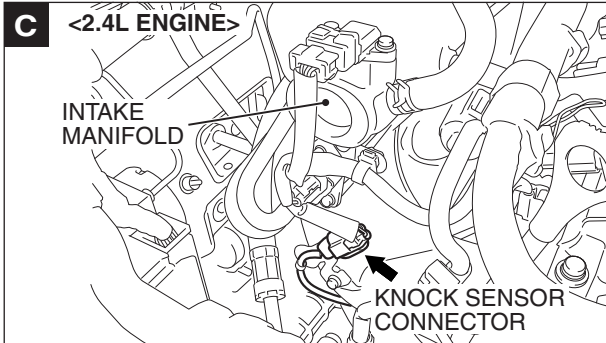
**C** <3.8L ENGINE>KNOCK SENSOR  
CONNECTOR

  AC600467






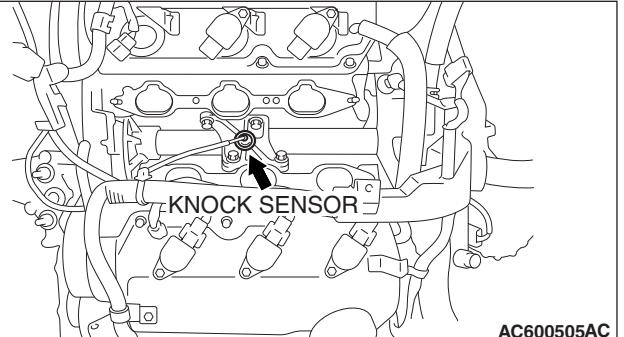
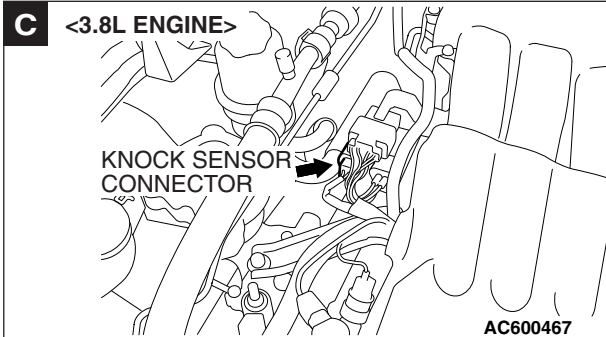






AC600505AC

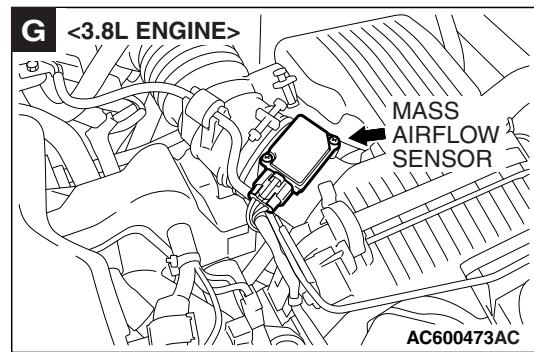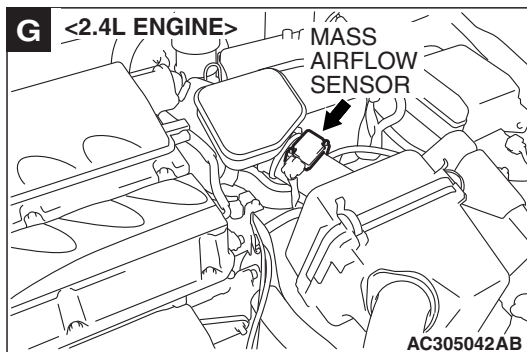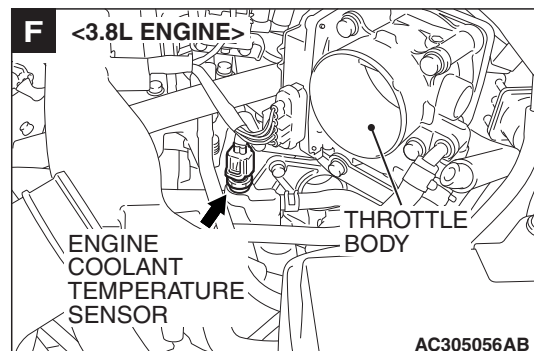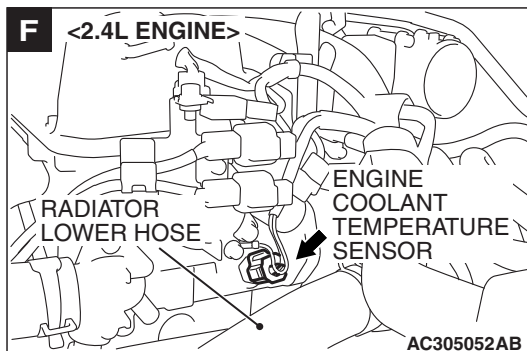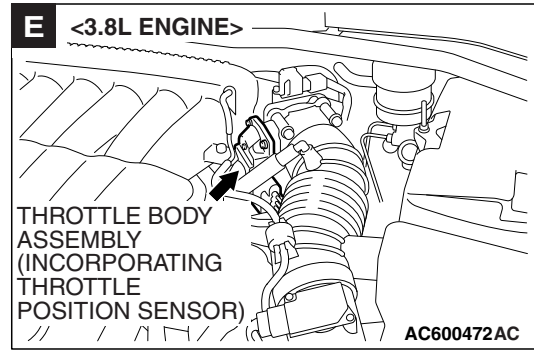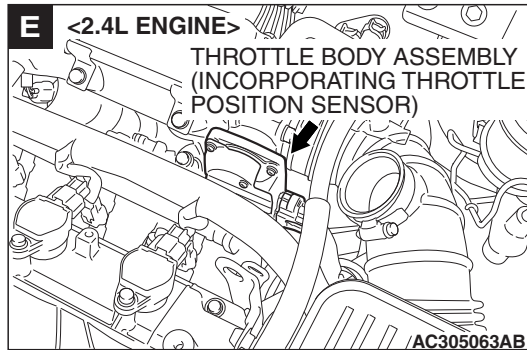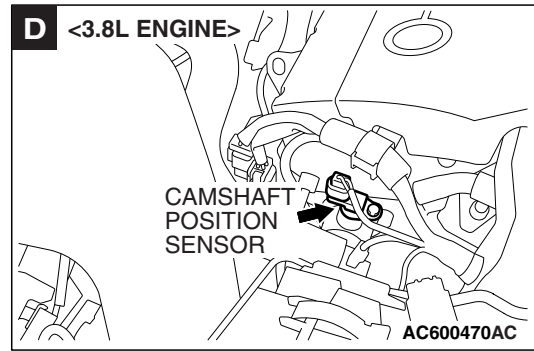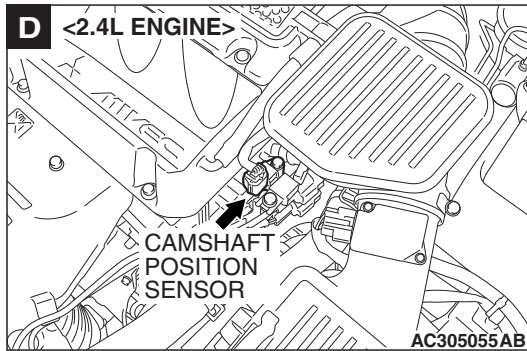        

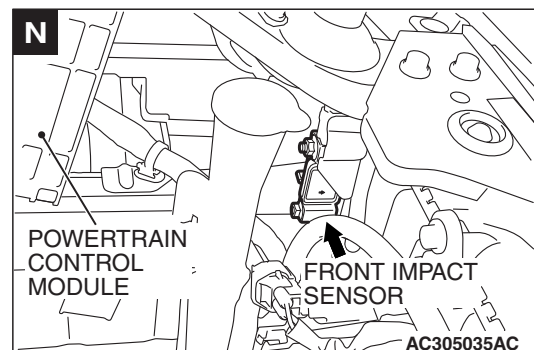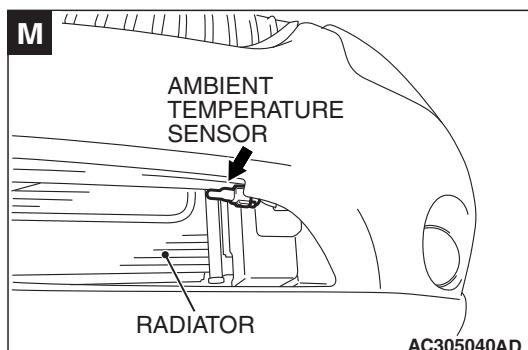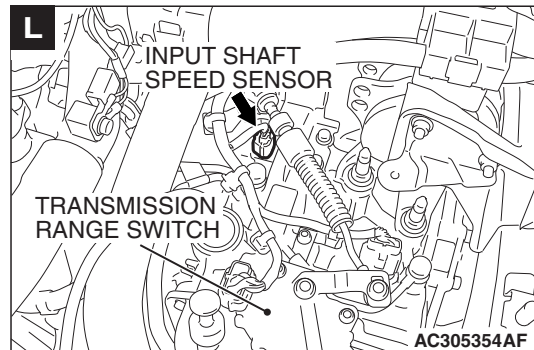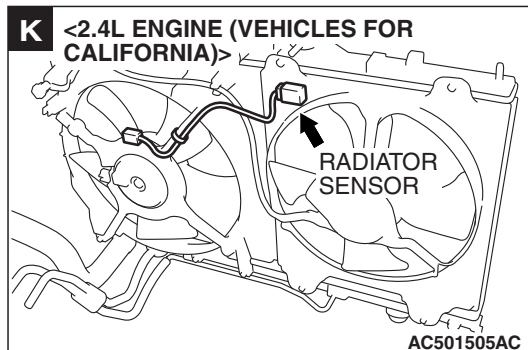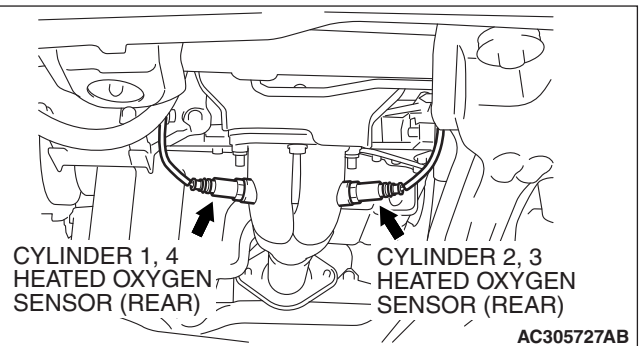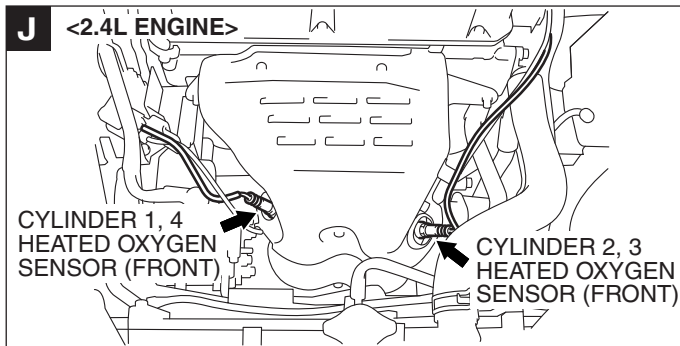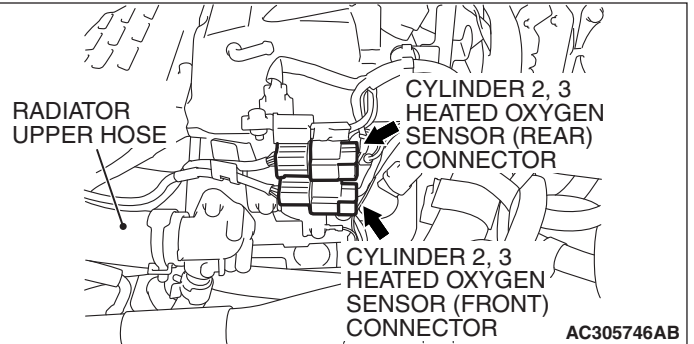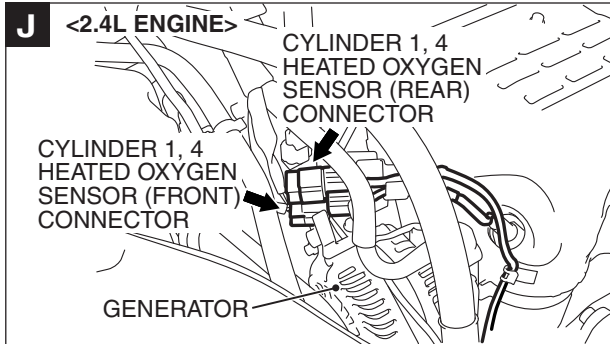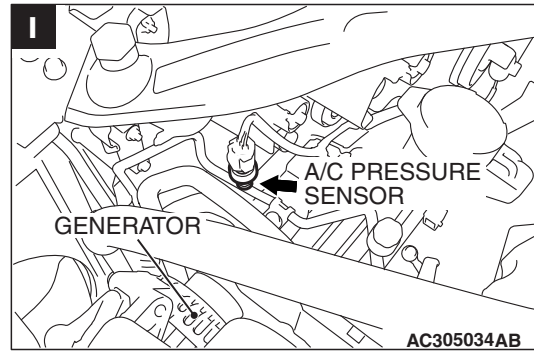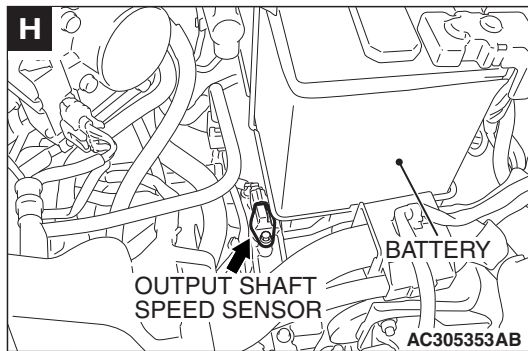          



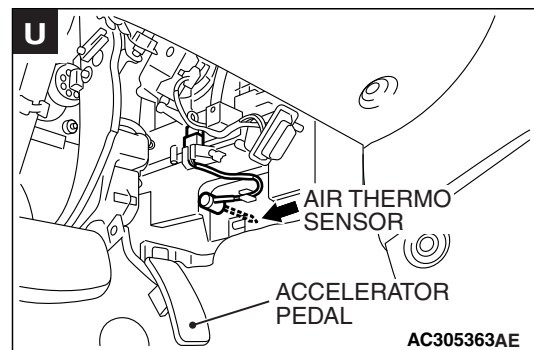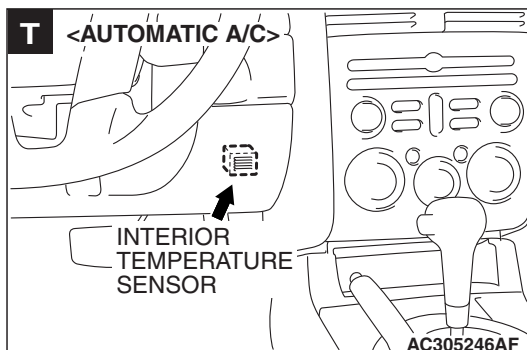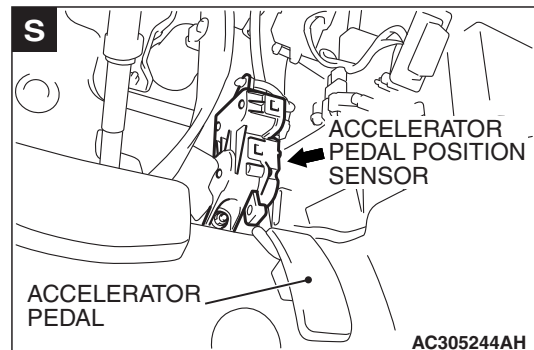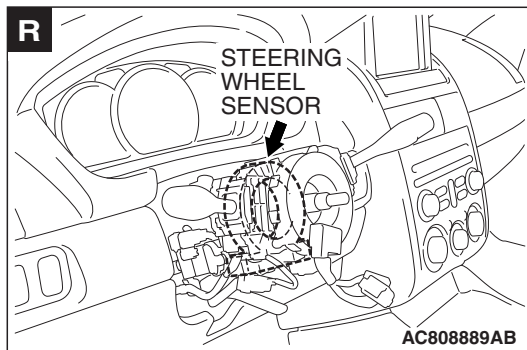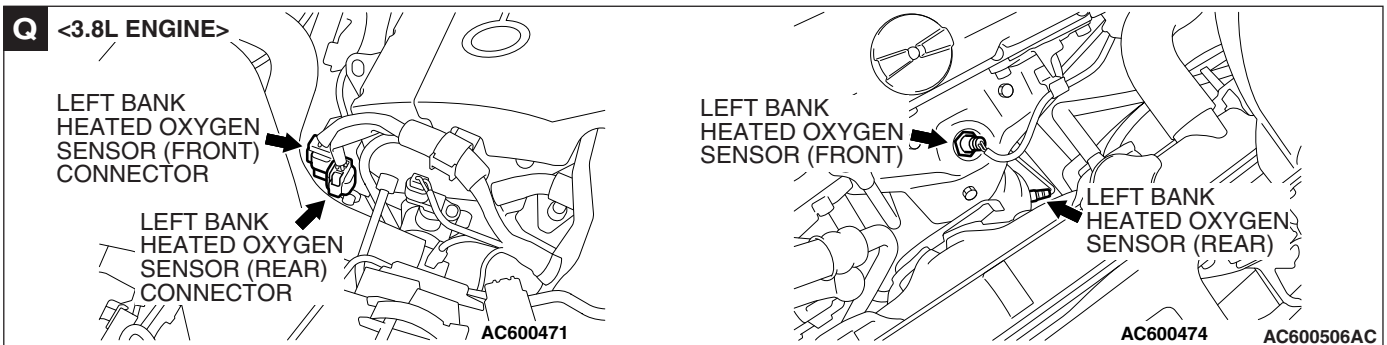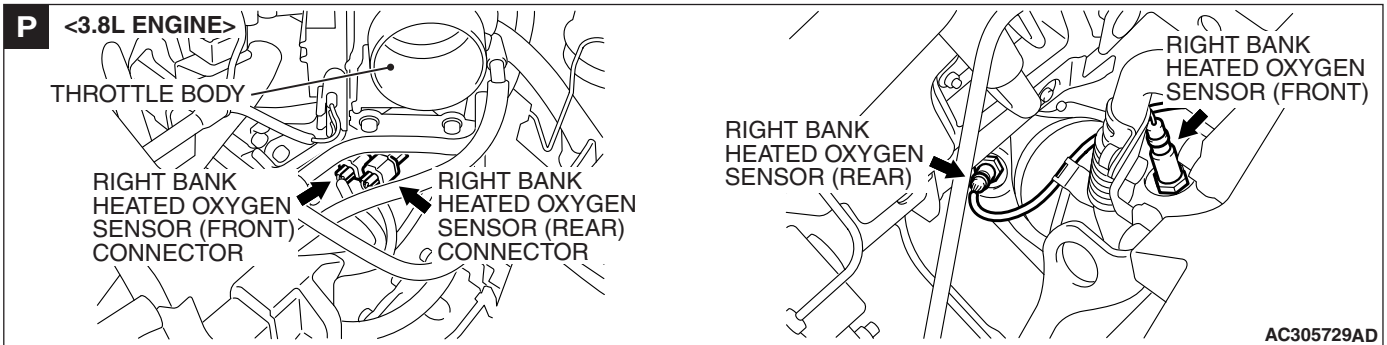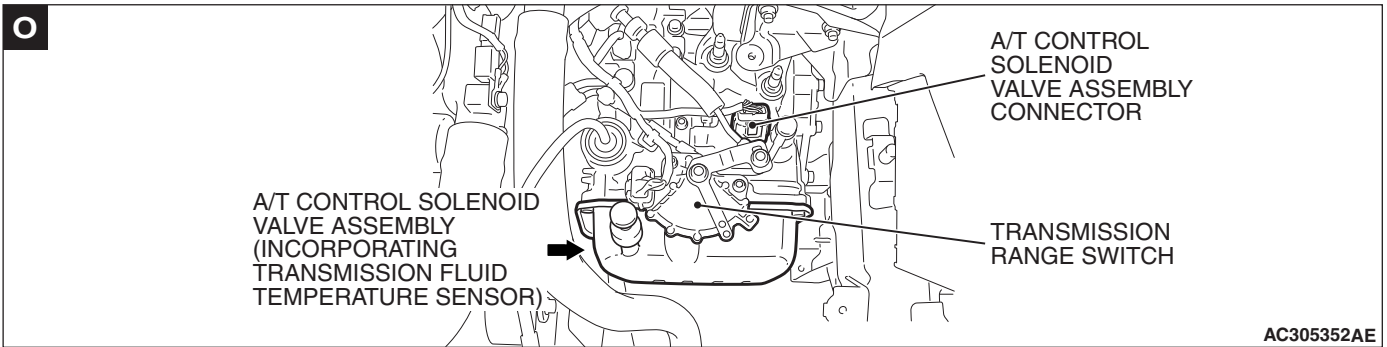       

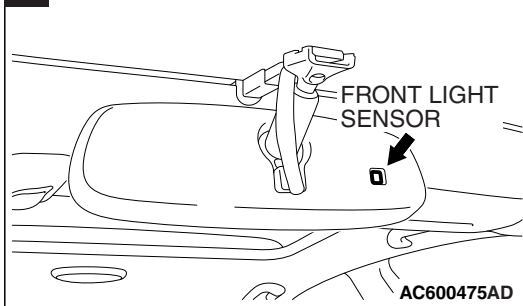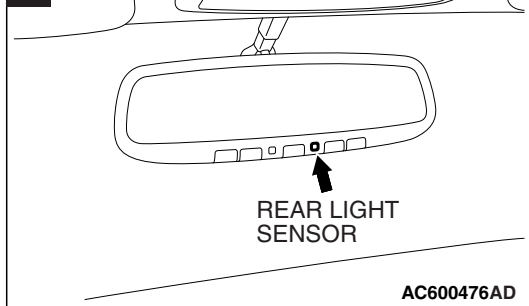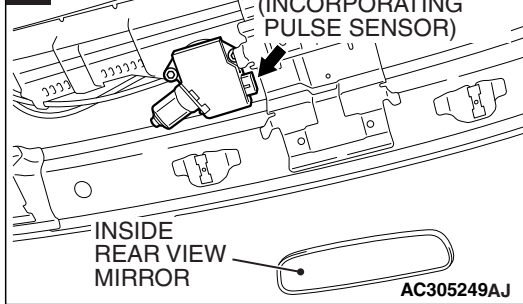   
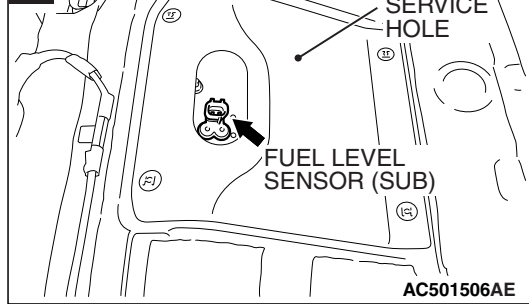 
**V** <AUTOMATIC ANTI-DAZZLING MIRROR>**V** <AUTOMATIC ANTI-DAZZLING MIRROR>**W** SUNROOF ASSEMBLY (INCORPORATING PULSE SENSOR)**X** SERVICE HOLE**Y**

SERVICE HOLE


FUEL TANK DIFFERENTIAL PRESSURE SENSOR

FUEL PUMP MODULE (INCORPORATING FUEL LEVEL SENSOR (MAIN) AND FUEL TANK TEMPERATURE SENSOR)

  AC406590AI




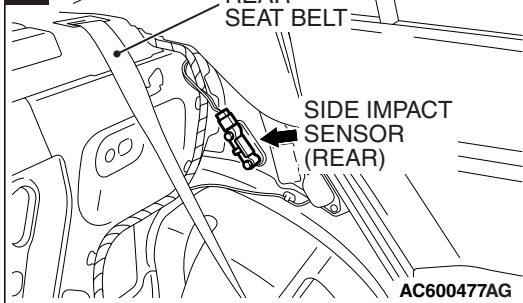
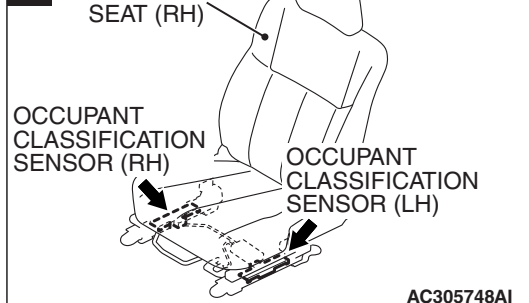
**Z** REAR SEAT BELT**a** FRONT SEAT (RH)**b**

 TPMS TRANSMITTER (INCORPORATING TIRE PRESSURE SENSOR)

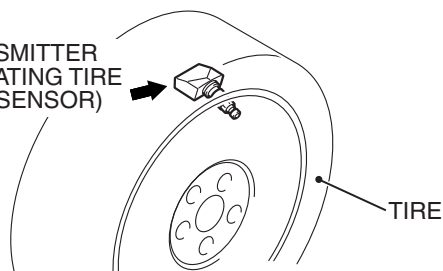

AC205718AL






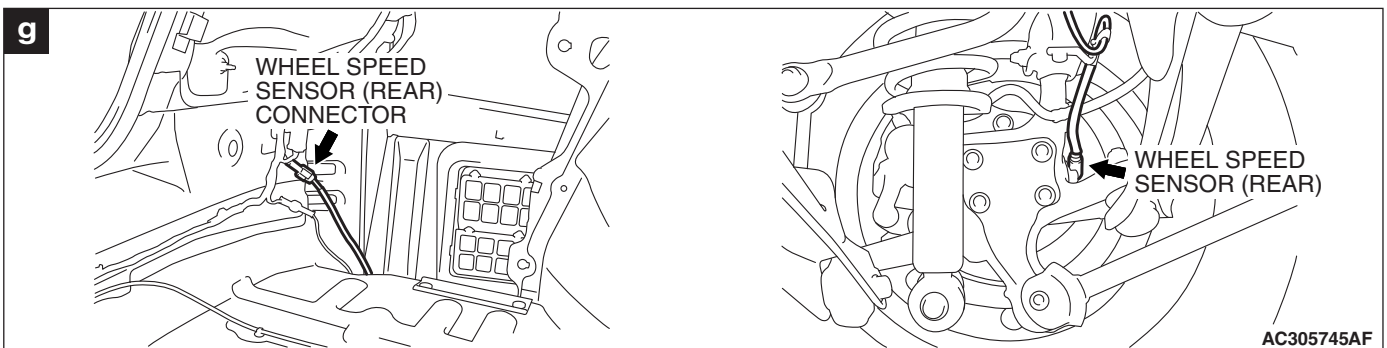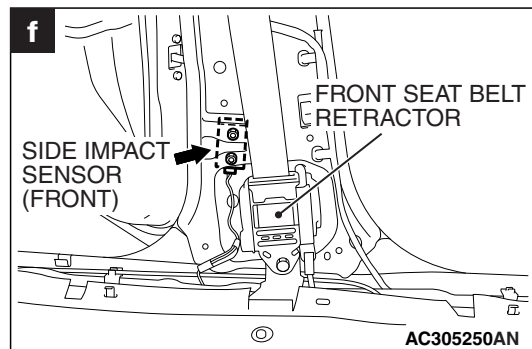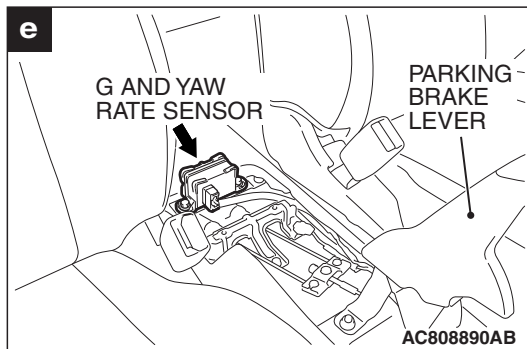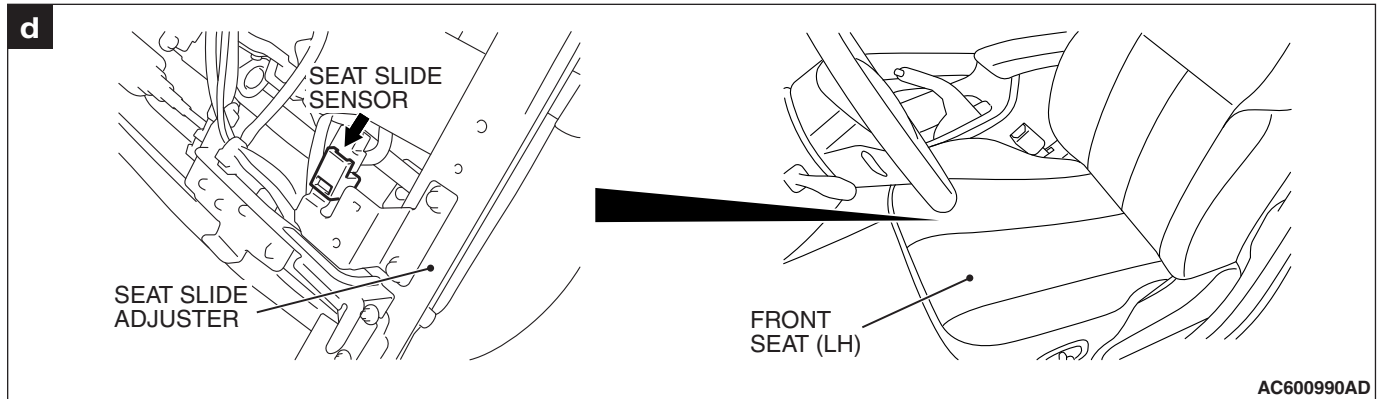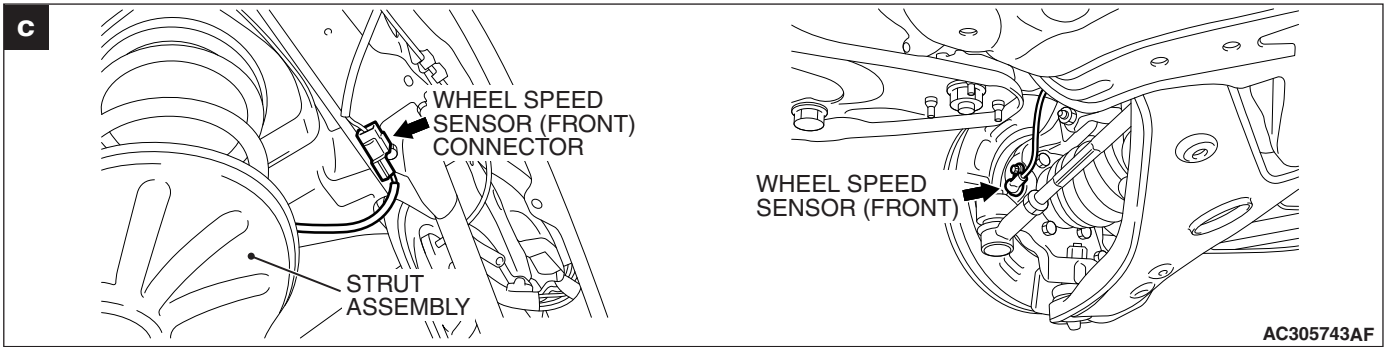     









## CONTROL UNIT








M1701000700928

   NAME	SYMBOL	NAME	SYMBOL
A/C-ECU	K	Occupant classification-ECU	M
Column switch (incorporating column-ECU)	D	Powertrain control module	B
Combination meter (incorporating CPU)	E	Power window main switch (incorporating CPU)	N
ETACS-ECU	H	SRS-ECU	I
Front-ECU	C	Sunroof assembly (incorporating sunroof-ECU)	L
Hands-free module <Hands-free cellular phone system>	G	TCL/ASC-ECU	A
Multi center display unit	F	TPMS receiver	J

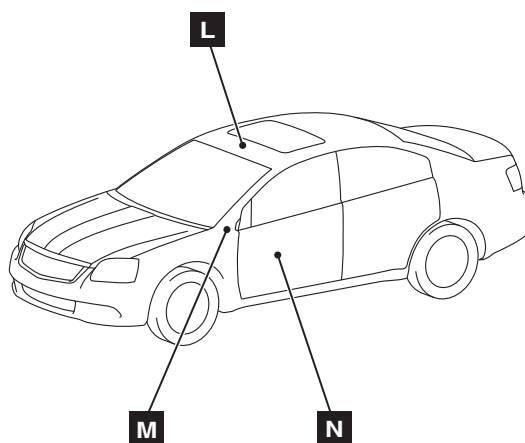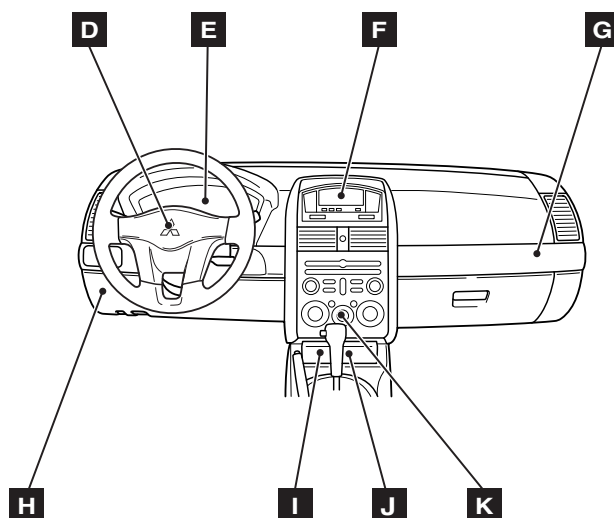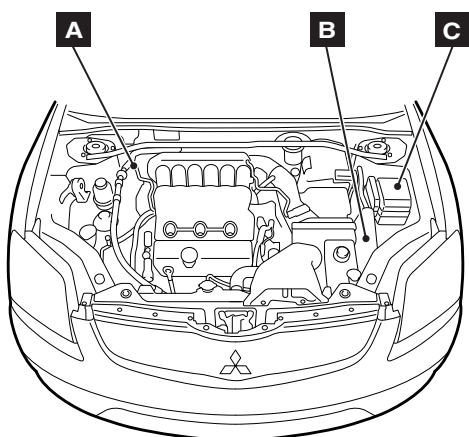

AC808895AB

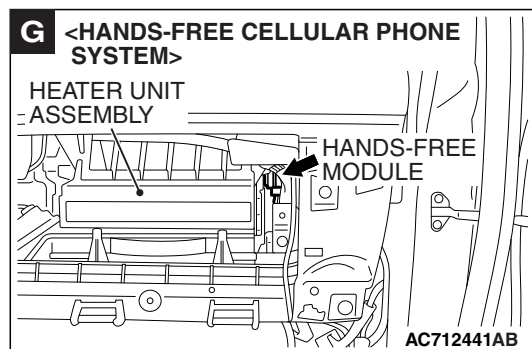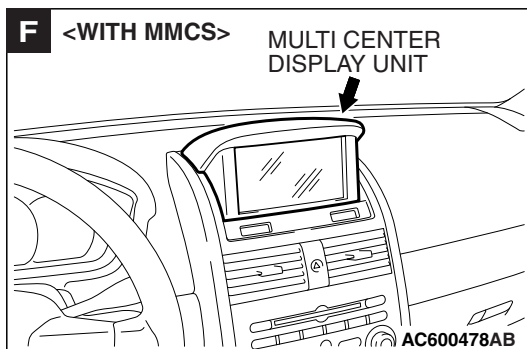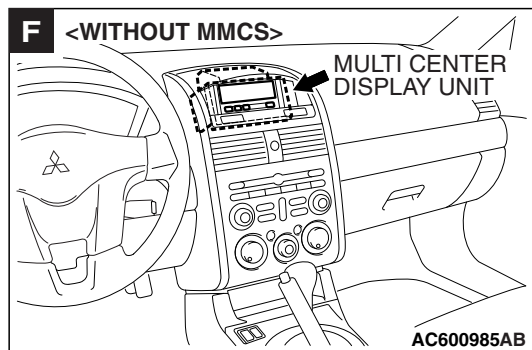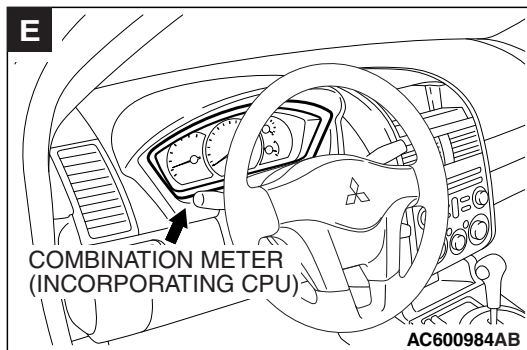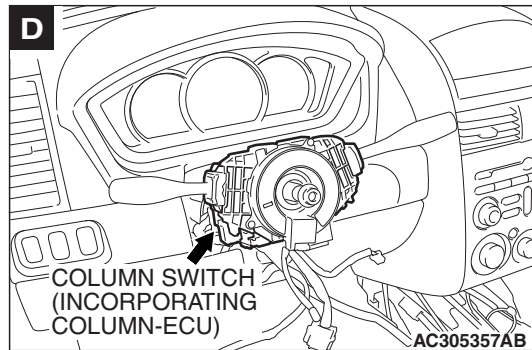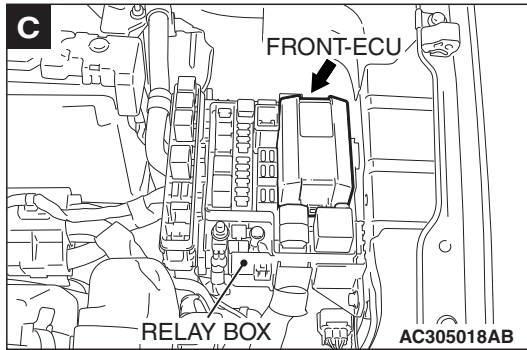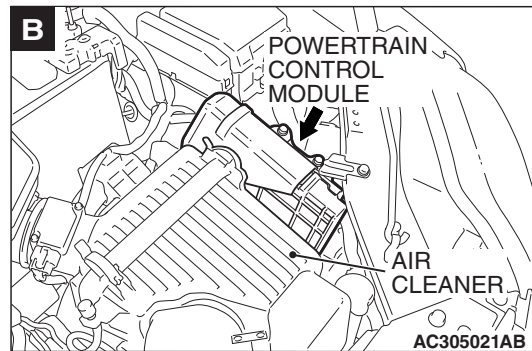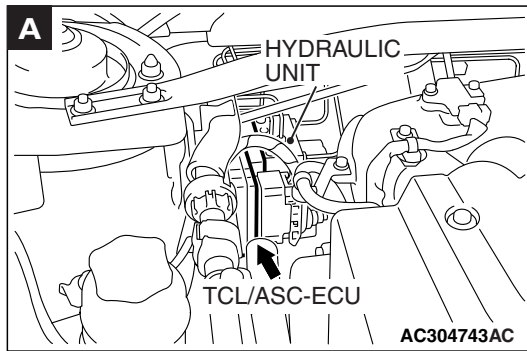        

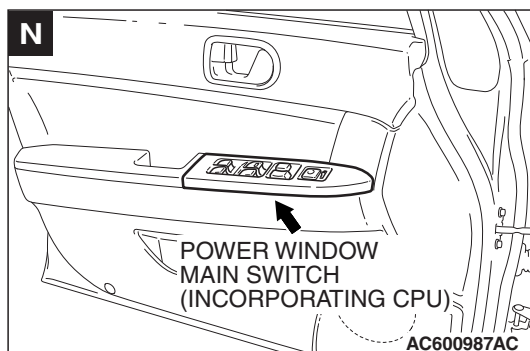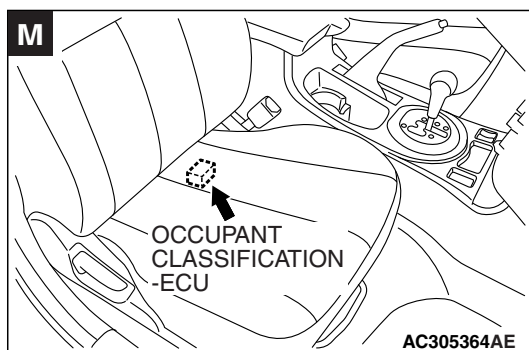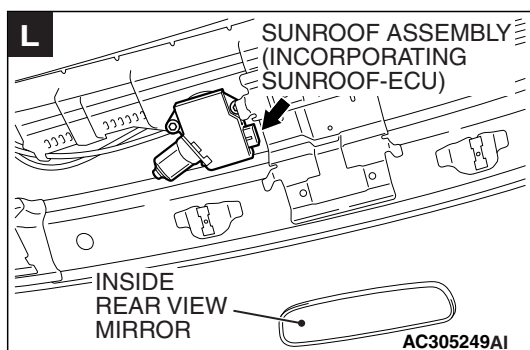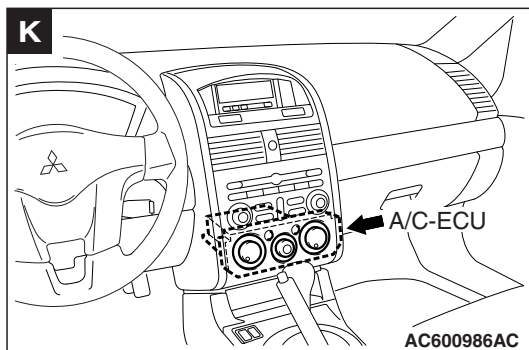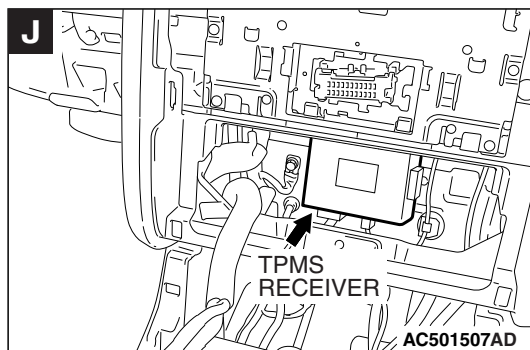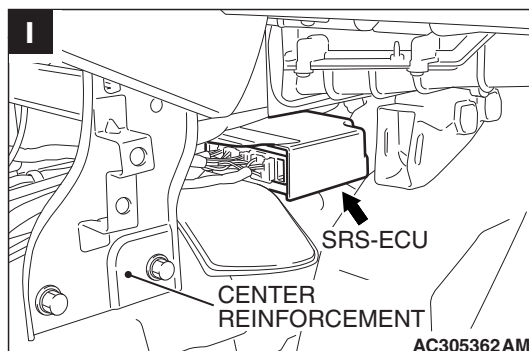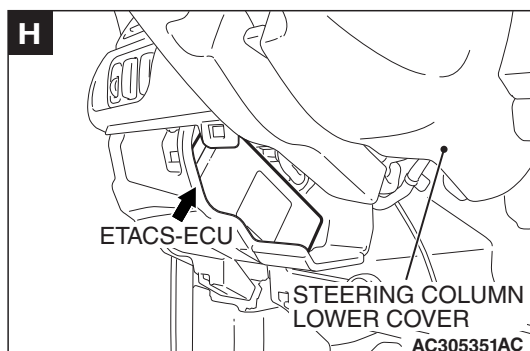       


# OTHER DEVICES


M1701005600540

NAME	SYMBOL	NAME	SYMBOL
A/C compressor assembly (incorporating A/C refrigerant temperature switch)	B	Power steering pressure switch	A



 
<2.4L ENGINE>

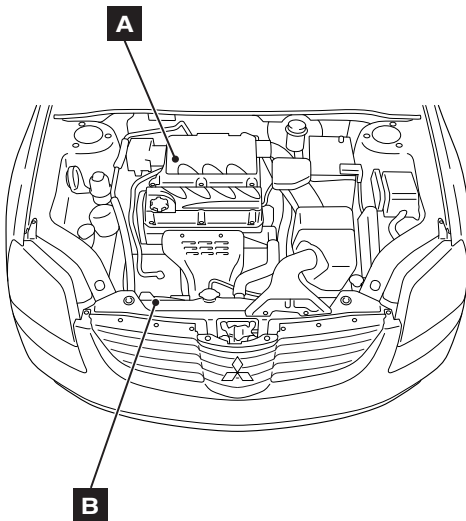

<3.8L ENGINE>

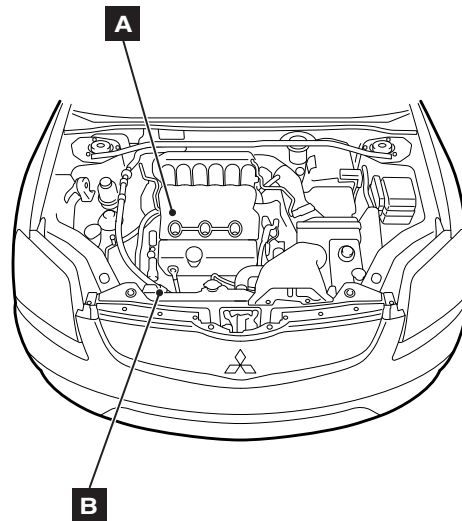 

AC808887AC

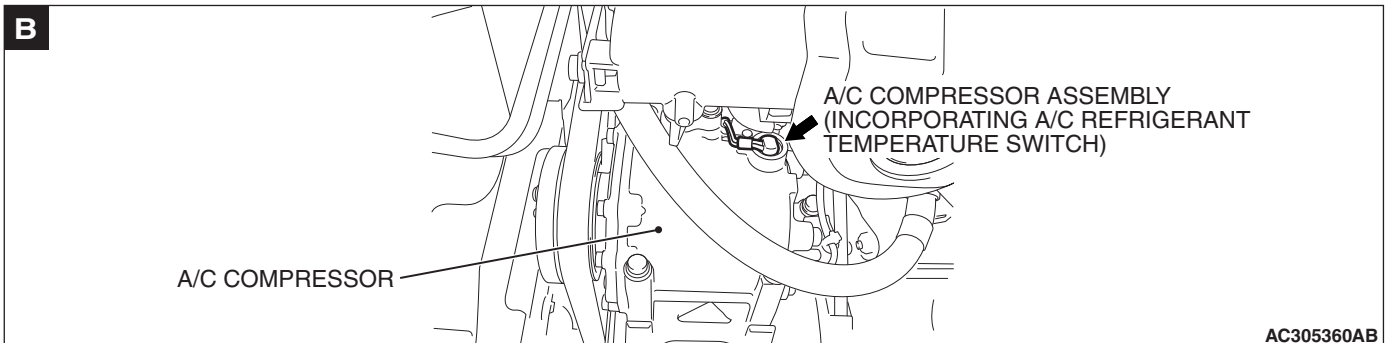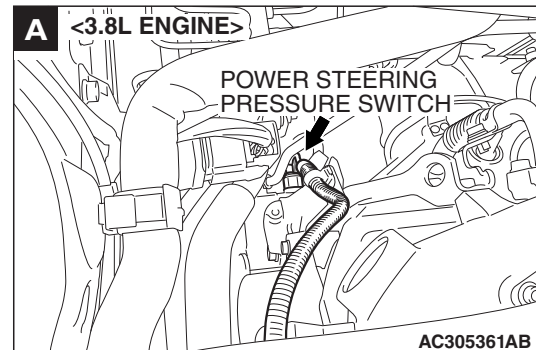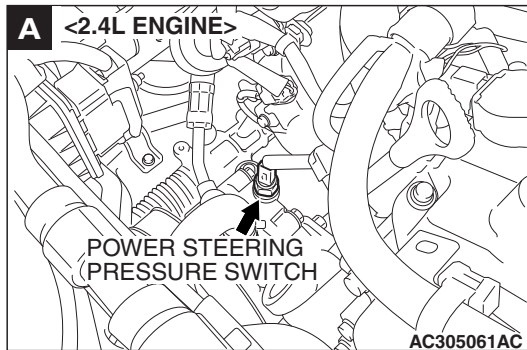   


SOLENOID AND SOLENOID VALVE


M1701000801843

NAME	SYMBOL	NAME	SYMBOL
A/T control solenoid valve assembly	E	Evaporative emission ventilation solenoid	F
Engine oil control valve	D	Exhaust gas recirculation valve	C
Evaporative emission purge solenoid	B	Hydraulic unit (incorporating ABS solenoid valve)	A

 
<2.4L ENGINE>

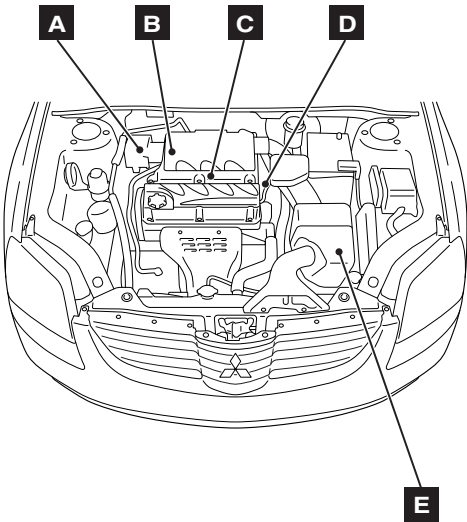

<3.8L ENGINE>

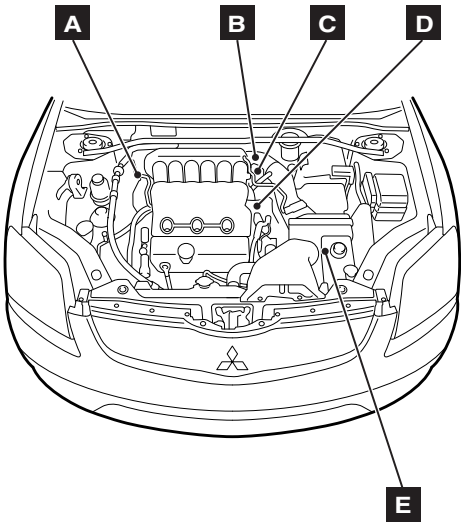 

AC808887AD

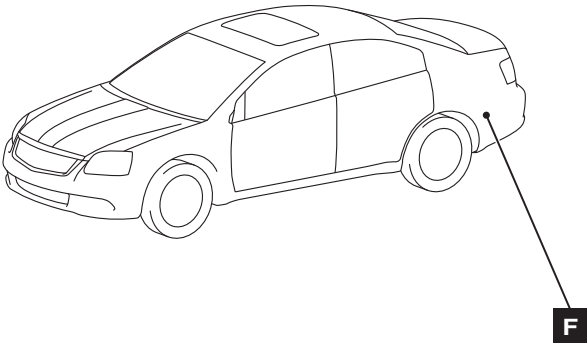 

AC708990AC



