

---

## GROUP 70

# COMPONENT LOCATIONS

 
### CONTENTS

RELAY .....	70-2	FUSIBLE LINK AND FUSE .....	70-18
ECU .....	70-3	INSPECTION TERMINAL LOCATION .....	70-20
SENSOR.....	70-8	EARTH CABLE.....	70-20
SOLENOID VALVE .....	70-16	EARTH .....	70-21


RELAY



M1701000400756

Name	Symbol	Name	Symbol
A/C compressor relay	A	Heated seat relay	B
A/T control relay	A	Horn relay	A
Engine control relay	A	Power window relay	B
Fan control relay	A	PTC heater relay 1	B
Front fog lamp relay	A	PTC heater relay 2	B
Front blower relay	B	Rear blower relay	B
Fuel pump relay 1	B	Rear window defogger relay	B
Fuel pump relay 2	B	Throttle valve control servo relay	A

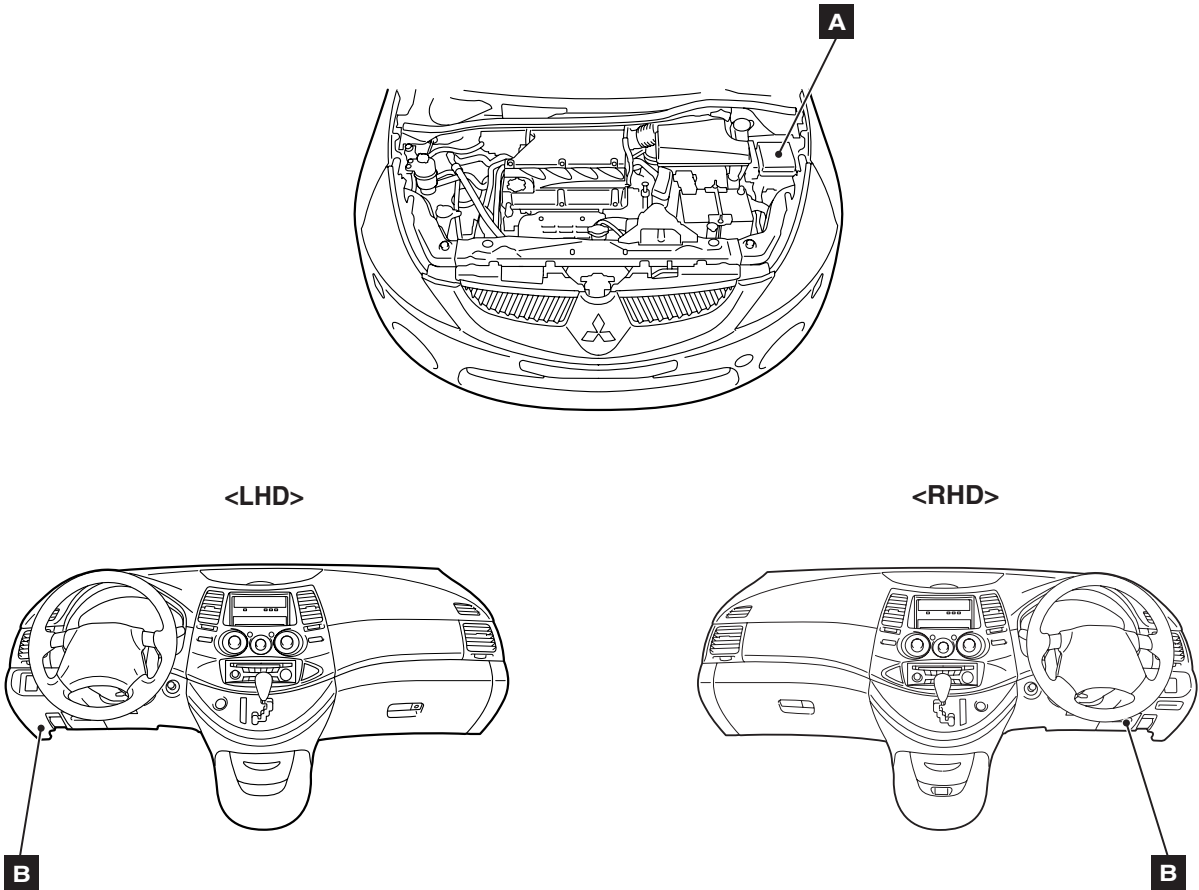

AC310823AE




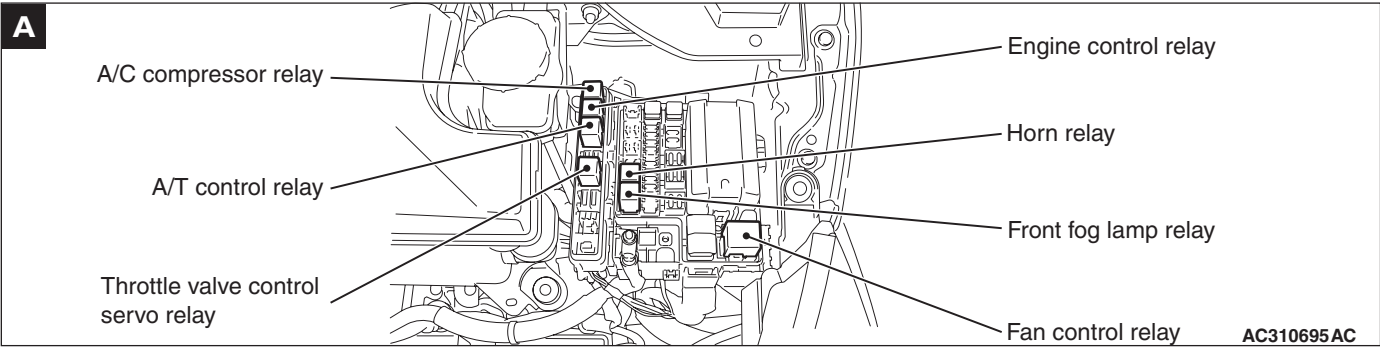 


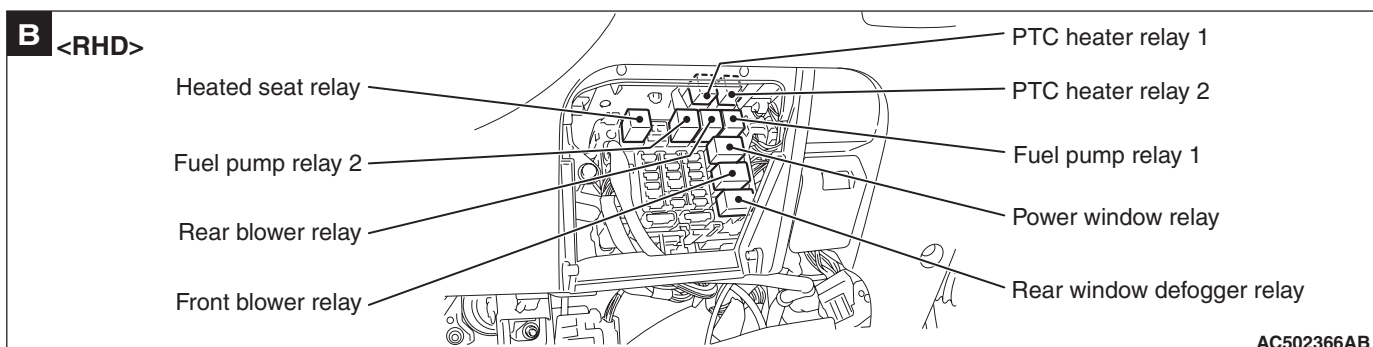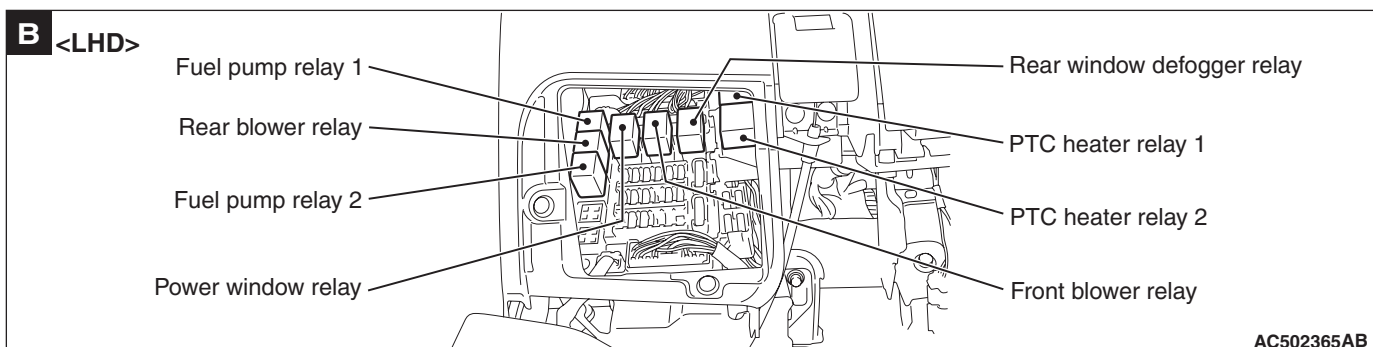  



## ECU

M1701000500322

    Name	Symbol	Name	Symbol
A/C-ECU	F	Front-ECU	B
ABS-ECU	A	Headlamp automatic levelling-ECU <Vehicles for Hong Kong and Singapore>	J
Column switch (incorporating Column-ECU)	D	Immobilizer-ECU <Vehicles for GCC>	E
Corner sensor/back sensor-ECU <Vehicles for Hong Kong, Singapore, Australia and New Zealand>	J	Immobilizer-ECU <Vehicles for Hong Kong and Singapore>	J
Discharge-ECU <Vehicles for Hong Kong and Singapore>	M	Power window main switch (incorporating ECU)	K
Engine-A/T-ECU <A/T>	I	Power window sub switch (incorporating ECU) <Vehicles for Hong Kong and Singapore>	N
Engine-ECU <M/T>	I	SRS-ECU	H
ETACS-ECU	G	Sunroof motor assembly (incorporating ECU)	L
Fan controller	C		

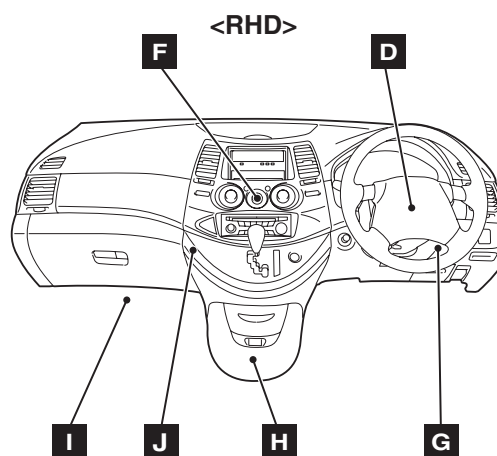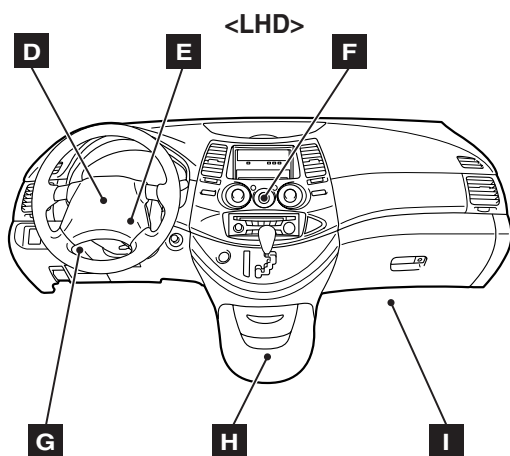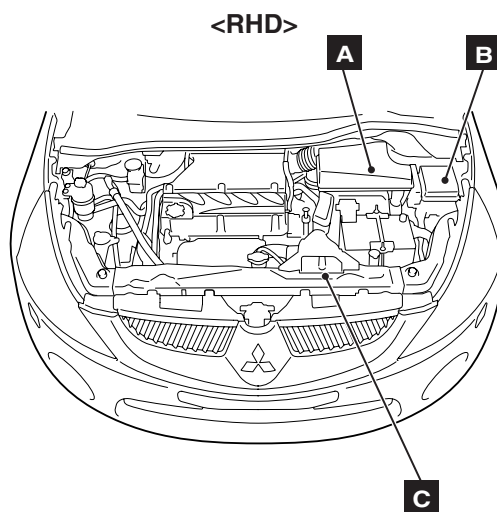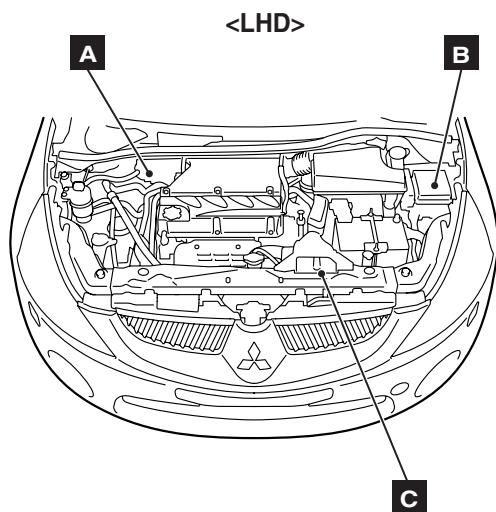









AC311101AF







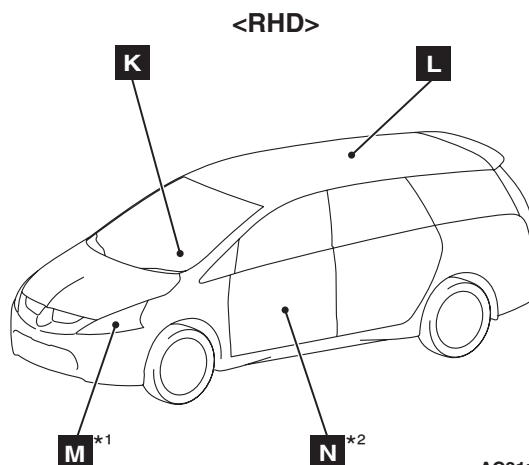 
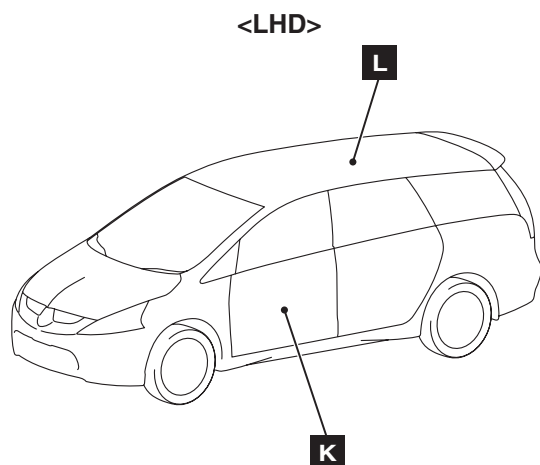 




AC311102AB

## NOTE:

                  1. \*1: also equipped at the right side.
2. \*2: also equipped on the rear door.

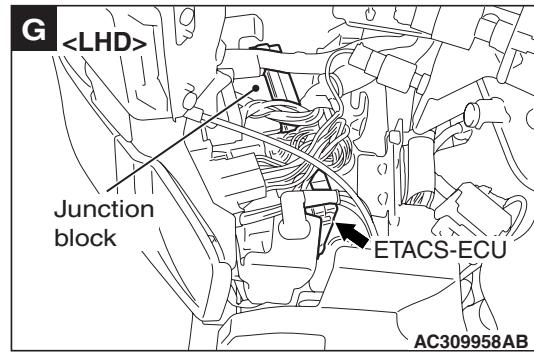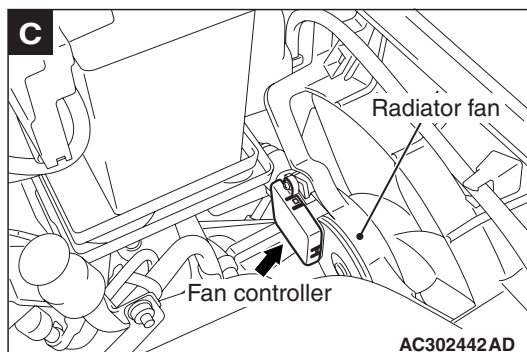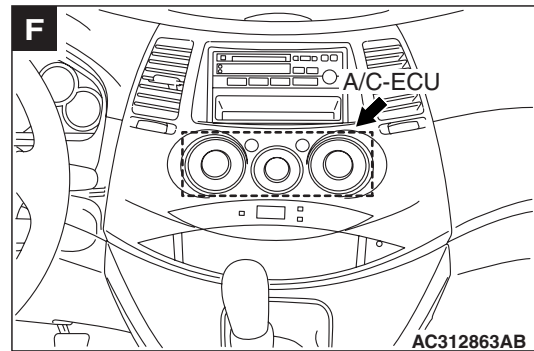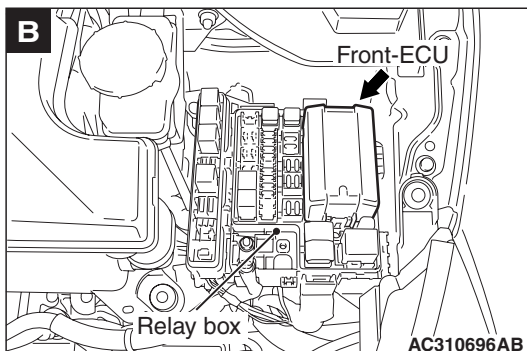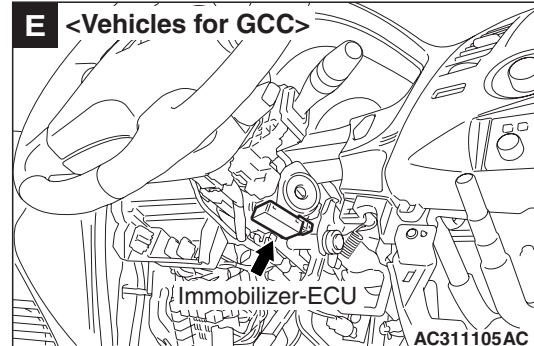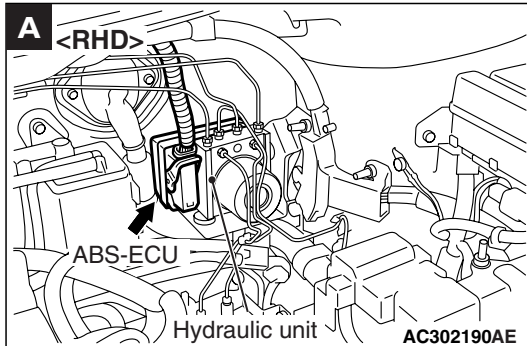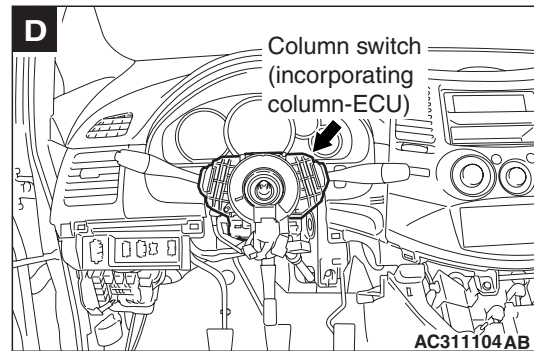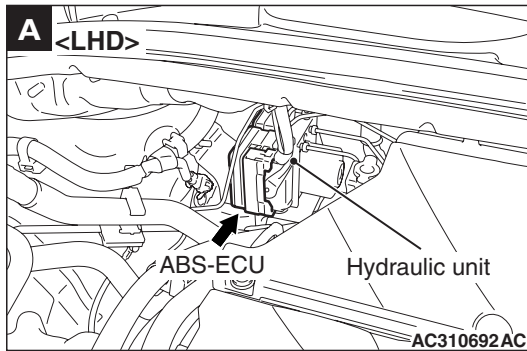

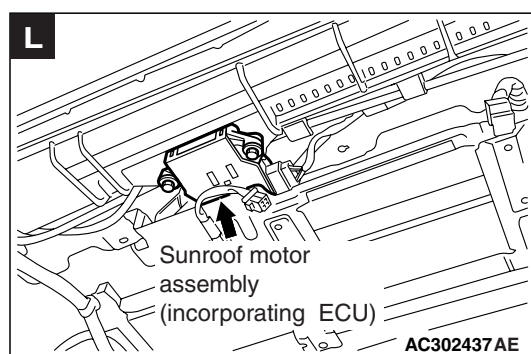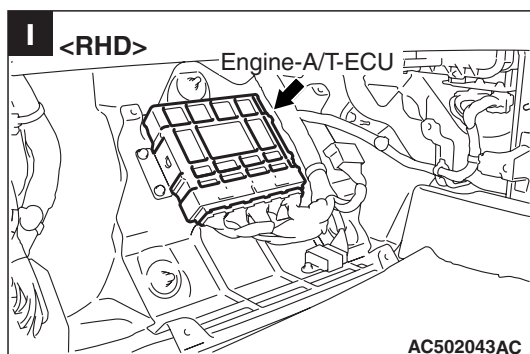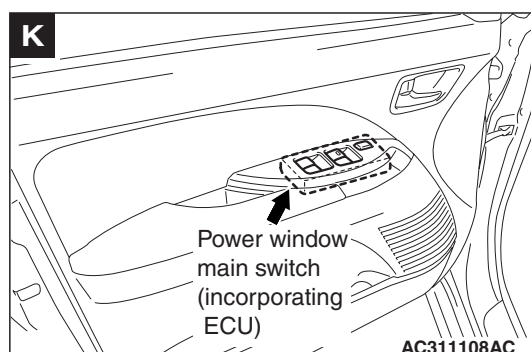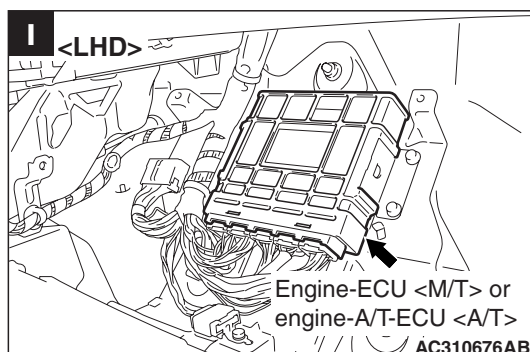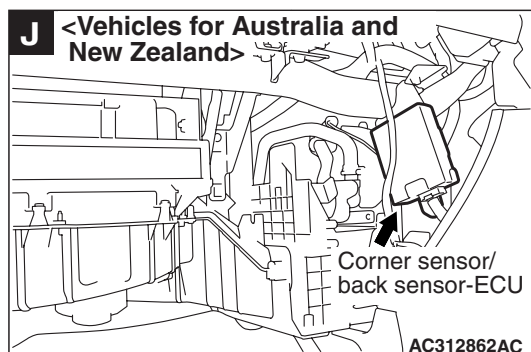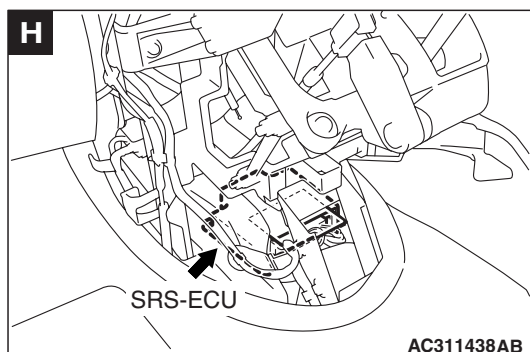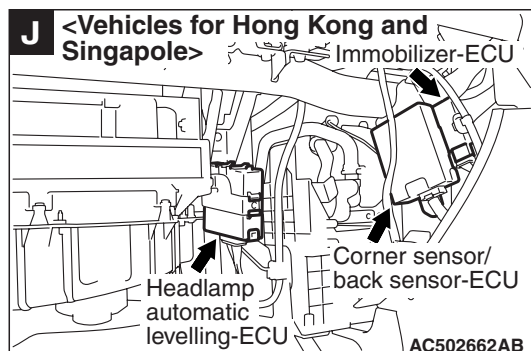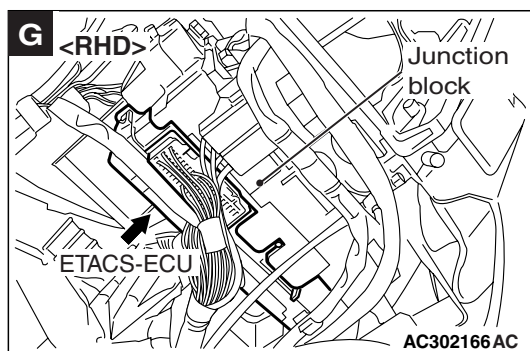

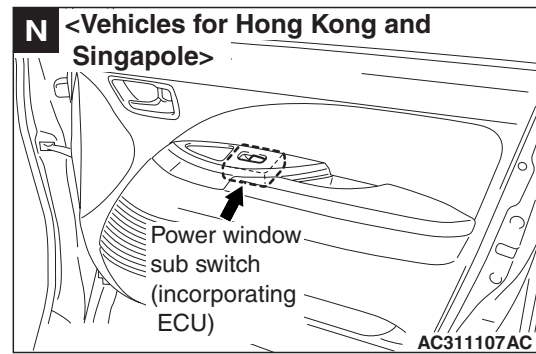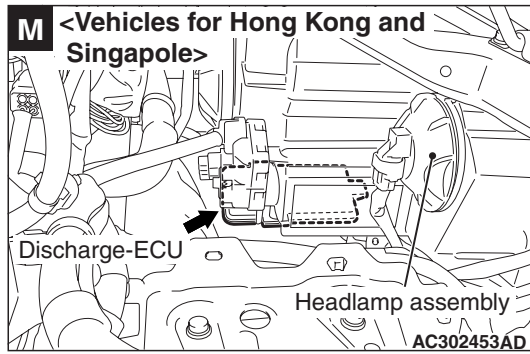







## SENSOR



M1701000600921

    Name	Symbol	Name	Symbol
A/C pressure sensor	A	Electronic-controlled throttle valve (incorporating throttle position sensor)	C
Accelerator pedal position sensor	Q	Engine coolant temperature sensor	J
Air flow sensor	F	Front impact sensor	M
Air thermo sensor	R	Height sensor (Front) <Vehicles with headlamp automatic levelling system>	S
Ambient temperature sensor	K	Height sensor (Rear) <Vehicles with headlamp automatic levelling system>	X
Back sensor (LH, RH) <Vehicles for Australia and New Zealand>	Z	Input shaft speed sensor <A/T>	L
Back sensor <Vehicles for Hong Kong and Singapore>	Z	Interior temperature sensor	O
Camshaft position sensor	D	Output shaft speed sensor <A/T>	L
Corner sensor (Front) <Vehicles for Hong Kong and Singapore>	N	Photo sensor	P
Corner sensor (Rear) <Vehicles for Hong Kong, Singapore, Australia and New Zealand>	Z	Power steering fluid pressure sensor	G
Crank angle sensor	H	Seat slide sensor <Vehicles for Hong Kong, Singapore, Australia and New Zealand>	T
Cylinder 1, 4 heated oxygen sensor <Except vehicles for Hong Kong, Singapore, Australia and New Zealand>	I	Side impact sensor (Front)	W
Cylinder 1, 4 heated oxygen sensor (Front, Rear) <Vehicles for Hong Kong, Singapore, Australia and New Zealand>	I	Side impact sensor (Rear)	U
Cylinder 2, 3 heated oxygen sensor <Except vehicles for Hong Kong, Singapore, Australia and New Zealand>	I	Vehicle speed sensor <M/T>	E
Cylinder 2, 3 heated oxygen sensor (Front, Rear) <Vehicles for Hong Kong, Singapore, Australia and New Zealand>	I	Wheel speed sensor (Front)	V
Detonation sensor	B	Wheel speed sensor (Rear)	Y





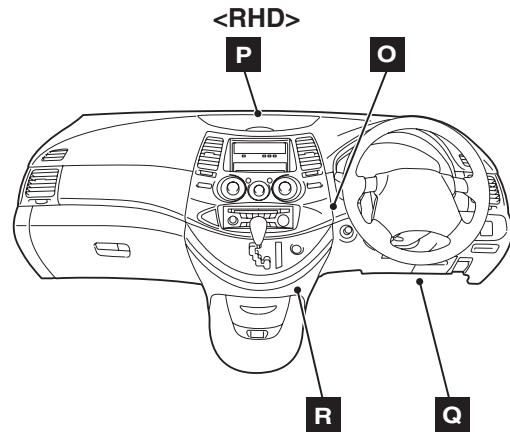
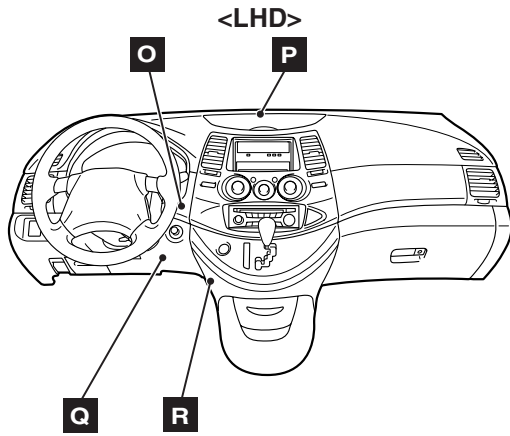
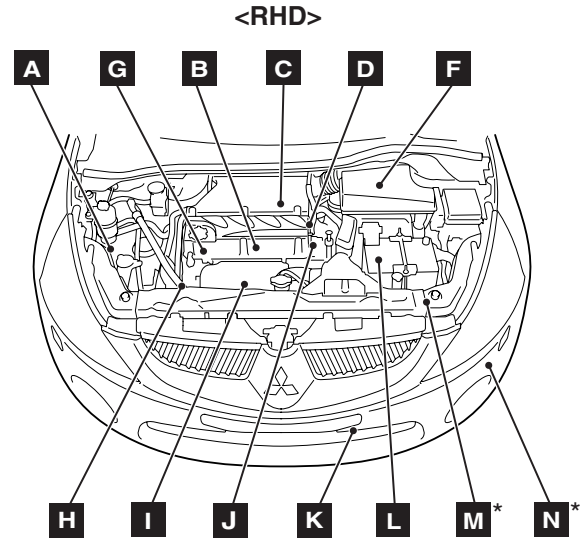
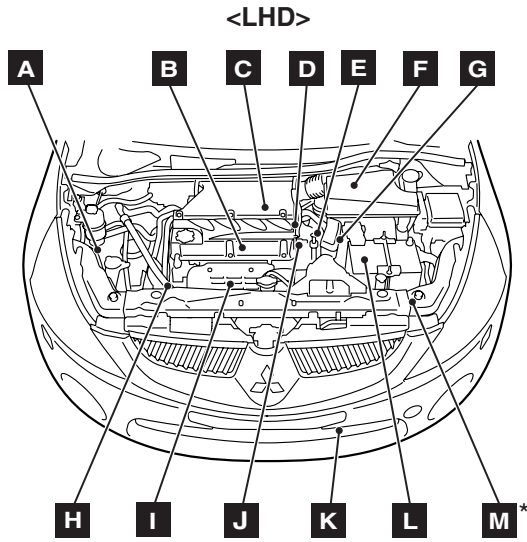








AC311101AE





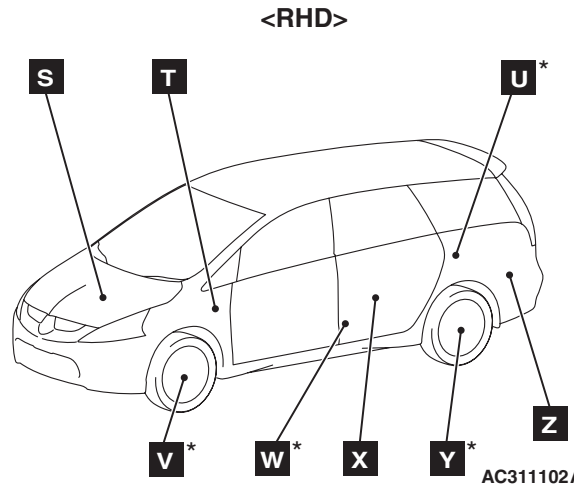 
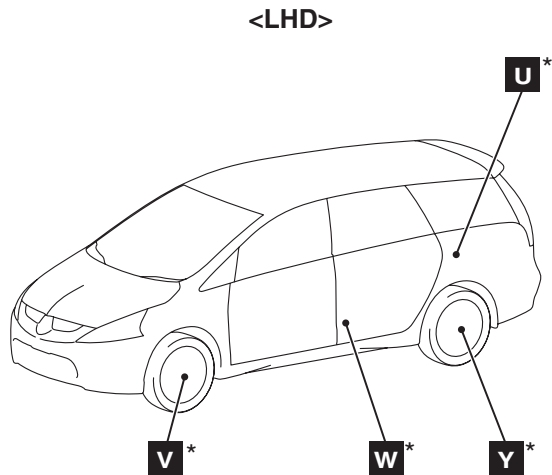 


AC311102AF

                  
NOTE: \*: also equipped at the right side.

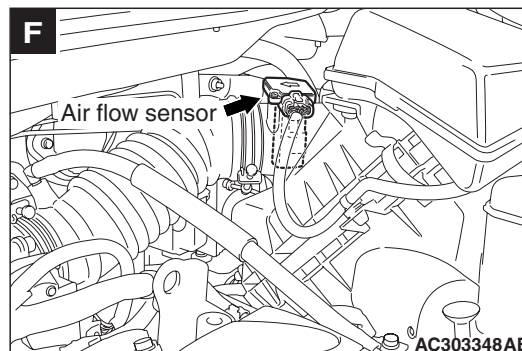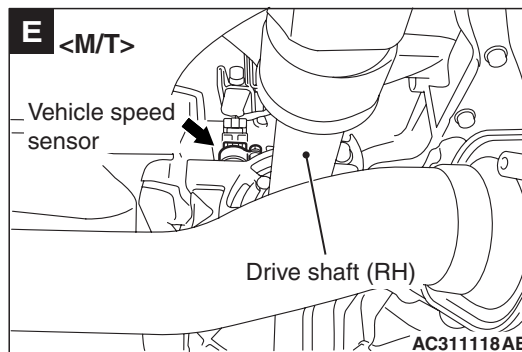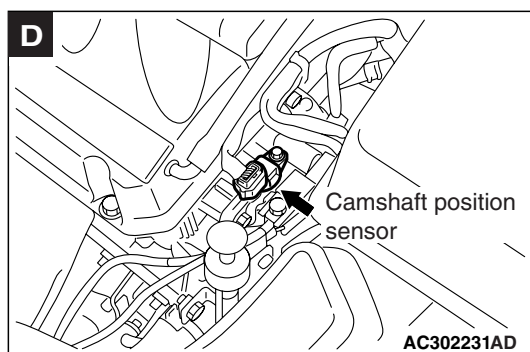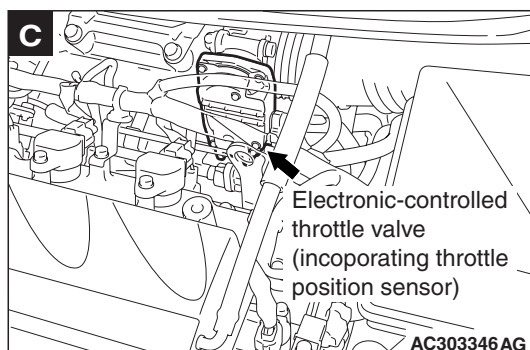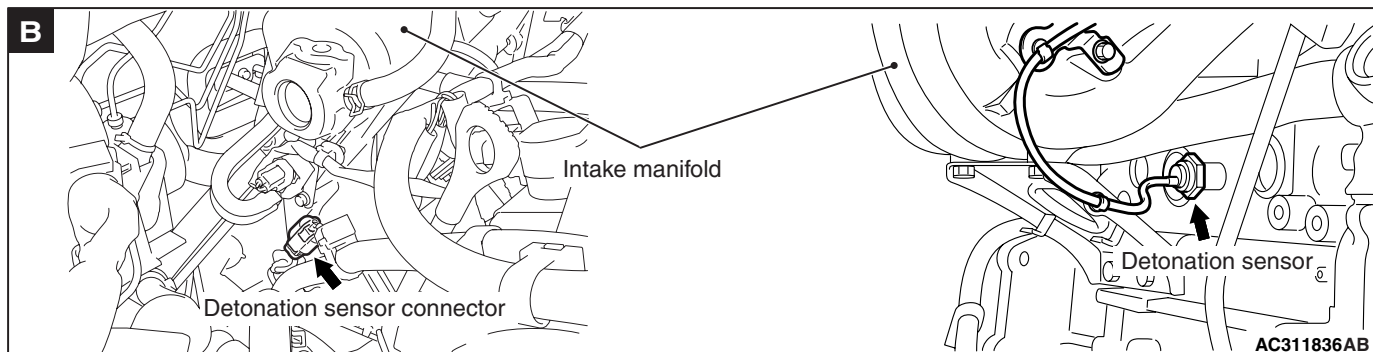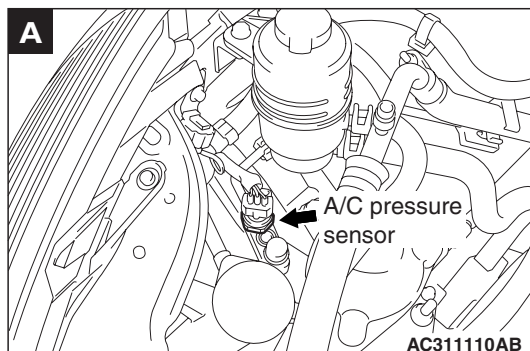

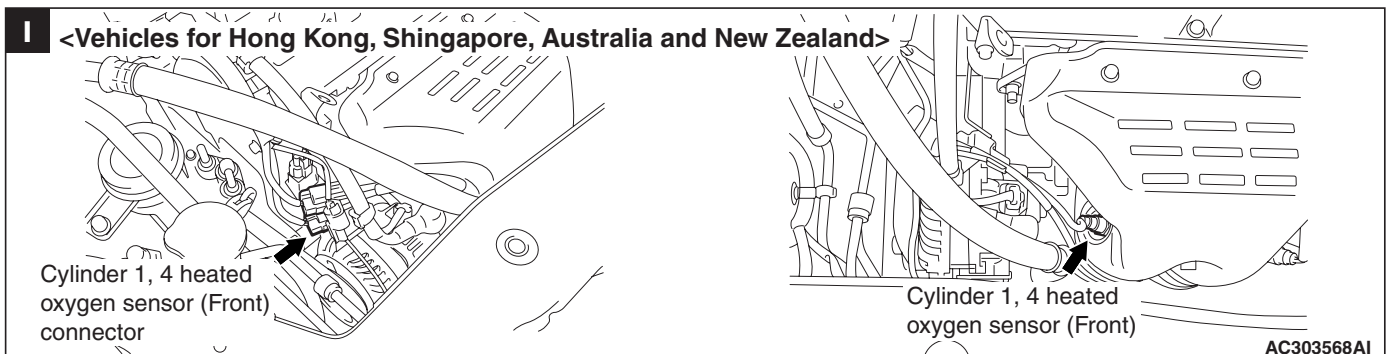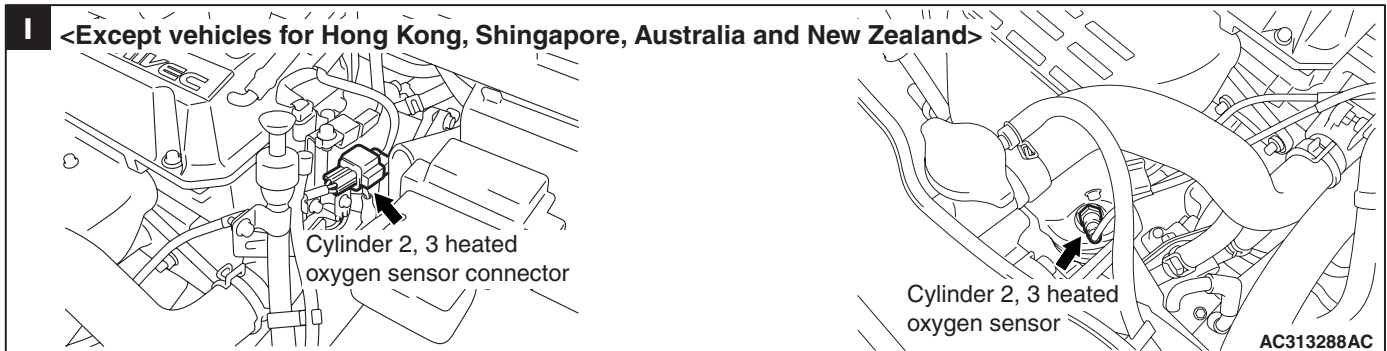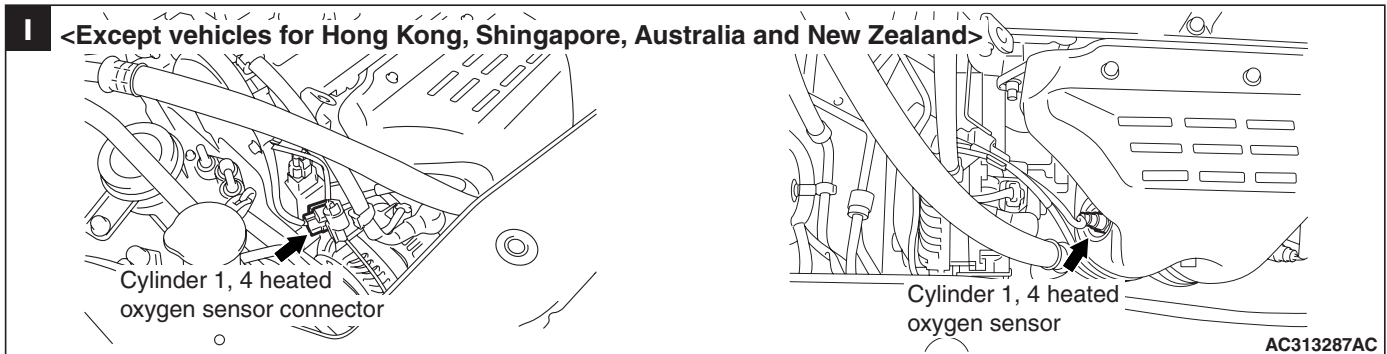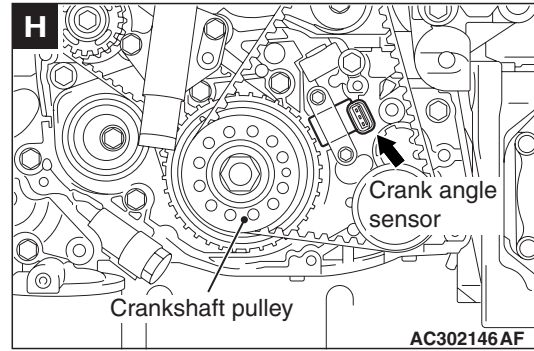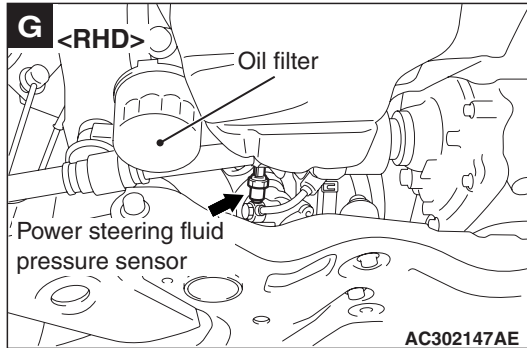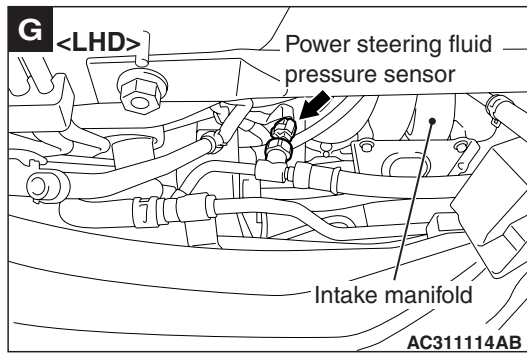


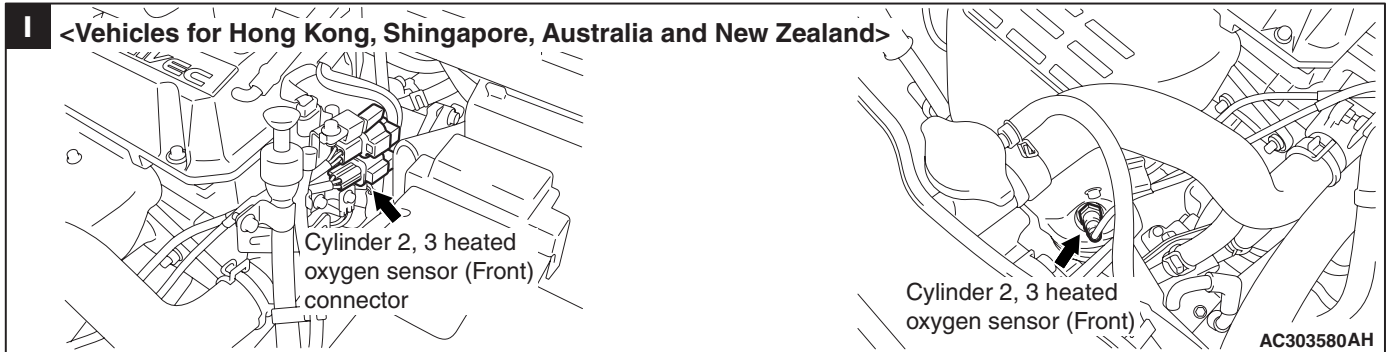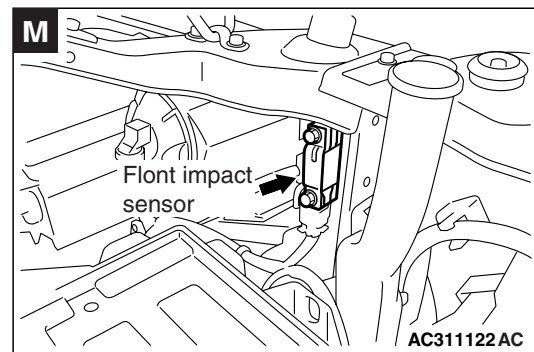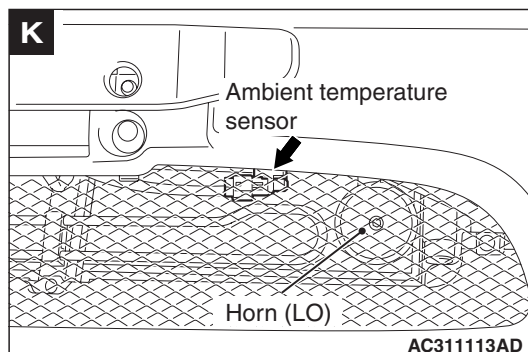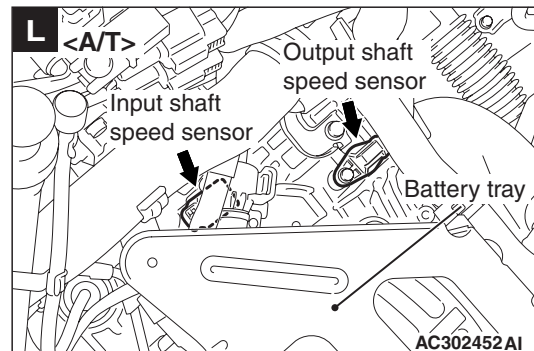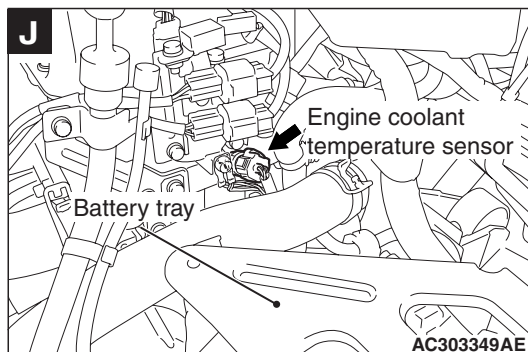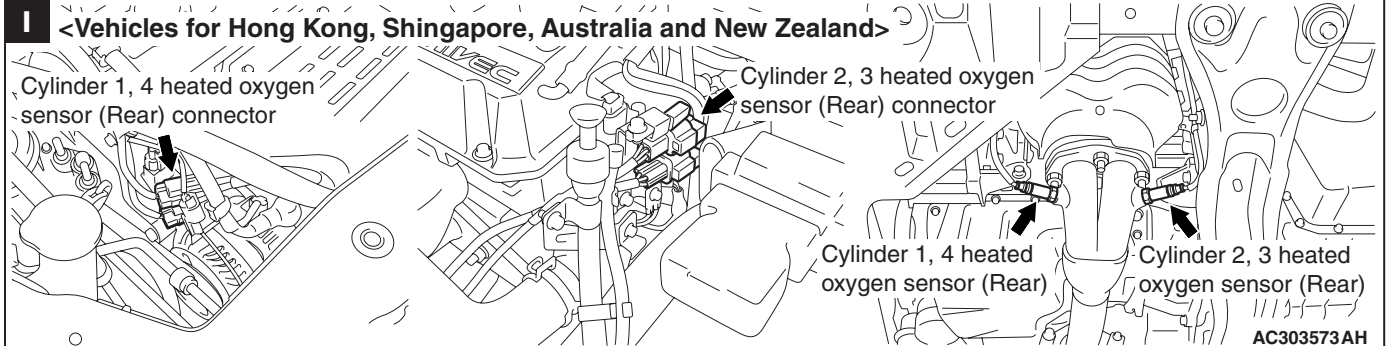**I** <Vehicles for Hong Kong, Shingapore, Australia and New Zealand>**I** <Vehicles for Hong Kong, Shingapore, Australia and New Zealand>

 
**N** <Vehicles for Hong Kong and Singapore>

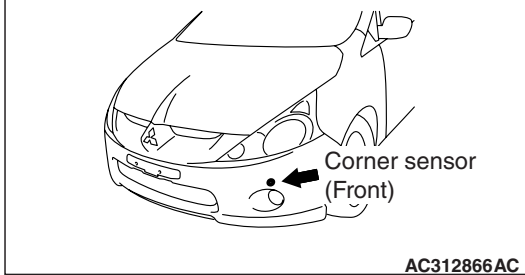


**Q** <RHD>

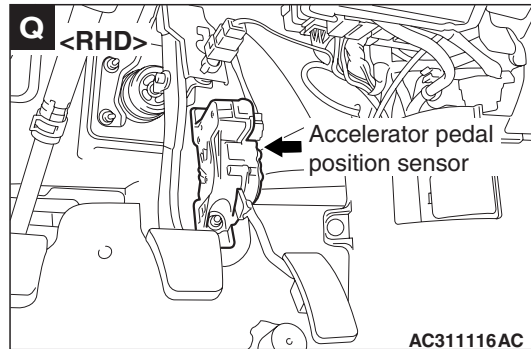 


**O**

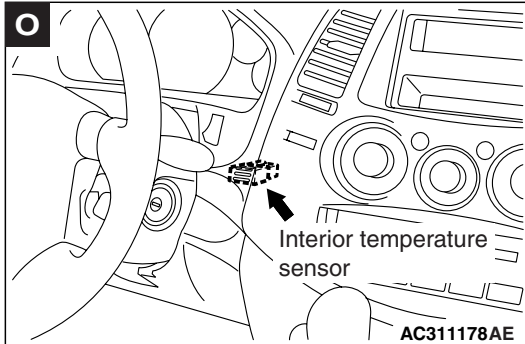 


**R**

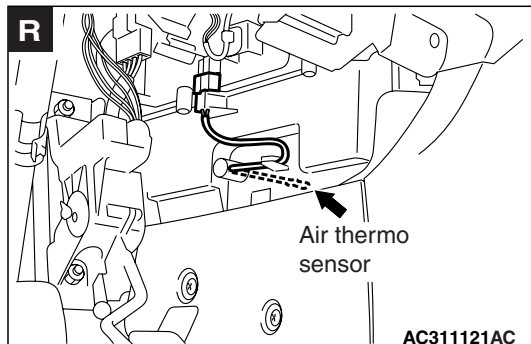 


**P**

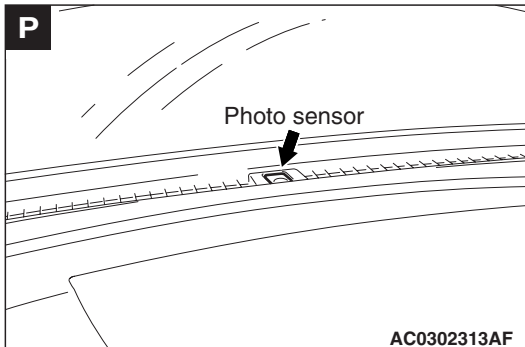 


**S**

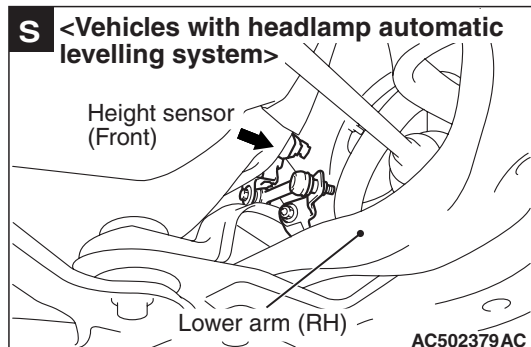 






**Q**


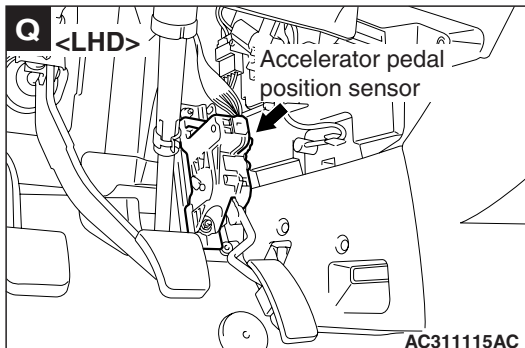 


**T**

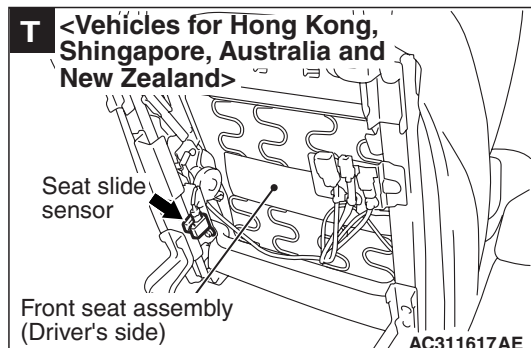 



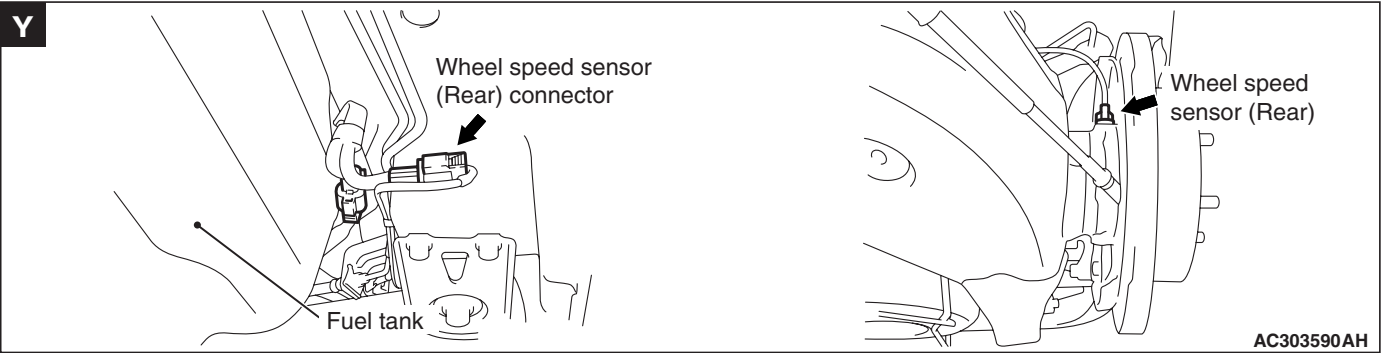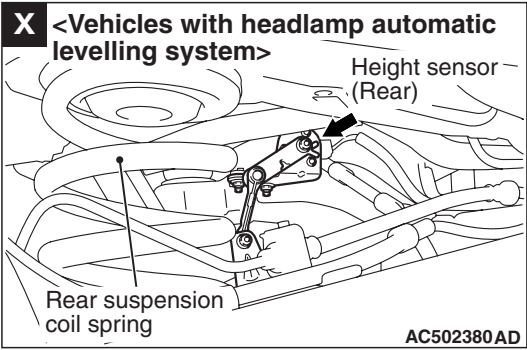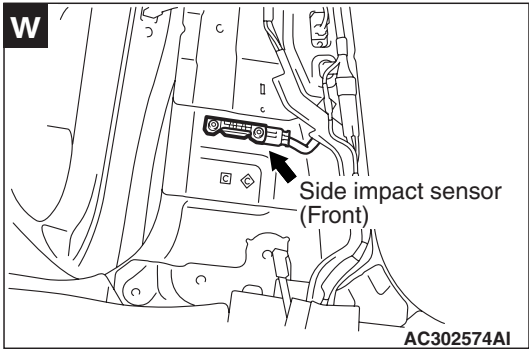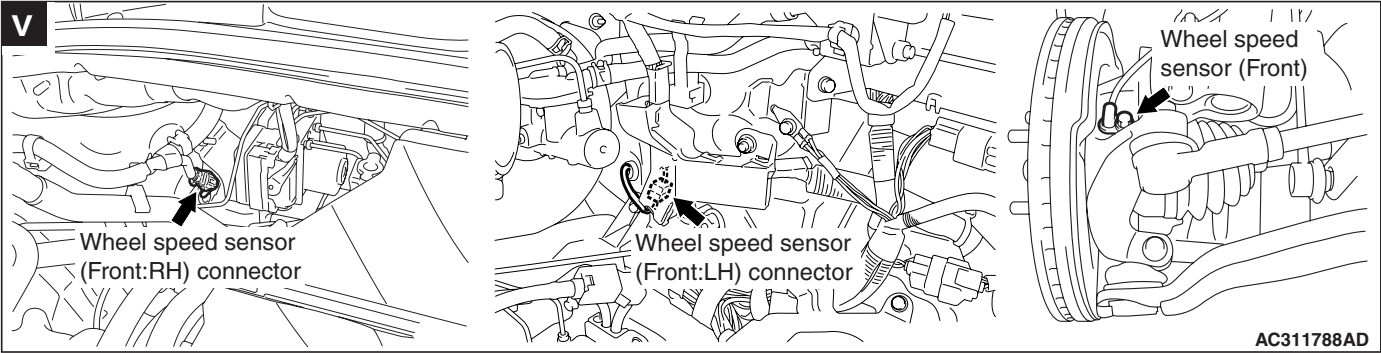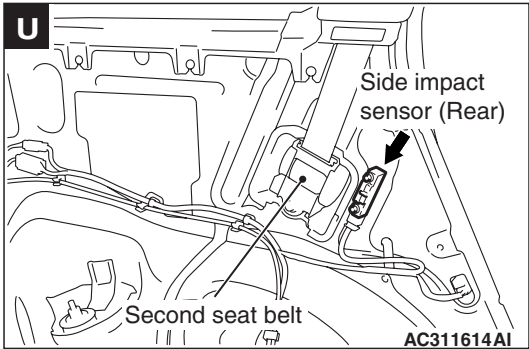     

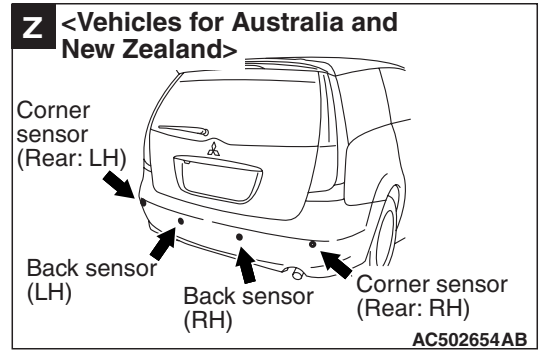 
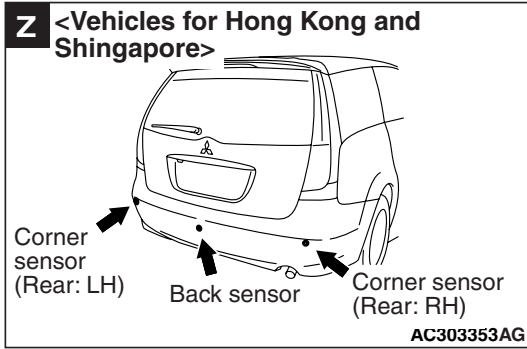 








SOLENOID VALVE



M1701000800464

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	E	Hydraulic unit (incorporating solenoid valve)	A
Engine oil control valve	D	Purge control solenoid valve	B
Exhaust gas recirculation valve	C		

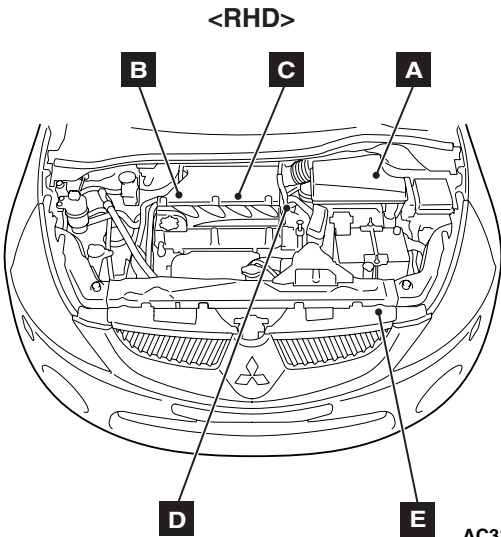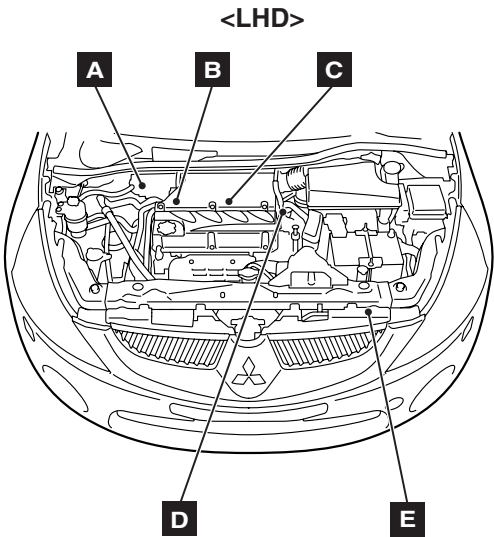  


AC310822AB

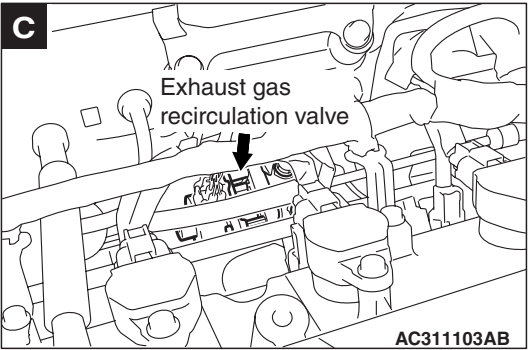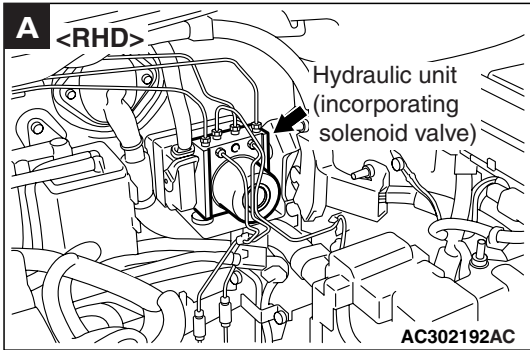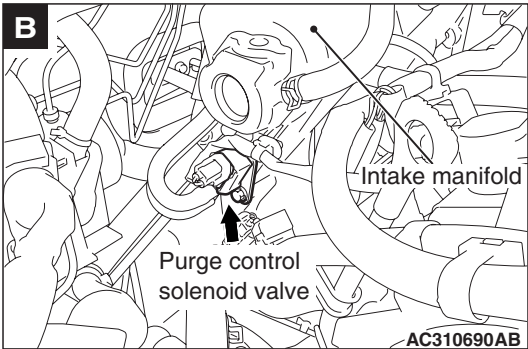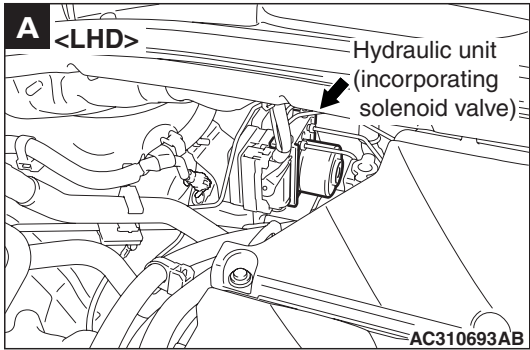    

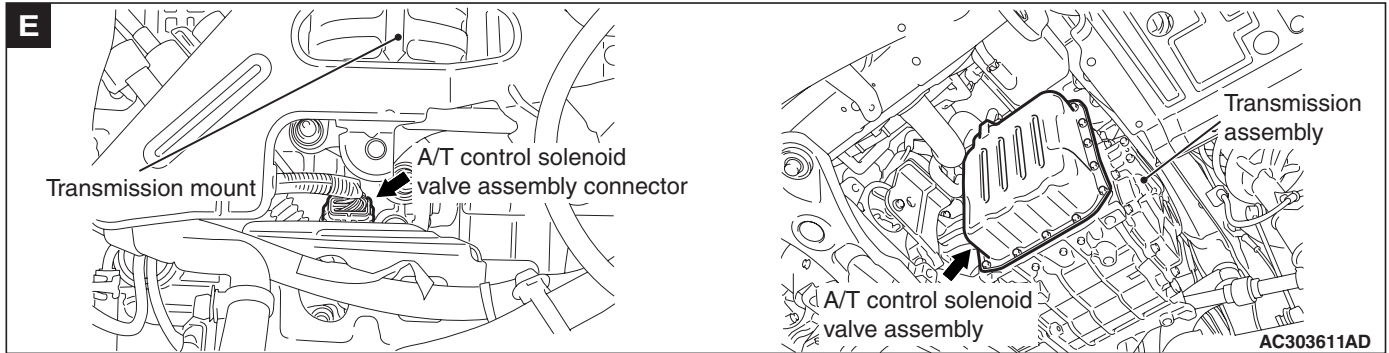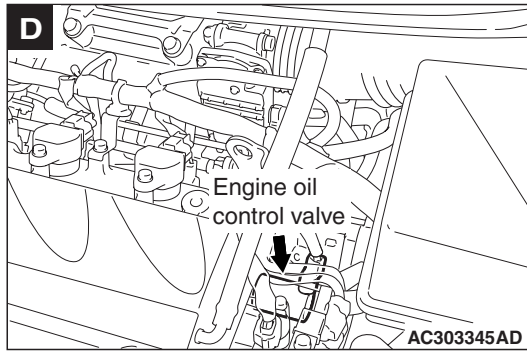  


FUSIBLE LINK AND FUSE


Name	Symbol	Name	Symbol
Fuses No.1 to 24 (Passenger compartment)	C	Fusible links No.2 to 5 (Engine compartment)	B
Fuses No.6 to 25 (Engine compartment)	B	Fusible links No.26 to 31 (Battery positive terminal)	A

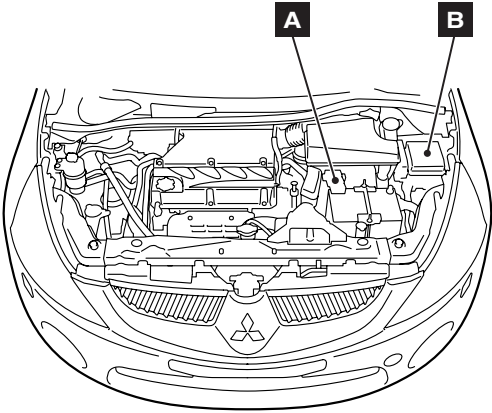 



<LHD>



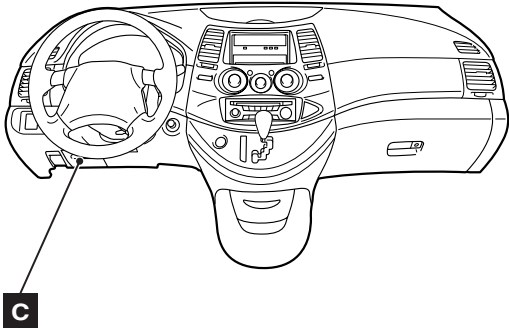 


<RHD>

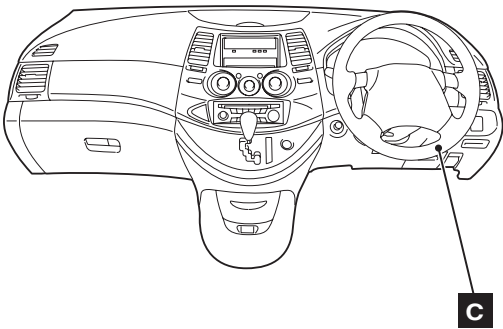 



AC310823AB

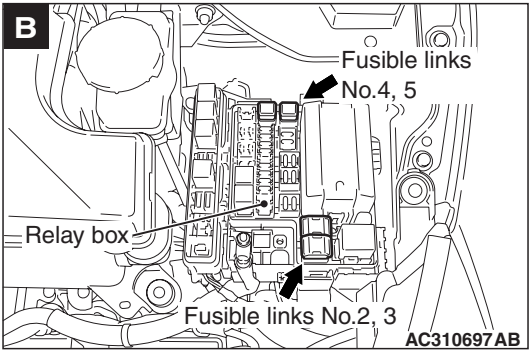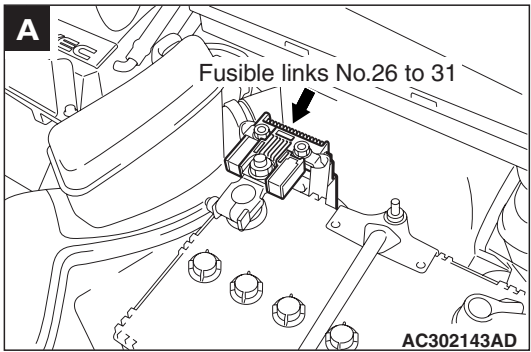  

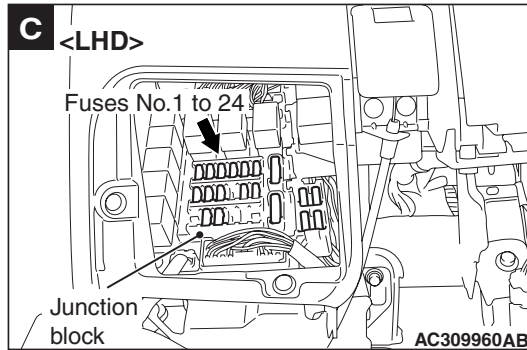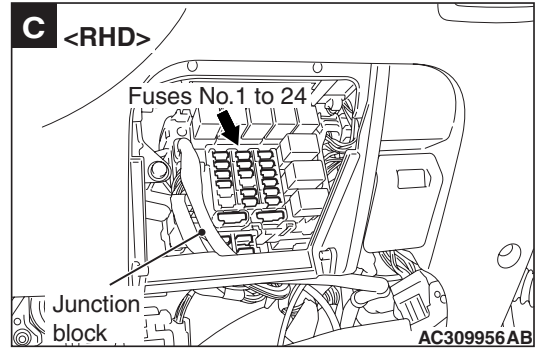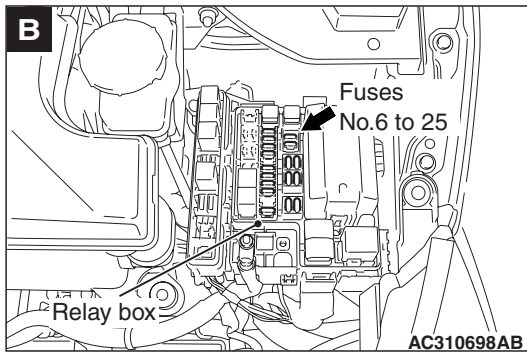   

# INSPECTION TERMINAL LOCATION

 
 
M1701000200406

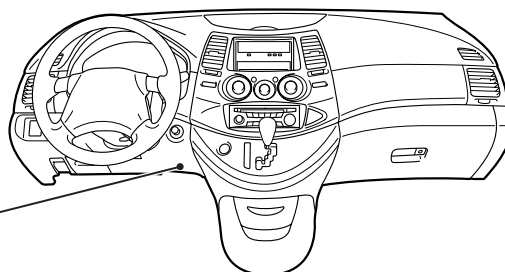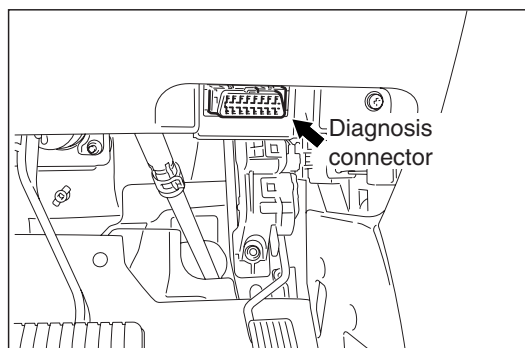

AC311119AB

## EARTH CABLE

  M1701001000375

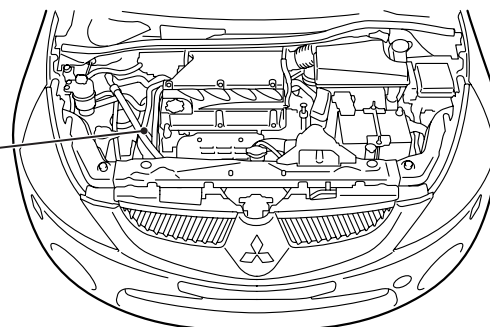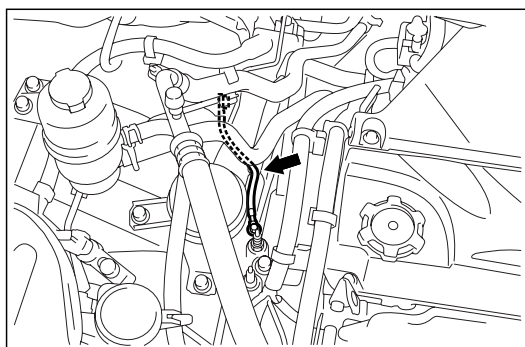


AC310821AB

EARTH


M1701000300748

 LHD

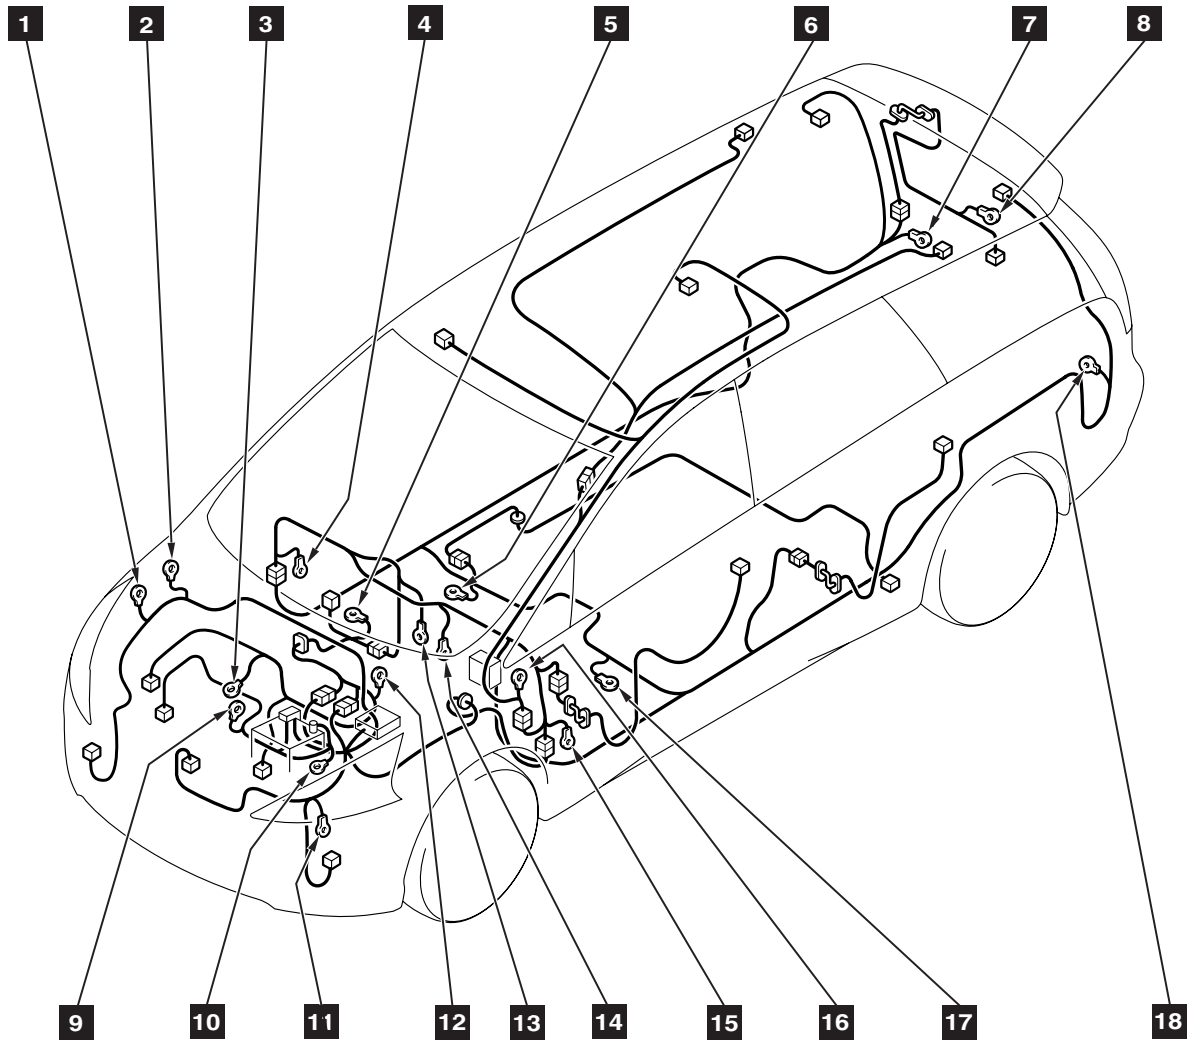

AC501441AC

 RHD

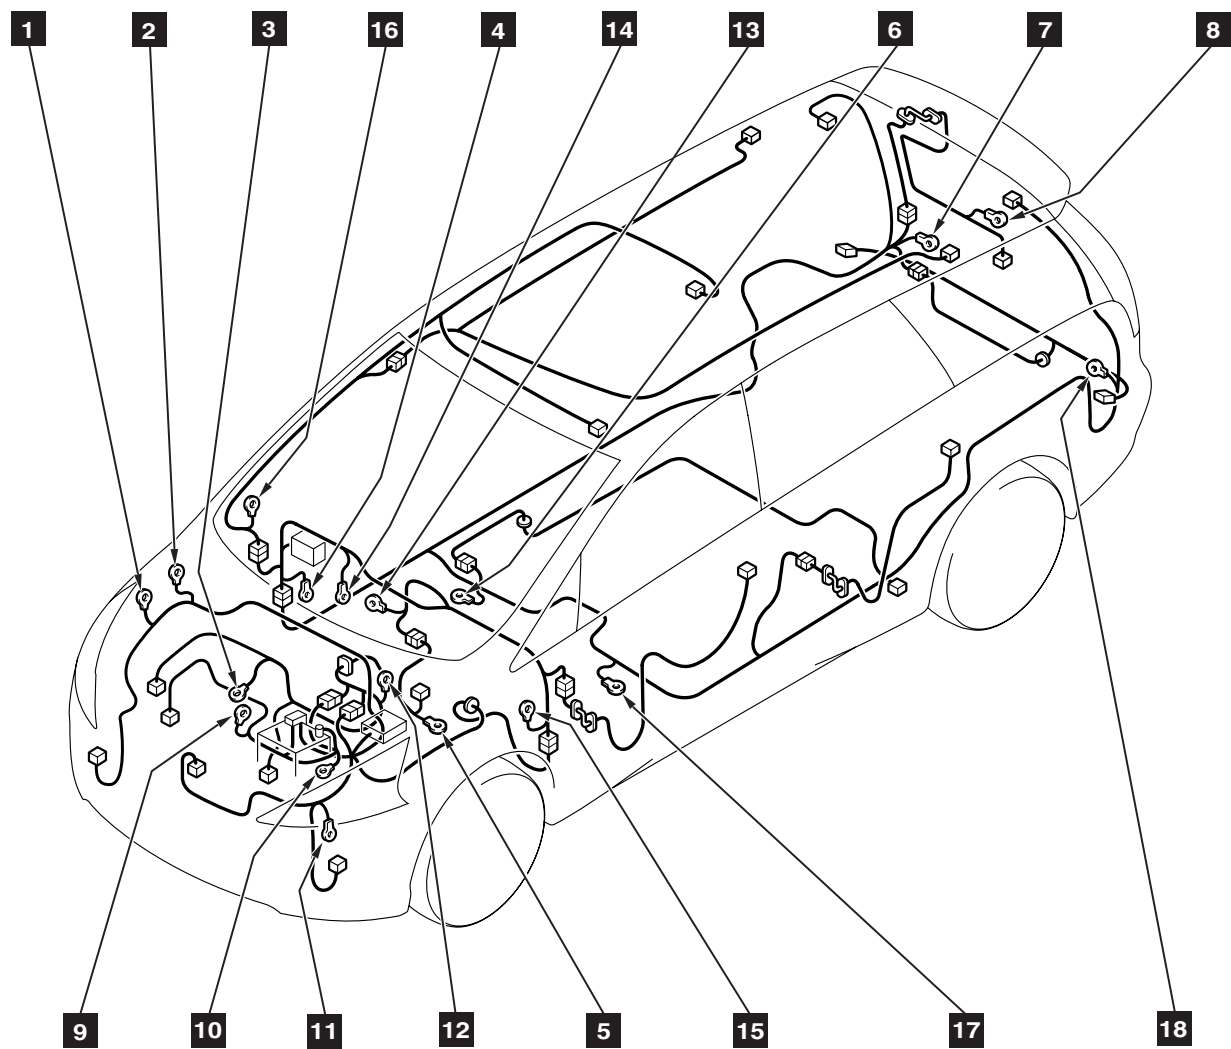

AC501357AC

NOTE: Same earth numbers are used in the circuit diagram.

