

GROUP 80B

SPLICE LOCATIONS

CONTENTS

HOW TO READ SPLICE LOCATIONS.....	80B-2	DASH PANEL.....	80B-6
INDEX.....	80B-2	FLOOR AND ROOF	80B-8
ENGINE COMPARTMENT.....	80B-4	DOOR	80B-9
ENGINE AND TRANSAXLE	80B-5	LUGGAGE COMPARTMENT.....	80B-10

HOW TO READ SPLICE LOCATIONS

M1802000100294

"Splice locations" describes splice points of each wiring harness on an actual vehicle.


Indicates a splice point number.

The splice point numbers are identical to those in "CIRCUIT DIAGRAMS," making them easy to use. In addition, the splice point numbers are usually numbered clockwise.

Example: S 013

Sequential number

Prefix meaning splice point

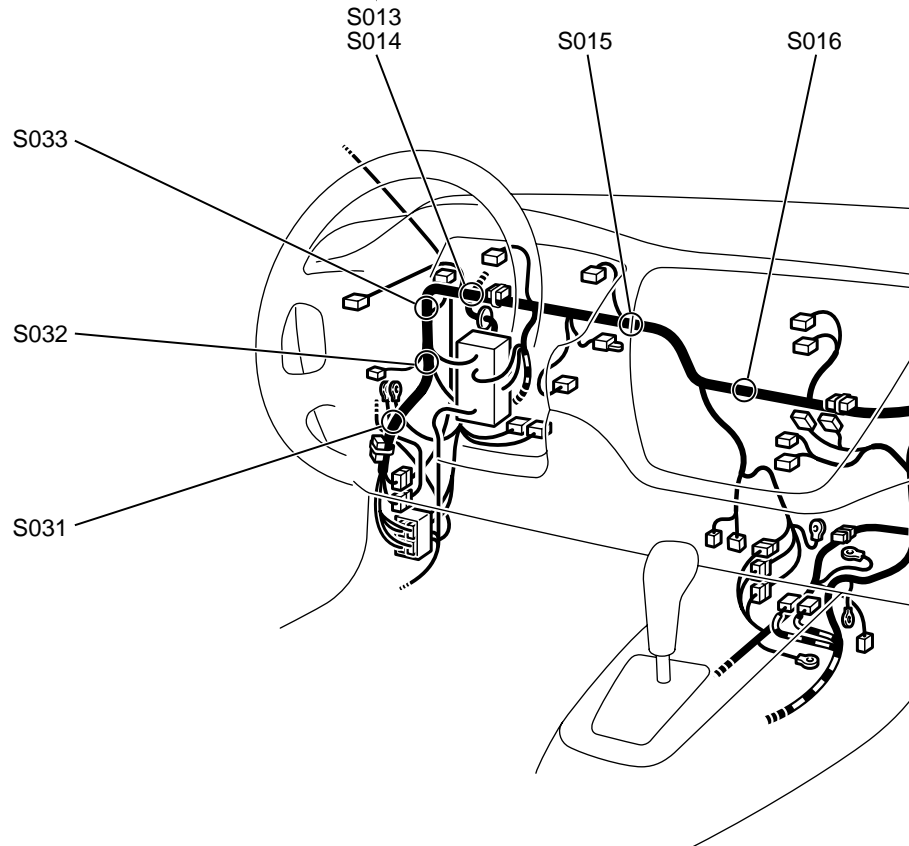

AC100213AB

INDEX


M1802000900438

This index shows the page numbers where the splice locations are.

SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE	SPLICE LOCATION NO.	PAGE
S001	P.80B-4	S022	P.80B-6	S043	P.80B-7	S066	P.80B-8
S002	P.80B-4	S023	P.80B-6	S044	P.80B-7	S067	P.80B-8
S003	P.80B-4	S024	P.80B-7	S045	P.80B-7	S068	P.80B-9
S004	P.80B-4	S025	P.80B-7	S046	P.80B-7	S069	P.80B-9
S005	P.80B-4	S026	P.80B-7	S047	P.80B-7	S070	P.80B-9
S006	P.80B-4	S027	P.80B-7	S048	P.80B-7	S071	P.80B-9
S007	P.80B-4	S028	P.80B-7	S049	P.80B-7	S072	P.80B-10
S008	P.80B-5	S029	P.80B-7	S050	P.80B-7	S073	P.80B-10
S009	P.80B-5	S030	P.80B-7	S051	P.80B-7	S074	P.80B-10
S010	P.80B-5	S031	P.80B-7	S052	P.80B-7	S076	P.80B-4
S011	P.80B-5	S032	P.80B-7	S053	P.80B-6	S077	P.80B-4
S012	P.80B-5	S033	P.80B-7	S054	P.80B-6	S078	P.80B-4
S013	P.80B-5	S034	P.80B-7	S055	P.80B-6	S079	P.80B-5
S014	P.80B-5	S035	P.80B-7	S057	P.80B-6	S080	P.80B-5
S015	P.80B-5	S036	P.80B-7	S058	P.80B-6	S082	P.80B-6
S016	P.80B-6	S037	P.80B-7	S059	P.80B-8	S083	P.80B-8
S017	P.80B-6	S038	P.80B-7	S060	P.80B-8	S084	P.80B-9
S018	P.80B-6	S039	P.80B-7	S061	P.80B-8	S085	P.80B-9
S019	P.80B-6	S040	P.80B-7	S062	P.80B-8	S086	P.80B-10
S020	P.80B-6	S041	P.80B-7	S064	P.80B-8		
S021	P.80B-6	S042	P.80B-7	S065	P.80B-8		

ENGINE COMPARTMENT


M1802000200321

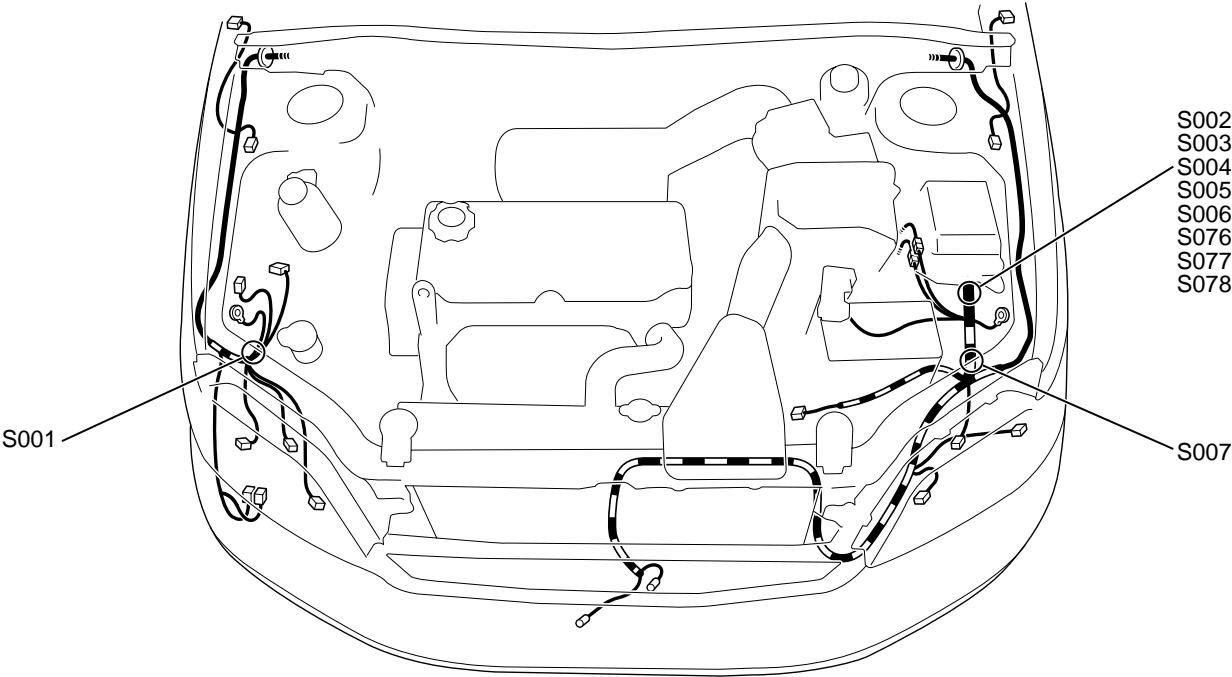

AC100215AH

ENGINE AND TRANSAXLE


M1802001400209

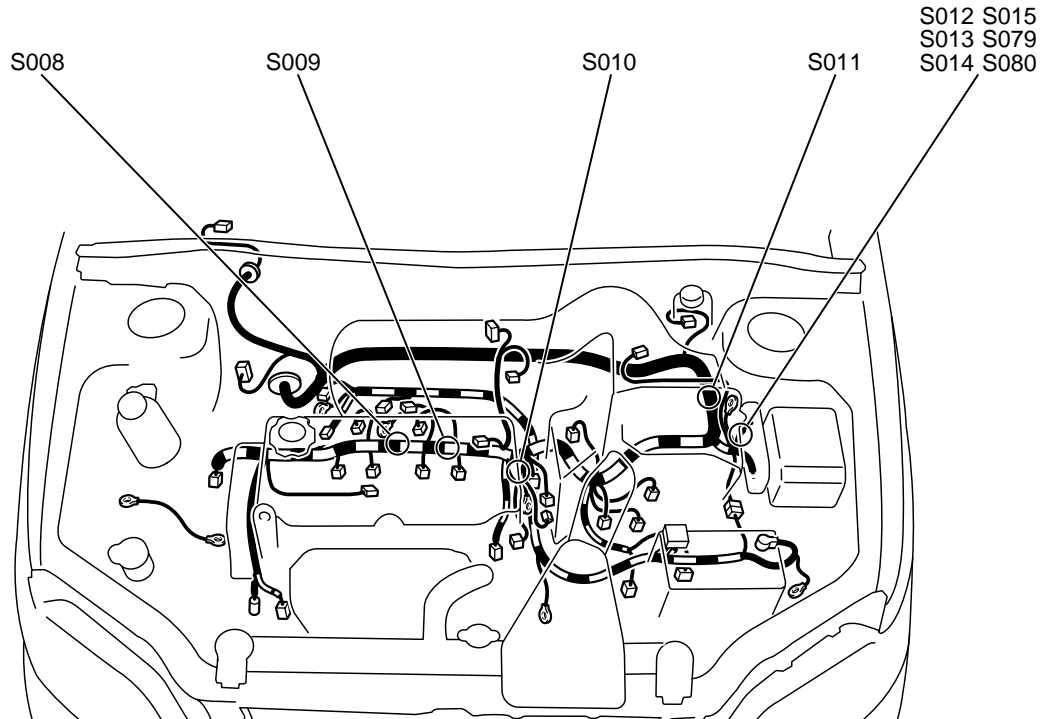


AC107352AB

DASH PANEL

M1802000300328

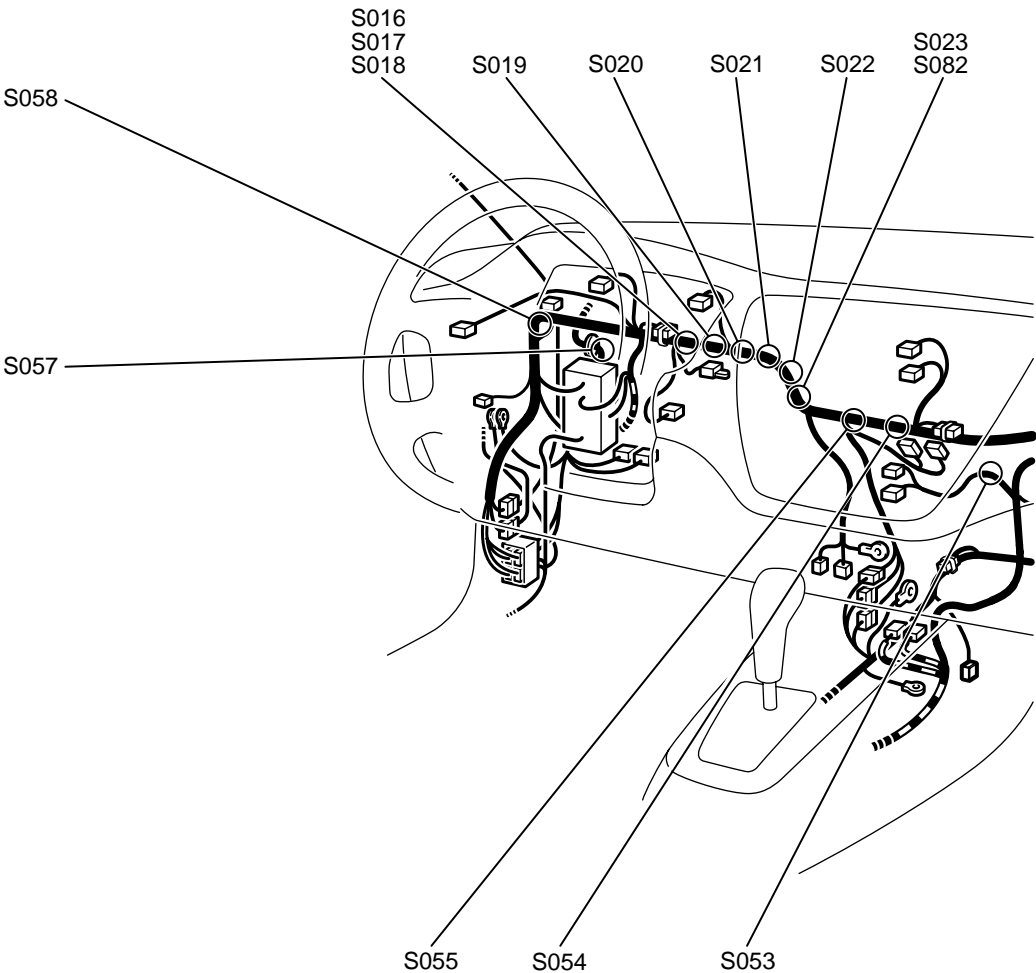


AC107149AB

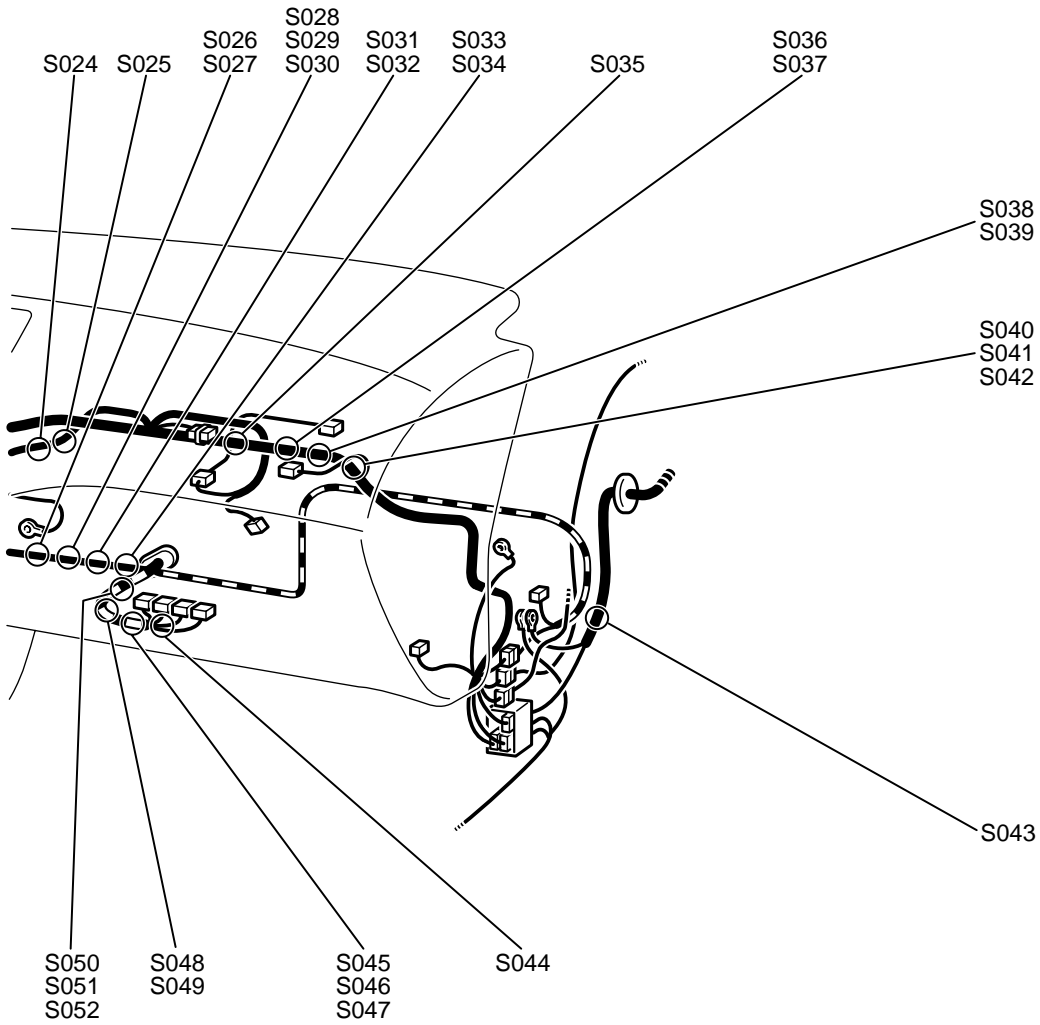

AC107150AB

FLOOR AND ROOF

M1802001200335

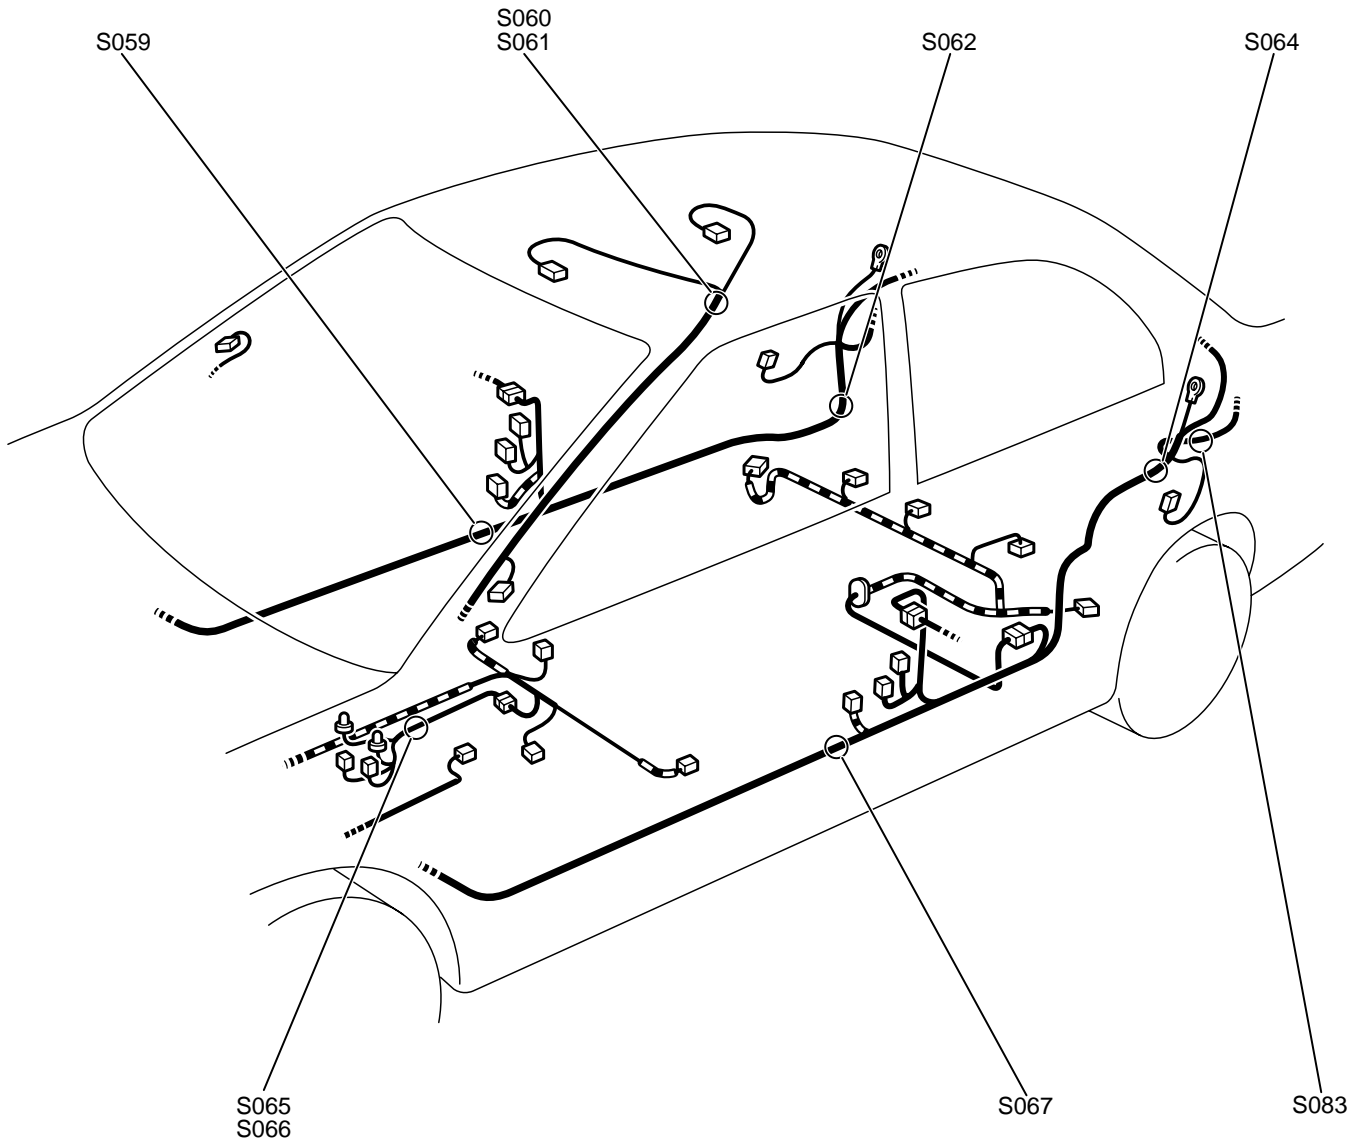

AC107136AB

DOOR

M1802000800301



<DRIVER'S SIDE>

<PASSENGER'S SIDE>

S068
S084
S085

S069
S070
S071


FRONT

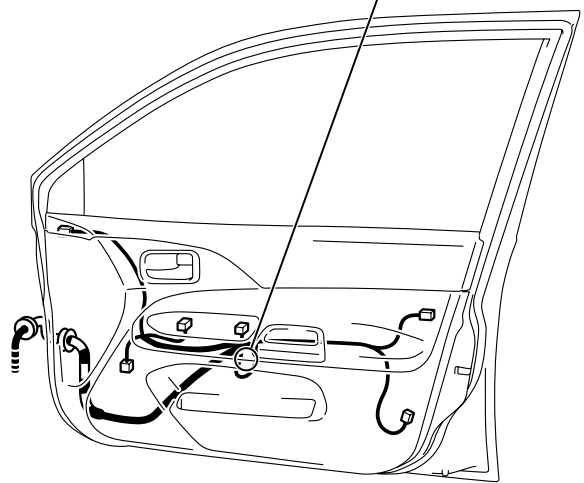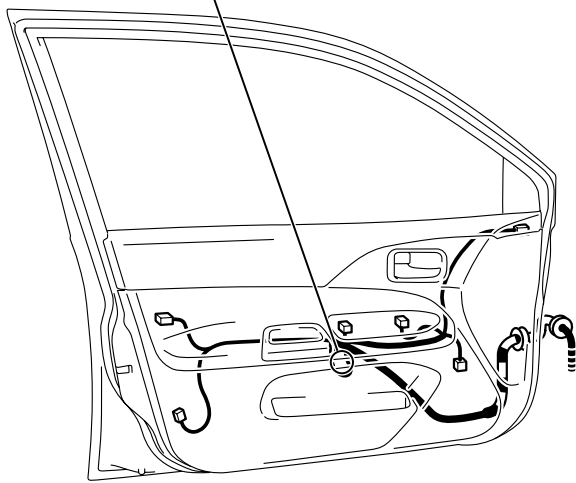

AC107367AB

LUGGAGE COMPARTMENT

M1802001500109

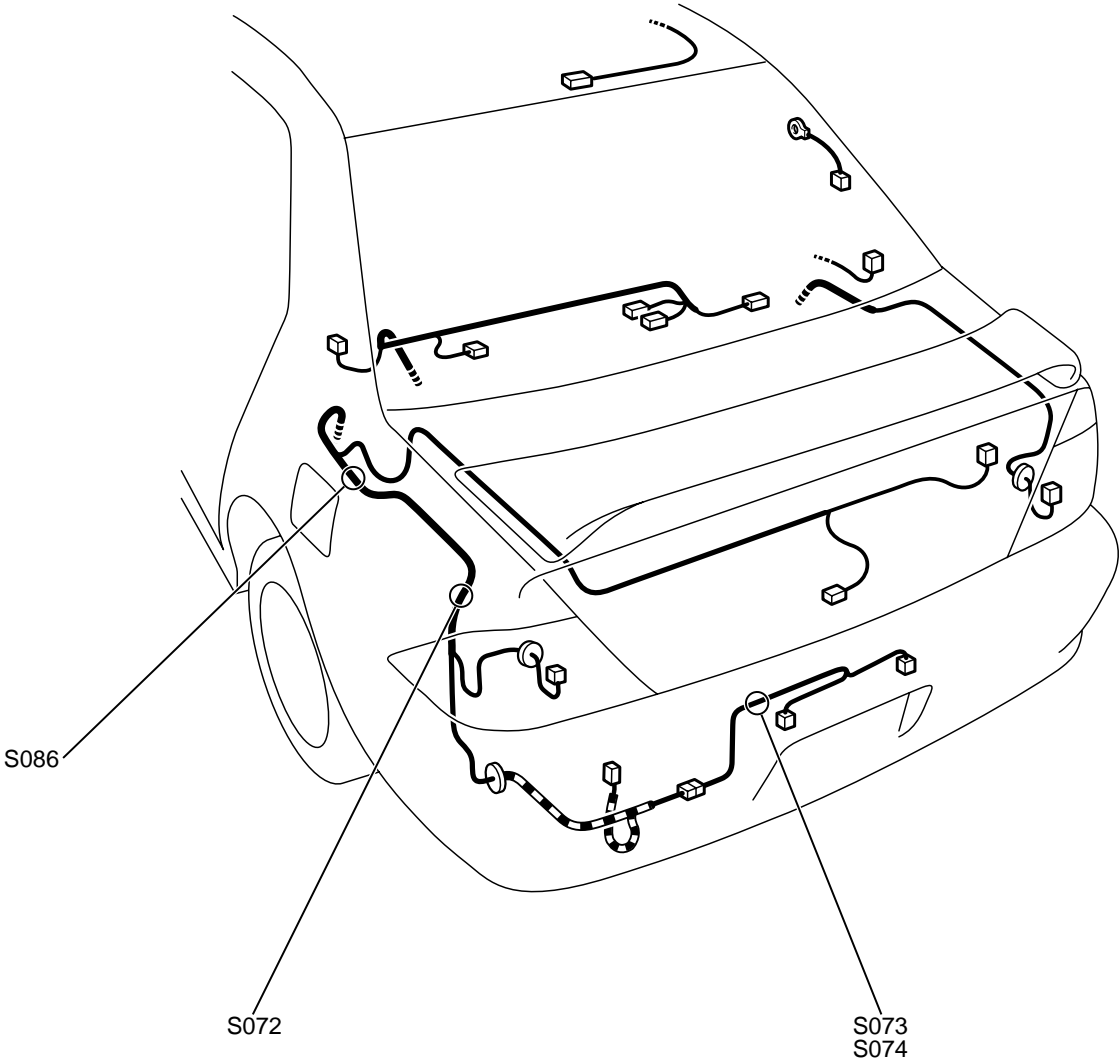

AC107138AB