

**A**

A/C Switch.....	55-85
A/T Control Component.....	23Aa-12
ABS	
Actuator Test.....	35B-58
Circuit Diagram.....	90-132
ECU, Check at Terminal.....	35B-58
ABS Bleeding.....	35B-60
ABS Power Relay	
Check.....	35B-64
Accelerator Cable	
Check and Adjustment.....	17-4
Accessory Socket.....	54A-61
Adhesive	
Automatic Transaxle.....	23B-70
Engine Lubrication.....	12-5
Engine Overhaul.....	11B-57
Exterior.....	51-53
MFI.....	13Aa-34
Steering.....	37A-45
Adhesive Table.....	00-55
Air Cleaner.....	15-4
Air Cleaner Element	
Replace.....	00-36
Air Conditioning	
Charging.....	55-79
Compressor Drive Belt Adjustment.....	55-79
Compressor Noise Check.....	55-82
Condenser and Condenser Fan Motor.....	55-101
ECU Terminal Check.....	55-77
Idle-up Operation Check.....	55-84
Magnetic Clutch Test.....	55-78
Manual, Circuit Diagram.....	90-102
Performance Test.....	55-80
Pressure Switch Check.....	55-79
Receiver Drier Test.....	55-78
Refrigerant Leak Repair.....	55-81
Refrigerant Line.....	55-103
Sight Glass Refrigerant Level Test.....	55-78
Audio System	
Circuit Diagram.....	90-118
Auto Adjuster	
Function Check.....	35A-26
Auto-cruise Control.....	17-105
Auto-cruise Control.....	17-6
Auto-cruise Control System	
Check at ECU Terminal.....	17-99
Circuit Diagram	
A/T.....	90-128
M/T.....	90-124
Component Check.....	17-102
Main Switch Check.....	17-101
Trouble Code Diagnosis.....	17-8
Auto-cruise Control System Diagnosis.....	17-7
Automatic Transaxle	
Adhesive.....	23B-70
Adjusting Plate, Snap Ring and Spacers.....	23B-68
Control Cable Adjustment.....	23Aa-18
Faulty Operation Prevention Mechanism.....	23Aa-28
Fluid Check.....	23Aa-13
Fluid Level Check.....	00-43
Fluid Replacement.....	23Aa-14
Key Interlock Mechanism Check.....	23Aa-23
Sealant.....	23B-70
Shift Lock Mechanism Check.....	23Aa-23
Transaxle Control.....	23Aa-25
Valve Body Spring Identification.....	23B-68
Automatic Transaxle Control Component	
Check.....	23Aa-19

Automatic Transaxle Fluid	
Level Check.....	00-43
<b>B</b>	
Backup Light	
Circuit Diagram.....	90-77
Ball Joint Dust Cover Inspection	
Steering.....	37A-19
Ball Joint Dust Cover Replacement	
Steering.....	37A-37
Ball Joint Seals	
Check.....	00-48
Basic Idle Speed	
Adjustment.....	13Aa-13
Battery	
Handling.....	00E-12
Remedy for a Discharged Battery.....	35B-65
Belt	
Water Pump and Generator Drive Belt Check.....	00-37
Belt, Timing	
Replace.....	00-37
BJ Boot	
Replacement.....	26-21
Bleeding	
Brakes (Basic).....	35A-19
Power Steering.....	37A-17
Blower Assembly.....	55-88
Boots	
Driveshaft, Check.....	00-48
Brake Booster.....	35A-29
Brake Booster	
Operating Check.....	35A-17
Brake Disc	
Pad Wear Check.....	00-47
Runout Check and Correction.....	35A-23
Thickness Check.....	35A-22
Brake Drum	
Inside Diameter, Check.....	35A-25
Brake Fluid Level Sensor Check.....	35A-20
Brake Hoses	
Check.....	00-47
Brake Lining	
Thickness, Check.....	35A-25
Brake Lining and Brake Drum	
Contact, Check.....	35A-25
Brake Pad	
Check and Adjustment.....	35A-20
Wear Check.....	00-47
Brake Pedal.....	35A-27
Brake Pedal	
Check and Adjustment.....	35A-15
Brake Rotor	
Disc, Check.....	35A-22
Bumper	
Front.....	51-3
Front.....	51-3
Rear.....	51-7
Rear.....	51-7
<b>C</b>	
Cable	
Accelerator, Check and Adjustment.....	17-4
Ignition, Replace.....	00-37
Camshaft	
Overhaul.....	11B-19
Camshaft and Camshaft Oil Seal.....	11A-19
Camshaft Position Sensor.....	16-36
Camshaft Position Sensor	

Check .....	16-31
Canister .....	
Evaporative Emission .....	17-120
Evaporative Emission .....	17-120
Catalytic Converter .....	17-122
Catalytic Converter .....	17-122
Centermember .....	32-6
Central Door Locking System .....	
Circuit Diagram .....	
VEHICLES WITH KEYLESS ENTRY SYSTEM .....	90-94
VEHICLES WITHOUT KEYLESS ENTRY SYSTEM .....	90-90
Charging System .....	16-2
Charging System .....	
Circuit Diagram .....	
A/T .....	90-33
M/T .....	90-32
Charging System Diagnosis .....	16-3
Check Valve .....	
Operating Check .....	35A-18
Cigarette Lighter .....	54A-61
Cigarette Lighter .....	
Circuit Diagram .....	90-123
Clock .....	
Circuit Diagram .....	90-122
Clutch .....	21B-2
Clutch .....	
Inspection .....	21B-3
Clutch Bleeding .....	21A-7
Clutch Control .....	21A-10
Clutch Control .....	
Inspection .....	21A-10
Clutch Diagnosis .....	21A-2
Clutch Housing .....	22B-39
Clutch Housing .....	22B-39
Clutch Master Assembly Cylinder .....	
Inspection .....	21A-12
Clutch Pedal .....	21A-9
Clutch Pedal .....	
Check and Adjustment .....	21A-6
Inspection .....	21A-10
Clutch Pedal Position Switch .....	
Check .....	21A-8
Compression Pressure .....	
Check .....	11A-7
Compressor (A/C) .....	
Noise Check .....	55-82
Compressor Assembly .....	55-96
Connecting Rod .....	
Overhaul .....	11B-37
Connector Inspection .....	00E-2
Control Housing .....	22B-36
Control Housing .....	22B-36
Control Relay .....	
Check .....	23Aa-20
Control Unit Location .....	70-12
Coolant .....	
Engine, Change .....	00-45
Cooling System .....	
Circuit Diagram .....	90-49
Crankcase Ventilation System .....	
Check .....	17-111
Crankshaft .....	
Overhaul .....	11B-46
Crankshaft Front Oil Seal .....	11A-25
Crankshaft Oil Seal .....	11A-25
Crankshaft Position Sensor .....	16-36
Crankshaft Position Sensor .....	
Check .....	23Aa-19
Crankshaft Pulley .....	11A-17
Crankshaft Rear Oil Seal .....	11A-27
Crossmember .....	32-8
Crossmember .....	
Inspection .....	32-11
Cylinder Block .....	
Overhaul .....	11B-46
Cylinder Head .....	
Overhaul .....	11B-24
Cylinder Head Gasket .....	11A-29
<b>D</b>	
Defogger and Door Mirror Heater .....	
Circuit Diagram .....	90-114
Diagnosis .....	
Auto-cruise Control System .....	17-7
Charging System .....	16-3
Emission Control System .....	17-107
Engine .....	11A-2
Engine Control System .....	17-3
Engine Cooling .....	14-3
Fuel Supply .....	13B-2
Intake and Exhaust .....	15-2
Power Steering .....	37A-2
Rear Axle .....	27-2
Starting System .....	16-19
Trouble Code, ABS .....	35B-5
Differential .....	22B-45
Differential .....	23B-58
Differential .....	
Disassembly and Assembly .....	23B-58
Disc Brake .....	
Pad Wear Check .....	00-47
Disc Brake Assembly .....	
Front .....	35A-33
Disc Brake Rotor .....	
Check .....	35A-22
Door .....	42-23
Door .....	42-35
Door .....	
Front and Rear, Fit Adjustment .....	42-29
Glass and Regulator .....	42-43
Handle and Latch .....	42-46
Inside Handle Play Adjustment .....	42-34
Mirror .....	51-49
Mirror .....	51-32
Opening Weatherstrip .....	42-51
Outside Handle Play Adjustment .....	42-33
Switch Check .....	42-36
Trim and Waterproof Film .....	42-37
Drive Belt .....	
Power Steering, Tension Check .....	37A-16
Tension Check and Adjustment .....	11A-5
Water Pump and Generator Drive Belt Check .....	00-37
Drive Plate .....	
Overhaul .....	11B-46
Drive Shaft Oil Seal .....	23B-65
Drive Shaft Oil Seal .....	
Disassembly and Assembly .....	23B-65
Driveshaft .....	
BJ Boot Replacement .....	26-21
Front Axle .....	26-14
Driveshaft Boots .....	
Check .....	00-48
Dual Pressure Switch .....	
Check .....	23Aa-20
<b>E</b>	
EGR .....	
Solenoid Check .....	13Aa-26
EGR solenoid .....	

## TSB Revision

## TSB Revision

Spark Plug .....	00-36
SRS .....	00-48
Timing Belt .....	00-37
Manifold Vacuum	
Check .....	11A-8
Manual Transaxle (Transmission)	
Oil Level Check .....	00-42
Manual Transaxle Diagnosis .....	22A-4
Mark .....	51-30
Master Cylinder	
Function Check .....	35A-26
Master Cylinder Assembly .....	35A-29
Master Cylinder Assembly	
Disassembly and Assembly .....	35A-32
Inspection .....	35A-32
Meter	
Circuit Diagram .....	90-80
MFI	
Adhesive .....	13Aa-34
Sealant .....	13Aa-34
Tightening Specification(s) .....	13Aa-32
MFI System	
Circuit Diagram	
A/T .....	90-42
M/T .....	90-34
Mirror	
Door .....	51-32
Door .....	51-49
Remote Controlled, Circuit Diagram	
VEHICLES WITH DOOR MIRROR HEATER .....	90-117
VEHICLES WITHOUT DOOR MIRROR HEATER .....	90-116
Module	
Fuel Pump .....	13B-13
Mounting	
Engine .....	32-4
Transaxle .....	32-5

## O

Oil	
Engine, Change .....	00-41
Engine, Check .....	12-3
Engine, Replacement .....	12-3
Oil Cooler	
Flow Check .....	23Aa-17
Oil Filter	
Engine, Replacement .....	12-3
Oil Pan .....	11A-22
Oil Pan	
Overhaul .....	11B-32
Oil Pressure	
Engine, Check .....	12-3
Oil Pump .....	23B-44
Oil Pump	
Disassembly and Assembly .....	23B-44
Overhaul .....	11B-32
Power Steering .....	37A-38
Power Steering, Pressure Test .....	37A-18
Oil Seal	
Crankshaft .....	11A-25
Crankshaft Front .....	11A-25
Crankshaft Rear .....	11A-27
Output Shaft .....	23B-56
Output Shaft .....	22B-23
Output Shaft	
Disassembly and Assembly .....	23B-56
Inspection .....	22B-31
Overdrive Clutch .....	23B-47
Overdrive Clutch	
Disassembly and Assembly .....	23B-47

Oxygen Sensor	
Check .....	13Aa-21

## P

Park/neutral Position Switch	
Adjustment .....	23Aa-18
Park/Neutral Position Switch	
Check .....	23Aa-18
Check .....	23Aa-20
Parking Brake	
Cable .....	36-6
Lever .....	36-5
Lever Stroke Check and Adjustment .....	36-4
Switch Check .....	36-4
PCV (Positive Crankcase Ventilation) System .....	17-110
PCV (Positive Crankcase Ventilation) System .....	17-110
PCV (Positive Crankcase Ventilation) System	
Valve Check .....	17-111
Piston	
Overhaul .....	11B-37
Planetary Gear .....	23B-52
Planetary Gear	
Disassembly and Assembly .....	23B-52
Power Distribution System	
Circuit Diagram .....	90-22
Power Steering	
Bleeding .....	37A-17
Drive Belt Tension Check .....	37A-16
Fluid Level Check .....	37A-16
Fluid Replacement .....	37A-16
Hoses .....	37A-41
Oil Pump Assembly .....	37A-38
Oil Pump Pressure Test .....	37A-18
Pressure Switch Check .....	37A-19
Power Steering Diagnosis .....	37A-2
Power Steering Oil Pump Assembly	
Inspection .....	37A-39
Power Window	
Circuit Breaker Inspection .....	42-33
Circuit Diagram .....	90-86
Operating Current Check .....	42-32
Switch Continuity Check .....	42-41
Proportioning Valve	
Function Test .....	35A-18
Purge Control System	
Check .....	17-113

## R

Radiator .....	14-25
Radiator Cap	
Pressure Check .....	14-21
Rear Axle	
Hub .....	27-6
Wheel Bearing End Play Check .....	27-4
Rear Axle Diagnosis .....	27-2
Rear Drum Brake .....	35A-39
Rear Drum Brake Linings	
Wear and Leaks Check .....	00-47
Rear Drum Brake Wheel Cylinder Assembly	
Disassembly and Assembly .....	35A-42
Inspection .....	35A-43
Rear Hub Rotary-Sliding Resistance	
Check .....	27-5
Rear Spoiler .....	51-18
Rear Wheel Cylinder	
Wear and Leaks Check .....	00-47
Rear Window Defogger	
Circuit Diagram .....	90-113

Rear Window Glass.....	42-20	Solenoid	
Rear Wiper and Washer		EGR, Check.....	17-119
Inspection.....	51-28	EGR, Check.....	13Aa-26
Receiver Drier Test (A/C).....	55-78	Evaporative Emission Purge, Check.....	13Aa-26
Relay		Solenoid Location.....	70-14
Check.....	00E-9	Solenoid Valve	
Relay Location.....	70-7	Check.....	23Aa-21
Resistive Cord		Solenoid Valve Location.....	70-14
Inspection.....	16-31	Spark Plug	
Reverse Clutch.....	23B-47	Replace.....	00-36
Reverse Clutch		Speedometer Gear.....	22B-34
Disassembly and Assembly.....	23B-47	SRS	
Reverse Idler Gear.....	22B-33	Circuit Diagram	
Rheostat		VEHICLES WITH SIDE AIR BAG.....	90-138
Circuit Diagram.....	90-151	VEHICLES WITHOUT SIDE AIR BAG.....	90-136
RKE (Keyless Entry System).....	42-60	Maintenance.....	00-48
RKE (Keyless Entry System)		Stabilizer Bar.....	34-17
Secret Code Registration.....	42-64	Stabilizer Bar.....	34-17
Transmitter Battery Replacement.....	42-61	Stabilizer Bar.....	33A-16
Rocker Arm		Starter Motor	
Overhaul.....	11B-19	Assembly.....	16-21
<b>S</b>			
Sealant		Starter Relay	
Automatic Transaxle.....	23B-70	Check.....	16-20
Engine Lubrication.....	12-5	Starting System.....	16-18
Engine Overhaul.....	11B-57	Starting System	
Exterior.....	51-53	Circuit Diagram	
MFI.....	13Aa-34	A/T.....	90-29
Steering.....	37A-45	M/T.....	90-28
Sealant Table.....	00-55	Starting System Diagnosis.....	16-19
Seat Belt Tone Alarm		Steering	
Circuit Diagram.....	90-146	Adhesive.....	37A-45
Seat Belts With Pre-Tensioner.....	52Ba-40	Ball Joint Dust Cover Inspection.....	37A-19
Seat Belts With Pre-Tensioner		Sealant.....	37A-45
Check.....	52Ba-43	Steering Linkage Seals	
Second Brake.....	23B-55	Check.....	00-48
Second Brake		Steering Wheel	
Disassembly and Assembly.....	23B-55	Free Play Check.....	37A-13
Select Lever.....	22B-35	Stationary Steering Effort Check.....	37A-15
Selector Lever.....	23Aa-27	Steering Angle Check.....	37A-14
Selector Lever		Steering Wheel Return to Center Check.....	37A-16
Operation Check.....	23Aa-22	Steering Wheel and Shaft	
Sensor		Assembly.....	37A-20
Camshaft Position.....	16-36	Stop Light Switch	
Camshaft Position, Check.....	16-31	Check.....	23Aa-20
Crankangle, Check.....	16-31	Stoplight	
Crankshaft Position.....	16-36	Circuit Diagram.....	90-76
Crankshaft Position, Check.....	23Aa-19	Strut Assembly.....	33A-8
Engine Coolant Temperature, Check.....	13Aa-19	Strut Assembly	
Fluid Temperature, Check.....	23Aa-19	Disassembly and Assembly.....	33A-9
Intake Air Temperature, Check.....	13Aa-19	Inspection.....	33A-9
Knock.....	16-37	Inspection.....	33A-11
Oxygen, Check.....	13Aa-21	Sunroof.....	42-71
Throttle Position, Adjustment.....	13Aa-12	Sunroof.....	42-66
Throttle Position, Adjustment.....	23Aa-17	Sunroof	
Throttle Position, Check.....	13Aa-20	Circuit Diagram.....	90-148
Throttle Position, Check.....	23Aa-19	Fit Adjustment.....	42-67
Wheel Speed.....	35B-67	Operation Check.....	42-69
Wheel Speed, Output Voltage Check.....	35B-61	Water Test.....	42-66
Sensor Location.....	70-8	Switch	
Shift Lever Assembly.....	22A-11	Check.....	00E-9
Shift Lock Mechanism		SWS	
Check.....	23Aa-23	General Information.....	54Ba-2
Shock Absorber Assembly.....	34-13	General Information.....	54Ba-5
Shock Absorber Assembly		<b>T</b>	
Disassembly and Assembly.....	34-15	Tail Light, Position Light and License Plate Light	
Inspection.....	34-14	Circuit Diagram.....	90-64
Sight Glass (Refrigerant Level Test).....	55-78	Tension Pulley.....	55-96
		Thermostat.....	14-27



Throttle Body		Circuit Diagram .....	90-72
Assembly .....	13Aa-28		
Cleaning .....	13Aa-11		
Throttle Position Sensor		<b>U</b>	
Adjustment .....	13Aa-12	Underdrive Clutch .....	23B-45
Adjustment .....	23Aa-17	Underdrive Clutch	
Check .....	23Aa-19	Disassembly and Assembly .....	23B-45
Check .....	13Aa-20		
Tie Rod End		<b>V</b>	
Steering, Ball Joint Breakaway Torque Check .....	37A-14	Vacuum Check	
Steering, Ball Joint Dust Cover Replacement .....	37A-37	EGR Port .....	17-118
Tightening Specification(s)		Vacuum Control Valve	
Automatic Transaxle Overhaul .....	23B-66	Check .....	17-117
Basic Brakes .....	35A-44	Vacuum Hose Routing .....	17-108
Charging System .....	16-38	Valve	
Emission Control .....	17-123	EGR System, Check .....	17-118
Engine Cooling .....	14-34	Fuel Tank Pressure Relief .....	17-120
Engine Lubrication .....	12-5	Fuel Tank Pressure Relief .....	17-120
Engine Overhaul .....	11B-52	Fuel Tank Pressure Relief, Inspection .....	17-120
Exterior .....	51-53	Proportioning, Function Test .....	35A-18
Front Axle .....	26-24	Vacuum Control, Check .....	17-117
Fuel Supply .....	13B-15	Valve Body .....	23B-61
MFI .....	13Aa-32	Valve Body	
Power Plant Mount .....	32-12	Disassembly and Assembly .....	23B-61
Rear Axle .....	27-9	Vehicle Identification .....	00-15
Steering .....	37A-43	Vehicle Identification .....	00-15
Wheel and Tire .....	31-8	Vehicle Identification Code Plate .....	00-17
Tightening Torque .....	00-28	Ventilators .....	55-105
Timing Belt .....	11A-35		
Timing Belt		<b>W</b>	
Overhaul .....	11B-7	Water Hose .....	11B-16
Replace .....	00-37	Water Hose .....	14-31
Tire .....	31-7	Water Pipe .....	14-31
Tire		Water Pump .....	11B-16
Diagnosis .....	31-2	Water Pump .....	14-29
Diagnosis .....	31-2	Wheel .....	31-7
Inflation Pressure Check .....	31-7	Wheel	
Rotation .....	00-54	Balance Accuracy .....	31-3
Wear Check .....	31-7	Diagnosis .....	31-2
Torque Converter		Diagnosis .....	31-2
Stall Test .....	23Ab-12	Runout Check .....	31-7
Trailing Arm .....	34-10	Wheel Bearing End Play Check .....	27-4
Trailing Arm		Wheel Cylinder Assembly	
Inspection .....	34-11	Rear Drum Brake, Disassembly and Assembly .....	35A-42
Transaxle .....	23B-8	Rear Drum Brake, Inspection .....	35A-43
Transaxle		Wheel Speed Sensor .....	35B-67
Automatic, Fluid Level Check .....	00-43	Wheel Speed Sensor	
Control .....	23Aa-25	Output Voltage Check .....	35B-61
Disassembly and Assembly .....	23B-8	Window Glass .....	42-12
Transaxle (Transmission) .....	22B-6	Window Glass	
Transaxle (Transmission)		Door, Adjustment .....	42-31
Inspection .....	22B-14	Runchannel .....	42-51
Transaxle (Transmission) Mounting		Windshield .....	42-15
Inspection .....	32-6	Windshield	
Transaxle Assembly .....	23Aa-30	Wiper and Washer .....	51-21
Transaxle Assembly .....	22A-12	Wiper and Washer .....	51-21
Transaxle Control .....	22A-9	Wiper and Washer .....	51-19
Transaxle Control .....	23Aa-25	Windshield Wiper and Washer .....	51-21
Transaxle Mounting .....	32-5	Windshield Wiper and Washer	
Transaxle Oil		Circuit Diagram .....	90-106
Level Check .....	22A-8	Wiper and Washer	
Replacement .....	22A-8	Rear .....	51-26
Transmission Case .....	22B-43	Rear .....	51-25
Triple Pressure Switch (A/C Load)		Rear, Circuit Diagram .....	90-110
Check .....	23Aa-20	Windshield .....	51-19
Trunk Lid .....	42-57	Windshield .....	51-21
Trunk Lid .....	42-53		
Trunk Lid Diagnosis .....	42-53		
Trunk Lid Latch			
Inspection .....	42-60		
Turn Signal Light			

---

NOTES