

A		B	
A/C Switch.....	55-85	Automatic Transaxle Fluid Level Check.....	00-43
A/T Control Component.....	23Aa-12		
ABS			
Actuator Test.....	35B-58	Backup Light	
Circuit Diagram.....	90-132	Circuit Diagram.....	90-77
ECU, Check at Terminal.....	35B-58	Ball Joint Dust Cover Inspection	
ABS Bleeding.....	35B-60	Steering.....	37A-19
ABS Power Relay		Ball Joint Dust Cover Replacement	
Check.....	35B-64	Steering.....	37A-37
Accelerator Cable		Ball Joint Seals	
Check and Adjustment.....	17-4	Check.....	00-48
Accessory Socket.....	54A-61	Basic Idle Speed	
Adhesive		Adjustment.....	13Aa-13
Automatic Transaxle.....	23B-70	Battery	
Engine Lubrication.....	12-5	Handling.....	00E-12
Engine Overhaul.....	11B-57	Remedy for a Discharged Battery.....	35B-65
Exterior.....	51-53	Belt	
MFI.....	13Aa-34	Water Pump and Generator Drive Belt Check.....	00-37
Steering.....	37A-45	Belt, Timing	
Adhesive Table.....	00-55	Replace.....	00-37
Air Cleaner.....	15-4	BJ Boot	
Air Cleaner Element		Replacement.....	26-21
Replace.....	00-36	Bleeding	
Air Conditioning		Brakes (Basic).....	35A-19
Charging.....	55-79	Power Steering.....	37A-17
Compressor Drive Belt Adjustment.....	55-79	Blower Assembly.....	55-88
Compressor Noise Check.....	55-82	Boots	
Condenser and Condenser Fan Motor.....	55-101	Driveshaft, Check.....	00-48
ECU Terminal Check.....	55-77	Brake Booster.....	35A-29
Idle-up Operation Check.....	55-84	Brake Booster	
Magnetic Clutch Test.....	55-78	Operating Check.....	35A-17
Manual, Circuit Diagram.....	90-102	Brake Disc	
Performance Test.....	55-80	Pad Wear Check.....	00-47
Pressure Switch Check.....	55-79	Runout Check and Correction.....	35A-23
Receiver Drier Test.....	55-78	Thickness Check.....	35A-22
Refrigerant Leak Repair.....	55-81	Brake Drum	
Refrigerant Line.....	55-103	Inside Diameter, Check.....	35A-25
Sight Glass Refrigerant Level Test.....	55-78	Brake Fluid Level Sensor Check.....	35A-20
Audio System		Brake Hoses	
Circuit Diagram.....	90-118	Check.....	00-47
Auto Adjuster		Brake Lining	
Function Check.....	35A-26	Thickness, Check.....	35A-25
Auto-cruise Control.....	17-105	Brake Lining and Brake Drum	
Auto-cruise Control.....	17-6	Contact, Check.....	35A-25
Auto-cruise Control System		Brake Pad	
Check at ECU Terminal.....	17-99	Check and Adjustment.....	35A-20
Circuit Diagram		Wear Check.....	00-47
A/T.....	90-128	Brake Pedal.....	35A-27
M/T.....	90-124	Brake Pedal	
Component Check.....	17-102	Check and Adjustment.....	35A-15
Main Switch Check.....	17-101	Brake Rotor	
Trouble Code Diagnosis.....	17-8	Disc, Check.....	35A-22
Auto-cruise Control System Diagnosis.....	17-7	Bumper	
Automatic Transaxle		Front.....	51-3
Adhesive.....	23B-70	Front.....	51-3
Adjusting Plate, Snap Ring and Spacers.....	23B-68	Rear.....	51-7
Control Cable Adjustment.....	23Aa-18	Rear.....	51-7
Faulty Operation Prevention Mechanism.....	23Aa-28		
Fluid Check.....	23Aa-13		
Fluid Level Check.....	00-43		
Fluid Replacement.....	23Aa-14		
Key Interlock Mechanism Check.....	23Aa-23		
Sealant.....	23B-70		
Shift Lock Mechanism Check.....	23Aa-23		
Transaxle Control.....	23Aa-25		
Valve Body Spring Identification.....	23B-68		
Automatic Transaxle Control Component			
Check.....	23Aa-19		

C

Cable	
Accelerator, Check and Adjustment.....	17-4
Ignition, Replace.....	00-37
Camshaft	
Overhaul.....	11B-19
Camshaft and Camshaft Oil Seal.....	11A-19
Camshaft Position Sensor.....	16-36
Camshaft Position Sensor	

TSB Revision

TSB Revision

TSB Revision

Spark Plug	00-36
SRS	00-48
Timing Belt	00-37
Manifold Vacuum	
Check	11A-8
Manual Transaxle (Transmission)	
Oil Level Check	00-42
Manual Transaxle Diagnosis	22A-4
Mark	51-30
Master Cylinder	
Function Check	35A-26
Master Cylinder Assembly	35A-29
Master Cylinder Assembly	
Disassembly and Assembly	35A-32
Inspection	35A-32
Meter	
Circuit Diagram	90-80
MFI	
Adhesive	13Aa-34
Sealant	13Aa-34
Tightening Specification(s)	13Aa-32
MFI System	
Circuit Diagram	
A/T	90-42
M/T	90-34
Mirror	
Door	51-32
Door	51-49
Remote Controlled, Circuit Diagram	
VEHICLES WITH DOOR MIRROR HEATER	90-117
VEHICLES WITHOUT DOOR MIRROR HEATER	90-116
Module	
Fuel Pump	13B-13
Mounting	
Engine	32-4
Transaxle	32-5

O

Oil	
Engine, Change	00-41
Engine, Check	12-3
Engine, Replacement	12-3
Oil Cooler	
Flow Check	23Aa-17
Oil Filter	
Engine, Replacement	12-3
Oil Pan	11A-22
Oil Pan	
Overhaul	11B-32
Oil Pressure	
Engine, Check	12-3
Oil Pump	23B-44
Oil Pump	
Disassembly and Assembly	23B-44
Overhaul	11B-32
Power Steering	37A-38
Power Steering, Pressure Test	37A-18
Oil Seal	
Crankshaft	11A-25
Crankshaft Front	11A-25
Crankshaft Rear	11A-27
Output Shaft	23B-56
Output Shaft	22B-23
Output Shaft	
Disassembly and Assembly	23B-56
Inspection	22B-31
Overdrive Clutch	23B-47
Overdrive Clutch	
Disassembly and Assembly	23B-47

Oxygen Sensor	
Check	13Aa-21

P

Park/neutral Position Switch	
Adjustment	23Aa-18
Park/Neutral Position Switch	
Check	23Aa-18
Check	23Aa-20
Parking Brake	
Cable	36-6
Lever	36-5
Lever Stroke Check and Adjustment	36-4
Switch Check	36-4
PCV (Positive Crankcase Ventilation) System	17-110
PCV (Positive Crankcase Ventilation) System	17-110
PCV (Positive Crankcase Ventilation) System	
Valve Check	17-111
Piston	
Overhaul	11B-37
Planetary Gear	23B-52
Planetary Gear	
Disassembly and Assembly	23B-52
Power Distribution System	
Circuit Diagram	90-22
Power Steering	
Bleeding	37A-17
Drive Belt Tension Check	37A-16
Fluid Level Check	37A-16
Fluid Replacement	37A-16
Hoses	37A-41
Oil Pump Assembly	37A-38
Oil Pump Pressure Test	37A-18
Pressure Switch Check	37A-19
Power Steering Diagnosis	37A-2
Power Steering Oil Pump Assembly	
Inspection	37A-39
Power Window	
Circuit Breaker Inspection	42-33
Circuit Diagram	90-86
Operating Current Check	42-32
Switch Continuity Check	42-41
Proportioning Valve	
Function Test	35A-18
Purge Control System	
Check	17-113

R

Radiator	14-25
Radiator Cap	
Pressure Check	14-21
Rear Axle	
Hub	27-6
Wheel Bearing End Play Check	27-4
Rear Axle Diagnosis	27-2
Rear Drum Brake	35A-39
Rear Drum Brake Linings	
Wear and Leaks Check	00-47
Rear Drum Brake Wheel Cylinder Assembly	
Disassembly and Assembly	35A-42
Inspection	35A-43
Rear Hub Rotary-Sliding Resistance	
Check	27-5
Rear Spoiler	51-18
Rear Wheel Cylinder	
Wear and Leaks Check	00-47
Rear Window Defogger	
Circuit Diagram	90-113

Rear Window Glass.....	42-20	Solenoid	
Rear Wiper and Washer		EGR, Check.....	17-119
Inspection.....	51-28	EGR, Check.....	13Aa-26
Receiver Drier Test (A/C).....	55-78	Evaporative Emission Purge, Check.....	13Aa-26
Relay		Solenoid Location.....	70-14
Check.....	00E-9	Solenoid Valve	
Relay Location.....	70-7	Check.....	23Aa-21
Resistive Cord		Solenoid Valve Location.....	70-14
Inspection.....	16-31	Spark Plug	
Reverse Clutch.....	23B-47	Replace.....	00-36
Reverse Clutch		Speedometer Gear.....	22B-34
Disassembly and Assembly.....	23B-47	SRS	
Reverse Idler Gear.....	22B-33	Circuit Diagram	
Rheostat		VEHICLES WITH SIDE AIR BAG.....	90-138
Circuit Diagram.....	90-151	VEHICLES WITHOUT SIDE AIR BAG.....	90-136
RKE (Keyless Entry System).....	42-60	Maintenance.....	00-48
RKE (Keyless Entry System)		Stabilizer Bar.....	34-17
Secret Code Registration.....	42-64	Stabilizer Bar.....	34-17
Transmitter Battery Replacement.....	42-61	Stabilizer Bar.....	33A-16
Rocker Arm		Starter Motor	
Overhaul.....	11B-19	Assembly.....	16-21
S			
Sealant		Starter Relay	
Automatic Transaxle.....	23B-70	Check.....	16-20
Engine Lubrication.....	12-5	Starting System.....	16-18
Engine Overhaul.....	11B-57	Starting System	
Exterior.....	51-53	Circuit Diagram	
MFI.....	13Aa-34	A/T.....	90-29
Steering.....	37A-45	M/T.....	90-28
Sealant Table.....	00-55	Starting System Diagnosis.....	16-19
Seat Belt Tone Alarm		Steering	
Circuit Diagram.....	90-146	Adhesive.....	37A-45
Seat Belts With Pre-Tensioner.....	52Ba-40	Ball Joint Dust Cover Inspection.....	37A-19
Seat Belts With Pre-Tensioner		Sealant.....	37A-45
Check.....	52Ba-43	Steering Linkage Seals	
Second Brake.....	23B-55	Check.....	00-48
Second Brake		Steering Wheel	
Disassembly and Assembly.....	23B-55	Free Play Check.....	37A-13
Select Lever.....	22B-35	Stationary Steering Effort Check.....	37A-15
Selector Lever.....	23Aa-27	Steering Angle Check.....	37A-14
Selector Lever		Steering Wheel Return to Center Check.....	37A-16
Operation Check.....	23Aa-22	Steering Wheel and Shaft	
Sensor		Assembly.....	37A-20
Camshaft Position.....	16-36	Stop Light Switch	
Camshaft Position, Check.....	16-31	Check.....	23Aa-20
Crankangle, Check.....	16-31	Stoplight	
Crankshaft Position.....	16-36	Circuit Diagram.....	90-76
Crankshaft Position, Check.....	23Aa-19	Strut Assembly.....	33A-8
Engine Coolant Temperature, Check.....	13Aa-19	Strut Assembly	
Fluid Temperature, Check.....	23Aa-19	Disassembly and Assembly.....	33A-9
Intake Air Temperature, Check.....	13Aa-19	Inspection.....	33A-9
Knock.....	16-37	Inspection.....	33A-11
Oxygen, Check.....	13Aa-21	Sunroof.....	42-71
Throttle Position, Adjustment.....	13Aa-12	Sunroof.....	42-66
Throttle Position, Adjustment.....	23Aa-17	Sunroof	
Throttle Position, Check.....	13Aa-20	Circuit Diagram.....	90-148
Throttle Position, Check.....	23Aa-19	Fit Adjustment.....	42-67
Wheel Speed.....	35B-67	Operation Check.....	42-69
Wheel Speed, Output Voltage Check.....	35B-61	Water Test.....	42-66
Sensor Location.....	70-8	Switch	
Shift Lever Assembly.....	22A-11	Check.....	00E-9
Shift Lock Mechanism		SWS	
Check.....	23Aa-23	General Information.....	54Ba-2
Shock Absorber Assembly.....	34-13	General Information.....	54Ba-5
Shock Absorber Assembly		T	
Disassembly and Assembly.....	34-15		
Inspection.....	34-14	Tail Light, Position Light and License Plate Light	
Sight Glass (Refrigerant Level Test).....	55-78	Circuit Diagram.....	90-64
		Tension Pulley.....	55-96
		Thermostat.....	14-27

Throttle Body		Circuit Diagram	90-72
Assembly	13Aa-28		
Cleaning	13Aa-11		
Throttle Position Sensor		U	
Adjustment	13Aa-12	Underdrive Clutch	23B-45
Adjustment	23Aa-17	Underdrive Clutch	
Check	23Aa-19	Disassembly and Assembly	23B-45
Check	13Aa-20		
Tie Rod End		V	
Steering, Ball Joint Breakaway Torque Check	37A-14	Vacuum Check	
Steering, Ball Joint Dust Cover Replacement	37A-37	EGR Port	17-118
Tightening Specification(s)		Vacuum Control Valve	
Automatic Transaxle Overhaul	23B-66	Check	17-117
Basic Brakes	35A-44	Vacuum Hose Routing	17-108
Charging System	16-38	Valve	
Emission Control	17-123	EGR System, Check	17-118
Engine Cooling	14-34	Fuel Tank Pressure Relief	17-120
Engine Lubrication	12-5	Fuel Tank Pressure Relief	17-120
Engine Overhaul	11B-52	Fuel Tank Pressure Relief, Inspection	17-120
Exterior	51-53	Proportioning, Function Test	35A-18
Front Axle	26-24	Vacuum Control, Check	17-117
Fuel Supply	13B-15	Valve Body	23B-61
MFI	13Aa-32	Valve Body	
Power Plant Mount	32-12	Disassembly and Assembly	23B-61
Rear Axle	27-9	Vehicle Identification	00-15
Steering	37A-43	Vehicle Identification	00-15
Wheel and Tire	31-8	Vehicle Identification Code Plate	00-17
Tightening Torque	00-28	Ventilators	55-105
Timing Belt	11A-35		
Timing Belt		W	
Overhaul	11B-7	Water Hose	11B-16
Replace	00-37	Water Hose	14-31
Tire	31-7	Water Pipe	14-31
Tire		Water Pump	11B-16
Diagnosis	31-2	Water Pump	14-29
Diagnosis	31-2	Wheel	31-7
Inflation Pressure Check	31-7	Wheel	
Rotation	00-54	Balance Accuracy	31-3
Wear Check	31-7	Diagnosis	31-2
Torque Converter		Diagnosis	31-2
Stall Test	23Ab-12	Runout Check	31-7
Trailing Arm	34-10	Wheel Bearing End Play Check	27-4
Trailing Arm		Wheel Cylinder Assembly	
Inspection	34-11	Rear Drum Brake, Disassembly and Assembly	35A-42
Transaxle	23B-8	Rear Drum Brake, Inspection	35A-43
Transaxle		Wheel Speed Sensor	35B-67
Automatic, Fluid Level Check	00-43	Wheel Speed Sensor	
Control	23Aa-25	Output Voltage Check	35B-61
Disassembly and Assembly	23B-8	Window Glass	42-12
Transaxle (Transmission)	22B-6	Window Glass	
Transaxle (Transmission)		Door, Adjustment	42-31
Inspection	22B-14	Runchannel	42-51
Transaxle (Transmission) Mounting		Windshield	42-15
Inspection	32-6	Windshield	
Transaxle Assembly	23Aa-30	Wiper and Washer	51-21
Transaxle Assembly	22A-12	Wiper and Washer	51-21
Transaxle Control	22A-9	Wiper and Washer	51-19
Transaxle Control	23Aa-25	Windshield Wiper and Washer	51-21
Transaxle Mounting	32-5	Circuit Diagram	90-106
Transaxle Oil		Wiper and Washer	
Level Check	22A-8	Rear	51-26
Replacement	22A-8	Rear	51-25
Transmission Case	22B-43	Rear, Circuit Diagram	90-110
Triple Pressure Switch (A/C Load)		Windshield	51-19
Check	23Aa-20	Windshield	51-21
Trunk Lid	42-57		
Trunk Lid	42-53		
Trunk Lid Diagnosis	42-53		
Trunk Lid Latch			
Inspection	42-60		
Turn Signal Light			

NOTES