

## GROUP 80A


# CONFIGURATION DIAGRAMS

## CONTENTS

OVERALL CONFIGURATION DIAGRAM <NON-TURBO> .....	80A-2	ENGINE AND TRANSAXLE <NON-TURBO> .....	80A-10
OVERALL CONFIGURATION DIAGRAM <TURBO>.....	80A-3	ENGINE AND TRANSAXLE <TURBO> .....	80A-14
HOW TO READ CONFIGURATION DIAGRAMS .....	80A-4	DASH PANEL.....	80A-18
ENGINE COMPARTMENT <NON-TURBO> .....	80A-6	FLOOR AND ROOF .....	80A-24
ENGINE COMPARTMENT <TURBO>.....	80A-8	DOOR .....	80A-26
		LUGGAGE COMPARTMENT.....	80A-28

## OVERALL CONFIGURATION DIAGRAM &lt;NON-TURBO&gt;

M1801000102662

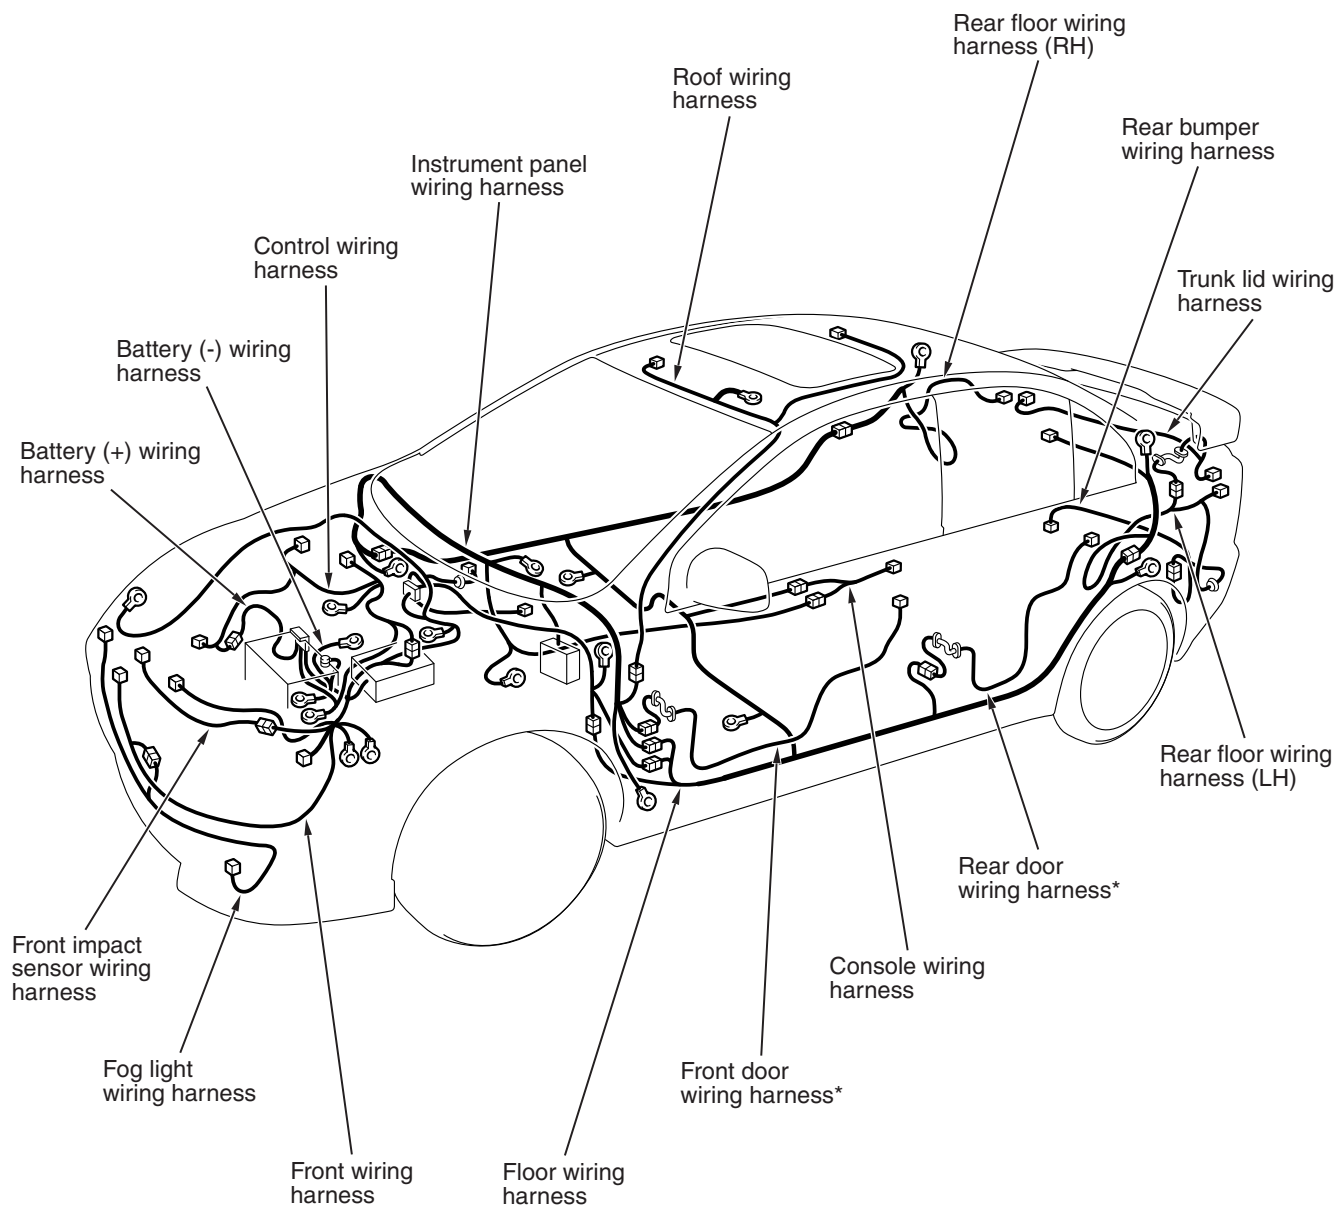


AC802284AB

**NOTE:**

1. This illustration shows only major wiring harnesses.
2. \*: also equipped at the right side.

# OVERALL CONFIGURATION DIAGRAM <TURBO>

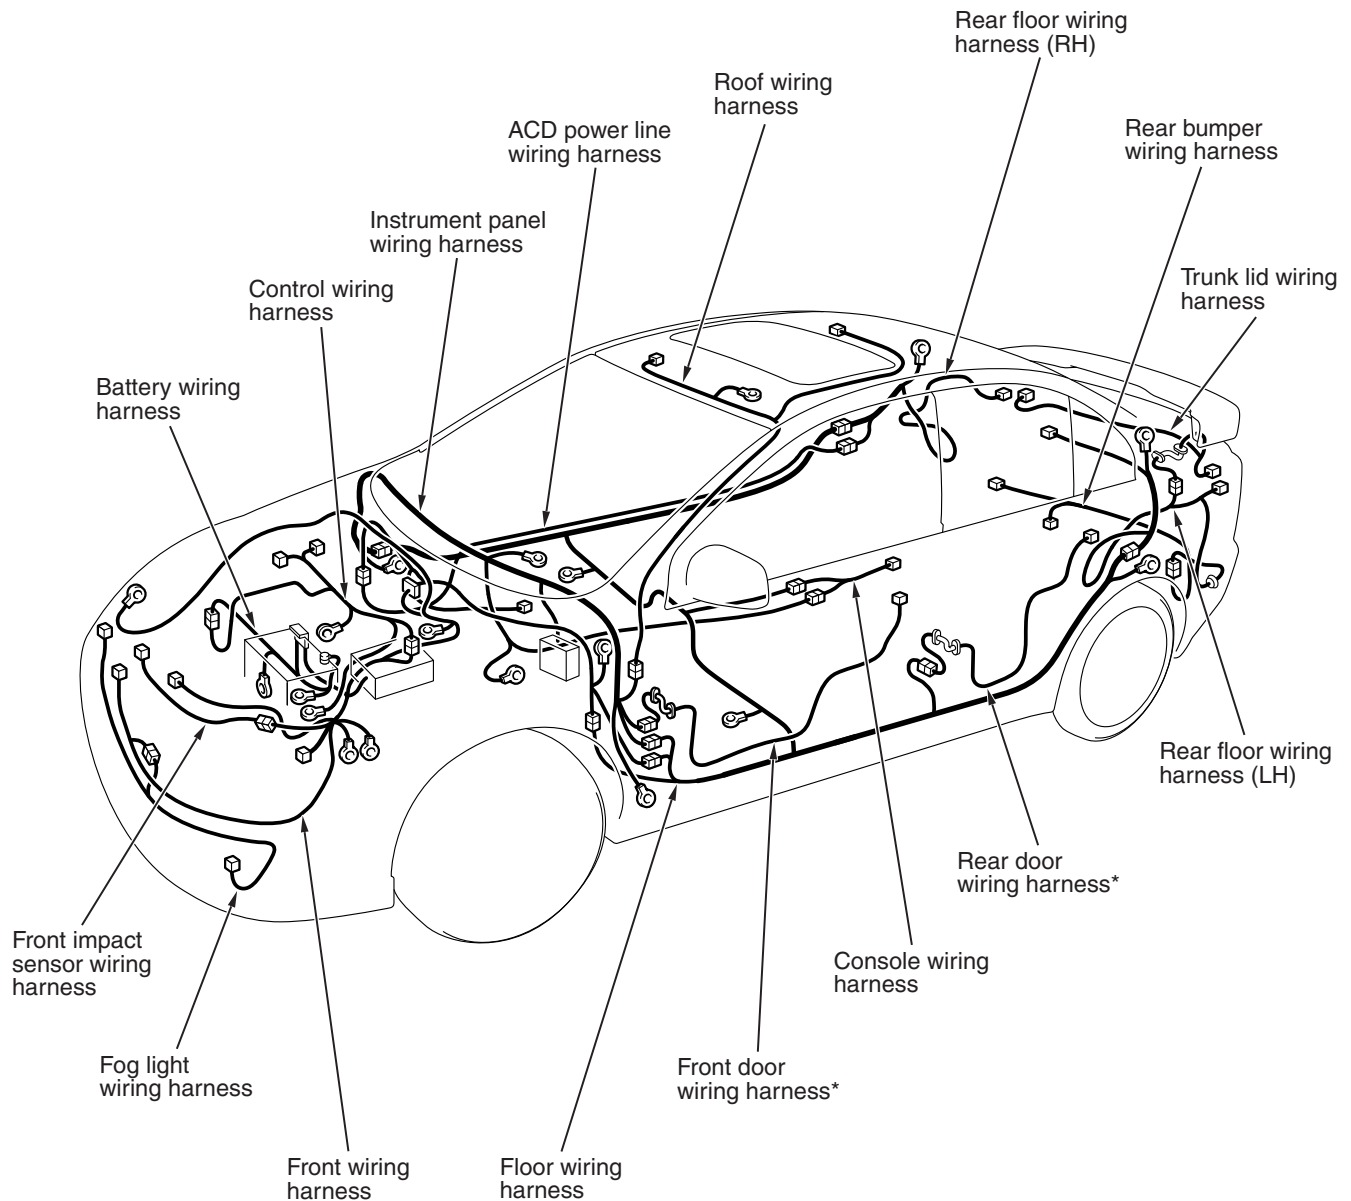

AC901082AB

**NOTE:**

1. This illustration shows only major wiring harnesses.
2. \*: also equipped at the right side.

# HOW TO READ CONFIGURATION DIAGRAMS

M1801000200555

The wiring harness diagrams clearly show the connector locations and harness configurations on actual vehicles. Some variations are included in one configuration diagram. Accordingly, some diagrams may not be applicable for individual vehicles.

Denotes connector No.

The same connector No. is used throughout the circuit diagrams to facilitate connector location searches.

The first alphabetical symbol indicates the location site of the connector and a number that follows is the unique number. Numbers are usually assigned to parts in clockwise order on the diagram.

Example: A-19

Number specific to connector (serial number)

Connector location site symbol  
A: ENGINE COMPARTMENT  
B: ENGINE AND TRANSAXLE  
C: DASH PANEL

D: FLOOR AND ROOF

E: DOOR

F: LUGGAGE COMPARTMENT

Denotes ground point.

Same ground number is used throughout circuit diagrams to facilitate search of ground point. Refer to GROUP 70 COMPONENT LOCATIONS -GROUND MOUNTING LOCATIONS for details of ground points.

Denotes harness name.

FRONT  
WIRING  
HARNESS  
(RH)

Denotes a section covered by a corrugated tube.

The mark ★ shows the standard mounting position of wiring harness.

Denotes the color of the tube  
(If not specified, it is black).  
R: Red  
Y: Yellow

The number of connector pins and the connector color (except milk white)\* are shown for ease of retrieval.

Example: (2-B)

Connector color  
(milk white if no color is indicated)

Number of connector pins

\*: Typical connector colors

B: Black	BR: Brown
Y: Yellow	V: Violet
L: Blue	O: Orange
G: Green	GR: Gray
R: Red	NONE: Milk white

A-19

A-18

A-17

A-16

A-15

A-15 (2)  
A-16 (2-GR)  
A-17 (2-B)  
A-18 (2-B)  
A-19 (2-GR)


FOG LIGHT (RH)  
HORN (LOW)  
HEADLIGHT (RH)  
WINDSHIELD WASHER MOTOR  
DUAL PRESSURE SWITCH

Indicates the device to which the connector is connected.

NOTES

## ENGINE COMPARTMENT &lt;NON-TURBO&gt;


M1801000306817

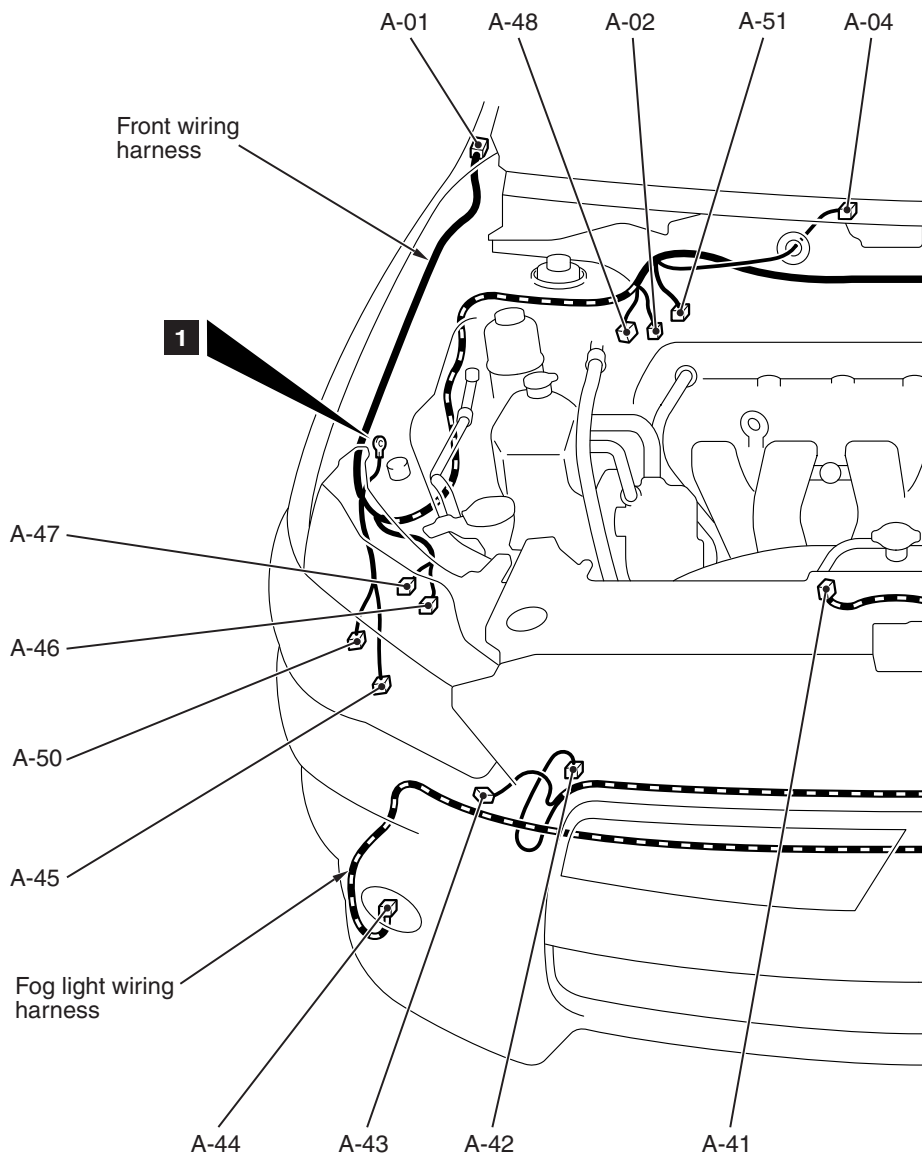Connector  
symbol**A**Connector color  
code

B: Black  
 BR: Brown  
 G: Green  
 GR: Gray  
 L: Blue  
 None: Milk white  
 O: Orange  
 R: Red  
 V: Violet  
 Y: Yellow

AC901088AB

A-01	(2-B)	Side turn-signal light (RH)	A-13X	(4)	A/C compressor clutch relay
A-02	(2-B)	Front wheel speed sensor (RH)	A-15X	(4)	CVT control relay
A-04	(5-GR)	Windshield wiper motor	A-16X	(4)	No connection
A-05	(4-GR)	Mass airflow sensor	A-17X	(4)	Headlight relay (High)
A-06	(2-B)	Brake fluid level switch	A-18X	(4)	Throttle actuator control motor relay
A-07	(2-B)	Front wheel speed sensor (LH)	A-20X	(4)	Daytime running light relay <Vehicles with discharge type headlight>
A-08	(2-B)	Side turn-signal light (LH)	A-21X	(4)	Injector relay
A-09	(24)	Front wiring harness and control wiring harness combination <CVT>	A-23X	(4)	Condenser fan relay
A-10	(20)	Front wiring harness and control wiring harness combination	A-24X	(4)	Starter relay
A-11X	(4)	Fog light relay	A-25X	(4)	Headlight relay (Low)
A-12X	(4)	Horn relay	A-26X	(4)	Radiator fan relay

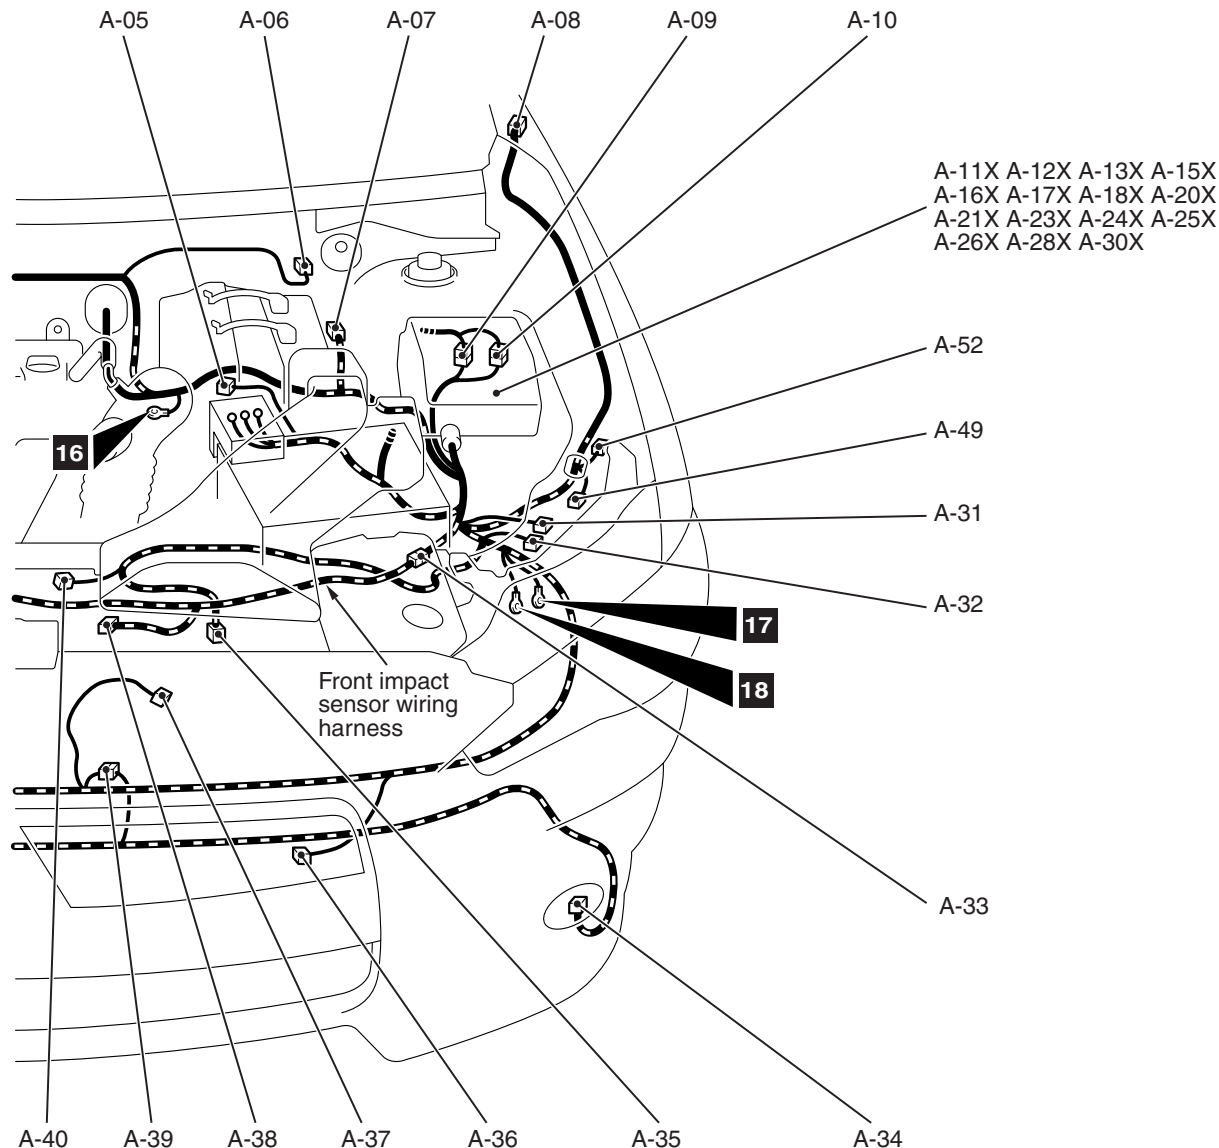

AC901089AB


A-28X (4)	Fan control relay	A-41 (2-Y)	Front impact sensor (RH)
A-30X (4)	MFI relay	A-42 (3-B)	A/C pressure sensor
A-31 (12-B)	Headlight assembly (LH)	A-43 (1-B)	Horn (High)
A-32 (6-B)	Headlight assembly (LH)	A-44 (2-B)	Fog light (RH)
A-33 (4-B)	Front wiring harness and front impact sensor wiring harness combination	A-45 (2-B)	Windshield washer motor
A-34 (2-B)	Fog light (LH)	A-46 (6-B)	Headlight assembly (RH)
A-35 (2-GR)	Radiator fan motor	A-47 (12-B)	Headlight assembly (RH)
A-36 (2-B)	Ambient air temperature sensor	A-48 (3-GR)	No connection
A-37 (1-B)	Horn (Low)	A-49 (1-GR)	No connection
A-38 (2-Y)	Front impact sensor (LH)	A-50 (2-B)	No connection
A-39 (2-B)	Front wiring harness and fog light wiring harness combination	A-51 (47-B)	ASC-ECU
A-40 (2-B)	Condenser fan motor	A-52 (2-B)	No connection

## ENGINE COMPARTMENT &lt;TURBO&gt;

M1801000306828

Connector  
symbol**A**Connector color  
code

B: Black  
 BR: Brown  
 G: Green  
 GR: Gray  
 L: Blue  
 None: Milk white  
 O: Orange  
 R: Red  
 V: Violet  
 Y: Yellow

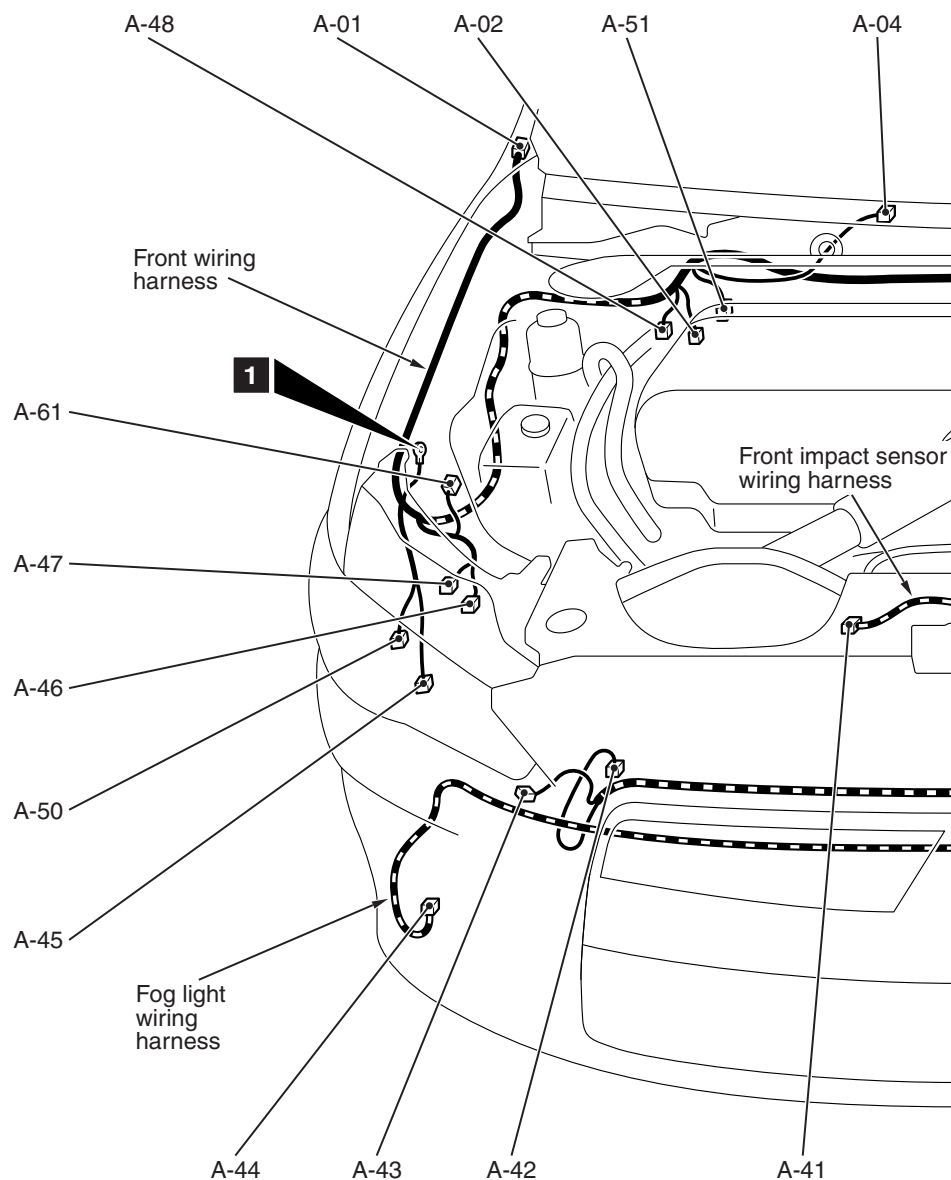


AC901090AB

A-01	(2-B)	Side turn-signal light (RH)
A-02	(2-B)	Front wheel speed sensor (RH)
A-04	(5-GR)	Windshield wiper motor
A-05	(4-GR)	Mass airflow sensor
A-06	(2-B)	Brake fluid level switch
A-07	(2-B)	Front wheel speed sensor (LH)
A-08	(2-B)	Side turn-signal light (LH)
A-11X	(4)	Fog light relay
A-12X	(4)	Horn relay
A-13X	(4)	A/C compressor clutch relay
A-16X	(4)	No connection
A-17X	(4)	Headlight relay (High)
A-18X	(4)	Throttle actuator control motor relay
A-20X	(4)	Daytime running light relay <Vehicles with discharge type headlight>

A-21X	(4)	Injector relay
A-22X	(4)	Electric pump relay
A-24X	(4)	Starter relay
A-25X	(4)	Headlight relay (Low)
A-30X	(4)	MFI relay
A-31	(12-B)	Headlight assembly (LH)
A-32	(6-B)	Headlight assembly (LH)
A-33	(4-B)	Front wiring harness and front impact sensor wiring harness combination
A-34	(2-B)	Fog light (LH)
A-35	(2-B)	Radiator fan motor
A-36	(2-B)	Ambient air temperature sensor
A-37	(1-B)	Horn (Low)

TSB Revision



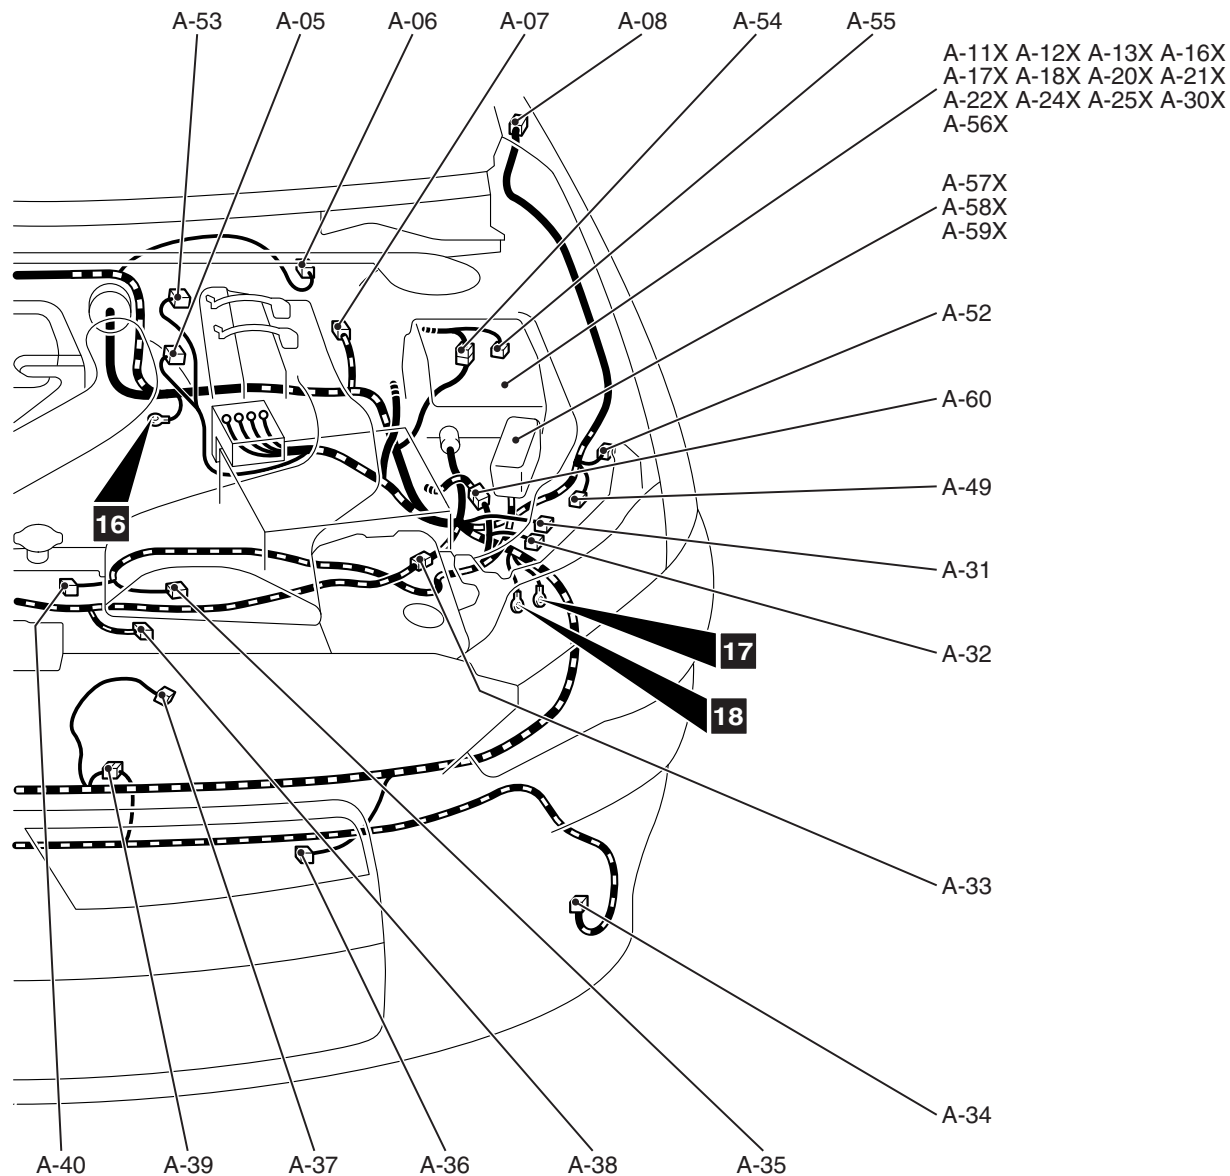


AC901091AB

A-38	(2-Y)	Front impact sensor (LH)	A-51	(47-B)	ASC-ECU
A-39	(2-B)	Front wiring harness and fog light wiring harness combination	A-52	(2-B)	No connection
A-40	(2-B)	Condenser fan motor	A-53	(2-GR)	Turbocharger wastegate solenoid
A-41	(2-Y)	Front impact sensor (RH)	A-54	(22)	Front wiring harness and control wiring harness combination
A-42	(3-B)	A/C pressure sensor	A-55	(24)	Joint connector (CAN4)
A-43	(1-B)	Horn (High)	A-56X	(4)	No.1 fuel pump relay
A-44	(2-B)	Fog light (RH)	A-57X	(4)	Radiator fan relay
A-45	(2-B)	Windshield washer motor	A-58X	(4)	Condenser fan relay
A-46	(6-B)	Headlight assembly (RH)	A-59X	(5)	Fan control relay
A-47	(12-B)	Headlight assembly (RH)	A-60	(6-B)	Front wiring harness and control wiring harness combination
A-48	(3-GR)	No connection	A-61	(2-B)	Fuel pump circuit resistor
A-49	(1-GR)	No connection			
A-50	(2-B)	No connection			

## ENGINE AND TRANSAXLE &lt;NON-TURBO&gt;

M1801000404078

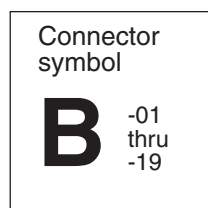


Connector color  
code

B: Black  
BR: Brown  
G: Green  
GR: Gray  
L: Blue  
NONE: Milk white  
O: Orange  
R: Red  
V: Violet  
Y: Yellow

B-01 (3-B) No.1 ignition coil  
B-02 (3-B) No.2 ignition coil  
B-03 (3-B) No.3 ignition coil  
B-04 (3-B) No.4 ignition coil  
B-05 (4-B) Heated oxygen sensor (Front)  
<Vehicles for California emission  
regulation>

B-06 (2-B) Engine coolant temperature sensor  
B-07 (3-B) Primary pulley speed sensor <CVT>  
B-08 (22-B) CVT assembly  
B-09 (10-B) Transmission range switch <CVT>  
B-10 (6-B) Throttle body assembly



AC605699AB

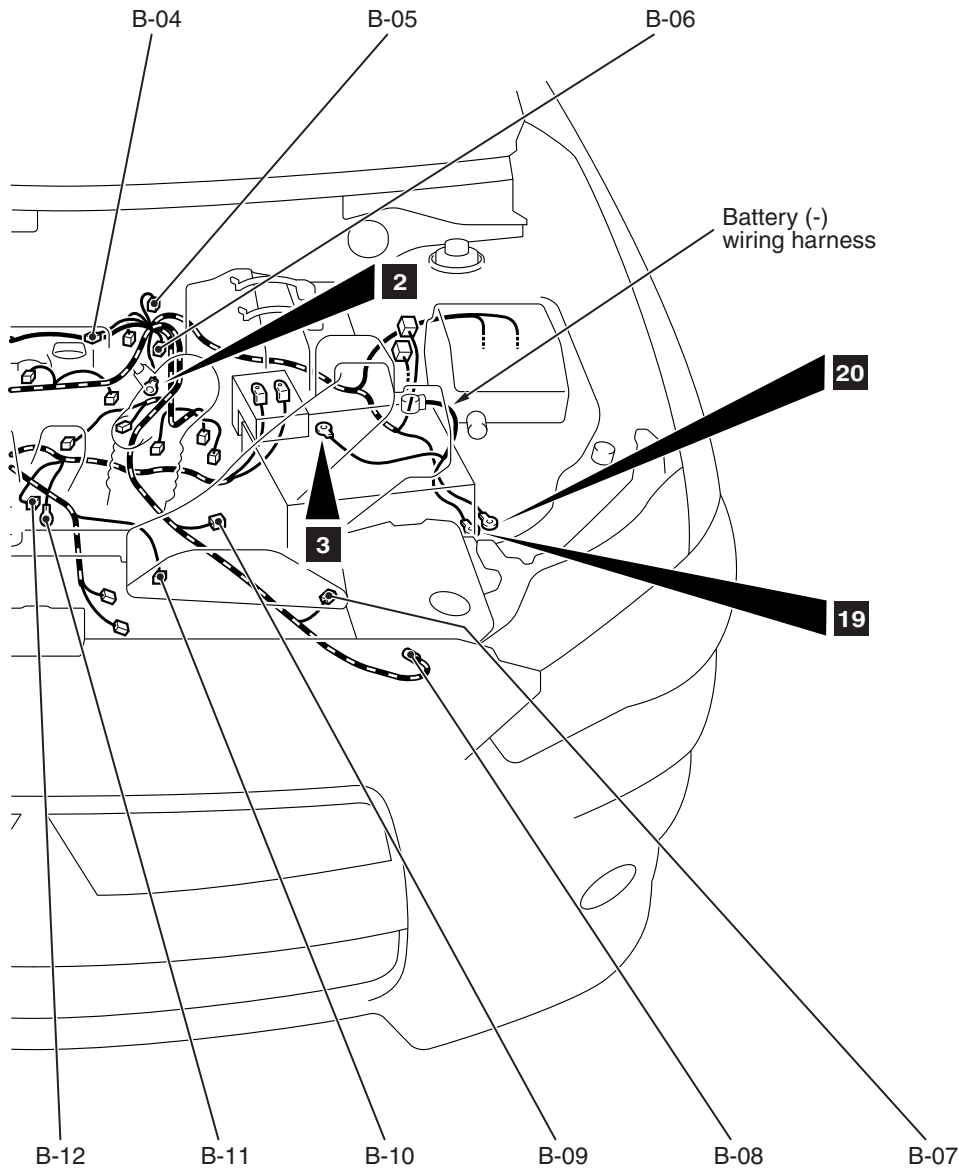

AC901093AB

B-11	(1)	Starter	B-16	(3-B)	Control wiring harness and engine sub wiring harness combination
B-12	(1-B)	Starter	B-17	(1-B)	Power steering pressure switch
B-13	(1-B)	Control wiring harness and battery (+) wiring harness combination	B-18	(2)	Intake engine oil control valve
B-14	(1-B)	A/C compressor clutch assembly	B-19	(2)	Exhaust engine oil control valve
B-15	(4-GR)	Generator			

## ENGINE AND TRANSAXLE &lt;NON-TURBO&gt; (CONTINUED)

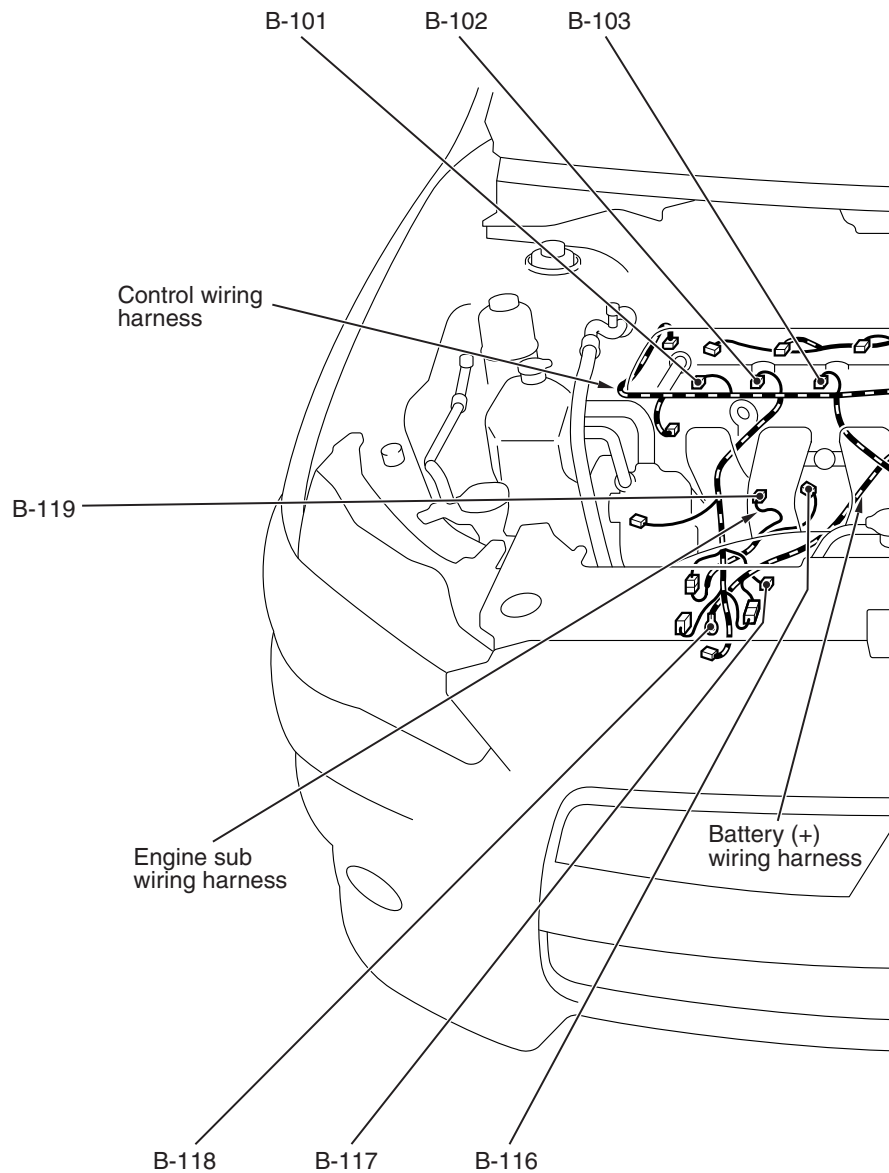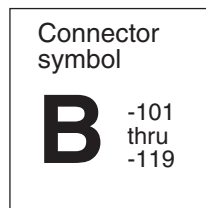


Connector color code

B: Black  
BR: Brown  
G: Green  
GR: Gray  
L: Blue  
NONE: Milk white  
O: Orange  
R: Red  
V: Violet  
Y: Yellow

AC605699AD

B-101 (2-GR) No.1 injector  
B-102 (2-GR) No.2 injector  
B-103 (2-GR) No.3 injector  
B-104 (2-GR) No.4 injector  
B-105 (3-GR) Crankshaft position sensor  
B-106 (3-GR) Intake camshaft position sensor

B-107 (3-GR) Exhaust camshaft position sensor  
B-108 (64-GR) Engine control module  
B-109 (48-GR) Engine control module  
B-110 (2-B) Backup light switch <M/T>  
B-111 (3-B) Vehicle speed sensor <M/T>

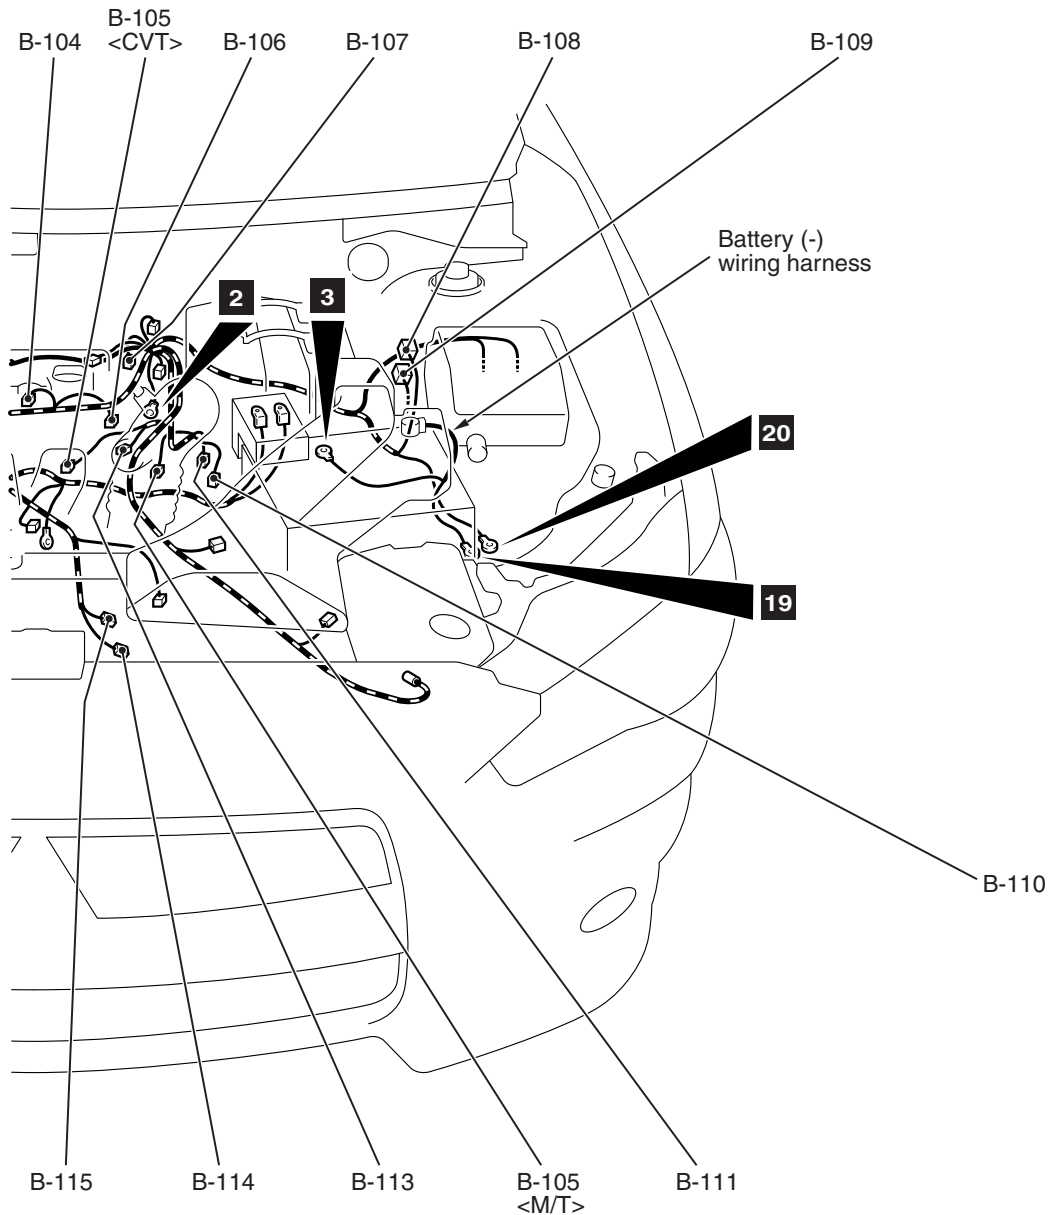


AC901093AC

B-113 (3-B)	Secondary pulley speed sensor <CVT>	B-116 (2-B)	Knock sensor
B-114 (6-GR)	Exhaust gas recirculation valve <2.0L engine (vehicles for California emission regulation) and 2.4L engine>	B-117 (3-B)	Manifold absolute pressure sensor
B-115 (2-B)	Evaporative emission purge solenoid	B-118 (1)	Generator
		B-119 (1)	Engine oil pressure switch

## ENGINE AND TRANSAXLE &lt;TURBO&gt;

M1801000403633

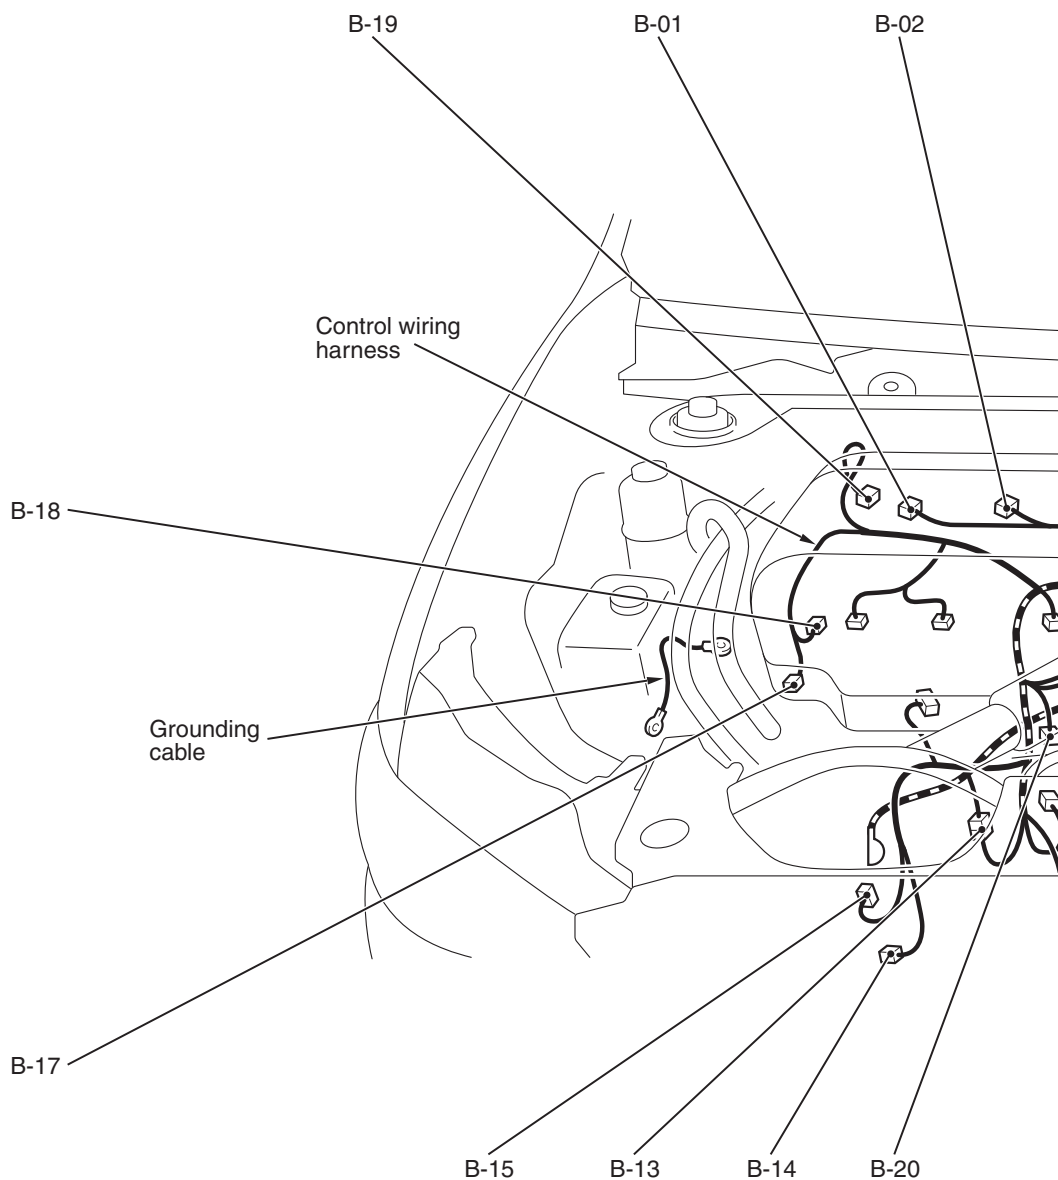
Connector  
symbol**B** -01  
thru  
-20Connector color  
code

B: Black  
 BR: Brown  
 G: Green  
 GR: Gray  
 L: Blue  
 NONE: Milk white  
 O: Orange  
 R: Red  
 V: Violet  
 Y: Yellow

AC712278AD

B-01 (4-GR) No.1 ignition coil  
 B-02 (4-GR) No.2 ignition coil  
 B-03 (4-GR) No.3 ignition coil  
 B-04 (4-GR) No.4 ignition coil

B-06 (2-B) Engine coolant temperature sensor  
 B-10 (6-B) Throttle body assembly  
 B-11 (1) Starter  
 B-12 (1-B) Starter

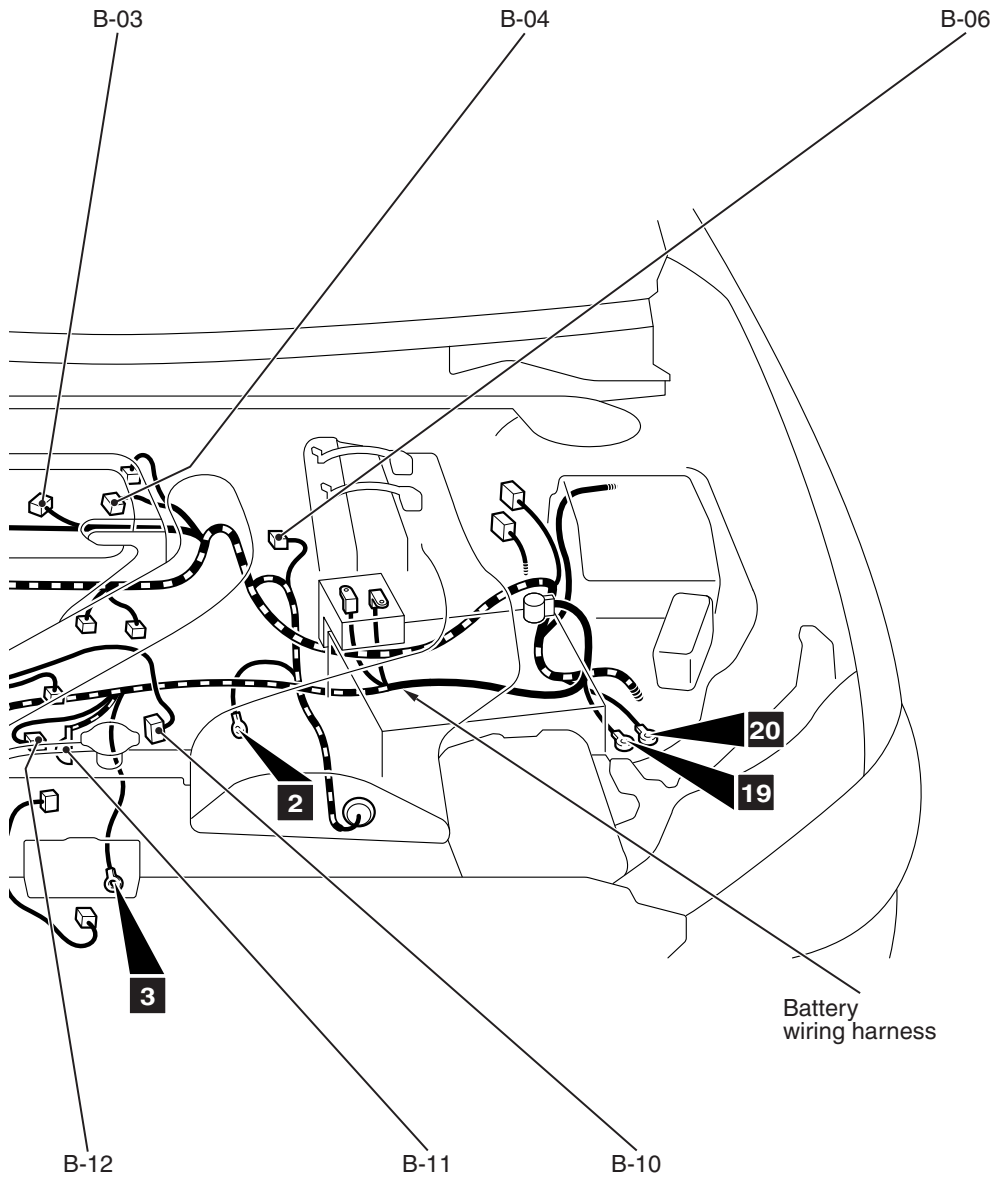


AC712279AD

B-13 (1-B) Control wiring harness and battery wiring harness combination  
B-14 (1-B) A/C compressor clutch assembly  
B-15 (4-GR) Generator

B-17 (1) Power steering pressure switch  
B-18 (2) Intake engine oil control valve  
B-19 (2) Exhaust engine oil control valve  
B-20 (2-B) No.2 intake air temperature sensor

## ENGINE AND TRANSAXLE &lt;TURBO&gt; (CONTINUED)

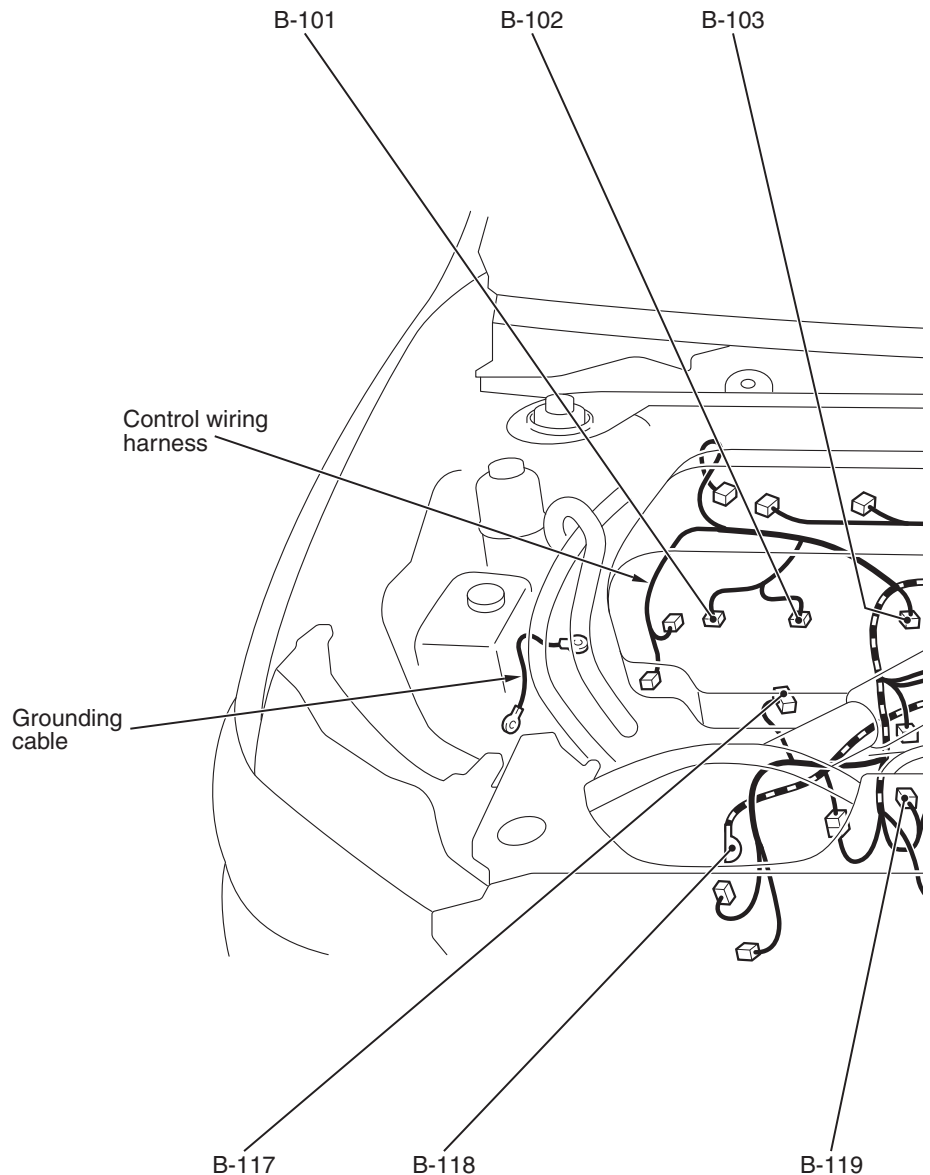Connector  
symbol**B** -101  
thru  
-120


Connector color  
code  
 B: Black  
 BR: Brown  
 G: Green  
 GR: Gray  
 L: Blue  
 NONE: Milk white  
 O: Orange  
 R: Red  
 V: Violet  
 Y: Yellow

AC712278AE

B-101 (2-GR) No.1 injector  
 B-102 (2-GR) No.2 injector  
 B-103 (2-GR) No.3 injector  
 B-104 (2-GR) No.4 injector  
 B-105 (3-GR) Crankshaft position sensor

B-106 (3-GR) Intake camshaft position sensor  
 B-107 (3-GR) Exhaust camshaft position sensor  
 B-108 (64-GR) Engine control module  
 B-109 (48-GR) Engine control module



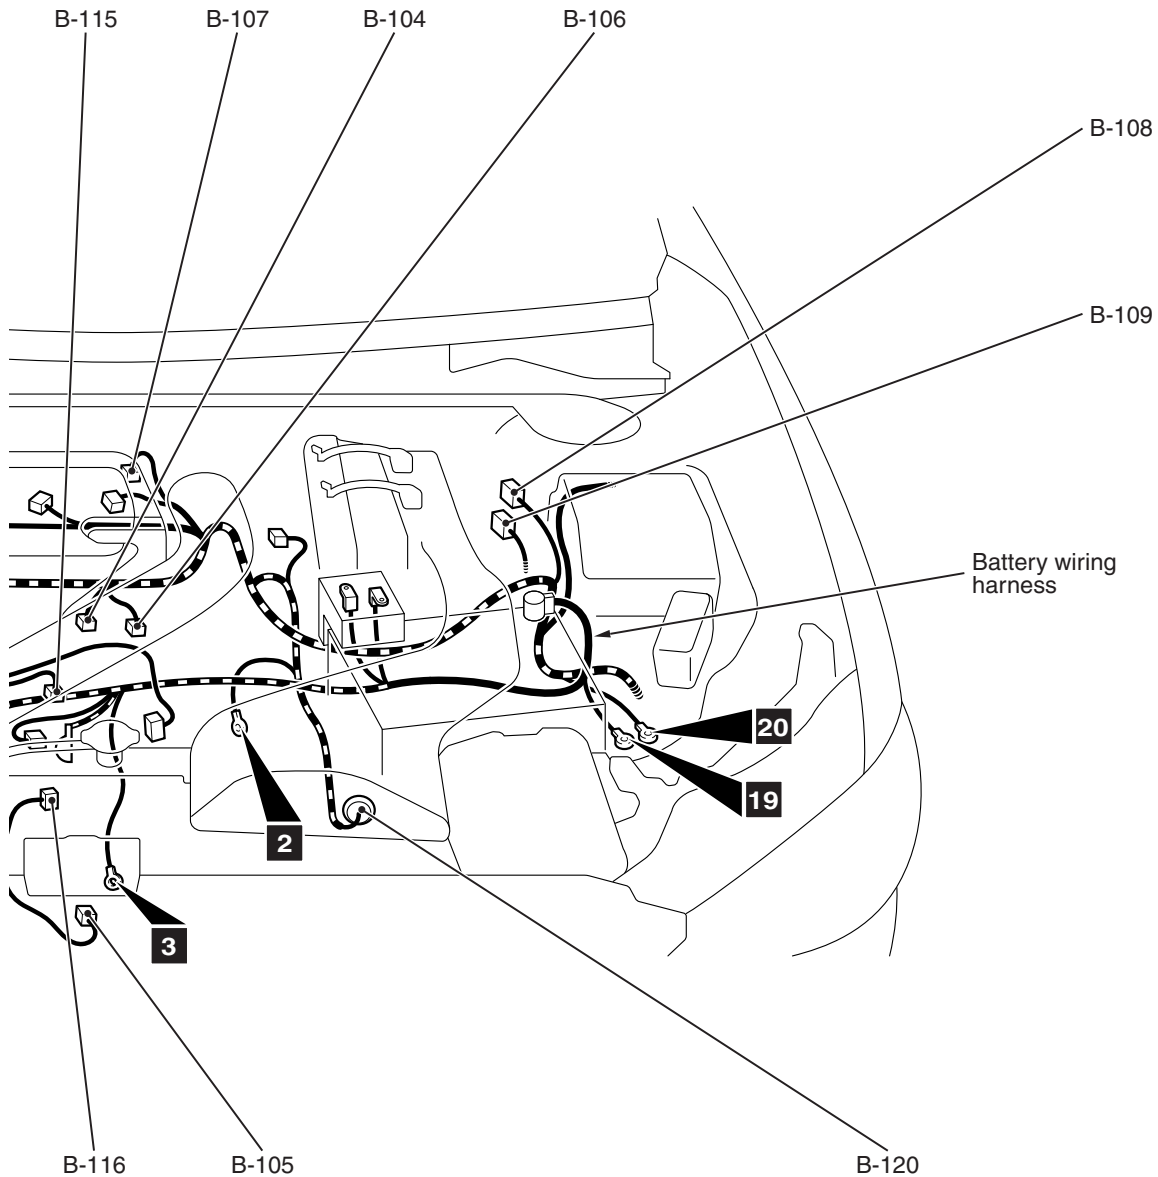


AC712279AE

B-115 (2-B)	Evaporative emission purge solenoid	B-118 (1)	Generator
B-116 (2-B)	Knock sensor	B-119 (1)	Engine oil pressure switch
B-117 (3-B)	Manifold absolute pressure sensor	B-120 (20-B)	Transaxle assembly


## DASH PANEL

M1801000603853

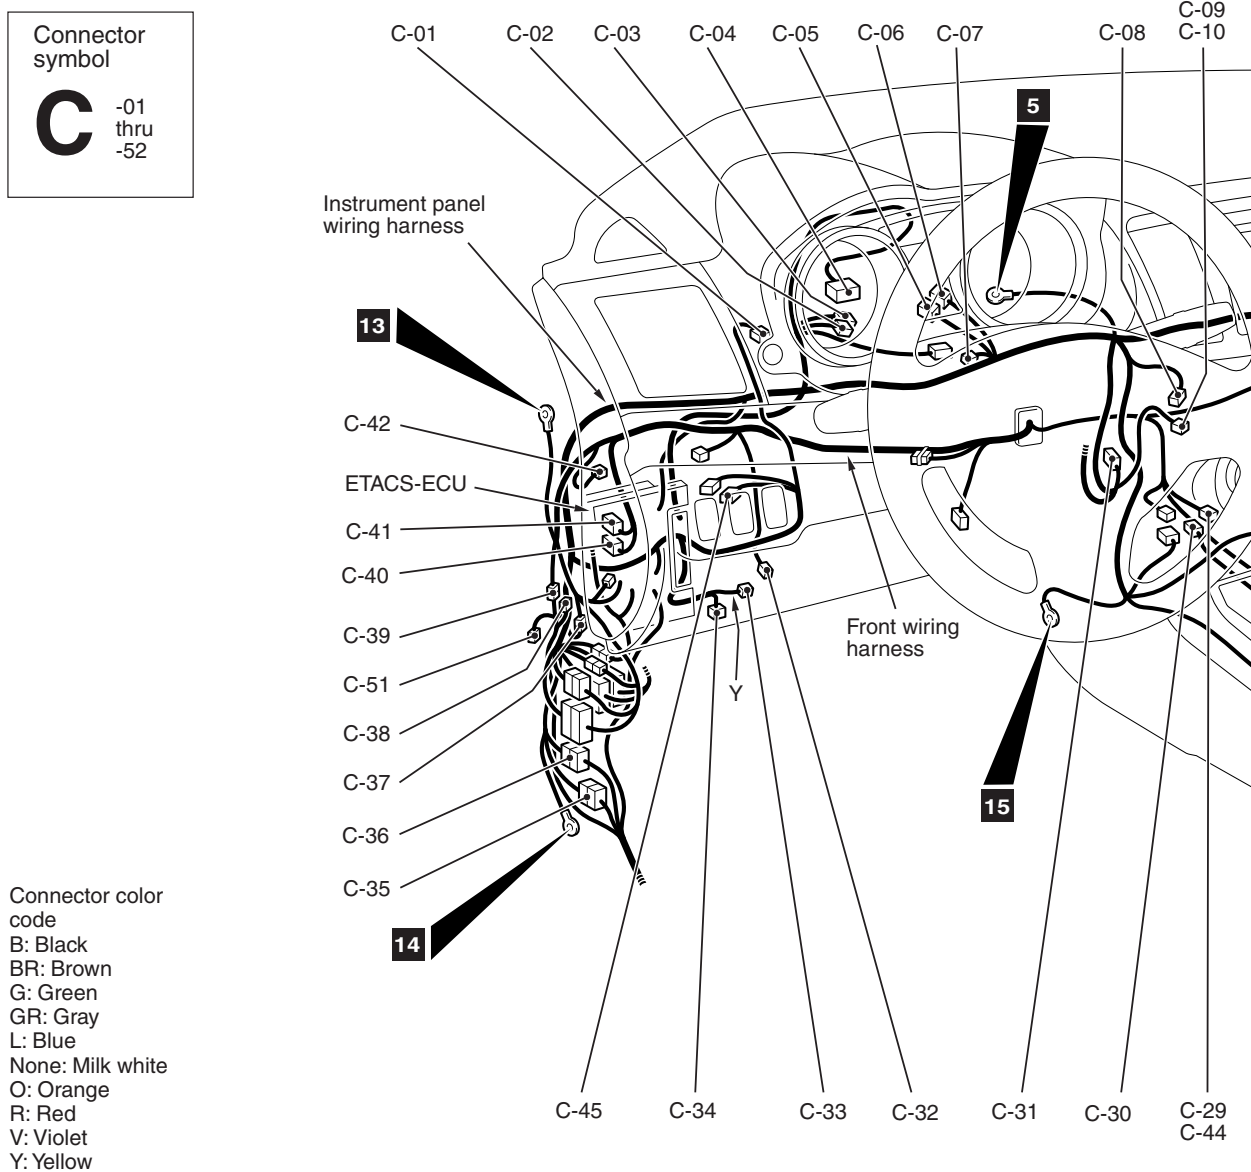

AC901094AB


C-01	(4)	Meter information switch	C-17	(14)	Satellite radio tuner
C-02	(12)	Joint connector (2)	C-18	(16-B)	Center panel unit
C-03	(24)	Joint connector (1)	C-19	(16-B)	A/C-ECU
C-04	(24)	Combination meter	C-20	(20-B)	A/C-ECU
C-05	(24)	Joint connector (CAN2)	C-21	(20)	Instrument panel wiring harness and floor wiring harness combination
C-06	(24)	Joint connector (CAN1)	C-22	(22)	Instrument panel wiring harness and floor wiring harness combination
C-07	(24)	Joint connector (3)	C-23	(9)	Heated seat switch
C-08	(2)	Interior temperature sensor <Vehicles with automatic air conditioning system>	C-24	(2)	Accessory socket (Rear floor console)
C-09	(12)	Wireless control module <Vehicles without KOS>	C-25	(4)	Floor wiring harness and console wiring harness combination
C-10	(12)	Receiver antenna module <Vehicles with KOS>	C-26	(6)	Instrument panel wiring harness and console wiring harness combination
C-11	(7)	Audio visual navigation unit	C-27	(10)	Shift switch assembly <CVT> or shift lever <TC-SST>
C-12	(32-GR)	Audio visual navigation unit	C-28	(2)	Accessory socket (Front floor console)
C-13	(5-GR)	Audio visual navigation unit	C-29	(4-B)	Heated oxygen sensor (Rear) <Non-turbo (Vehicles for California emission regulation)>
C-14	(17-GR)	Audio visual navigation unit			
C-15	(2)	Radio antenna			
C-16	(4-Y)	Passenger's (Front) air bag module (Squib)			

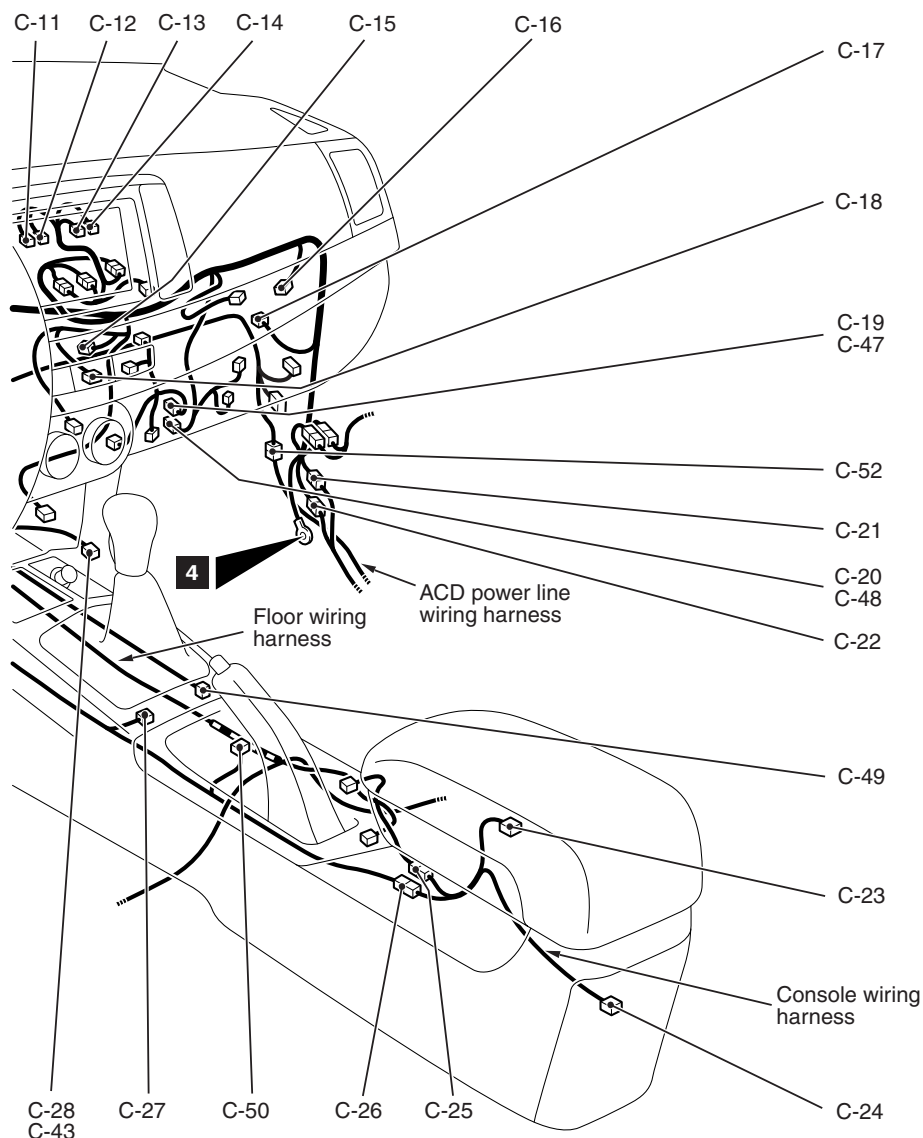

AC901095AB

C-30	(32-Y)	SRS-ECU	C-41	(26)	Transaxle control module <CVT>
C-31	(40)	KOS-ECU	C-42	(2)	Clutch monitoring switch <Vehicles with cruise control system (M/T)>
C-32	(4)	Stoplight switch	C-43	(2)	Cigarette lighter
C-33	(2-B)	Knee air bag module (Squib)	C-44	(4-B)	Heated oxygen sensor (Front) <Non-turbo (Except vehicles for California emission regulation) and turbo>
C-34	(16-B)	Data link connector	C-45	(6)	ASC off switch
C-35	(24)	Instrument panel wiring harness and floor wiring harness combination	C-47	(16-B)	Heater control unit <Vehicles without A/C>
C-36	(20)	Instrument panel wiring harness and floor wiring harness combination	C-48	(20-B)	Heater control unit <Vehicles without A/C>
C-37	(12)	Front wiring harness and floor wiring harness combination	C-49	(16)	Shift lever <TC-SST>
C-38	(24)	Joint connector (4)	C-50	(6)	AWC switch <Turbo>
C-39	(22)	Front wiring harness and floor wiring harness combination	C-51	(26)	AWC-ECU <Turbo>
C-40	(22)	Transaxle control module <CVT>	C-52	(1-GR)	Front wiring harness and ACD power line wiring harness combination <Turbo>


## DASH PANEL (CONTINUED)

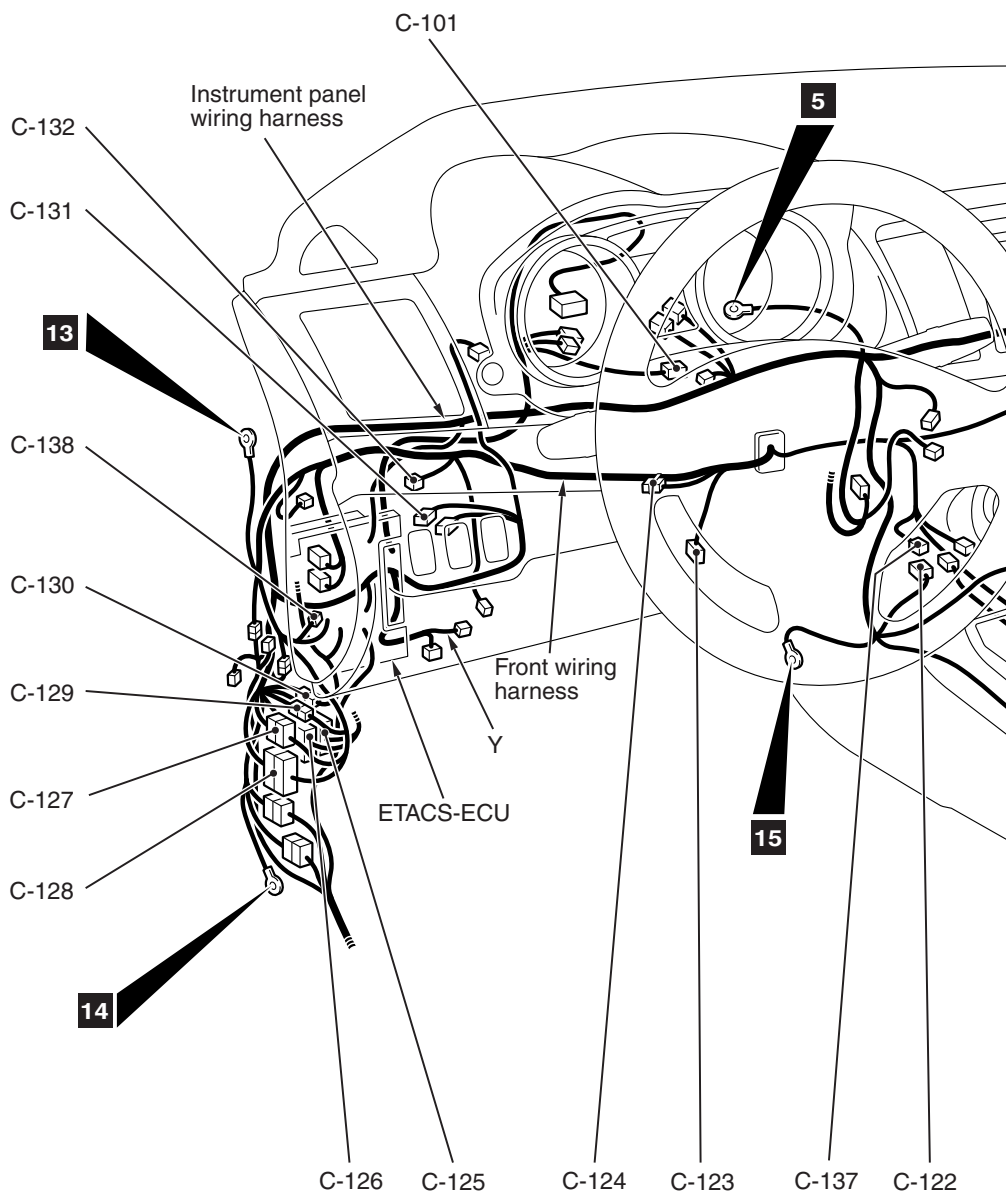Connector  
symbol**C** -101  
thru  
-138Connector color  
code

B: Black  
 BR: Brown  
 G: Green  
 GR: Gray  
 L: Blue  
 None: Milk white  
 O: Orange  
 R: Red  
 V: Violet  
 Y: Yellow

AC901094AC


C-101 (6)	No connection	C-111 (5)	Mode selection damper control motor
C-102 (24)	Radio and CD player <Vehicles with audio amplifier>	C-112 (4)	Power transistor
C-103 (24)	Instrument panel wiring harness and navigation wiring harness combination	C-113 (2)	Blower motor
C-104 (20)	Radio and CD player	C-114 (12)	Instrument panel wiring harness and front door wiring harness (RH) combination
C-105 (20)	Instrument panel wiring harness and navigation wiring harness combination	C-115 (24-BR)	Instrument panel wiring harness and front door wiring harness (RH) combination
C-106 (18)	Radio and CD player	C-116 (3)	Inside transmission antenna assembly (Front) <Vehicles with KOS>
C-107 (18)	Instrument panel wiring harness and navigation wiring harness combination	C-117 (1-B)	Parking brake switch
C-108 (10)	CAN box unit	C-118 (5)	Air mixing damper control motor
C-109 (5)	Outside/inside air selection damper control motor	C-119 (2)	Air thermo sensor
C-110 (24)	Hands free module	C-120 (12)	A/C control panel

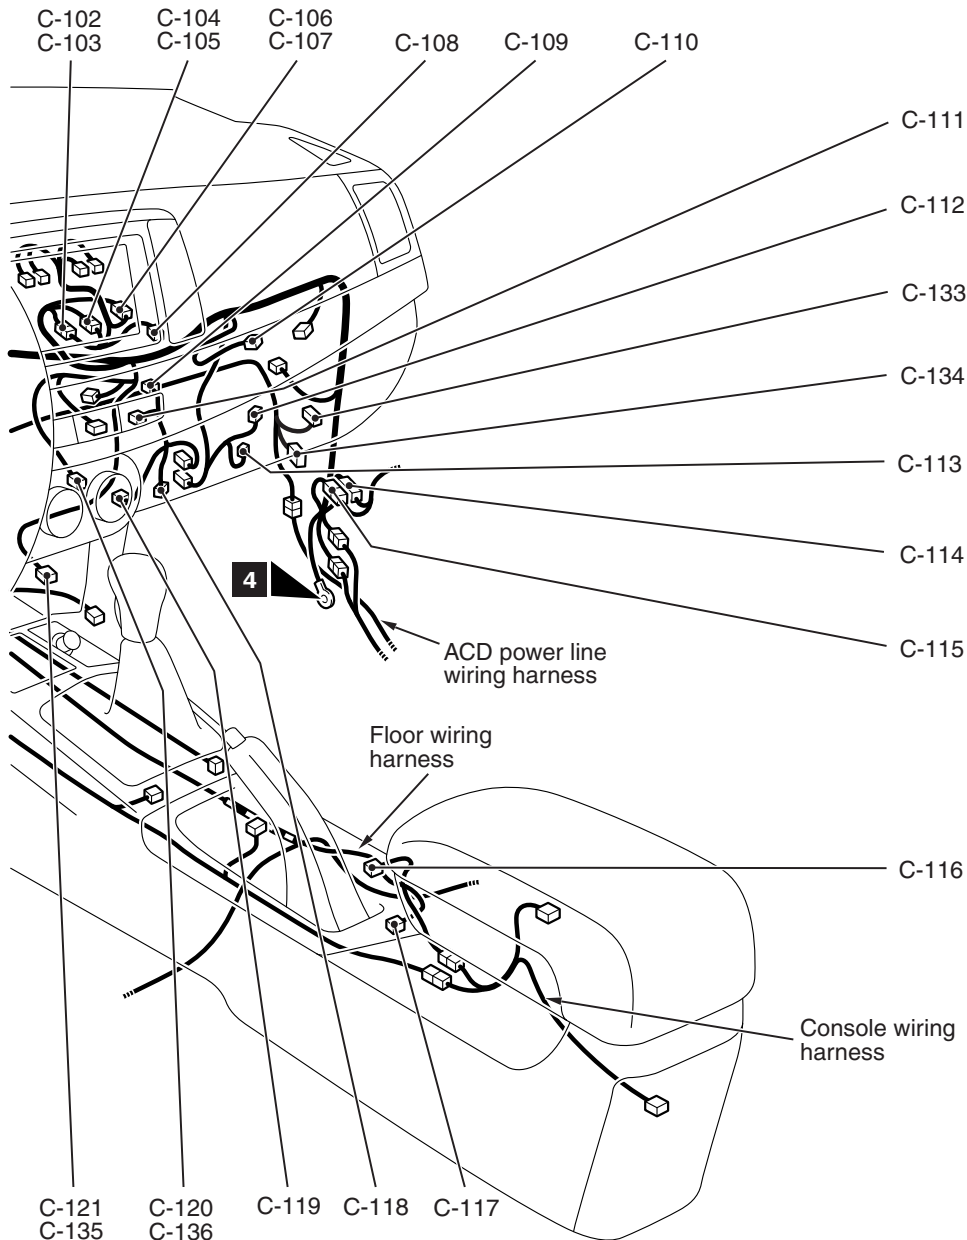


AC901095AC

C-121 (6-B)	Audio and video adapter	C-129 (2)	Instrument panel wiring harness and front wiring harness combination
C-122 (24-Y)	SRS-ECU	C-130 (12)	Instrument panel wiring harness and roof wiring harness combination
C-123 (6-B)	Accelerator pedal position sensor	C-131 (6-GR)	Headlight leveling switch <Vehicles with discharge type headlight>
C-124 (24)	Joint connector (CAN3)	C-132 (2)	Clutch interlock switch <M/T>
C-125 (12)	Instrument panel wiring harness and front door wiring harness (LH) combination	C-133 (10)	No connection
C-126 (24-BR)	Instrument panel wiring harness and front door wiring harness (LH) combination	C-134 (24)	No connection
C-127 (16-BR)	Instrument panel wiring harness and front wiring harness combination	C-135 (6-B)	Audio adapter
C-128 (22)	Instrument panel wiring harness and front wiring harness combination	C-136 (12)	Heater control panel <Vehicles without A/C>
		C-137 (6-B)	G and yaw rate sensor
		C-138 (2)	No connection

## DASH PANEL (CONTINUED)

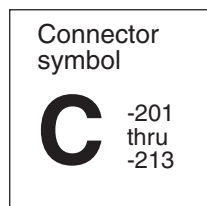


## Steering column

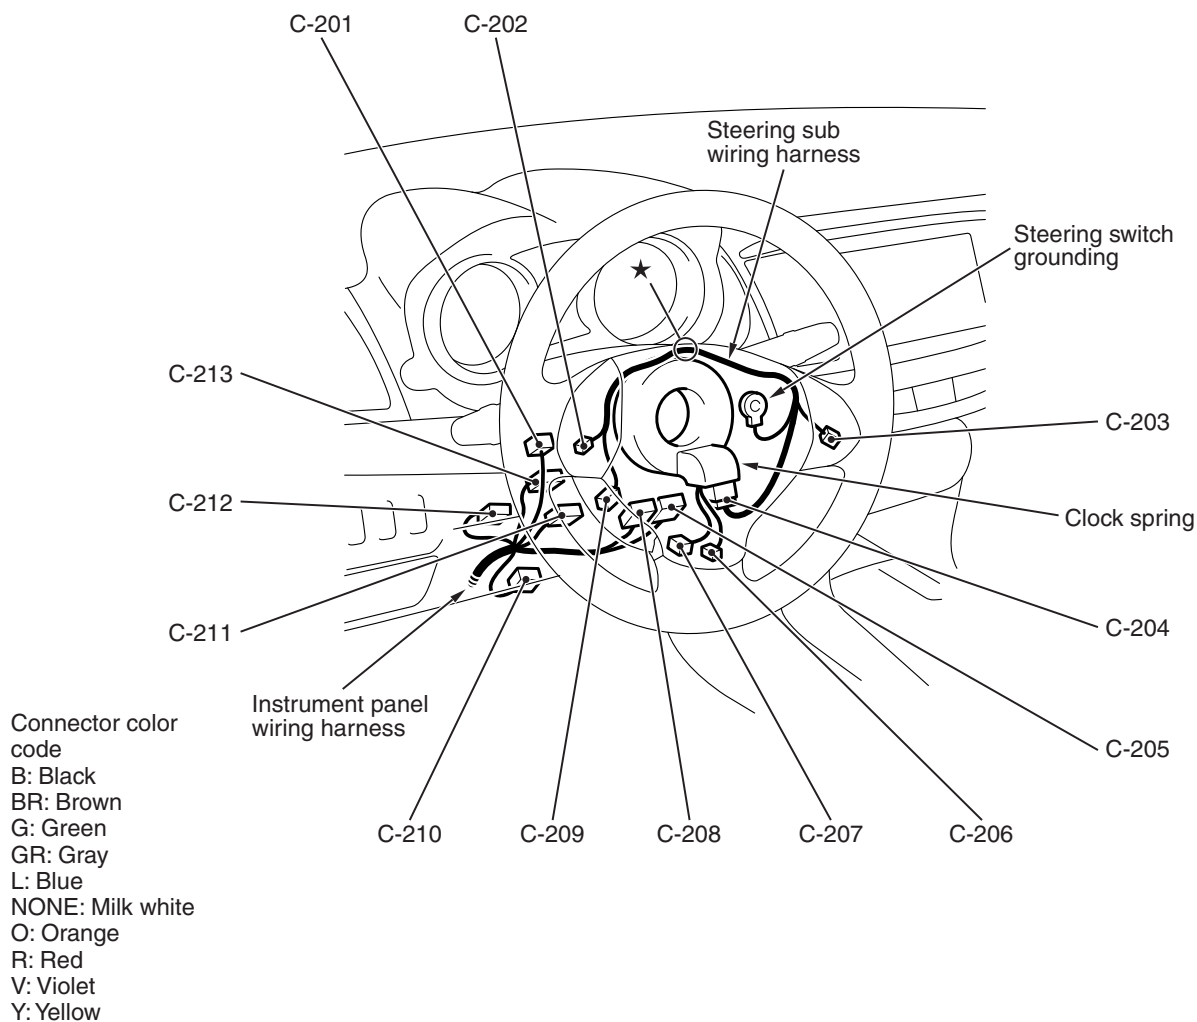


AC800255AD

C-201 (10)	Column switch	C-207 (4-Y)	Driver's air bag module (Squib)
C-202 (5-R)	Steering wheel audio remote control switch	C-208 (4-Y)	Clock spring
C-203 (4-L)	Cruise control switch	C-209 (4-Y)	Steering wheel voice control switch
C-204 (5)	Clock spring and steering sub wiring harness combination	C-210 (3)	Paddle shift switch <Vehicles with sport mode>
C-205 (6)	Clock spring	C-211 (5)	Steering wheel sensor
C-206 (1)	Horn switch	C-212 (6)	Ignition switch
		C-213 (12)	Key reminder switch

DASH PANEL (CONTINUED)

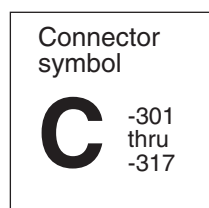

ETACS-ECU

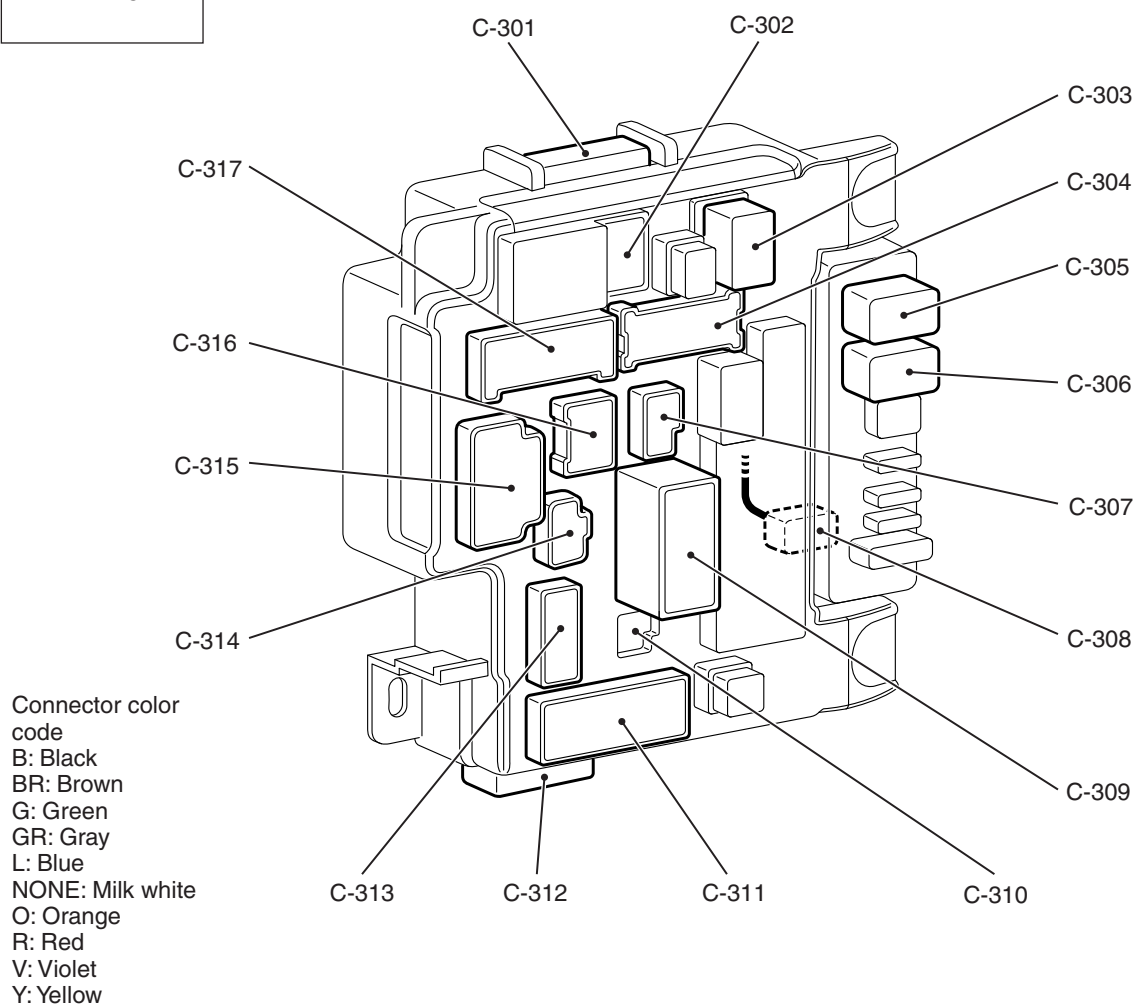


AC607744AB

C-301 (24)	Instrument panel wiring harness and ETACS-ECU combination	C-311 (20)	Floor wiring harness and ETACS-ECU combination
C-302 (4)	No connection	C-312 (16)	Front wiring harness and ETACS-ECU combination
C-303 (4)	Blower relay	C-313 (16-BR)	Floor wiring harness and ETACS-ECU combination
C-304 (16)	Front wiring harness and ETACS-ECU combination	C-314 (2)	Floor wiring harness and ETACS-ECU combination
C-305 (4)	Heated seat relay	C-315 (19)	Instrument panel wiring harness and ETACS-ECU combination
C-306 (4)	Rear window defogger relay	C-316 (6)	Roof wiring harness and ETACS-ECU combination
C-307 (2-B)	Front wiring harness and ETACS-ECU combination	C-317 (15)	Instrument panel wiring harness and ETACS-ECU combination
C-308 (1-GR)	Instrument panel wiring harness and relay box combination		
C-309 (2-B)	Front wiring harness and ETACS-ECU combination		
C-310 (4)	No connection		



## FLOOR AND ROOF

M1801000904471

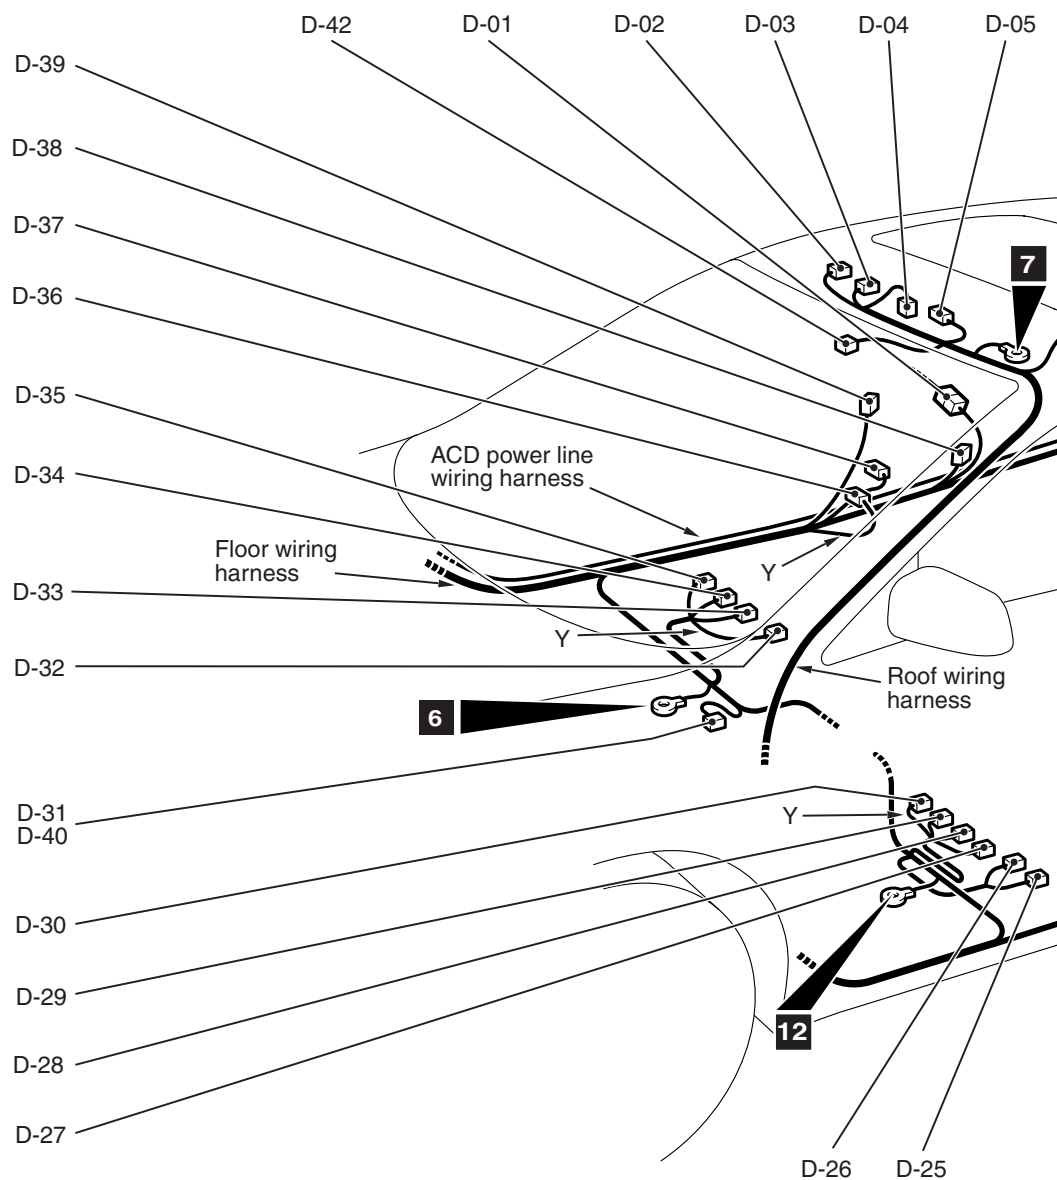Connector  
symbol**D**Connector color  
code


B : Black  
 BR : Brown  
 G : Green  
 GR : Gray  
 L : Blue  
 None : Milk white  
 O : Orange  
 R : Red  
 V : Violet  
 Y : Yellow

AC901096AB

D-01	(10)	Floor wiring harness and rear door wiring harness (RH) combination	D-12	(2-Y)	Floor wiring harness and rear floor wiring harness (LH) combination
D-02	(3)	Front dome light	D-14	(24-BR)	Floor wiring harness and rear floor wiring harness (LH) combination
D-03	(3)	Microphone unit	D-15	(18)	Floor wiring harness and rear floor wiring harness (LH) combination
D-04	(6-B)	Sunroof switch	D-16	(3)	Rear door switch (LH)
D-05	(10-GR)	Sunroof motor assembly	D-17	(3-B)	Fuel tank differential pressure sensor
D-06	(2-GR)	Rear dome light	D-18	(5-GR)	Fuel pump module
D-07	(3)	Rear door switch (RH)	D-19	(3)	Outside transmission antenna assembly (Driver's side) <Vehicles with KOS>
D-08	(2)	Floor wiring harness and fuel wiring harness combination	D-20	(10)	Floor wiring harness and rear door wiring harness (LH) combination
D-10	(2-Y)	Floor wiring harness and rear floor wiring harness (RH) combination	D-21	(2-B)	Seat belt pre-tensioner (LH)
D-11	(22)	Floor wiring harness and rear floor wiring harness (RH) combination	D-22	(2-Y)	Side impact sensor (LH)

TSB Revision



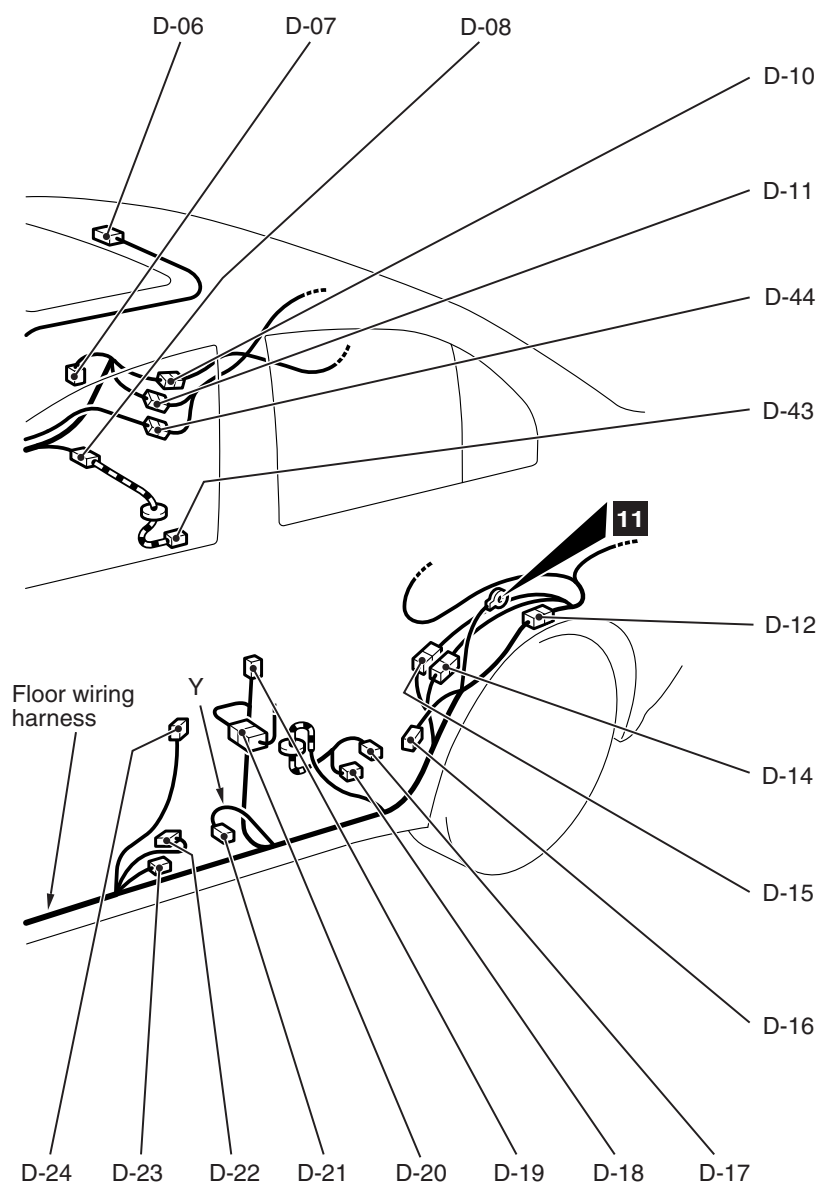


AC901097AB

D-23	(12)	Joint connector (5)	D-37	(2-Y)	Side impact sensor (RH)
D-24	(3)	Front door switch (LH)	D-38	(3)	Outside transmission antenna assembly (Passenger's side) <Vehicles with KOS>
D-25	(18)	Audio amplifier	D-39	(3)	Front door switch (RH)
D-26	(14)	Audio amplifier	D-40	(4-B)	Heated oxygen sensor (Rear) <Non-turbo (Except vehicles for California emission regulation) and turbo>
D-27	(4-B)	Heated seat assembly (LH)	D-42	(3)	Lighting control sensor <Vehicles with automatic light>
D-28	(2-GR)	Seat slide sensor (LH)	D-43	(2)	Fuel level sensor (sub) <AWD>
D-29	(4-B)	Seat belt switch (Driver's side)	D-44	(1-GR)	ACD power line wiring harness and rear floor wiring harness (RH) combination <Turbo>
D-30	(2-Y)	Side-airbag module (Squib) (LH)			
D-31	(4-B)	Heated oxygen sensor (3rd) <Vehicles for California emission regulation>			
D-32	(2-Y)	Side-airbag module (Squib) (RH)			
D-33	(2-B)	Seat belt switch (Passenger's side)			
D-34	(4-B)	Heated seat assembly (RH)			
D-35	(6)	Front seat assembly (RH)			
D-36	(2-B)	Seat belt pre-tensioner (RH)			

DOOR


M1801001402945

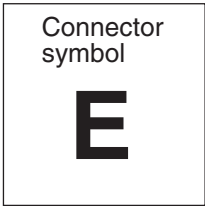

FRONT DOOR

(Driver's side)

(Passenger's side)

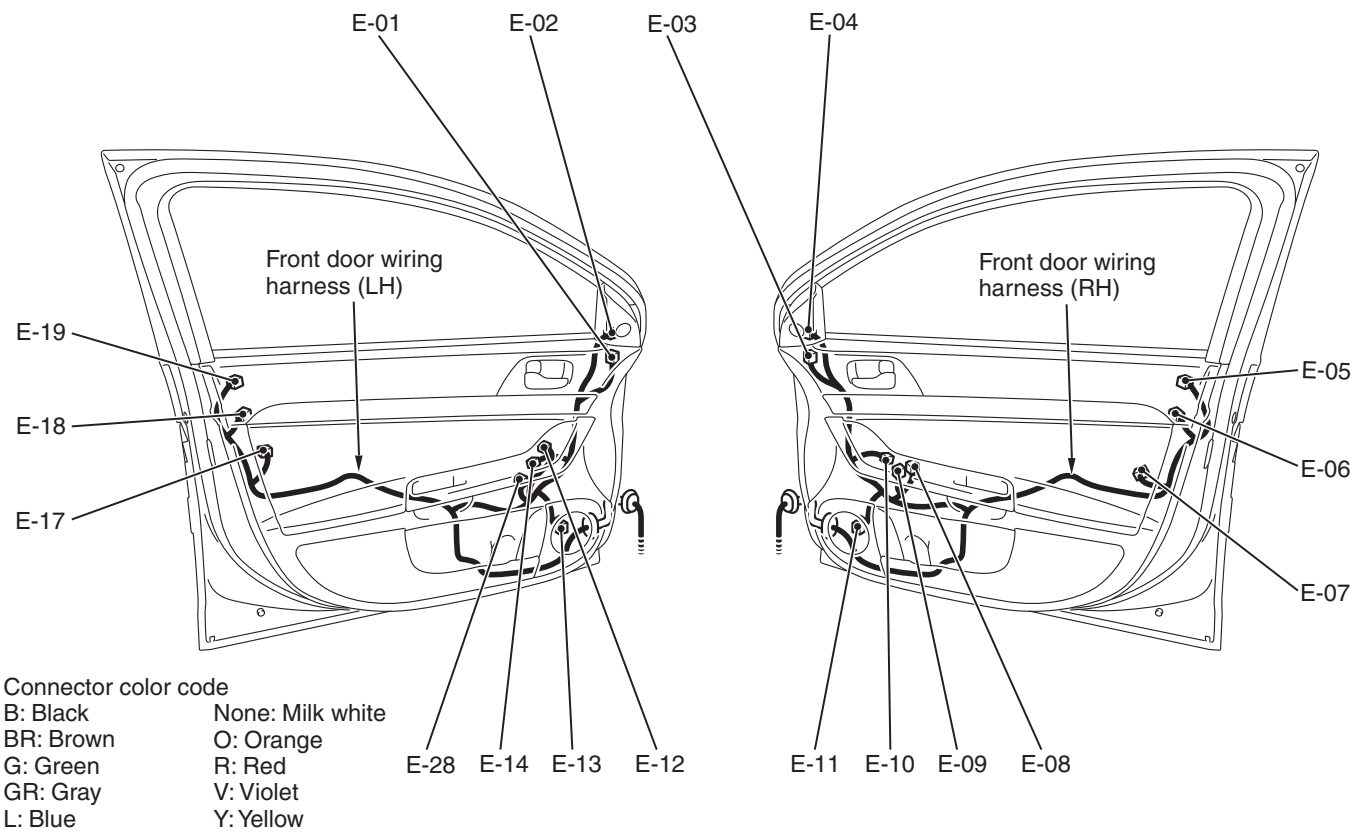



AC605712AF

E-01	(10)	Door mirror assembly (LH)	E-08	(4)	Front power window sub switch
E-02	(2-B)	Tweeter (LH)	E-09	(8)	Front power window sub switch
E-03	(10)	Door mirror assembly (RH)	E-10	(6-GR)	Front power window motor (RH)
E-04	(2-B)	Tweeter (RH)	E-11	(2)	Front door speaker (RH)
E-05	(6)	Unlock sensor (RH) <Vehicles with KOS>	E-12	(11-L)	Remote controlled mirror switch
E-06	(2-GR)	Lock switch (RH) <Vehicles with KOS>	E-13	(2)	Front door speaker (LH)
E-07	(6-B)	Front door lock actuator (RH)	E-14	(6-GR)	Front power window motor (LH)

REAR DOOR

(LH)

(RH)

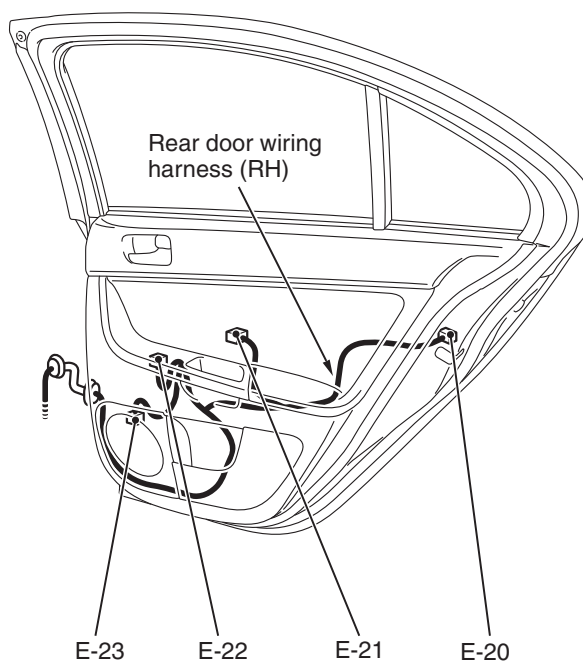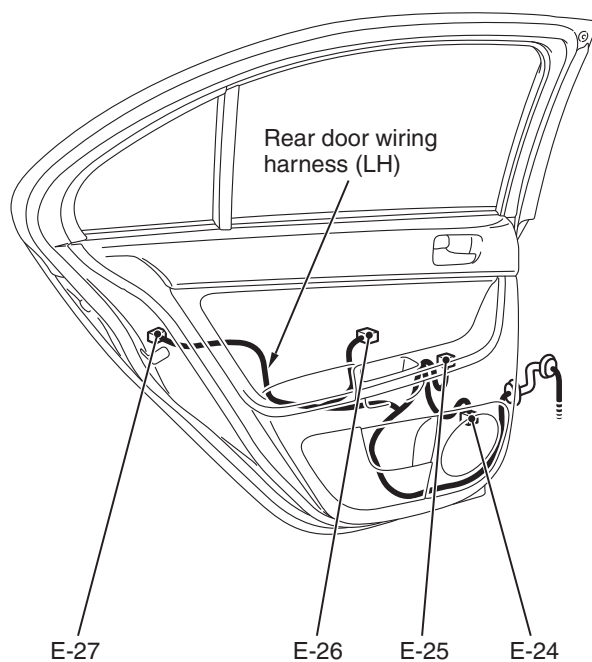


AC605713AG

E-17	(6-B)	Front door lock actuator (LH)
E-18	(2-GR)	Lock switch (LH) <Vehicles with KOS>
E-19	(6)	Unlock sensor (LH) <Vehicles with KOS>
E-20	(6-B)	Rear door lock actuator (RH)
E-21	(6-GR)	Rear power window motor (RH)
E-22	(8)	Rear power window sub switch (RH)

E-23	(2)	Rear door speaker (RH)
E-24	(2)	Rear door speaker (LH)
E-25	(8)	Rear power window sub switch (LH)
E-26	(6-GR)	Rear power window motor (LH)
E-27	(6-B)	Rear door lock actuator (LH)
E-28	(19)	Power window main switch

## LUGGAGE COMPARTMENT

M1801001501314

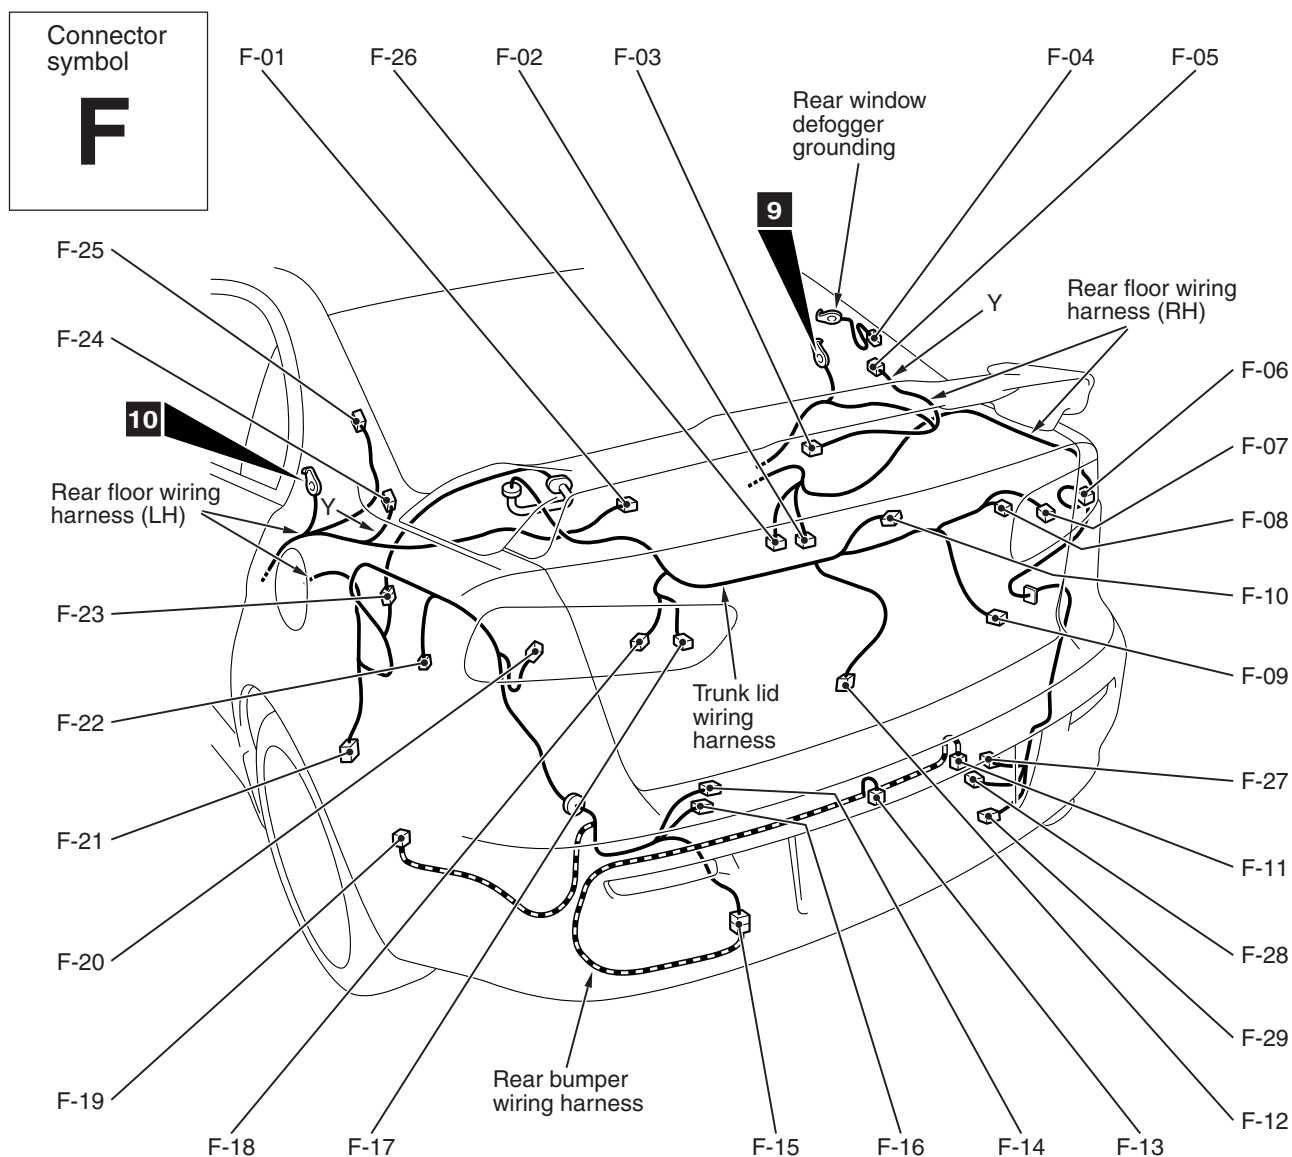

AC802289AB

F-01	(2)	Luggage compartment light	F-16	(3-GR)	Outside transmission antenna assembly (Trunk lid) <Vehicles with KOS>
F-02	(2-B)	Rear wheel speed sensor (RH)	F-17	(3-GR)	Backup light (LH)
F-03	(3)	Inside transmission antenna assembly (Rear: passenger's side) <Vehicles with KOS>	F-18	(2-GR)	Tail light (LH)
			F-19	(2-GR)	Evaporative emission ventilation solenoid
F-04	(1-B)	Rear window defogger (-)	F-20	(4)	Rear combination light (LH)
F-05	(2-B)	Curtain air bag module (Squib) (RH)	F-21	(2-B)	Rear wheel speed sensor (LH)
F-06	(4)	Rear combination light (RH)	F-22	(4-B)	Sub woofer
F-07	(2-GR)	Tail light (RH)	F-23	(10)	Rear floor wiring harness (LH) and trunk lid wiring harness combination
F-08	(3-GR)	Backup light (RH)	F-24	(2-B)	Curtain air bag module (Squib) (LH)
F-09	(2)	Trunk lid opener <Vehicles with KOS>	F-25	(1-B)	Rear window defogger (+)
F-10	(2-GR)	High-mounted stoplight	F-26	(3)	No connection
F-11	(2-GR)	License plate light (RH)	F-27	(3-B)	Pressure sensor <Turbo>
F-12	(3)	Trunk lid lock actuator	F-28	(3-B)	Proportioning valve (for ACD control) <Turbo>
F-13	(2-GR)	License plate light (LH)	F-29	(2-GR)	Electric pump <Turbo>
F-14	(2-GR)	Outer tone alarm <Vehicles with KOS>			
F-15	(2-B)	Rear floor wiring harness (LH) and rear bumper wiring harness combination			