

**A**

A/C-ECU	
Removal and installation .....	55A-189
Accessory socket and cigarette lighter .....	90-306
Accessory socket and cigarette lighter	
Diagnosis	
Standard flow of diagnostic troubleshooting .....	54A-317
General information .....	54A-315
Inspection .....	54A-330
Removal and installation .....	54A-329
Special tools .....	54A-316
Symptom procedures	
Inspection procedure 1: the accessory socket does not work. <vehicles with accessory socket> .....	54A-318
Inspection procedure 2: the cigarette lighter does not work. <vehicles with cigarette lighter> .....	54A-324
Trouble symptom chart .....	54A-317
Adjusting snap rings and spacers .....	22B-3
Aero parts	
Removal and installation .....	51-2
Air bag module and seat belt pre-tensioner disposal procedures	52B-463
Air cleaner .....	15-9
Air cleaner	
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	15-9
Removal and installation <2.0l engine turbo> .....	15-10
Air conditioning system <non-turbo> .....	90-256
Air conditioning system <turbo> .....	90-268
Ambient air temperature sensor .....	55A-188
Ambient air temperature sensor	
Inspection .....	55A-188
Removal and installation .....	55A-188
Amplifier	
General information .....	54A-627
Removal and installation .....	54A-627
Antenna	
General information .....	54A-633
Removal and installation .....	54A-634
Anti-lock braking system (ABS) and active stability control system (ASC) <non-turbo> .....	90-336
Anti-lock braking system (ABS), active stability control system (ASC) and active center differential (ACD) <turbo> .....	90-344
ASC off switch	
Inspection .....	35C-300
Removal and installation .....	35C-299
Audio system <vehicles with audio amplifier> .....	90-296
Audio system <vehicles without audio amplifier> .....	90-290
Automatic A/C diagnosis	
Actuator test .....	55B-16
Automatic air conditioning troubleshooting strategy .....	55B-4
Check at A/C-ECU terminal .....	55B-17
Data list reference table .....	55B-12
Diagnostic function .....	55B-4

Diagnostic trouble code chart .....	55B-8
Diagnostic trouble code procedures	
DTC B10C0, B10C1: interior temperature sensor system .....	55B-9
Introduction .....	55B-4
AWC-ECU	
Removal and installation .....	22C-547

**B**

Backup light <non-turbo> .....	90-178
Backup light <turbo> .....	90-180
Balancer chain .....	11F-56
Balancer chain	
Removal and installation .....	11F-56
Balancer shaft and oil pump module	
Removal and installation .....	11E-79
Balancer timing chain, balancer shaft and oil pump module	
Removal and installation .....	11E-75
Basic brake system diagnosis	
Basic brake system diagnostic troubleshooting strategy .....	35A-5
Introduction to basic brake system diagnosis .....	35A-5
Symptom chart .....	35A-5
Symptom procedures	
Inspection procedure 1: vehicle pulls to one side when brakes are applied .....	35A-6
Inspection procedure 2: insufficient braking power ....	35A-7
Inspection procedure 3: increased pedal stroke (reduced pedal-to- floor board clearance) .....	35A-8
Inspection procedure 4: brake drag .....	35A-8
Inspection procedure 5: scraping or grinding noise when brakes are applied .....	35A-10
Inspection procedure 6: squealing, groaning or chattering noise when brakes are applied .....	35A-10
Inspection procedure 7: squealing noise when brakes are not applied .....	35A-11
Inspection procedure 8: groaning, clicking or rattling noise when brakes are not applied. ....	35A-12
Battery	
Battery removal and installation .....	54A-10
General information .....	54A-7
On-vehicle service	
Battery charging .....	54A-8
Battery check .....	54A-7
Battery test .....	54A-8
Bellcrank	
Bellcrank disassembly and assembly .....	22B-38
Brake pedal	
Inspection	
Brake pedal distortion check .....	35A-35
Stoplight switch check .....	35A-34
Removal and installation .....	35A-33
Brake warning light, fuel warning light and oil pressure warning light <non-turbo> .....	90-190
Brake warning light, fuel warning light and oil pressure warning light <turbo> .....	90-194

**C**

Camshaft		General information .....	54A-331
Inspection		Inspection	
Engine overhaul <2.0l engine non-turbo> .....	11B-45	Column switch (switch body part) continuity check....	54A-340
Engine overhaul <2.0l engine turbo> .....	11D-46	Wiper/washer switch continuity check .....	54A-339
Engine overhaul <2.4L engine> .....	11F-45	Removal and installation.....	54A-338
Removal and installation		Special tools.....	54A-332
Engine mechanical <2.0l engine non-turbo> .....	11A-24	Troubleshooting	
Engine overhaul <2.0l engine non-turbo> .....	11B-42	Diagnostic function.....	54A-333
Engine mechanical <2.0l engine turbo> .....	11C-26	Diagnostic trouble code table.....	54A-335
Engine overhaul <2.0l engine turbo> .....	11D-43	Standard flow of diagnostic troubleshooting .....	54A-333
Engine mechanical <2.4L engine> .....	11E-24	Combination meter	
Engine overhaul <2.4L engine> .....	11F-42	Actuator test table <vehicles with color liquid crystal display>.....	54A-100
CAN communication-related DTC (u-code) table.....	54C-285	Actuator test table	
Central door locking system <vehicles with keyless entry system> .....	90-210	<vehicles without color liquid crystal display> .....	54A-100
Central door locking system <vehicles without keyless entry system> .....	90-204	Check at ECU terminals .....	54A-111
Centralized junction .....	90-19	Check procedure for each multi information display screen <vehicles with color liquid crystal display> .....	54A-106
Charge air cooler <2.0l engine turbo>		Check procedure for each multi information display screen <vehicles without color liquid crystal display> .....	54A-101
Removal and installation .....	15-12	Combination meter	
Charging system		Disassembly and assembly .....	54A-126
Charging system diagnosis .....	16-5	Removal and installation.....	54A-125
General information .....	16-3	Diagnostic trouble code chart .....	54A-33
General specifications .....	16-4	Diagnostic trouble code procedures	
Generator assembly		DTC B1200: malfunction of odometer.....	54A-34
Disassembly and assembly		DTC B1201: abnormal fuel information <AWD> .....	54A-39
<2.0l engine non-turbo, 2.4L engine> .....	16-19	DTC B1201: abnormal fuel information <FWD> .....	54A-35
Disassembly and assembly <2.0l engine turbo> .....	16-27	DTC B1208: malfunction of lcd heater .....	54A-42
Inspection <2.0l engine non-turbo, 2.4L engine> .....	16-23	DTC B1209: test mode .....	54A-43
Inspection <2.0l engine turbo> .....	16-32	DTC B2203: vin not programmed .....	54A-43
Removal and installation		DTC B2463: sticking of rheostat switch .....	54A-45
<2.0l engine non-turbo, 2.4L engine> .....	16-17	DTC B2464: the sticking of meter information switch .....	54A-46
Removal and installation <2.0l engine turbo> .....	16-26	DTC B2465: ignition switch signal error.....	54A-49
On-vehicle service		DTC U0019: bus off (CAN-B).....	54A-50
Generator output line voltage drop test .....	16-9	DTC U0100: engine control module CAN timeout ....	54A-52
Output current test .....	16-10	DTC U0141: ETACS CAN timeout.....	54A-54
Regulated voltage test .....	16-12	DTC U0151: SRS-ECU CAN timeout .....	54A-56
Wave pattern check using an oscilloscope .....	16-13	DTC U0154: occupant classification-ECU CAN timeout .....	54A-58
Service specifications .....	16-5	DTC U0164: A/C/heater control unit CAN timeout....	54A-60
Special tool .....	16-8	DTC U0168: KOS-ECU or WCM CAN timeout.....	54A-62
Charging system <non-turbo> .....	90-56	DTC U0184: audio CAN timeout.....	54A-64
Charging system <turbo> .....	90-60	DTC U0197: hands free module CAN timeout.....	54A-66
Clutch		DTC U0245: audio visual navigation unit CAN timeout .....	54A-68
Clutch inspection .....	21B-5	DTC U1415: coding not completed/data fail .....	54A-70
Removal and installation .....	21B-3	General information .....	54A-26
Clutch control .....	21A-8	On-vehicle service	
Clutch control		Fuel level sensor check .....	54A-115
Inspection .....	21A-10	Meter information switch check.....	54A-116
Removal and installation .....	21A-8	Service reminder function set .....	54A-117
Clutch housing		Speedometer check .....	54A-112
Disassembly and assembly .....	22B-40	Tachometer check.....	54A-114
Clutch pedal and master cylinder		Service data <vehicles with color liquid crystal display> .....	54A-98
Inspection .....	21A-8	Service data <vehicles without color liquid crystal display> .....	54A-94
Removal and installation .....	21A-5	Service specifications .....	54A-28
Column switch .....	54A-331	Special tools.....	54A-29
Column switch		Symptom procedures	
Diagnostic trouble code procedures		Inspection procedure 1: power supply circuit check .	54A-73
DTC B2350: malfunction of lighting switch, DTC B2351: malfunction of wiper/washer switch.....	54A-335	Inspection procedure 2: the speedometer does not work (the other meters work).....	54A-79
		Inspection procedure 3: the tachometer does not work (the other meters work).....	54A-81

Inspection procedure 4: tone alarm does not sound normally.....	54A-83	Cruise control	
Inspection procedure 5: the combination meter light does not illuminate normally or the multi information display is not displayed normally.....	54A-86	Cruise control switch	
Inspection procedure 6: the multi information display screen cannot be changed with the operation of the meter information switch.....	54A-90	Removal and installation	
Trouble symptom chart.....	54A-72	<2.0l engine non-turbo, 2.4L engine> .....	17-89
Troubleshooting		Removal and installation <2.0l engine turbo> .....	17-89
Diagnosis function .....	54A-30	Cruise control system diagnosis	
Standard flow of diagnostic troubleshooting .....	54A-30	Diagnostic function.....	17-14
Component identification.....	27B-4	Diagnostic troubleshooting strategy.....	17-13
Compressor assembly <except ralliart>		Introduction to cruise control system diagnosis .....	17-13
Disassembly and assembly <except ralliart> .....	55A-192	Data list reference table.....	17-79
Inspection		Diagnostic trouble code (DTC) chart .....	17-17
Heater, air conditioning and ventilation.....	55A-192	Diagnostic trouble code procedures .....	17-18
Heater, air conditioning and ventilation.....	55A-194	Diagnostic trouble code procedures	
Removal and installation <except ralliart> .....	55A-190	DTC 15: cruise control switch system.....	17-18
Compressor assembly and tension pulley <ralliart>		DTC 22: stoplight switch system.....	17-32
Disassembly and assembly <ralliart> .....	55A-197	DTC 23: ECM and its related component .....	17-41
Inspection		ECM terminal voltage reference chart for cruise control system operation.....	17-80
Heater, air conditioning and ventilation.....	55A-196	General information .....	17-10
Heater, air conditioning and ventilation.....	55A-199	On-vehicle service	
Removal and installation <ralliart> .....	55A-195	Cruise control system component check .....	17-87
Condenser assembly		Cruise control system operation check .....	17-83
Removal and installation .....	55A-200	Special tools.....	17-82
Control link, upper arm and lower arm		Symptom chart.....	17-42
Control link and upper arm pillow ball bushing rotation starting torque check <AWD> .....	34-12	Symptom procedures	
Lower arm bushing replacement .....	34-13	Inspection procedure 1: when the brake pedal is depressed, cruise control is not cancelled. ....	17-44
Removal and installation .....	34-10	Inspection procedure 10: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed <TC-SST>..	17-73
Control unit.....	70-2	Inspection procedure 11: when the "on/off" switch is turned on, "CRUISE" indicator light does not illuminate (however, cruise control system is normal.).....	17-76
Controller area network (CAN) <non-turbo> .....	90-424	Inspection procedure 2: when the clutch pedal is depressed, cruise control is not cancelled <M/T> .....	17-46
Controller area network (CAN) <turbo> .....	90-428	Inspection procedure 3: when the selector lever is moved to "N" position, cruise control is not cancelled <CVT> .....	17-50
Coolant .....	14-3	Inspection procedure 4: when the shift lever is moved to "N" position, cruise control is not cancelled <TC-SST> .....	17-52
Cooling system <non-turbo> .....	90-88	Inspection procedure 5: when the "CANCEL" switch is pressed, cruise control is not cancelled.....	17-55
Cooling system <turbo> .....	90-92	Inspection procedure 6: cruise control cannot be set (No response "coast/set" switch and "acc/res" switch is pressed) <2.0l engine non-turbo, 2.4L engine> .....	17-57
Crankshaft and cylinder block		Inspection procedure 7: cruise control cannot be set (No response "coast/set" switch and "acc/res" switch is pressed) <2.0l engine turbo> .....	17-63
Inspection		Inspection procedure 8: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed <M/T>.....	17-68
Engine overhaul <2.0l engine non-turbo>.....	11B-75	Inspection procedure 9: hunting (repeated acceleration and deceleration) occurs at the set vehicle speed <CVT>.....	17-70
Engine overhaul <2.0l engine turbo> .....	11D-78	Cruise control system <non-turbo> .....	90-372
Engine overhaul <2.4L engine> .....	11F-78	Cruise control system <turbo> .....	90-380
Removal and installation		Curtain air bag module(s)	
Engine overhaul <2.0l engine non-turbo>.....	11B-70	Inspection .....	52B-457
Engine overhaul <2.0l engine turbo> .....	11D-73	Removal and installation.....	52B-454
Engine overhaul <2.4L engine> .....	11F-73	CVT key interlock and shift lock mechanisms	
Crankshaft oil seal		Removal and installation.....	23A-153
Removal and installation		Cylinder head and valves	
Engine mechanical <2.0l engine non-turbo> .....	11A-52	Inspection	
Engine mechanical <2.0l engine turbo> .....	11C-55	Engine overhaul <2.0l engine non-turbo> .....	11B-52
Engine mechanical <2.4L engine> .....	11E-51	Engine overhaul <2.0l engine turbo> .....	11D-53
Crankshaft pulley		Engine overhaul <2.4L engine> .....	11F-52
Removal and installation		Removal and installation	
Engine mechanical <2.0l engine non-turbo> .....	11A-19	Engine overhaul <2.0l engine non-turbo> .....	11B-48
Engine mechanical <2.0l engine turbo> .....	11C-21		
Engine mechanical <2.4L engine> .....	11E-19		
Crossmember <2.0l engine non-turbo, 2.4L engine>			
Removal and installation .....	32-16		

Engine overhaul <2.0l engine turbo> .....	11D-49	Diagnostic item 25: diagnose when the scan tool cannot receive the data sent by satellite radio tuner <vehicles with satellite radio tuner> .....	54C-178
Engine overhaul <2.4L engine> .....	11F-48	Diagnostic item 26: short to power supply or ground in both CAN_h and CAN_l lines. ....	54C-181
Cylinder head gasket		Diagnostic item 27: diagnose the ETACS-ECU, joint connector (can1) or lines between ETACS-ECU and joint connector (can1) .....	54C-223
Removal and installation		Diagnostic item 28: short to power supply or ground, open circuit or line-to-line short in the CAN-B bus lines. ....	54C-227
Engine mechanical <2.0l engine non-turbo> .....	11A-56	Diagnostic item 3: abnormal short between the CAN-C bus lines. ....	54C-38
Engine mechanical <2.0l engine turbo> .....	11C-58	Diagnostic item 4: diagnose shorts in the ground to CAN-C bus line. ....	54C-62
Engine mechanical <2.4L engine> .....	11E-55	Diagnostic item 5: diagnose shorts in the power supply to CAN-C bus line. ....	54C-88
		Diagnostic item 6: diagnose when the scan tool cannot receive the data sent by steering wheel sensor. ....	54C-114
		Diagnostic item 7: diagnose when the scan tool cannot receive the data sent by AWC-ECU. <ralliart> .....	54C-118
		Diagnostic item 8: diagnose when the scan tool cannot receive the data sent by ASC-ECU. ....	54C-121
		Diagnostic item 9: diagnose when the scan tool cannot receive the data sent by shift lever. <ralliart>). ....	54C-125
		CAN bus diagnostics table .....	54C-17
		CAN-related connector position .....	54C-29
		Check at ECU terminals	
		Active stability control system (ASC) .....	35C-286
		Wireless control module (WCM) .....	42C-105
		CVT diagnostic troubleshooting strategy .....	23A-15
		Data list reference table	
		CVT .....	23A-125
		Active stability control system (ASC) .....	35C-282
		Keyless operation system (KOS) .....	42B-135
		Wireless control module (WCM) .....	42C-81
		Diagnosis code chart .....	23A-30
		Diagnostic function	
		CVT .....	23A-15
		Active stability control system (ASC) .....	35C-10
		Active stability control system (ASC) .....	35C-14
		Keyless operation system (KOS) .....	42B-9
		Wireless control module (WCM) .....	42C-7
		Diagnostic trouble code chart	
		Active stability control system (ASC) .....	35C-25
		Keyless operation system (KOS) .....	42B-28
		Wireless control module (WCM) .....	42C-17
		Diagnostic trouble code procedures	
		Code No. C101C abnormality in FR wheel speed sensor signal. ....	35C-57
		Code No. C102A: mutual monitoring of RL wheel speed sensor .....	35C-86
		Code No. U1417 implausible coding data	
		Keyless operation system (KOS) .....	42B-132
		Wireless control module (WCM) .....	42C-79
		DTC B1731: engine control module communication timeout	
		Keyless operation system (KOS) .....	42B-31
		Wireless control module (WCM) .....	42C-19
		DTC B1761: vin code not programmed	
		Keyless operation system (KOS) .....	42B-34
		Wireless control module (WCM) .....	42C-21

DTC B1A08: keyless/KOS key1 performance	DTC B1A09: keyless/KOS key2 performance	DTC B1A0A: keyless/KOS key3 performance	DTC B1A0B: keyless/KOS key4 performance	42B-35																																																																																																																																																																												
DTC B1A08: keyless/KOS key1 performance	DTC B1A09: keyless/KOS key2 performance	DTC B1A0A: keyless/KOS key3 performance	DTC B1A0B: keyless/KOS key4 performance	DTC B1A0C: keyless key 5 performance	DTC B1A ..... 42C-23																																																																																																																																																																											
DTC B1A10: keyless/KOS key 1 low battery	DTC B1A11: keyless/KOS key 2 low battery	DTC B1A12: keyless/KOS key 3 low battery	DTC B1A13: keyless/KOS key 4 low battery	42B-36	DTC B1A10: keyless/KOS key 1 low battery	DTC B1A11: keyless/KOS key 2 low battery	DTC B1A12: keyless/KOS key 3 low battery	DTC B1A13: keyless/KOS key 4 low battery	DTC B1A14: keyless key 5 low battery	DTC ..... 42C-24																																																																																																																																																																						
DTC B1A24: key id not registered	Keyless operation system (KOS)	42B-37	Wireless control module (WCM)	42C-25	DTC B1A25: key id unmatched	Keyless operation system (KOS)	42B-39	Wireless control module (WCM)	42C-27	DTC B1A28: engine control module authenticate error	Keyless operation system (KOS)	42B-41	Wireless control module (WCM)	42C-29	DTC B1A35: transponder read error	Keyless operation system (KOS)	42B-43	Wireless control module (WCM)	42C-31	DTC B2101: IG sw start pos.circuit low	DTC B2102: IG sw start pos.circuit high	Keyless operation system (KOS)	42B-46	Wireless control module (WCM)	42C-34	DTC B2204: coding data mismatch	Keyless operation system (KOS)	42B-49	Wireless control module (WCM)	42C-37	DTC B2206: vin code mismatch	Keyless operation system (KOS)	42B-50	Wireless control module (WCM)	42C-39	DTC B2352: antenna fail	Keyless operation system (KOS)	42B-52	Wireless control module (WCM)	42C-40	DTC B2400: KOS key registration fail	42B-54	DTC B2401: keyless/KOS key id not register	42C-41	DTC B2401: keyless/KOS key id not registered	42B-56	DTC B2402: stl unit comm. (system id), DTC B2403: stl unit comm. (crc), DTC B2404: stl unit comm. (function code), DTC B2405: stl unit comm. (rolling code), DTC B2406: stl unit comm. (ptc operate), DTC B2407: stl un ...	42B-59	DTC B2409: stl unit comm.(No response)	42B-63	DTC B240A: dr side antenna(outdoor) open	42B-66	DTC B240B: ps side antenna(outdoor) open	42B-69	DTC B240C: tail gate antenna(outdoor) open	42B-72	DTC B240D: front antenna(indoor) open	42B-75	DTC B240E: RR antenna(indoor) open	42B-78	DTC B2412: antenna power voltage	42B-81	DTC B2413: stl unit power voltage	42B-86	DTC B2414: unlock sensor fail	42B-89	DTC B2415: ra module power voltage	42B-93	DTC B2416: ECU internal error	Keyless operation system (KOS)	42B-95	Wireless control module (WCM)	42C-42	DTC C1000: abnormality in stoplight switch circuit...	35C-152	DTC C100A abnormality in FL wheel speed sensor circuit	35C-28	DTC C1011 abnormality in FL wheel speed sensor signal	35C-50	DTC C1014 mutual monitoring of FL wheel speed sensor	35C-79	DTC C1015 abnormality in FR wheel speed sensor circuit	35C-33	DTC C101F mutual monitoring of FR wheel speed sensor	35C-83	DTC C1020 abnormality in RL wheel speed sensor circuit	35C-38	DTC C1027 abnormality in RL wheel speed sensor signal	35C-64	DTC C102B abnormality in RR wheel speed sensor circuit	35C-44	DTC C1032 abnormality in RR wheel speed sensor signal	35C-72	DTC C1035 mutual monitoring of RR wheel speed sensor	35C-90	DTC C1041 abnormality in periodical signal for FL wheel speed sensor	35C-93	DTC C1042 abnormality in periodical signal for FR wheel speed sensor	35C-96	DTC C1043: abnormality in periodical signal for RL wheel speed sensor	35C-98	DTC C1044 abnormality in periodical signal for RR wheel speed sensor	35C-101	DTC C1046 FL wheel speed sensor control phase time exceeded	35C-104	DTC C1047 FR wheel speed sensor control phase time exceeded	35C-110	DTC C1048 RL wheel speed sensor control phase time exceeded	35C-116	DTC C1049 RR wheel speed sensor control phase time exceeded	35C-123	DTC C104B abnormality in FL wheel inlet valve system	DTC C104F abnormality in FR wheel inlet valve system	DTC C1053 abnormality in RL wheel inlet valve system	DTC C1057 abnormality in RR wheel inlet valve system	DTC C105F abno ...	35C-130	DTC C1073 faulty motor drive circuit	35C-136	DTC C1210 abnormality in G and yaw rate sensor (abnormality in longitudinal G sensor output voltage) <AWD>	35C-175	DTC C1219 abnormality in steering wheel sensor signal	35C-196	DTC C121A abnormality in steering wheel sensor calibration	35C-199	DTC C121C torque request signal rejection	35C-166	DTC C121D abnormality in brake fluid pressure sensor circuit	35C-146	DTC C121E abnormality in brake fluid pressure sensor output signal	35C-148	DTC C123A: abnormality in sensor calibration	35C-194	DTC C123B: prolonged operation of ASC	35C-160	DTC C123C abnormality in G and yaw rate sensor [abnormality in lateral G sensor and yaw rate output value (incorrect installation)]	35C-181	DTC C1242 abnormality in G and yaw rate sensor (abnormality in longitudinal G sensor output signal) <AWD>	35C-178	DTC C1290 CAN time-out error	35C-168	DTC C1395 brake fluid filling not completed	35C-202	DTC C1608 implausible diagnosis data	35C-203	DTC C1608: EEPROM error	Keyless operation system (KOS)	42B-96	Wireless control module (WCM)	42C-43	DTC C1900: No registration	Keyless operation system (KOS)	42B-97	Wireless control module (WCM)	42C-44	DTC C1901: vehicle speed information abnormality	Keyless operation system (KOS)	42B-99	Wireless control module (WCM)	42C-46	DTC C1910: transmitter low battery voltage abnormality 1	DTC C1920: transmitter low battery voltage abnormality 2	DTC C1930: transmitter low battery voltage abnormality 3	DTC C1940: transmitter low battery voltage abnormality 4 ...	Keyless operation system (KOS)	42B-101	Wireless control module (WCM)	42C-48	DTC C1912: tire inflation pressure warning 1	DTC C1922: tire inflation pressure warning 2	DTC C1932: tire inflation pressure warning 3	DTC C1942: tire inflation pressure warning 4	Keyless operation system (KOS)	42B-103	Wireless control module (WCM)	42C-50

DTC C1913: acceleration sensor abnormality 1	DTC C1923: acceleration sensor abnormality 2	DTC C1933: acceleration sensor abnormality 3	DTC C1943: acceleration sensor abnormality 4	DTC C1914: pressure sensor abnormality 1 ...
Keyless operation system (KOS).....	42B-106			
Wireless control module (WCM).....	42C-53			
DTC C1915: transmitter off mode 1	DTC C1925: transmitter off mode 2	DTC C1935: transmitter off mode 3	DTC C1945: transmitter off mode 4	
Keyless operation system (KOS).....	42B-108			
Wireless control module (WCM).....	42C-55			
DTC C2002: valve calibration not completed .....	35C-208			
DTC C2003: control parameter not implement .....	35C-209			
DTC C2101 abnormality in battery voltage (high voltage)	35C-164			
DTC C2104 faulty valve power supply circuit .....	35C-132			
DTC C2111 brake fluid pressure sensor power supply circuit (low input)	DTC C2112 brake fluid pressure sensor power supply circuit (high input).....	35C-188		
DTC C2114 abnormality in G and yaw rate sensor operation voltage (low voltage)	DTC C2115 abnormality in G and yaw rate sensor operation voltage (high voltage) .....	35C-190		
DTC C2116 low or high power supply voltage in pump motor.....	35C-141			
DTC C2200 abnormality in ASC-ECU .....	35C-163			
DTC C2203 vin not recorded .....	35C-171			
DTC C2204 internal abnormality in G and yaw rate sensor	35C-185			
DTC C2205: internal malfunction of steering wheel sensor	35C-200			
DTC C2206 re-execution of variant coding.....	35C-173			
DTC P0703: malfunction of stoplight switch .....	23A-32			
DTC P0705: malfunction of transmission range switch	23A-37			
DTC P0710: malfunction of transmission fluid temperature sensor	DTC P0712*: malfunction of transmission fluid temperature sensor (short)	DTC P0713*: malfunction of transmission fluid temperature sensor (open).....	23A-44	
DTC P0711: malfunction of transmission fluid temperature sensor .....	23A-41			
DTC P0715: malfunction of primary pulley speed sensor	23A-49			
DTC P0720: malfunction of secondary pulley speed sensor	23A-54			
DTC P0725: malfunction of engine speed .....	23A-58			
DTC P0740: malfunction of lockup solenoid valve ....	23A-61			
DTC P0741: abnormality in lock-up function .....	23A-64			
DTC P0745: malfunction of line pressure solenoid valve	23A-66			
DTC P0746: abnormality in hydraulic control system function .....	23A-69			
DTC P0776: abnormality in secondary pressure solenoid valve function .....	23A-71			
DTC P0778: malfunction of secondary pressure solenoid valve .....	23A-72			
DTC P0815: malfunction of paddle shift up switch ....	23A-75			
DTC P0816: malfunction of paddle shift down switch	23A-77			
DTC P0826: malfunction of shift switch assembly .....	23A-78			
DTC P0840: malfunction of secondary pressure sensor	23A-80			
DTC P0841: abnormality in line pressure sensor function	23A-84			
DTC P0868: secondary pressure drop .....	23A-85			
DTC P0882: malfunction of power supply system (low)	DTC P0883: malfunction of power supply system (high)	23A-88		
DTC P1637: malfunction of memory backup .....	23A-90			
DTC P1706: malfunction of throttle signal .....	23A-92			
DTC P1710: malfunction of vehicle speed signal .....	23A-94			
DTC P1723: abnormality in speed sensor system function	23A-95			
DTC P1740: malfunction of lockup/select switching solenoid valve .....	23A-98			
DTC P1745: monitoring of percentage change in pulley ratio.....	23A-101			
DTC P1773: malfunction of ABS .....	23A-101			
DTC P1777: malfunction of stepper motor.....	23A-103			
DTC P1778: malfunction of stepper motor.....	23A-107			
DTC P1902: malfunction of engine system.....	23A-107			
DTC U0001 bus-off .....	35C-212			
DTC U0001: malfunction of CAN communication circuit	23A-108			
DTC U0019: bus off(CAN-B)				
Keyless operation system (KOS) .....	42B-109			
Wireless control module (WCM) .....	42C-56			
DTC U0100 engine time-out error	DTC U0101 CVT or TC-SST time-out error	DTC U0126 steering wheel sensor time-out error	DTC U0141 ETACS time-out error	DTC U0114 AWC time-out error .....
				35C-214
DTC U0100: CAN time-out error (engine).....	23A-110			
DTC U0121: CAN time-out error (ABS) .....	23A-112			
DTC U0125 G and yaw rate sensor message time-out error/	35C-216			
DTC U0141: CAN time-out error (ETACS).....	23A-113			
DTC U0141: ETACS-ECU CAN timeout				
Keyless operation system (KOS) .....	42B-111			
Wireless control module (WCM) .....	42C-58			
DTC U0151: SRS-ECU CAN timeout				
Keyless operation system (KOS) .....	42B-113			
Wireless control module (WCM) .....	42C-60			
DTC U0154: occupant classification-ECU CAN timeout				
Keyless operation system (KOS) .....	42B-115			
Wireless control module (WCM) .....	42C-62			
DTC U0155: combination meter CAN timeout				
Keyless operation system (KOS) .....	42B-117			
Wireless control module (WCM) .....	42C-63			
DTC U0164: A/C-ECU <vehicles with A/C> or heater control unit <vehicles without A/C> CAN timeout				
Keyless operation system (KOS) .....	42B-119			
Wireless control module (WCM) .....	42C-66			
DTC U0184: audio CAN timeout				
Keyless operation system (KOS) .....	42B-121			
Wireless control module (WCM) .....	42C-68			
DTC U0195: satellite radio tuner CAN timeout				
Keyless operation system (KOS) .....	42B-123			
Wireless control module (WCM) .....	42C-70			
DTC U0197: hands free module CAN timeout				
Keyless operation system (KOS) .....	42B-124			
Wireless control module (WCM) .....	42C-72			
DTC U0245: audio visual navigation unit CAN timeout				
Keyless operation system (KOS) .....	42B-126			
Wireless control module (WCM) .....	42C-74			
DTC U0401 engine signal malfunction detected.....	35C-219			
DTC U0428 communication error in steering wheel sensor	35C-220			
DTC U1003 G and yaw rate sensor bus-off.....	35C-222			
DTC U1412: implausible vehicle speed signal received				
Keyless operation system (KOS) .....	42B-128			
Wireless control module (WCM) .....	42C-76			
DTC U1415 variant coding not implemented .....	35C-224			
DTC U1415: coding not completed/data fail				
Keyless operation system (KOS) .....	42B-130			
Wireless control module (WCM) .....	42C-77			
DTC U1417 variant coding value invalid (includes faulty installation).....	35C-226			

Diagnostic troubleshooting flow .....	23A-14	Inspection procedure 3: abnormality in KOS-ECU power supply and ground circuits.....	42B-143
Fail-safe function/backup function .....	23A-19	Inspection procedure 3: brake warning light stays on with the parking brake lever released.....	35C-233
How to initialize CVT learned value .....	23A-18	Inspection procedure 3: engine does not start.....	42C-86
Hydraulic pressure test.....	23A-27	Inspection procedure 3: shock is experienced during n to d and/or n to r shifting operation. ....	23A-117
Id codes registration judgment table		Inspection procedure 4: abnormality in WCM power supply and ground circuits.....	42C-89
Keyless operation system (KOS).....	42B-11	Inspection procedure 4: ABS warning light does not illuminate when ignition switch is turned to the on position (engine stopped).....	35C-238
Wireless control module (WCM) .....	42C-9	Inspection procedure 4: keyless operation warning display does not disappear.....	42B-145
Introduction to ASC diagnosis .....	35C-9	Inspection procedure 4: poor acceleration or incomplete shifting operation.....	23A-117
Introduction to CVT diagnosis .....	23A-14	Inspection procedure 5: brake warning light does not illuminate when the ignition switch is turned to on position (engine stopped).....	35C-241
Learning procedure for CVT hydraulic control.....	23A-18	Inspection procedure 5: cannot be changed in sport mode. <vehicles with sport mode> .....	23A-118
Oscilloscope inspection procedures .....	23A-132	Inspection procedure 5: IG knob will not turn (keyless operation is not recognized).....	42B-147
Road test .....	23A-20	Inspection procedure 5: keyless entry system does not work.....	42C-92
Standard flow of diagnostic troubleshooting		Inspection procedure 6: ABS warning light stays on after the engine is started.....	35C-243
Keyless operation system (KOS).....	42B-9	Inspection procedure 6: cannot be changed with the paddle shift. <vehicles with sport mode> .....	23A-121
Wireless control module (WCM) .....	42C-7	Inspection procedure 6: keyless entry hazard light answerback function, the dome light answerback function or the horn answerback function does not work normally.....	42C-96
Symptom chart .....	35C-230	Inspection procedure 6: the engine will not start with KOS (IG knob operates normally).....	42B-152
Symptom procedures .....	42C-83	Inspection procedure 7: ASC warning display and light stays on after the engine is started.....	35C-245
Symptom procedures		Inspection procedure 7: engine does not start with emergency key.....	42B-154
Inspection procedure 1: cannot communicate with KOS-ECU using the scan tool.....	42B-138	Inspection procedure 7: the fluid temperature warning lamp illuminates too frequently.....	23A-123
Inspection procedure 1: scan tool cannot communicate with WCM.....	42C-83	Inspection procedure 7: the timer lock function does not work after the doors have been unlocked by the keyless entry system.....	42C-98
Inspection procedure 1: scan tool communication with ABS/ASC system is impossible.....	35C-231	Inspection procedure 8: ASC off display stays on after the engine is started.....	35C-248
Inspection procedure 1: tcm cannot communication with M.U.T.-III.....	23A-114	Inspection procedure 8: No door will be locked or unlocked by operating a lock switch on any door, or by touching the unlock sensor.....	42B-156
Inspection procedure 10: abnormality in brake operation .....	35C-254	Inspection procedure 8: the trunk is not opened when the keyless entry transmitter "TRUNK" button is operated.....	42C-99
Inspection procedure 10: driver's door unlock sensor does not work.....	42B-164	Inspection procedure 9: driver's door lock switch does not work.....	42B-161
Inspection procedure 11: ASC does not operate or faulty ASC operate.....	35C-256	Inspection procedure 9: power door locks with selective unlocking does not work.....	42C-104
Inspection procedure 11: front passenger's door lock switch does not work.....	42B-168	Inspection procedure 9: the skid control/TCL system cannot be disabled when ASC off switch is pressed for 3 seconds or more to turn the system off.....	35C-252
Inspection procedure 12: ASC-ECU power supply circuit system .....	35C-258	Tcm terminal voltage reference chart for transaxle operation .....	23A-129
Inspection procedure 12: front passenger's door unlock sensor does not work.....	42B-171	Terminal voltage reference chart .....	42B-200
Inspection procedure 13: ABS/skid control/TCL operates too frequently.....	35C-269	Torque converter stall test.....	23A-26
Inspection procedure 13: trunk lid opener switch does not work.....	42B-175	Trouble symptom chart	
Inspection procedure 14: keyless entry system does not work.....	42B-179	CVT.....	23A-31
Inspection procedure 14: steering wheel sensor power supply circuit system .....	35C-272	Keyless operation system (KOS).....	42B-137
Inspection procedure 15: hsa (hill start assist) does not work.....	35C-276	Wireless control module (WCM) .....	42C-83
Inspection procedure 15: KOS timer lock function does not work.....	42B-185	Warning and warning indicator list <vehicles with color liquid crystal display> .....	42B-22
Inspection procedure 16: hsa (hill start assist) works on a flat road.....	35C-280	Warning and warning indicator list <vehicles without color liquid crystal display> .....	42B-15
Inspection procedure 16: keyless entry hazard light answerback function, the dome light answerback function or the horn answerback function does not work normally.....	42B-187	Warnings/alarms <vehicles with color liquid crystal display> .....	42C-15
Inspection procedure 17: the trunk is not opened when the keyless operation key "TRUNK" button is operated.....	42B-190	Warnings/alarms <vehicles without color liquid crystal display>.....	42C-13
Inspection procedure 18: outer tone alarm does not sound.....	42B-195		
Inspection procedure 19: power door locks with selective unlocking does not work.....	42B-198		
Inspection procedure 2: ASC off display flashes at a rate of 2hz.....	35C-232		
Inspection procedure 2: the ignition key cannot be registered using scan tool.....	42C-85		
Inspection procedure 2: the keyless operation key cannot be registered using scan tool.....	42B-139		
Inspection procedure 2: vehicle creeps in the n range.....	23A-116		

Diagnosis <active center differential (ACD)>		Inspection procedure 3: AWC-ECU power supply circuit malfunction (control mode is not displayed.)	22C-498
4WD-ECU terminal voltage reference chart for ACD	22C-505	Troubleshooting strategy	22C-423
Data list reference table	22C-501	Diagnosis <shift lever>	
Diagnosis function	22C-423	Data list reference table	22C-417
Diagnostic trouble code chart	22C-426	Diagnosis function	22C-395
Diagnostic trouble code procedures		Diagnostic trouble code chart	22C-397
Code No.C1219: steering wheel sensor system (faulty signal)	22C-438	Diagnostic trouble code procedures	
Code No.U1428: G and yaw rate sensor data error	22C-493	DTC P0563: power supply system	22C-398
DTC C1000: stoplight switch system	22C-429	DTC P198D: EEPROM system	22C-399
DTC C100A <FL>, C1015 <FR>, C1020 <RL>, C102B <RR>: wheel speed sensor system (faulty circuit)	22C-433	DTC P198E, 198f: lever position sensor system	22C-399
DTC C1011 <FL>, C101C <FR>, C1027 <RL>, C1032 <RR>: wheel speed sensor system (faulty signal)	22C-434	DTC U0001: bus-off	22C-400
DTC C1014 <FL>, C101F <FR>, C102A <RL>, C1035 <RR>: wheel speed sensor system (characteristics abnormality)	22C-435	DTC U0100: engine time-out error	22C-401
DTC C1078: tire turning malfunction	22C-436	DTC U0101: TC-SST time-out error	22C-401
DTC C121A: steering wheel sensor system (neutral learning abnormality)	22C-440	DTC U0121: ASC time-out error	22C-402
DTC C123C: G and yaw rate sensor system (faulty signal)	22C-441	DTC U0141: ETACS time-out error	22C-403
DTC C1242: G and yaw rate sensor system (abnormality of longitudinal G sensor output signal)	22C-444	Shift lever -ECU terminal voltage reference chart	22C-420
DTC C1610: electronic relay abnormality of AWC actuator power supply	22C-445	Special function (actuator test reference table)	22C-419
DTC C1611: AWC pressure sensor system (low voltage)	22C-446	Symptom chart	22C-397
DTC C1612: AWC pressure sensor system (high voltage)	22C-448	Symptom procedures	
DTC C1613: AWC switch system (stuck on)	22C-451	Inspection procedure 1: the scan tool cannot communicate with the shift lever-ECU	22C-404
DTC C1614: parking brake switch system (stuck on)	22C-454	Inspection procedure 2: shift indicator light does not illuminate	22C-404
DTC C1616: cranking signal system (stuck on)	22C-456	Inspection procedure 3: back-up light does not illuminate	22C-406
DTC C1617: AWC CAN main data system (data not received)	22C-459	Inspection procedure 4: the driving mode cannot be changed	22C-410
DTC C161C: ACD proportioning valve system (malfunction)	22C-460	Inspection procedure 5: speed change with the paddle shift is impossible	22C-411
DTC C161D: electric pump relay system (faulty circuit)	22C-463	Inspection procedure 6: shift lever-ECU power supply circuit abnormality	22C-413
DTC C161E: electric pump system	22C-466	Diagnosis <TC-SST>	
DTC C1622: ACD control system (abnormal)	22C-468	Data list reference table	22C-387
DTC C1624: AWC-ECU system (internal error)	22C-470	Diagnosis function	22C-27
DTC C1625: AWC pressure sensor system (power supply voltage abnormality)	22C-471	Diagnostic trouble code chart	22C-33
DTC C2100: battery voltage malfunction (low voltage)	22C-473	Diagnostic trouble code procedures	
DTC C2101: battery voltage malfunction (high voltage)	22C-476	13bdtc P0725: engine speed signal abnormality	22C-54
DTC C2203: vin not recorded	22C-478	DTC P0630: vin not recorded	22C-39
DTC C2205: steering wheel sensor system (internal error)	22C-479	DTC P0701: EEPROM system (malfunction)	22C-40
DTC U0001: bus-off	22C-480	DTC P0702: internal control module, monitoring processor system (malfunction)	22C-40
DTC U0100: engine time-out error	22C-481	DTC P0712: TC-SST-ECU temperature sensor system (output low range out)	22C-41
DTC U0101: TC-SST time-out error	22C-482	DTC P0713: TC-SST-ECU temperature sensor system (output high range out)	22C-43
DTC U0121: ASC time-out error	22C-483	DTC P0715: input shaft 1 (odd number gear axle) speed sensor system (output high range out)	22C-45
DTC U0126: steering wheel sensor time-out error	22C-484	DTC P0716: input shaft 1 (odd number gear axle) speed sensor system (poor performance)	22C-47
DTC U0141: ETACS time-out error	22C-485	DTC P0717: input shaft 1 (odd number gear axle) speed sensor system (output current low range out)	22C-52
DTC U0401: engine data error	22C-486	DTC P0746: line pressure solenoid system (drive current range out)	22C-55
DTC U0428: steering wheel sensor data error	22C-487	DTC P0753: shift select solenoid 1 system (open circuit)	22C-58
DTC U0431: ETACS data error	22C-488	DTC P0758: shift select solenoid 2 system (open circuit)	22C-60
DTC U1415: coding incomplete/fail	22C-489	DTC P0776: clutch cooling flow solenoid system (drive current range out)	22C-62
DTC U1417: coding data malfunction	22C-490	DTC P0777: clutch cooling flow solenoid system (stuck)	22C-64
DTC U1425: TC-SST data error	22C-491	DTC P0841: clutch 1 pressure sensor system (poor performance)	22C-67
DTC U1427: wheel speed sensor data error	22C-492	DTC P0842: clutch 1 pressure sensor system (output low range out)	22C-70
Special function reference table	22C-504	DTC P0843: clutch 1 pressure sensor system (output high range out)	22C-72
Symptom chart	22C-428		
Symptom procedures			
Inspection procedure 1: communication between the scan tool and AWC-ECU cannot be established	22C-495		
Inspection procedure 2: mode does not change even when the AWC switch is pressed	22C-495		

DTC P0846: clutch 2 pressure sensor system (poor performance) .....	22C-74	DTC P1828: shift fork position sensor 2 system (neutral) .....	22C-178
DTC P0847: clutch 2 pressure sensor system (output low range out) .....	22C-77	DTC P1829: shift fork position sensor 2 system (poor performance) .....	22C-181
DTC P0848: clutch 2 pressure sensor system (output high range out) .....	22C-79	DTC P182A: shift fork position sensor 3 system (voltage low range out) .....	22C-185
DTC P0960: line pressure solenoid system (open circuit) .....	22C-81	DTC P182B: shift fork position sensor 3 system (voltage high range out) .....	22C-188
DTC P0961: line pressure solenoid system (overcurrent) .....	22C-83	DTC P182C: shift fork position sensor 3 system (output range out) .....	22C-191
DTC P0962: line pressure solenoid system (short to ground) .....	22C-85	DTC P182D: shift fork position sensor 3 system (neutral) .....	22C-194
DTC P0963: line pressure solenoid system (short to power supply) .....	22C-87	DTC P182E: shift fork position sensor 3 system (poor performance) .....	22C-197
DTC P0964: clutch cooling flow solenoid system (open circuit) .....	22C-89	DTC P1831: shift fork position sensor 4 system (voltage low range out) .....	22C-200
DTC P0965: clutch cooling flow solenoid system (overcurrent) .....	22C-91	DTC P1832: shift fork position sensor 4 system (voltage high range out) .....	22C-202
DTC P0966: clutch cooling flow solenoid system (short to ground) .....	22C-93	DTC P1833: shift fork position sensor 4 system (output range out) .....	22C-205
DTC P0967: clutch cooling flow solenoid system (short to power supply) .....	22C-95	DTC P1834: shift fork position sensor 4 system (neutral) .....	22C-208
DTC P0968: shift/cooling switching solenoid system (open circuit) .....	22C-97	DTC P1835: shift fork position sensor 4 system (poor performance) .....	22C-211
DTC P0970: shift/cooling switching solenoid system (short to ground) .....	22C-99	DTC P1836: shift fork 1 malfunction .....	22C-215
DTC P0971: shift/cooling switching solenoid system (short to power supply) .....	22C-101	DTC P183D: shift fork 2 malfunction .....	22C-222
DTC P0973: shift select solenoid 1 system (short to ground) .....	22C-103	DTC P1844: shift fork 3 malfunction .....	22C-230
DTC P0974: shift select solenoid 1 system (short to power supply) .....	22C-105	DTC P184B: shift fork 4 malfunction .....	22C-237
DTC P0976: shift select solenoid 2 system (short to ground) .....	22C-107	DTC P1852: shift fork 1 or 2 opposite direction movement .....	22C-245
DTC P0977: shift select solenoid 2 system (short to power supply) .....	22C-109	DTC P1855: shift fork 3 or 4 opposite direction movement .....	22C-247
DTC P1637: EEPROM system (DTC storing malfunction) .....	22C-110	DTC P1857: odd number gear axle interlock .....	22C-250
DTC P1676: coding incomplete .....	22C-112	DTC P1858: even number gear axle interlock .....	22C-253
DTC P1802: shift lever system (LIN communication malfunction) .....	22C-114	DTC P185D: clutch open not possible .....	22C-255
DTC P1803: shift lever system (CAN, LIN time-out error) .....	22C-117	DTC P1862: high side 1 system (overcurrent) .....	22C-256
DTC P1804: shift fork position sensor 1 and 2 system (power supply voltage low range out) .....	22C-118	DTC P1863: high side 1 system (open circuit) .....	22C-258
DTC P1805: shift fork position sensor 1 and 2 system (power supply voltage high range out) .....	22C-120	DTC P1864: high side 1 system (short to power supply) .....	22C-260
DTC P1806: shift fork position sensor 3 and 4 system (power supply voltage low range out) .....	22C-122	DTC P1866: high side 2 system (overcurrent) .....	22C-262
DTC P1807: shift fork position sensor 3 and 4 system (power supply voltage high range out) .....	22C-124	DTC P1867: high side 2 system (open circuit) .....	22C-264
DTC P1808: TC-SST-ECU temperature, fluid temperature sensor system (correlation error) .....	22C-126	DTC P1868: high side 2 system (short to power supply) .....	22C-266
DTC P180C: clutch pressure cut spool sticking .....	22C-128	DTC P186A: high side 3 system (overcurrent) .....	22C-268
DTC P181B: clutch 1 (pressure low range out) .....	22C-129	DTC P186B: high side 3 system (open circuit) .....	22C-270
DTC P181C: clutch 1 (pressure high range out) .....	22C-131	DTC P186C: high side 3 system (short to power supply) .....	22C-272
DTC P181E: clutch 2 (pressure low range out) .....	22C-141	DTC P186D: high side 1 system (voltage low range out) .....	22C-274
DTC P181F: clutch 2 (pressure high range out) .....	22C-144	DTC P186E: high side 2 system (voltage low range out) .....	22C-276
DTC P1820: shift fork position sensor 1 system (voltage low range out) .....	22C-154	DTC P186F: high side 3 system (voltage low range out) .....	22C-278
DTC P1821: shift fork position sensor 1 system (voltage high range out) .....	22C-157	DTC P1870: engine torque signal abnormality .....	22C-281
DTC P1822: shift fork position sensor 1 system (output range out) .....	22C-160	DTC P1871: aps system (signal abnormality) .....	22C-284
DTC P1823: shift fork position sensor 1 system (neutral) .....	22C-163	DTC P1872: between shift lever and TC-SST system (q-a function abnormality) .....	22C-287
DTC P1824: shift fork position sensor 1 system (poor performance) .....	22C-166	DTC P1873: clutch 1 system (pressure abnormality) .....	22C-288
DTC P1825: shift fork position sensor 2 system (voltage low range out) .....	22C-170	DTC P1874: clutch 2 system (pressure abnormality) .....	22C-289
DTC P1826: shift fork position sensor 2 system (voltage high range out) .....	22C-172	DTC P1875: damper speed sensor system (poor performance) .....	22C-290
DTC P1827: shift fork position sensor 2 system (output range out) .....	22C-175	DTC P1876: gear block 1st .....	22C-293
		DTC P1877: gear block 2nd .....	22C-295
		DTC P1878: gear block 3rd .....	22C-297
		DTC P1879: gear block 4th .....	22C-299
		DTC P187A: gear block 5th .....	22C-301
		DTC P187B: gear block 6th .....	22C-303
		DTC P187C: gear block reverse .....	22C-305
		DTC P1880: eol mode active .....	22C-306
		DTC P1881: twin clutch sst control mode switch system (malfunction) .....	22C-307
		DTC P1885: shift fork 1 jump out .....	22C-308
		DTC P1886: shift fork 2 jump out .....	22C-309
		DTC P1887: shift fork 3 jump out .....	22C-310

DTC P1888: shift fork 4 jump out.....	22C-311	Inspection procedure 3: speed change with the paddle shift is impossible.....	22C-366
DTC P1890 teach-in not completed.....	22C-312	Inspection procedure 4: TC-SST-ECU power supply circuit malfunction.....	22C-369
DTC P2718: clutch/shift pressure solenoid 1 system (open circuit).....	22C-314	Inspection procedure 5: the shift lever does not operate.....	22C-373
DTC P2719: clutch/shift pressure solenoid 1 system (overcurrent).....	22C-316	Inspection procedure 6: gears cannot be changed with the manual mode.....	22C-376
DTC P2720: clutch/shift pressure solenoid 1 system (short to ground).....	22C-318	Inspection procedure 7: the vehicle moves with the P-range.....	22C-377
DTC P2721: clutch/shift pressure solenoid 1 system (short to power supply).....	22C-320	Inspection procedure 8: slipping occurs with the D-range/r-Range/manual mode, and engine racing occurs during gear shifting/driving.....	22C-378
DTC P2727: clutch/shift pressure solenoid 2 system (open circuit).....	22C-322	Inspection procedure 9: the vehicle does not creep with the d-range/r-range/manual mode.....	22C-379
DTC P2728: clutch/shift pressure solenoid 2 system (overcurrent).....	22C-324	TC-SST teach-in.....	22C-24
DTC P2729: clutch/shift pressure solenoid 2 system (short to ground).....	22C-326	TC-SST-ECU terminal voltage reference chart.....	22C-394
DTC P2730: clutch/shift pressure solenoid 2 system (short to power supply).....	22C-328	Troubleshooting strategy.....	22C-23
DTC P2733: clutch/shift switching solenoid 1, spool stuck.....	22C-330	Differential trouble code diagnosis.....	54C-15
DTC P2736: clutch/shift switching solenoid 1 system (open circuit).....	22C-333	Differential	
DTC P2738: clutch/shift switching solenoid 1 system (short to ground).....	22C-334	Disassembly and assembly	
DTC P2739: clutch/shift switching solenoid 1 system (short to power supply).....	22C-336	Manual transaxle overhaul.....	22B-49
DTC P2742: fluid temperature sensor system (output low range out).....	22C-338	Continuously variable transaxle overhaul.....	23B-66
DTC P2743: fluid temperature sensor system (output high range out).....	22C-340	Inspection.....	23B-67
DTC P2766: input shaft 2 (even number gear axle) speed sensor system (poor performance).....	22C-342	Differential carrier assembly	
DTC P2809: clutch/shift switching solenoid 2, spool stuck.....	22C-347	Assembly.....	27B-36
DTC P2812: clutch/shift switching solenoid 2 system (open circuit).....	22C-349	Disassembly.....	27B-29
DTC P2814: clutch/shift switching solenoid 2 system (short to ground).....	22C-351	Disassembly and assembly.....	27B-44
DTC P2815: clutch/shift switching solenoid 2 system (short to power supply).....	22C-353	Inspection.....	27B-47
DTC U0001: bus-off.....	22C-355	Removal and installation.....	27B-28
DTC U0100: engine time-out error.....	22C-357	Differential sub-assembly	
DTC U0103: shift lever time-out error.....	22C-359	Assembly.....	23B-68
DTC U0121: ASC time-out error.....	22C-360	Dome light	
DTC U0136: AWC time-out error.....	22C-361	Diagnosis	
DTC U0141: ETACS time-out error.....	22C-362	Diagnostic function.....	54A-284
Introduction.....	22C-23	Standard flow of diagnostic troubleshooting.....	54A-284
Special function.....	22C-393	Dome light removal and installation.....	54A-301
Symptom chart.....	22C-38	General information.....	54A-281
Symptom procedures		Luggage compartment light removal and installation....	54A-302
Inspection procedure 1: the scan tool cannot communicate with TC-SST-ECU.....	22C-363	On-vehicle service	
Inspection procedure 10: the shock is large when the vehicle is stopped and the brake pedal is released with the d-range/r-range/manual mode.....	22C-380	Customization function.....	54A-300
Inspection procedure 11: poor acceleration.....	22C-380	Special tools.....	54A-281
Inspection procedure 12: the gear shifting does not occur. (the transaxle does not upshift or downshift.).....	22C-381	Symptom procedures	
Inspection procedure 13: the shift shock is large.....	22C-382	Inspection procedure 1: the front dome light does not illuminate normally.....	54A-286
Inspection procedure 14: delay occurs when the lever is shifted from "N" to "D" or "N" to "R".....	22C-383	Inspection procedure 2: the rear dome light does not illuminate normally.....	54A-290
Inspection procedure 15: the engine stops when the lever is shifted from "N" to "D" or "N" to "R".....	22C-384	Inspection procedure 3: the luggage compartment light does not illuminate normally.....	54A-294
Inspection procedure 16: the vehicle moves with the n-range on the level ground.....	22C-385	Inspection procedure 4: the interior light auto-cut function does not operate correctly.....	54A-298
Inspection procedure 17: judder/noise/vibration.....	22C-385	Trouble symptom chart.....	54A-285
Inspection procedure 2: the driving mode cannot be changed.....	22C-364	Dome light, luggage compartment light and ignition key hole illumination light.....	90-166

Door		Symptom procedures	
Configuration diagrams .....	80A-26	Inspection procedure 1: water leak through door window glass.....	42A-109
Configuration diagrams .....	80A-26	Inspection procedure 2: door window glass malfunction .....	42A-110
Splice locations.....	80B-7	Inspection procedure 3: water leak through door edge .....	42A-110
Door		Inspection procedure 4: water leak from door center.....	42A-110
Central door locking system diagnosis		Inspection procedure 5: door hard to open .....	42A-111
Trouble symptom chart .....	42A-32	Inspection procedure 6: door does not open or close completely.....	42A-111
Troubleshooting strategy .....	42A-32	Inspection procedure 7: uneven gap between body ..	42A-111
Check at ECU terminal .....	42A-108	Inspection procedure 8: wind noise around door .....	42A-112
Diagnostic trouble code procedures <power window>		Symptom procedures <central door locking system>	
Code no. L0730: p/w (dr) sw pulse 1 disconnection ..	42A-64	Inspection procedure 1: central door locking system does not work at all. ....	42A-33
Code no. L0732: p/w (dr) sw pulse 2 disconnection ..	42A-66	Inspection procedure 2: central door locking system does not operate even when door lock switch of power window main switch operated (door lock switch of front power window sub switch operate normally). ....	42A-38
Code no. L0734: p/w (dr) above window position.....	42A-68	Inspection procedure 3: central door locking system does not operate even when door lock switch of front power window sub switch operated (door lock switch of power window main switch operate normally). ....	42A-42
Code no. L0736: p/w (dr) sensor fail (ground).....	42A-69	Inspection procedure 4: a door cannot be locked or unlocked by the central door locking system. ....	42A-46
Code no. L0740: p/w (dr) 3 times jam - protection.....	42A-71	Inspection procedure 5: selector "P" position-linked door unlock function does not operate normally. <vehicles with CVT with keyless entry system, TC-SST> .....	42A-56
Code no. L0746: p/w (dr) parameter read failcode no. L0750: p/w (dr) position read fail .....	42A-72	Inspection procedure 6: ignition "lock (off)" position-linked door unlock function does not operate. <M/T, CVT, TC-SST> .....	42A-60
Door assembly		Symptom procedures <power window>	
Inspection .....	42A-129	Inspection procedure 1: power windows do not work at all. ....	42A-73
Removal and installation.....	42A-127	Inspection procedure 2: driver's power window does not work by means of the power window main switch.....	42A-81
Door diagnosis		Inspection procedure 3: relevant power window(s) does not work by means of the front and rear passenger's power window sub switches. ....	42A-84
Glass and door diagnostic troubleshooting strategy ..	42A-109	Inspection procedure 4: front and/or rear passenger's power window(s) do not work by means of the power window main switch. ....	42A-100
Introduction to glass and door diagnosis .....	42A-109	Inspection procedure 5: the power window timer function does not work normally. ....	42A-102
Symptom chart.....	42A-109	Inspection procedure 6: power window anti-trap function does not work normally. <driver's side only> .....	42A-104
Door glass and regulator		Inspection procedure 7: the window glass lowers automatically while it is rising <driver's side only> .....	42A-107
Inspection .....	42A-133	Window glass runchannel and door opening weatherstrip	
Removal and installation.....	42A-129	Removal and installation.....	42A-142
Door handle and latch		Door ajar warning tone alarm .....	90-402
Inspection .....	42A-139	Door mirror	
Removal and installation.....	42A-135	Door mirror	
General information .....	42A-29	Inspection.....	51-103
How to locate wind noise.....	42A-112	Removal and installation.....	51-101
On-vehicle service		General information .....	51-91
Central door locking system check .....	42A-123	Heated door mirror diagnosis	
Check of key lock prevention function .....	42A-123	Symptom chart.....	51-91
Customization function .....	42A-126	Troubleshooting strategy .....	51-91
Door fit adjustment.....	42A-116	Symptom procedures	
Door inside handle check .....	42A-124	Inspection procedure 1: none of the heated door mirrors operate.....	51-92
Door outside handle play check.....	42A-124	Inspection procedure 2: the right or left heated door mirror does not operate.....	51-95
Door window glass adjustment.....	42A-118		
Glass sliding mechanism check and adjustment.....	42A-120		
Ignition "lock (off)" position-linked door unlocking function check <M/T, CVT, TC-SST> .....	42A-123		
Learning procedures of the power window fully closed position <driver's side only>.....	42A-122		
Power window check .....	42A-120		
Power window operating current check .....	42A-121		
Power window safety mechanism check <driver's side only> .....	42A-121		
Power window timer function check.....	42A-121		
Shift "P" interlink door unlock function check <vehicles with CVT with keyless entry system, TC-SST> .....	42A-123		
Power window diagnosis			
Diagnostic trouble code chart .....	42A-63		
Trouble symptom chart .....	42A-63		
Troubleshooting strategy .....	42A-62		
Special tools .....	42A-114		
Specification(s)			
Component identifications .....	42A-29		
Sealant.....	42A-29		
Service specifications .....	42A-29		

Door sash tape		Mass airflow sensor check.....	17-111
Removal and installation .....	51-10	Removal and installation <2.0l engine non-turbo (vehicles for california), 2.4L engine> .....	17-113
Special tool .....	51-10	General information .....	17-90
Door trim		Positive crankcase ventilation system	
Removal and installation .....	52A-16	Component location .....	17-98
Driver's air bag module and clock spring <except ralliart>		Crankcase ventilation system check .....	17-98
Inspection .....	52B-425	General information (positive crankcase ventilation system) .....	17-96
Removal and installation .....	52B-419	Positive crankcase ventilation (pcv) valve check .....	17-98
Driver's air bag module and clock spring <ralliart>		Service specifications .....	17-90
Inspection .....	52B-433	Special tools.....	17-91
Removal and installation .....	52B-427	Vacuum hoses	
Driveshaft assembly		Vacuum circuit diagram.....	17-94
Disassembly and assembly <FWD>.....	26-28	Vacuum hose check .....	17-96
Disassembly and reassembly .....	27B-25	Vacuum hose installation .....	17-96
Disassembly and reassembly <AWD> .....	26-32	Vacuum hose routing .....	17-92
Ebj boot replacement		Engine and transaxle <non-turbo>	
Front axle.....	26-35	Configuration diagrams.....	80A-10
Rear axle <AWD> .....	27B-28	Configuration diagrams.....	80A-10
Inspection .....	26-35	Splice locations .....	80B-5
Removal and installation		Engine and transaxle <turbo>	
Front axle.....	26-21	Configuration diagrams.....	80A-14
Rear axle <AWD> .....	27B-22	Configuration diagrams.....	80A-14
Ducts		Splice locations .....	80B-5
Removal and installation .....	55A-203	Engine assembly	
<b>E</b>			
Emission control MFI		Removal and installation	
Catalytic converter		Engine mechanical <2.0l engine non-turbo> .....	11A-76
Removal and installation <2.0l engine non-turbo, 2.4L engine>.....	17-117	Engine mechanical <2.0l engine turbo>.....	11C-80
Removal and installation <2.0l engine turbo>.....	17-117	Engine mechanical <2.4L engine>.....	11E-84
Diagnosis.....	17-90	Engine compartment <non-turbo>	
Evaporative emission canister and fuel tank pressure relief valve		Configuration diagrams.....	80A-6
Inspection .....	17-116	Configuration diagrams.....	80A-6
Removal and installation.....	17-116	Splice locations .....	80B-4
Evaporative emission control system		Engine compartment <turbo>	
Barometric pressure sensor check <turbo>.....	17-107	Configuration diagrams.....	80A-8
Component location.....	17-102	Configuration diagrams.....	80A-8
Crankshaft position sensor check.....	17-108	Splice locations .....	80B-4
Engine coolant temperature sensor check .....	17-107	Engine control	
Evaporative emission purge solenoid check.....	17-104	Accelerator pedal	
General information (evaporative emission system)..	17-100	Removal and installation.....	17-9
Intake air temperature sensor 1 check <turbo> .....	17-106	Engine control system diagnosis	
Intake air temperature sensor check <non-turbo>.....	17-106	Introduction .....	17-3
Manifold absolute pressure sensor check <non-turbo> .....	17-107	Troubleshooting strategy .....	17-3
Mass airflow sensor check.....	17-106	General information .....	17-3
Purge control system check (purge flow check) .....	17-103	Special tool .....	17-8
Throttle position sensor check.....	17-107	Symptom chart.....	17-3
Exhaust gas recirculation (EGR) system <2.0 l engine non-turbo, 2.4 l engine>		Symptom procedures	
Accelerator pedal position sensor check .....	17-112	Inspection procedure 1: throttle valve will not fully open or close.....	17-4
Component location.....	17-109	Inspection procedure 2: accelerator pedal operation not smooth (over acceleration) .....	17-6
Crankshaft position sensor check.....	17-112	Engine control module (ECM)	
EGR valve (stepper motor) check.....	17-110	Removal and installation	
Engine coolant temperature sensor check .....	17-112	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-985
General information (exhaust gas recirculation system) <2.0l engine-california, 2.4L engine> .....	17-108	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-883
Intake air temperature sensor check .....	17-111	Multiport fuel injection (MFI) <2.4L engine>.....	13C-972
Manifold absolute pressure sensor check .....	17-112		

Engine control resistor		General information .....	54A-672
Removal and installation .....	13B-882	Input signal procedures	
Engine cooling diagnosis		Inspection procedure 1: ETACS-ECU does not receive any signal from the ignition switch (acc). ....	54A-735
Introduction.....	14-3	Inspection procedure 10: ETACS-ECU does not receive any signal from the hazard warning light switch.....	54A-764
Symptom chart .....	14-4	Inspection procedure 11: ETACS-ECU does not receive any signal from the column switch signal.....	54A-766
Symptom procedures		Inspection procedure 2: malfunction of the ignition switch (ig1) input/output signal.....	54A-738
Inspection procedure 1: coolant leak .....	14-4	Inspection procedure 3: ETACS-ECU does not receive any signal from the key reminder switch.....	54A-741
Inspection procedure 2: engine overheating.....	14-5	Inspection procedure 4: ETACS-ECU cannot receive the signal of front door lock actuator (LH) or front door lock actuator (RH). ....	54A-744
Inspection procedure 3: radiator fan and condenser fan do not operate <2.0l engine non-turbo, 2.4L engine> .....	14-6	Inspection procedure 5: ETACS-ECU does not receive any signal from the front door switch (LH). ....	54A-751
Inspection procedure 4: radiator fan and condenser fan do not operate <2.0l engine turbo> .....	14-14	Inspection procedure 6: ETACS-ECU does not receive any signal from the front door switch (RH).....	54A-753
Troubleshooting strategy .....	14-3	Inspection procedure 7: ETACS-ECU does not receive any signal from the rear door switch (LH). ....	54A-756
Engine diagnosis		Inspection procedure 8: ETACS-ECU does not receive any signal from the rear door switch (RH).....	54A-758
Engine mechanical <2.0l engine non-turbo> .....	11A-2	Inspection procedure 9: ETACS-ECU does not receive any signal from the trunk lid actuator and switch. ....	54A-761
Engine mechanical <2.0l engine turbo> .....	11C-2	On-vehicle service	
Engine mechanical <2.4L engine> .....	11E-2	Customization function.....	54A-768
Engine mounting		Special tool .....	54A-674
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	32-4	Symptom procedures	
Removal and installation <2.0l engine turbo> .....	32-6	Malfunction of ETACS-ECU power supply circuit .....	54A-731
Engine oil pressure switch		Trouble symptom chart .....	54A-731
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	12-9	Trouble symptom chart for input signal.....	54A-735
Removal and installation <2.0l engine turbo> .....	12-11	Troubleshooting	
Engine roll stopper and centermember <2.0l engine non-turbo, 2.4L engine>		Diagnostic function.....	54A-675
Removal and installation .....	32-12	Standard flow of diagnostic troubleshooting .....	54A-675
ETACS		ETACS-ECU .....	90-10
Check with terminal voltage.....	54A-773	Exhaust manifold	
Data list reference table.....	54A-726	Removal and installation	
Diagnostic trouble code chart .....	54A-678	Engine overhaul <2.0l engine non-turbo> .....	11B-21
Diagnostic trouble code procedures		Engine overhaul <2.0l engine turbo> .....	11D-20
DTC B1761: vin not recorded .....	54A-716	Engine overhaul <2.4L engine> .....	11F-21
DTC B210A: +b power supply (low input)DTC B210B: +b power supply (high input) .....	54A-717	Exhaust manifold <2.0l engine non-turbo, 2.4L engine>	
DTC B2206: chassis number does not match .....	54A-722	Inspection .....	15-23
DTC B2215: ECU internal error.....	54A-723	Removal and installation.....	15-21
DTC B222C: coding incomplete .....	54A-721	Exhaust manifold and turbocharger <2.0l engine turbo>	
DTC B2353: ignition power supply (low input)DTC B2354: ignition power supply (high input).....	54A-724	Inspection .....	15-29
DTC U0001: bus off (CAN-C)DTC U0019: bus off (CAN-B).....	54A-680	Removal and installation.....	15-24
DTC U0100: engine control module CAN timeout .....	54A-681	Exhaust pipe and main muffler <2.0l engine non-turbo, 2.4L engine>	
DTC U0101: CVT-ECU/TC-SST-ECU CAN timeout..	54A-683	Removal and installation.....	15-30
DTC U0103: shift lever CAN timeout .....	54A-685	Exhaust pipe, main muffler and catalytic converter <2.0l engine turbo>	
DTC U0121: ASC-ECU CAN timeout .....	54A-687	Removal and installation.....	15-33
DTC U0126: steering wheel sensor CAN timeout .....	54A-689	Explanation about the sCAN tool (M.U.T.-III) CAN bus diagnostics.....	54C-9
DTC U0136: AWC-ECU CAN time-out .....	54A-691	Exterior transmitter antenna assembly, interior transmitter antenna assembly, receiver antenna module	
DTC U0151: SRS-ECU CAN timeout .....	54A-693	Removal and installation.....	42B-217
DTC U0154: occupant classification-ECU CAN timeout .....	54A-695		
DTC U0155: combination meter CAN timeout.....	54A-697		
DTC U0164: A/C/heater control unit CAN timeout.....	54A-699		
DTC U0168: WCM or KOS-ECU CAN timeout.....	54A-702		
DTC U0184: audio CAN timeout.....	54A-704		
DTC U0195: satellite radio tuner CAN timeout .....	54A-706		
DTC U0197: hands free module CAN timeout.....	54A-708		
DTC U0245: audio visual navigation unit CAN timeout .....	54A-710		
DTC U0331: ECU internal error.....	54A-715		
DTC U1108: excess CAN-B ECU detection .....	54A-712		
DTC U1120: bus line (CAN-C) low inputDTC U1121: bus line (CAN-C) high input .....	54A-713		
ETACS-ECU			
Removal and installation.....	54A-772		

**F**

Fastener tightening specification .....	22D-3	Inspection .....	35A-53
Fastener tightening specifications		Removal and installation .....	35A-43
Engine overhaul <2.0l engine non-turbo> .....	11B-4	Front impact sensors	
Engine overhaul <2.0l engine turbo> .....	11D-4	Inspection .....	52B-415
Manual transaxle overhaul .....	22B-4	Removal and installation .....	52B-413
Continuously variable transaxle overhaul .....	23B-4	Front roll stopper and center member <2.0l engine turbo>	
Fender		Removal and installation .....	32-14
Removal and installation .....	42A-13	Front seat assembly	
Floor and roof		Disassembly and assembly .....	52A-25
Configuration diagrams .....	80A-24	Inspection .....	52A-23
Configuration diagrams .....	80A-24	Removal and installation .....	52A-21
Splice locations .....	80B-7	Front seat belt	
Floor console assembly		Inspection .....	52A-35
Removal and installation .....	52A-9	Removal and installation .....	52A-34
Fog light .....	90-154	Front suspension diagnosis	
Fog light		Front suspension diagnosis troubleshooting strategy...	33-4
Diagnosis		Introduction to front suspension diagnosis .....	33-4
Diagnostic function .....	54A-260	Symptom chart .....	33-4
Standard flow of diagnostic troubleshooting .....	54A-260	Symptom procedures	
Inspection		Inspection procedure 1: steering wheel is heavy, vibrates or pulls to one side .....	33-4
Front fog light relay check .....	54A-279	Inspection procedure 2: excessive body rolling .....	33-5
On-vehicle service		Inspection procedure 3: poor ride .....	33-5
Bulb replacement .....	54A-276	Inspection procedure 4: unequal ride height .....	33-5
Front fog light aiming .....	54A-274	Inspection procedure 5: noise .....	33-6
Removal and installation .....	54A-277	Fuel filler lid	
Service specifications .....	54A-257	Removal and installation .....	42A-15
Special tools .....	54A-258	Fuel supply diagnosis	
Symptom procedures		Introduction .....	13D-4
Inspection procedure 1: none of the front fog lights illuminates .....	54A-262	Symptom procedures .....	13D-4
Inspection procedure 2: one of the front fog lights does not illuminate .....	54A-268	Troubleshooting strategy .....	13D-4
Inspection procedure 3: the front fog light indicator does not illuminate normally .....	54A-272	Fuel tank <2.0l engine non-turbo, 2.4L engine>	
Trouble symptom chart .....	54A-261	Disassembly and assembly	
Forward clutch		Fuel supply .....	13D-19
Disassembly and assembly .....	23B-57	Fuel supply .....	13D-20
Inspection .....	23B-60	Fuel tank inspection .....	13D-22
Front axle diagnosis		Removal and installation .....	13D-14
Symptom chart .....	26-5	Fuel tank <2.0l engine turbo>	
Symptom procedures		Disassembly and assembly	
Inspection procedure 1: noise during wheel rotation .....	26-6	Fuel supply .....	13D-28
Inspection procedure 2: noise due to excessive play of wheel in turning direction .....	26-7	Fuel supply .....	13D-30
Troubleshooting strategy .....	26-5	Fuel tank inspection .....	13D-31
Front axle hub assembly		Removal and installation .....	13D-23
Disassembly and assembly .....	26-16	Fusible link, fuse and iod or storage connector .....	70-16
Inspection			
Front axle .....	26-15		
Front axle .....	26-20		
Removal and installation .....	26-12		
Front bumper assembly and radiator grille			
Disassembly and assembly .....	51-4		
Removal and installation .....	51-3		
Front disc brake assembly			
Disassembly and assembly <15-inch front disc brake> .....	35A-44		
Disassembly and assembly <16-inch front disc brake (except ralliart)> .....	35A-47		
Disassembly and assembly <16-inch front disc brake (ralliart)> .....	35A-50		

**G**

G and yaw rate sensor	
Removal and installation .....	35C-309
Garnishes and moldings	
Removal and installation .....	51-8
General data and specifications .....	00-22
General description	
Intake and exhaust .....	15-2
Twin clutch sst overhaul .....	22D-2
Heater, air conditioning and ventilation .....	55A-3
Automatic air conditioning .....	55B-2
General information	
Engine mechanical <2.0l engine non-turbo> .....	11A-2

Engine mechanical <2.0l engine turbo> .....	11C-2	<b>H</b>	
Engine mechanical <2.4L engine> .....	11E-2		
Engine lubrication .....	12-2		Hands free cellular phone system
Multiport fuel injection (MFI) <2.0l engine non-turbo> ...	13A-3		Actuator test table.....
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-3		54A-623
Multiport fuel injection (MFI) <2.4L engine> .....	13C-2		Diagnosis
Fuel supply .....	13D-2		Diagnosis function.....
Engine cooling .....	14-2		54A-560
Clutch .....	21A-2		Standard flow of diagnostic troubleshooting .....
Manual transaxle .....	22A-2		54A-560
Twin clutch-sportronic shift transmission (TC-SST).....	22C-3		Diagnosis code chart .....
CVT .....	23A-3		54A-563
Continuously variable transaxle overhaul.....	23B-2		Diagnostic trouble code procedures
Propeller shaft .....	25-2		DTC B2468: microphone input short to battDTC B2470: microphone
Front axle.....	26-2		input short to ground.....
Rear axle <FWD>.....	27A-2		54A-564
Rear axle <AWD>.....	27B-2		DTC B2471: on hook button stuckDTC B2472: off hook button
Power plant mount.....	32-2		stuckDTC B2473: vr button stuck .....
Front suspension .....	33-2		54A-567
Rear suspension.....	34-2		DTC B2475: vin not programmed .....
Basic brake.....	35A-2		54A-573
Active stability control system (ASC).....	35C-2		DTC No.U0184 audio CAN timeout .....
Parking brakes.....	36-2		54A-589
Power steering.....	37-2		DTC U0019: bus off (CAN-B).....
Keyless operation system (KOS).....	42B-2		54A-575
Wireless control module (WCM).....	42C-2		DTC U0141: ETACS CAN timeout.....
Interior .....	52A-2		54A-577
Supplemental restraint system (SRS) .....	52B-3		DTC U0151: SRS-ECU CAN timeout .....
Local interconnect network (LIN).....	54B-2		54A-579
Controller area network (CAN).....	54C-2		DTC U0154: ocm (occupant classification-ECU) CAN
General specification			timeout .....
Twin clutch sst overhaul .....	22D-2		54A-581
Continuously variable transaxle overhaul.....	23B-3		DTC U0155: meter CAN timeout .....
General specification(s)			54A-583
Multiport fuel injection (MFI) <2.0l engine non-turbo> ...	13A-7		DTC U0164: A/C CAN timeout.....
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-6		54A-585
Multiport fuel injection (MFI) <2.4L engine> .....	13C-6		DTC U0168: WCM/KOS CAN timeout.....
General specifications			54A-587
Engine overhaul <2.0l engine non-turbo> .....	11B-2		DTC U0195: satellite radio CAN timeout .....
Engine overhaul <2.0l engine turbo>.....	11D-2		54A-591
Engine overhaul <2.4L engine>.....	11F-2		DTC U0245 and [audio visual navigation (hdd) unit] CAN
Manual transaxle overhaul .....	22B-2		timeout .....
Propeller shaft .....	25-3		54A-592
Front axle.....	26-4		General information .....
Rear axle <AWD>.....	27B-3		54A-557
Wheel and tire .....	31-2		On-vehicle service
Basic brake.....	35A-3		Erase the passcode .....
Heater, air conditioning and ventilation.....	55A-4		54A-622
Generator and ignition system			Pairing a cellular phone or deleting a phone.....
Removal and installation			54A-620
Engine overhaul <2.0l engine non-turbo>.....	11B-10		Removal and installation.....
Engine overhaul <2.0l engine turbo> .....	11D-10		54A-623
Engine overhaul <2.4L engine>.....	11F-10		Service data .....
Glove box			54A-622
Removal and installation .....	52A-6		Special tools.....
Grounding.....	70-24		54A-559
Grounding cable .....	70-17		Steering wheel voice control switch continuity check ....
			54A-625
			Symptom procedures
			Inspection procedure 1: hands free cellular phone system does not
			work normally. ....
			54A-595
			Inspection procedure 2: during the conversation with the hands free
			cellular phone system, the speaker's voice cannot be heard by the
			other party. ....
			54A-603
			Inspection procedure 3: during the conversation with the hands free
			cellular phone system, the voice of other party cannot be
			heard.....
			54A-606
			Inspection procedure 4: even when the steering wheel voice control
			switch is operated, the conversation is not possible. .
			54A-607
			Inspection procedure 5: the cellular phone is not recognized or the
			connection cannot be established.....
			54A-612
			Inspection procedure 6: steering wheel voice control switch illumina-
			tion does not come on.....
			54A-614
			Inspection procedure 7: check the hands free module power supply
			circuit.....
			54A-617
			Trouble symptom chart .....
			54A-594
			Hands-free cellular phone system .....
			90-412
			Harness connector inspection .....
			00E-2
			Hazard warning light switch
			Diagnosis
			Diagnostic function.....
			54A-306
			Standard flow of diagnostic troubleshooting .....
			54A-306
			Diagnostic trouble code chart .....
			54A-308
			Diagnostic trouble code procedures
			DTC B16A6: turn-signal fuse blown.....
			54A-308
			Inspection
			Hazard warning light switch check.....
			54A-311

Removal and installation .....	54A-311	Inspection procedure 5: one of the headlight(s) does not illuminate.....	54A-170
Special tools .....	54A-304	Inspection procedure 6: high-beam indicator light does not illuminate normally.....	54A-174
Symptom procedures		Inspection procedure 7: the headlight automatic shutdown function does not work normally. ....	54A-176
Inspection procedure 1: the hazard warning lights do not illuminate.....	54A-310	Inspection procedure 8: daytime running light function does not work normally. <discharge type headlight> .....	54A-182
Trouble symptom chart.....	54A-310	Inspection procedure 8: daytime running light function does not work normally. <halogen type headlight> .....	54A-179
Headlight		Inspection procedure 9: one of the position light, the taillight, the rear side marker lights or the license plate light does not illuminate.....	54A-189
Bracket repair of headlight assembly .....	54A-226	Trouble symptom chart .....	54A-157
Data list reference table.....	54A-208	Headlight <discharge type (vehicles with color meter)> ....	90-136
Diagnosis		Headlight <discharge type (vehicles with standard meter)> .....	90-130
Diagnostic function .....	54A-133	Headlight <halogen type (vehicles with color meter)> .....	90-122
Standard flow of diagnostic troubleshooting .....	54A-133	Headlight <halogen type (vehicles with standard meter)> .....	90-116
Diagnostic trouble code chart .....	54A-135	Headlight leveling system .....	90-144
Diagnostic trouble code procedures		Headlining	
DTC B16A2: blown turn-signal light (LH) bulb .....	54A-136	Removal and installation.....	52A-18
DTC B16A3: turn-signal light (LH) short circuit.....	54A-141	Heated door mirror .....	90-286
DTC B16A4: blown turn-signal light (RH) bulb .....	54A-145	Heated seat .....	90-390
DTC B16A5: turn-signal light (RH) short circuit .....	54A-150	Heater .....	90-246
DTC L0432: rls rs adaptation error .....	54A-153	Heater control unit	
DTC L0434: rls rain sensor errorDTC L0436: rls light sensor error .....	54A-155	Removal and installation.....	55A-180
General information .....	54A-126	Heater unit and blower assembly	
Headlight leveling switch removal and installation .....	54A-220	Disassembly and reassembly .....	55A-184
Headlight removal and installation.....	54A-216	Inspection .....	55A-185
Inspection		Removal and installation.....	55A-181
Headlight leveling switch check .....	54A-225	High-mounted stoplight	
Headlight relay check .....	54A-223	Removal and installation.....	54A-303
Lighting control sensor (light sensor) check .....	54A-226	Hood	
Lighting control sensor removal and installation.....	54A-221	Hood	
On-vehicle service		Disassembly and reassembly <ralliart> .....	42A-11
Coming-home light function check.....	54A-214	Hood removal and installation <except ralliart> .....	42A-8
Customization function .....	54A-215	Removal and installation <ralliart> .....	42A-10
Headlight aiming .....	54A-209	Hood diagnosis	
Headlight auto light function check .....	54A-214	Introduction .....	42A-4
Headlight automatic-shutdown function check .....	54A-214	Troubleshooting strategy .....	42A-4
Luminous intensity measurement.....	54A-212	On-vehicle service	
Replace the bulb.....	54A-212	Adjustment of clearance around hood <except ralliart> .....	42A-5
Welcome light function check .....	54A-214	Adjustment of clearance around hood <ralliart> .....	42A-6
Service precautions <discharge headlight>.....	54A-130	Adjustment of hood height .....	42A-7
Service specifications .....	54A-127	Alignment of hood latch and striker.....	42A-6
Special tools .....	54A-128	Symptom procedures	
Symptom procedures		Inspection procedure 1: difficult locking and unlocking .....	42A-4
Inspection procedure 1: none of headlights (low-beam) illuminates.....	54A-158	Inspection procedure 2: uneven body clearance .....	42A-5
Inspection procedure 10: the auto light function does not work normally.....	54A-197	Inspection procedure 3: uneven height.....	42A-5
Inspection procedure 11: none of turn-signal lights illuminates.....	54A-199	Trouble symptom chart .....	42A-4
Inspection procedure 12: the comfort flashing function does not work normally.....	54A-200	Horn .....	90-177
Inspection procedure 13: the turn-signal indicator lights do not illuminate.....	54A-202	Horn	
Inspection procedure 14: the welcome light function does not work normally. ....	54A-204	Inspection	
Inspection procedure 15: the coming home light function does not work normally.....	54A-206	Horn relay check .....	54A-314
Inspection procedure 2: none of headlights (high-beam) illuminates.....	54A-162	Removal and installation.....	54A-312
Inspection procedure 3: the headlights illuminate at low-beam (high-beam does not illuminate) regardless of the lighting switch positions.....	54A-166	How to diagnose	
Inspection procedure 4: headlights do not illuminate when the passing switch is operated. ....	54A-168	Battery handling.....	00E-12
		Cables and wires check.....	00E-12
		Checking fuses .....	00E-9
		Checking relays .....	00E-11
		Checking switches .....	00E-10

General electrical system check .....	00E-12	Ignition coil	
How to diagnose .....	00E-6	Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	16-55
Information for diagnosis .....	00E-6	Removal and installation <2.0l engine turbo> .....	16-56
Inspection .....	00E-7	Knock sensor	
Inspection instruments .....	00E-8	Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	16-61
Troubleshooting steps .....	00E-6	Removal and installation <2.0l engine turbo> .....	16-63
How to read circuit diagrams .....	90-4	On-vehicle service	
How to read configuration diagrams		Camshaft position sensor check .....	16-53
Configuration diagrams .....	80A-4	Crankshaft position sensor check .....	16-54
Configuration diagrams .....	80A-4	Ignition coil check .....	16-50
How to read splice locations .....	80B-2	Knock control system check .....	16-50
How to use this manual .....	00-3	Spark plug check and cleaning .....	16-52
How to use troubleshooting/inspection service points		Spark plug test .....	16-51
Connector inspection service points .....	00-13	Service specification(s) .....	16-49
Connector measurement service points .....	00-11	Special tool .....	16-50
How to cope with intermittent malfunctions .....	00-14	Ignition system <non-turbo> .....	90-48
How to treat past trouble .....	00-15	Ignition system <turbo> .....	90-52
How to use the inspection procedures .....	00-9	Immobilizer system <non-turbo> .....	90-364
Inspection service points for a blown fuse .....	00-16	Immobilizer system <turbo> .....	90-368
Troubleshooting contents .....	00-7	Index .....	80B-3
Hydraulic unit .....	35C-301	Individual component service .....	52B-409
Hydraulic unit		Injector	
Removal and installation		Removal and installation	
Twin clutch-sportronic shift transmission (TC-SST) ...	22C-550	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-978
Active stability control system (ASC) .....	35C-301	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-875
		Multiport fuel injection (MFI) <2.4L engine> .....	13C-966
<b>I</b>		Input shaft	
Ignition key reminder tone alarm <vehicles with KOS> .....	90-398	Disassembly and assembly .....	22B-25
Ignition key reminder tone alarm <vehicles without KOS> .....	90-396	Inside rear view mirror .....	52A-20
Ignition switch		Inspection terminal .....	70-23
Inspection		Instrument center panel	
Ignition switch continuity check .....	54A-25	Removal and installation .....	52A-7
Key reminder switch inspection .....	54A-25	Instrument lower panel	
On-vehicle service		Removal and installation .....	52A-8
Check of ignition key reminder warning function (steering lock reminder tone alarm by KOS) .....	54A-22	Instrument panel assembly	
Removal and installation .....	54A-23	Removal and installation .....	52A-3
Special tools .....	54A-12	Intake and exhaust diagnosis	
Symptom procedures		Introduction .....	15-2
Inspection procedure 1: ignition key cylinder illumination light does not illuminate/extinguish normally. <vehicles with WCM> .....	54A-15	Symptom chart .....	15-2
Inspection procedure 2: defective power supply system of the ignition switch .....	54A-20	Symptom procedures	
Trouble symptom chart .....	54A-15	Inspection procedure 1: exhaust leakage .....	15-3
Troubleshooting		Inspection procedure 2: abnormal noise .....	15-3
Diagnosis function .....	54A-13	Troubleshooting strategy .....	15-2
Standard flow of diagnostic trouble shooting .....	54A-13	Intake manifold	
Ignition system		Inspection .....	15-20
Camshaft position sensor		Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	15-15
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	16-57	Removal and installation <2.0l engine turbo> .....	15-18
Removal and installation <2.0l engine turbo> .....	16-58	Intake manifold and fuel system	
Crankshaft position sensor		Removal and installation	
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	16-59	Engine overhaul <2.0l engine non-turbo> .....	11B-17
Removal and installation <2.0l engine turbo> .....	16-60	Engine overhaul <2.0l engine turbo> .....	11D-16
General information .....	16-48	Engine overhaul <2.4L engine> .....	11F-17
General specification(s) .....	16-49	INVECS-iii CVT .....	90-98

**J**

Joint connector ..... 90-14

**K**

Key interlock and shift lock mechanisms  
 Removal and installation ..... 22C-521  
 Keyless operating system (KOS) <non-turbo> ..... 90-220  
 Keyless operating system (KOS) <turbo> ..... 90-230  
 Keyless operation key  
 Disassembly and assembly ..... 42B-219  
 Knee air bag module  
 Inspection ..... 52B-442  
 Removal and installation ..... 52B-439  
 KOS-ECU  
 Removal and installation ..... 42B-216

**L**

License plate light  
 Removal and installation ..... 54A-303  
 Loose panel  
 Removal and installation ..... 42A-199  
 Lower arm  
 Inspection ..... 33-18  
 Lower arm ball joint dust cover replacement ..... 33-18  
 Lower arm rear bushing replacement ..... 33-19  
 Removal and installation ..... 33-17  
 Lubricant  
 Manual transaxle ..... 22A-2  
 Twin clutch sst overhaul ..... 22D-4  
 CVT ..... 23A-13  
 Lubricant(s) ..... 23B-6  
 Lubricants  
 Engine lubrication ..... 12-3  
 Clutch ..... 21A-2  
 Manual transaxle overhaul ..... 22B-5  
 Twin clutch-sportronic shift transmission (TC-SST) ..... 22C-19  
 Propeller shaft ..... 25-3  
 Front axle ..... 26-5  
 Rear axle <AWD> ..... 27B-4  
 Basic brake ..... 35A-5  
 Heater, air conditioning and ventilation ..... 55A-5  
 Lubrication and maintenance ..... 00-57  
 Luggage compartment  
 Configuration diagrams ..... 80A-28  
 Configuration diagrams ..... 80A-28  
 Splice locations ..... 80B-8

**M**

Main sealant and adhesive table ..... 00-103  
 Maintenance service <2.0l engine non-turbo, 2.4L engine>  
 1. fuel system (tank, pipe line and connection, and fuel tank filler tube cap) (check for leaks) ..... 00-68  
 10. engine oil filter (replace) ..... 00-72  
 11. transaxle oil <M/T> (check oil level and condition) .. 00-74  
 12. transmission fluid <CVT> (change fluid) ..... 00-74  
 13. engine coolant (change) ..... 00-76

14. coolant hoses (radiator hose, heater hose) (inspect) ..... 00-77  
 15. disk brake pads and rotors (inspect for wear) ..... 00-78  
 16. brake hoses (check for deterioration or leaks) ..... 00-83  
 17. ball joint and steering linkage seals (inspect for grease leaks and damage) ..... 00-83  
 18. drive shaft boots (inspect for grease leaks and damage) ..... 00-83  
 19. suspension system (inspect for looseness and damage) ..... 00-83  
 2. fuel hoses (check condition) ..... 00-68  
 20. tires (rotate) ..... 00-84  
 21. air filter (replace) ..... 00-84  
 3. air cleaner element (replace) ..... 00-68  
 4. evaporative emission control system (except evaporative emission canister) (check for leaks and clogging) ..... 00-68  
 5. spark plugs (replace) ..... 00-69  
 6. intake and exhaust valve clearance (inspect and adjust) ..... 00-69  
 7. drive belt (for the generator and power steering oil pump) (check condition) ..... 00-71  
 8. exhaust system (connections portion of muffler, muffler pipes and converter heat shields) (check and service) ..... 00-72  
 9. engine oil (change) ..... 00-72  
 Maintenance service <2.0l engine turbo>  
 1. fuel system (tank, pipe line and connection, and fuel tank filler tube cap) (check for leaks) ..... 00-85  
 10. engine oil filter (replace) ..... 00-90  
 11. twin clutch-sportronic shift transmission (TC-SST) [check the fluid leakage (if necessary, check the fluid level) /change]... 00-90  
 12. twin clutch-sportronic shift transmission oil filter (change) ..... 00-92  
 13. transfer oil (with active center differential) (check oil level/change) ..... 00-93  
 14. reserve tank fluid (for active center differential) (check fluid level) ..... 00-94  
 15. engine coolant (change) ..... 00-95  
 16. coolant hoses (radiator hose, heater hose) (inspect) ..... 00-97  
 17. disk brake pads and rotors (inspect for wear) ..... 00-97  
 18. brake hoses (check for deterioration or leaks) ..... 00-101  
 19. ball joint and steering linkage seals (inspect for grease leaks and damage) ..... 00-101  
 2. fuel hoses (check condition) ..... 00-85  
 20. drive shaft boots (inspect for grease leaks and damage) ..... 00-101  
 21. suspension system (inspect for looseness and damage) ..... 00-101  
 22. rear axle oil (with lsd) (change) ..... 00-102  
 23. tires (rotate) ..... 00-102  
 24. air purifier filter (replace) ..... 00-102  
 3. air cleaner element (replace) ..... 00-85  
 4. evaporative emission control system (except evaporative emission canister) (check for leaks and clogging) ..... 00-85  
 5. spark plugs (replace) ..... 00-86  
 6. intake and exhaust valve clearance (inspect and adjust) ..... 00-86  
 7. drive belt (for the generator and power steering oil pump) (replace) ..... 00-88  
 8. exhaust system (connections portion of muffler, muffler pipes and converter heat shields) (check and service) ..... 00-89  
 9. engine oil (change) ..... 00-89

Manual A/C diagnosis		Inspection procedure 2: blower fan and motor do not turn. <vehicles without A/C> .....	55A-96
Actuator test reference .....	55A-169	Inspection procedure 3: blower air amount cannot be changed. <vehicles without A/C> .....	55A-101
Check at A/C-ECU terminal .....	55A-169	Inspection procedure 4: outside/inside air changeover is not possible <vehicles without A/C> .....	55A-104
Data list reference table .....	55A-169	Inspection procedure 5: A/C outlet air temperature does not increase <vehicles without A/C> .....	55A-106
Diagnostic function .....	55A-6	Inspection procedure 6: air outlet vent cannot be changed. <vehicles without A/C> .....	55A-109
Diagnostic trouble code chart .....	55A-9	Inspection procedure 7: rear window defogger does not operate. <vehicles without A/C> .....	55A-112
Diagnostic trouble code procedures		Inspection procedure 8: blower motor power supply system. <vehicles without A/C> .....	55A-121
DTC B1000: control panel communication error .....	55A-16	Manual transaxle diagnosis	
DTC B1000: control panel communication error <vehicles without A/C> .....	55A-11	Introduction .....	22A-4
DTC B1003: mode dial sw error .....	55A-24	Symptom chart .....	22A-4
DTC B1003: mode dial sw error <vehicles without A/C> .....	55A-20	Symptom procedures	
DTC B1018: temperature control dial sw error .....	55A-30	Inspection procedure 1: noise, vibration .....	22A-4
DTC B1018: temperature control dial sw error <vehicles without A/C> .....	55A-27	Inspection procedure 2: oil leaks .....	22A-6
DTC B1021: fan dial sw error .....	55A-36	Inspection procedure 3: hard shifting .....	22A-6
DTC B1021: fan dial sw error <vehicles without A/C> .....	55A-33	Inspection procedure 4: jumps out of gear .....	22A-7
DTC B1031, B1032: air thermo sensor system .....	55A-42	Troubleshooting strategy .....	22A-4
DTC B1031, B1032: air thermo sensor system <vehicles without A/C> .....	55A-39	Mark	
DTC B1034, B1035: ambient air temperature sensor system .....	55A-45	Removal and installation .....	51-88
DTC B1079: refrigerant leaks .....	55A-48	Master cylinder assembly and brake booster assembly ....	35A-36
DTC B2214: control panel failure .....	55A-56	Master cylinder assembly and brake booster assembly	
DTC B2214: control panel failure <vehicles without A/C> .....	55A-52	Removal and installation <except ralliart> .....	35A-36
DTC B223B: control panel improperly assembled ....	55A-62	Removal and installation <ralliart> .....	35A-39
DTC B223B: control panel improperly assembled <vehicles without A/C> .....	55A-59	Mechatronic assembly, manual control lever	
DTC U0019: bus off (can1) .....	55A-68	Removal and installation .....	22C-533
DTC U0141: ETACS-ECU time-out .....	55A-70	Meter and gauge <non-turbo> .....	90-182
DTC U0151: SRS-ECU time-out .....	55A-72	Meter and gauge <turbo> .....	90-186
DTC U0154: occupant classification ECU time out ...	55A-75	MFI system <non-turbo> .....	90-64
DTC U0155: combination meter time-out .....	55A-78	MFI system <turbo> .....	90-76
DTC U0168: WCM time-out .....	55A-80	Mitsubishi multi-communication system (MMCS) <non-turbo> ..	90-308
DTC U0184: audio time-out .....	55A-83	Mitsubishi multi-communication system (MMCS) <turbo> ..	90-322
DTC U0195: satellite radio tuner CAN timeout .....	55A-86	MMCS	
DTC U0197: hands free module time-out .....	55A-88	Diagnosis	
DTC U1415: coding not completed .....	55A-65	Diagnosis function .....	54A-450
Heater, A/C and ventilation diagnostic troubleshooting strategy	55A-6	Error message .....	54A-435
Introduction to heater, A/C and ventilation diagnosis ....	55A-6	Precautions on servicing MMCS .....	54A-434
Symptom chart .....	55A-125	Service mode .....	54A-437
Symptom chart <vehicles without A/C> .....	55A-91	Standard flow of diagnostic troubleshooting .....	54A-434
Symptom procedures		Diagnostic trouble code chart .....	54A-452
Inspection procedure 1: when the A/C is operation, temperature inside the passenger compartment does not decrease (cool air is not emitted) .....	55A-126	Diagnostic trouble code procedures	
Inspection procedure 10: blower motor power supply system. ....	55A-165	DTC B2226: and [audio visual navigation (hdd) unit] error .....	54A-452
Inspection procedure 2: malfunction of the A/C-ECU power supply system. ....	55A-128	DTC B2240: communication error with CAN box .....	54A-454
Inspection procedure 3: the compressor does not work. ....	55A-132	DTC B2477: vin not programmed .....	54A-457
Inspection procedure 4: blower fan and motor do not turn. ....	55A-140	DTC No.U1417 implausible coding data .....	54A-477
Inspection procedure 5: blower air amount cannot be changed. ....	55A-145	DTC U0019: bus off (CAN-B) .....	54A-458
Inspection procedure 6: outside/inside air changeover is not possible. ....	55A-148	DTC U0141: ETACS CAN timeout .....	54A-459
Inspection procedure 7: A/C outlet air temperature does not increase .....	55A-150	DTC U0151: SRS-ECU CAN timeout .....	54A-461
Inspection procedure 8: air outlet vent cannot be changed. ....	55A-153	DTC U0154: ocm (occupant classification-ECU) CAN timeout .....	54A-463
Inspection procedure 9: rear window defogger does not operate .....	55A-156	DTC U0155: meter CAN timeout .....	54A-465
Symptom procedures <vehicles without A/C>		DTC U0164: A/C CAN timeout .....	54A-468
Inspection procedure 1: malfunction of the heater control unit power supply system. <vehicles without A/C> .....	55A-92	DTC U0168: WCM/KOS CAN timeout .....	54A-470
		DTC U0195: satellite radio CAN timeout .....	54A-472
		DTC U0197: hands free module CAN timeout .....	54A-474
		DTC U1415: coding not completed/data fail .....	54A-475
		ETACS customization function .....	54A-533

General information .....	54A-430	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-66
Inspection		Multiport fuel injection (MFI) <2.4L engine> .....	13C-62
Audio and video adapter inspection.....	54A-538	DTC P0012: camshaft position – timing over-retarded	13B-69
Removal and installation .....	54A-536	DTC P0013: exhaust engine oil control valve circuit	
Special tools .....	54A-432	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-68
Symptom procedures		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-71
Inspection procedure 1: No navigation screen is displayed.	54A-479	Multiport fuel injection (MFI) <2.4L engine> .....	13C-66
Inspection procedure 10: sound of a DVD can be played, but no image is played.....	54A-524	DTC P0014: exhaust variable valve timing system target error	
Inspection procedure 11: the picture and sound of external input are not played. ....	54A-525	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-74
Inspection procedure 12: check the CAN box unit power supply circuit. ....	54A-528	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-78
Inspection procedure 2: No sound is heard. <vehicles with audio amplifier> .....	54A-490	Multiport fuel injection (MFI) <2.4L engine> .....	13C-72
Inspection procedure 2: No sound is heard. <vehicles without audio amplifier> .....	54A-486	DTC P0016: crankshaft/camshaft (intake) position sensor phase problem	
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles with audio amplifier>.....	54A-504	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-77
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles without audio amplifier> .....	54A-497	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-81
Inspection procedure 4: the navigation system can be operated while the vehicle is driven. ....	54A-513	Multiport fuel injection (MFI) <2.4L engine> .....	13C-75
Inspection procedure 5: the screen is not normal in the navigation mode. ....	54A-516	DTC P0017: crankshaft/camshaft (exhaust) position sensor phase problem	
Inspection procedure 6: the AM/FM radio broadcasting cannot be received. ....	54A-519	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-82
Inspection procedure 7: GPS signal can not be received. ....	54A-521	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-86
Inspection procedure 8: CD/DVD cannot be played. .	54A-522	Multiport fuel injection (MFI) <2.4L engine> .....	13C-80
Inspection procedure 9: image of a DVD is played, but no sound is played. ....	54A-523	DTC P0031: heated oxygen sensor (front) heater circuit low	13B-90
Trouble symptom chart.....	54A-478	DTC P0031: heated oxygen sensor (front) heater control circuit low <california>	
Motors and transistor		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-94
Inspection .....	55A-187	Multiport fuel injection (MFI) <2.4L engine> .....	13C-92
Removal and installation .....	55A-186	DTC P0031: heated oxygen sensor (front) heater control circuit low <except for california>	
Multiport fuel injection (MFI) diagnosis		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-87
Actuator test reference table		Multiport fuel injection (MFI) <2.4L engine> .....	13C-85
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-935	DTC P0032: heated oxygen sensor (front) heater circuit high	13B-97
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-833	DTC P0032: heated oxygen sensor (front) heater control circuit high <california>	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-926	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-105
Check at the engine control module (ECM)		Multiport fuel injection (MFI) <2.4L engine> .....	13C-103
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-937	DTC P0032: heated oxygen sensor (front) heater control circuit high <except for california>	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-834	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-101
Multiport fuel injection (MFI) <2.4L engine> .....	13C-927	Multiport fuel injection (MFI) <2.4L engine> .....	13C-99
Data list reference table		DTC P0037: heated oxygen sensor (rear) heater circuit low	13B-101
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-912	DTC P0037: heated oxygen sensor (rear) heater control circuit low <california>	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-813	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-116
Multiport fuel injection (MFI) <2.4L engine> .....	13C-905	Multiport fuel injection (MFI) <2.4L engine> .....	13C-114
Diagnostic function		DTC P0037: heated oxygen sensor (rear) heater control circuit low <except for california>	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-12	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-109
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-10	Multiport fuel injection (MFI) <2.4L engine> .....	13C-107
Multiport fuel injection (MFI) <2.4L engine> .....	13C-11	DTC P0038: heated oxygen sensor (rear) heater circuit high	13B-108
Diagnostic trouble code chart		DTC P0038: heated oxygen sensor (rear) heater control circuit high <california>	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-50	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-127
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-51	Multiport fuel injection (MFI) <2.4L engine> .....	13C-125
Multiport fuel injection (MFI) <2.4L engine> .....	13C-48	DTC P0038: heated oxygen sensor (rear) heater control circuit high <except for california>	
Diagnostic trouble code procedures		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-123
DTC P0010: intake engine oil control valve circuit		Multiport fuel injection (MFI) <2.4L engine> .....	13C-121
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-58	DTC P0043: heated oxygen sensor (3rd) heater control circuit low <california>	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-59	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-131
Multiport fuel injection (MFI) <2.4L engine> .....	13C-56	Multiport fuel injection (MFI) <2.4L engine> .....	13C-129
DTC P0011: intake variable valve timing system target error			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-64		

DTC P0044: heated oxygen sensor (3rd) heater control circuit high <california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-138		
Multiport fuel injection (MFI) <2.4L engine>	13C-136		
DTC P0069: abnormal correlation between manifold absolute pressure sensor and barometric pressure sensor			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-142		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-112		
Multiport fuel injection (MFI) <2.4L engine>	13C-140		
DTC P0096: intake air temperature circuit range/performance problem (sensor 2)	13B-116		
DTC P0097: intake air temperature circuit low input (sensor 2)	13B-122		
DTC P0098: intake air temperature circuit high input (sensor 2)	13B-126		
DTC P0101: mass airflow circuit range/performance problem			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-147		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-132		
Multiport fuel injection (MFI) <2.4L engine>	13C-145		
DTC P0102: mass airflow circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-153		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-139		
Multiport fuel injection (MFI) <2.4L engine>	13A-153		
DTC P0103: mass airflow circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-160		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-146		
Multiport fuel injection (MFI) <2.4L engine>	13C-158		
DTC P0106: manifold absolute pressure circuit range/performance problem			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-166		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-151		
Multiport fuel injection (MFI) <2.4L engine>	13C-163		
DTC P0107: manifold absolute pressure circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-175		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-160		
Multiport fuel injection (MFI) <2.4L engine>	13C-172		
DTC P0108: manifold absolute pressure circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-183		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-168		
Multiport fuel injection (MFI) <2.4L engine>	13C-180		
DTC P0111: intake air temperature circuit range/performance problem			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-188		
Multiport fuel injection (MFI) <2.4L engine>	13A-188		
DTC P0111: intake air temperature circuit range/performance problem (sensor 1)	13B-173		
DTC P0112: intake air temperature circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-194		
Multiport fuel injection (MFI) <2.4L engine>	13A-194		
DTC P0112: intake air temperature circuit low input (sensor 1)	13B-179		
DTC P0113: intake air temperature circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-198		
Multiport fuel injection (MFI) <2.4L engine>	13A-198		
DTC P0113: intake air temperature circuit high input (sensor 1)	13B-183		
DTC P0116: engine coolant temperature circuit range/performance problem			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-204		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-189		
Multiport fuel injection (MFI) <2.4L engine>	13C-201		
DTC P0117: engine coolant temperature circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-210		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-195		
Multiport fuel injection (MFI) <2.4L engine>	13C-207		
DTC P0118: engine coolant temperature circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-214		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-200		
Multiport fuel injection (MFI) <2.4L engine>	13C-211		
DTC P0122: throttle position sensor (main) circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-221		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-206		
Multiport fuel injection (MFI) <2.4L engine>	13C-217		
DTC P0123: throttle position sensor (main) circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-225		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-211		
Multiport fuel injection (MFI) <2.4L engine>	13C-222		
DTC P0125: insufficient coolant temperature for closed loop fuel control			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-232		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-217		
Multiport fuel injection (MFI) <2.4L engine>	13C-228		
DTC P0128: coolant thermostat (coolant temperature below thermostat regulating temperature)			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-240		
Multiport fuel injection (MFI) <2.0l engine turbo>	13B-225		
Multiport fuel injection (MFI) <2.4L engine>	13C-236		
DTC P0131: heated oxygen sensor (front) circuit low voltage	13B-228		
DTC P0131: heated oxygen sensor (front) circuit low voltage <california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-250		
Multiport fuel injection (MFI) <2.4L engine>	13C-246		
DTC P0131: heated oxygen sensor (front) circuit low voltage <except for california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-242		
Multiport fuel injection (MFI) <2.4L engine>	13C-238		
DTC P0132: heated oxygen sensor (front) circuit high voltage	13B-236		
DTC P0132: heated oxygen sensor (front) circuit high voltage <california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-262		
Multiport fuel injection (MFI) <2.4L engine>	13C-258		
DTC P0132: heated oxygen sensor (front) circuit high voltage <except for california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-258		
Multiport fuel injection (MFI) <2.4L engine>	13C-254		
DTC P0133: heated oxygen sensor (front) circuit slow response <california>	13A-271		
DTC P0133: heated oxygen sensor (front) circuit slow response <except for california>	13A-266		
DTC P0133: heated oxygen sensor (front) circuit slow response	13B-240		
DTC P0133: heated oxygen sensor (front) circuit slow response <california>	13C-267		
DTC P0133: heated oxygen sensor (front) circuit slow response <except for california>	13C-262		
DTC P0134: heated oxygen sensor (front) circuit No activity detected	13B-245		
DTC P0134: heated oxygen sensor (front) No activity detected <california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-282		
Multiport fuel injection (MFI) <2.4L engine>	13C-277		
DTC P0134: heated oxygen sensor (front) No activity detected <except for california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-276		
Multiport fuel injection (MFI) <2.4L engine>	13C-272		

DTC P0137: heated oxygen sensor (rear) circuit low voltage .....	13B-251	DTC P0181: fuel tank temperature sensor circuit range/performance	
DTC P0137: heated oxygen sensor (rear) circuit low voltage <california>		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-366
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-297	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-284
Multiport fuel injection (MFI) <2.4L engine> .....	13C-292	Multiport fuel injection (MFI) <2.4L engine> .....	13C-361
DTC P0137: heated oxygen sensor (rear) circuit low voltage <except for california>		DTC P0182: fuel tank temperature sensor circuit low input	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-288	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-373
Multiport fuel injection (MFI) <2.4L engine> .....	13C-283	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-291
DTC P0138: heated oxygen sensor (rear) circuit high voltage .....	13B-259	Multiport fuel injection (MFI) <2.4L engine> .....	13C-368
DTC P0138: heated oxygen sensor (rear) circuit high voltage <california>		DTC P0183: fuel tank temperature sensor circuit high input	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-310	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-378
Multiport fuel injection (MFI) <2.4L engine> .....	13C-305	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-296
DTC P0138: heated oxygen sensor (rear) circuit high voltage <except for california>		Multiport fuel injection (MFI) <2.4L engine> .....	13C-373
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-306	DTC P0201: injector circuit-cylinder 1	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-301	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-385
DTC P0139: heated oxygen sensor (rear) circuit slow response <california> .....	13A-319	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-303
DTC P0139: heated oxygen sensor (rear) circuit slow response <except for california> .....	13A-314	Multiport fuel injection (MFI) <2.4L engine> .....	13C-380
DTC P0139: heated oxygen sensor (rear) circuit slow response .....	13B-263	DTC P0202: injector circuit-cylinder 2	
DTC P0139: heated oxygen sensor (rear) circuit slow response <california> .....	13C-314	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-395
DTC P0139: heated oxygen sensor (rear) circuit slow response <except for california> .....	13C-309	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-313
DTC P0140: heated oxygen sensor (rear) circuit No activity detected .....	13B-268	Multiport fuel injection (MFI) <2.4L engine> .....	13C-390
DTC P0140: heated oxygen sensor (rear) circuit No activity detected <california>		DTC P0203: injector circuit-cylinder 3	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-328	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-405
Multiport fuel injection (MFI) <2.4L engine> .....	13C-323	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-323
DTC P0140: heated oxygen sensor (rear) circuit No activity detected <except for california>		Multiport fuel injection (MFI) <2.4L engine> .....	13C-400
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-324	DTC P0204: injector circuit-cylinder 4	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-319	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-415
DTC P0143: heated oxygen sensor (3rd) circuit low voltage <california>		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-333
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-332	Multiport fuel injection (MFI) <2.4L engine> .....	13C-410
Multiport fuel injection (MFI) <2.4L engine> .....	13C-327	DTC P0219: engine over speed condition .....	13B-343
DTC P0144: heated oxygen sensor (3rd) circuit high voltage <california>		DTC P0222: throttle position sensor (sub) circuit low input	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-341	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-425
Multiport fuel injection (MFI) <2.4L engine> .....	13C-336	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-344
DTC P0145: heated oxygen sensor (3rd) circuit slow response <california> .....	13A-345	Multiport fuel injection (MFI) <2.4L engine> .....	13C-420
DTC P0145: heated oxygen sensor (3rd) circuit slow response <california> .....	13C-340	DTC P0223: throttle position sensor (sub) circuit high input	
DTC P0146: heated oxygen sensor (3rd) circuit No activity detected <california>		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-431
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-349	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-350
Multiport fuel injection (MFI) <2.4L engine> .....	13C-344	Multiport fuel injection (MFI) <2.4L engine> .....	13C-426
DTC P0171: system too lean		DTC P0234: turbocharger wastegate system malfunction	13B-355
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-353	DTC P0243: turbocharger wastegate solenoid circuit	13B-357
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-272	DTC P0300: random/multiple cylinder misfire detected	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-348	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-436
DTC P0172: system too rich		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-363
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-360	Multiport fuel injection (MFI) <2.4L engine> .....	13C-431
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-278	DTC P0301: cylinder 1 misfire detected	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-355	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-441
		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-368
		Multiport fuel injection (MFI) <2.4L engine> .....	13C-437
		DTC P0302: cylinder 2 misfire detected	
		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-444
		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-371
		Multiport fuel injection (MFI) <2.4L engine> .....	13C-440
		DTC P0303: cylinder 3 misfire detected	
		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-447
		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-374
		Multiport fuel injection (MFI) <2.4L engine> .....	13C-443

DTC P0304: cylinder 4 misfire detected			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-450		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-377		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-446		
DTC P0327: knock sensor circuit low			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-454		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-381		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-450		
DTC P0328: knock sensor circuit high			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-458		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-384		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-454		
DTC P0335: crankshaft position sensor circuit			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-462		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-387		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-458		
DTC P0340: intake camshaft position sensor circuit			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-472		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-396		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-468		
DTC P0365: exhaust camshaft position sensor circuit			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-480		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-405		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-476		
DTC P0401: exhaust gas recirculation flow insufficient detected	13C-485		
DTC P0401: exhaust gas recirculation flow insufficient detected <california> .....	13A-489		
DTC P0420: warm up catalyst efficiency below threshold	13B-414		
DTC P0420: warm up catalyst efficiency below threshold <except for california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-492		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-488		
DTC P0421: warm up catalyst efficiency below threshold <california>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-494		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-490		
DTC P0441: evaporative emission control system incorrect purge flow			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-496		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-416		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-492		
DTC P0442: evaporative emission control system leak detected (small leak)			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-500		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-420		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-496		
DTC P0443: evaporative emission control system purge control valve circuit			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-512		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-433		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-508		
DTC P0446: evaporative emission control system vent control circuit			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-519		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-440		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-515		
DTC P0450: evaporative emission control system pressure sensor malfunction			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-526		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-447		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-522		
DTC P0451: evaporative emission control system pressure sensor range/performance			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-534		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-530		
DTC P0451: evaporative emission control system pressure sensor range/performance .....	13B-456		
DTC P0452: evaporative emission control system pressure sensor low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-543		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-465		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-539		
DTC P0453: evaporative emission control system pressure sensor high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-554		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-475		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-549		
DTC P0455: evaporative emission control system leak detected (gross leak)			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-562		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-482		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-557		
DTC P0456: evaporative emission control system leak detected (very small leak)			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-573		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-495		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-568		
DTC P0461: fuel level sensor (main) circuit range /performance .....	13B-508		
DTC P0461: fuel level sensor circuit range/performance			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-584		
Multiport fuel injection (MFI) <2.4L engine> .....	13A-584		
DTC P0462: fuel level sensor circuit low input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-587		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-511		
Multiport fuel injection (MFI) <2.4L engine> .....	13A-587		
DTC P0463: fuel level sensor circuit high input			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-589		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-514		
Multiport fuel injection (MFI) <2.4L engine> .....	13A-589		
DTC P0489: EGR valve (stepper motor) circuit malfunction (ground short) .....	13C-587		
DTC P0489: EGR valve (stepper motor) circuit malfunction (ground short) <california> .....	13A-592		
DTC P0490: EGR valve (stepper motor) circuit malfunction (battery short) .....	13C-595		
DTC P0490: EGR valve (stepper motor) circuit malfunction (battery short) <california> .....	13A-600		
DTC P0500: vehicle speed sensor malfunction <M/T>			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-605		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-600		
DTC P0500: vehicle speed signal malfunction .....	13B-516		
DTC P0506: idle control system rpm lower than expected			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-613		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-519		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-609		
DTC P0507: idle control system rpm higher than expected			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-616		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-522		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-611		

DTC P050B: ignition timing retard insufficient				DTC P1234: throttle position sensor (sub) plausibility	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-619			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-668
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-525			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-575
Multiport fuel injection (MFI) <2.4L engine> .....	13C-614			Multiport fuel injection (MFI) <2.4L engine> .....	13C-662
DTC P0513: immobilizer malfunction				DTC P1235: mass airflow sensor plausibility	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-622			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-672
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-528			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-579
Multiport fuel injection (MFI) <2.4L engine> .....	13C-617			Multiport fuel injection (MFI) <2.4L engine> .....	13C-665
DTC P0551: power steering pressure switch circuit range/performance				DTC P1236: a/d converter	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-624			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-676
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-530			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-583
Multiport fuel injection (MFI) <2.4L engine> .....	13C-619			Multiport fuel injection (MFI) <2.4L engine> .....	13A-676
DTC P0554: power steering pressure switch circuit intermittent				DTC P1237: accelerator pedal position sensor plausibility	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-631			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-677
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-537			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-584
Multiport fuel injection (MFI) <2.4L engine> .....	13C-626			Multiport fuel injection (MFI) <2.4L engine> .....	13C-670
DTC P0603: EEPROM malfunction				DTC P1238: mass airflow sensor plausibility (torque monitor)	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-635			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-679
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-541			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-587
Multiport fuel injection (MFI) <2.4L engine> .....	13C-630			Multiport fuel injection (MFI) <2.4L engine> .....	13A-679
DTC P0606: engine control module main processor malfunction				DTC P1239: engine rpm plausibility	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-637			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-682
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-543			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-591
Multiport fuel injection (MFI) <2.4L engine> .....	13A-637			Multiport fuel injection (MFI) <2.4L engine> .....	13C-676
DTC P0622: generator FR terminal circuit malfunction				DTC P1240: ignition angle	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-642			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-685
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-548			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-593
Multiport fuel injection (MFI) <2.4L engine> .....	13C-637			Multiport fuel injection (MFI) <2.4L engine> .....	13C-678
DTC P0630: vehicle identification number (vin) malfunction				DTC P1241: torque monitor .....	13B-594
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-647			DTC P1241: torque monitoring	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-553			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-686
Multiport fuel injection (MFI) <2.4L engine> .....	13C-642			Multiport fuel injection (MFI) <2.4L engine> .....	13C-679
DTC P0638: throttle actuator control motor circuit range/performance .....	13B-555			DTC P1242: fail safe control monitor	
DTC P0638: throttle actuator control motor circuit range/performance problem				Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-690
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-649			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-599
Multiport fuel injection (MFI) <2.4L engine> .....	13A-649			Multiport fuel injection (MFI) <2.4L engine> .....	13A-690
DTC P0642: throttle position sensor power supply				DTC P1243: inquiry/response error	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-652			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-692
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-559			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-600
Multiport fuel injection (MFI) <2.4L engine> .....	13A-652			Multiport fuel injection (MFI) <2.4L engine> .....	13A-692
DTC P0657: throttle actuator control motor relay circuit malfunction				DTC P1244: ram test for all area	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-654			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-693
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-561			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-601
Multiport fuel injection (MFI) <2.4L engine> .....	13A-654			Multiport fuel injection (MFI) <2.4L engine> .....	13A-693
DTC P1231: active stability control plausibility				DTC P1245: cycle ram test (engine)	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-661			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-694
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-568			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-602
Multiport fuel injection (MFI) <2.4L engine> .....	13C-656			Multiport fuel injection (MFI) <2.4L engine> .....	13A-694
DTC P1232: fail safe system				DTC P1247: CVT plausibility <CVT>	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-663			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-695
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-570			Multiport fuel injection (MFI) <2.4L engine> .....	13A-695
Multiport fuel injection (MFI) <2.4L engine> .....	13C-658			DTC P1247: TC-SST plausibility .....	13B-603
DTC P1233: throttle position sensor (main) plausibility				DTC P1506: idle control system rpm lower than expected at low temperature	
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-664			Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-696
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-571			Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-605
Multiport fuel injection (MFI) <2.4L engine> .....	13C-659			Multiport fuel injection (MFI) <2.4L engine> .....	13C-689
				DTC P1507: idle control system rpm higher than expected at low temperature	
				Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-699

Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-607	Multiport fuel injection (MFI) <2.4L engine>.....	13C-746
Multiport fuel injection (MFI) <2.4L engine> .....	13C-691	DTC P2195: heated oxygen sensor (front) inactive ...	13B-672
DTC P1590: tcm to ECM communication error in torque reduction request		DTC P2195: heated oxygen sensor (front) inactive <california>	
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-702	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-764
Multiport fuel injection (MFI) <2.4L engine> .....	13A-702	Multiport fuel injection (MFI) <2.4L engine>.....	13C-756
DTC P1590: TC-SST-ECU to ECM communication error in torque reduction request.....	13B-610	DTC P2195: heated oxygen sensor (front) inactive <except for california>	
DTC P1603: battery backup circuit malfunction.....	13B-613	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-761
DTC P1603: battery backup line malfunction		Multiport fuel injection (MFI) <2.4L engine>.....	13C-753
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-705	DTC P2228: barometric pressure circuit low input	
Multiport fuel injection (MFI) <2.4L engine> .....	13A-705	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-767
DTC P1676: variant coding		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-675
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-709	Multiport fuel injection (MFI) <2.4L engine>.....	13C-759
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-617	DTC P2229: barometric pressure circuit high input	
Multiport fuel injection (MFI) <2.4L engine> .....	13A-709	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-769
DTC P2066: fuel level sensor (sub) circuit range /performance.....	13B-619	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-677
DTC P2096: post catalyst fuel trim system too lean		Multiport fuel injection (MFI) <2.4L engine>.....	13C-761
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-711	DTC P2252: heated oxygen sensor offset circuit low voltage .....	13B-679
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-622	DTC P2252: heated oxygen sensor offset circuit low voltage <california>	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-703	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-777
DTC P2097: post catalyst fuel trim system too rich		Multiport fuel injection (MFI) <2.4L engine>.....	13C-769
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-714	DTC P2252: heated oxygen sensor offset circuit low voltage <except for california>	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-625	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-771
Multiport fuel injection (MFI) <2.4L engine> .....	13C-706	Multiport fuel injection (MFI) <2.4L engine>.....	13C-763
DTC P2100: throttle actuator control motor circuit (open)		DTC P2253: heated oxygen sensor offset circuit high voltage .....	13B-681
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-718	DTC P2253: heated oxygen sensor offset circuit high voltage <california>	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-629	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-793
Multiport fuel injection (MFI) <2.4L engine> .....	13A-718	Multiport fuel injection (MFI) <2.4L engine>.....	13C-785
DTC P2101: throttle actuator control motor magneto malfunction		DTC P2253: heated oxygen sensor offset circuit high voltage <except for california>	
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-723	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-785
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-634	Multiport fuel injection (MFI) <2.4L engine>.....	13C-777
Multiport fuel injection (MFI) <2.4L engine> .....	13A-723	DTC P2263: intake charge system malfunction.....	13B-683
DTC P2122: accelerator pedal position sensor (main) circuit low input		DTC P2423: hc adsorber (hc trap catalyst) efficiency below threshold <california>	
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-727	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-803
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-638	Multiport fuel injection (MFI) <2.4L engine>.....	13C-795
Multiport fuel injection (MFI) <2.4L engine> .....	13C-719	DTC U0001: bus off	
DTC P2123: accelerator pedal position sensor (main) circuit high input		Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-805
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-733	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-686
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-644	Multiport fuel injection (MFI) <2.4L engine>.....	13A-805
Multiport fuel injection (MFI) <2.4L engine> .....	13A-733	DTC U0101: tcm time-out .....	13A-807
DTC P2127: accelerator pedal position sensor (sub) circuit low input		DTC U0101: tcm time-out <CVT> .....	13C-799
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-738	DTC U0101: TC-SST-ECU time-out .....	13B-687
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-649	DTC U0121: ASC-ECU time-out	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-730	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-811
DTC P2128: accelerator pedal position sensor (sub) circuit high input		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-691
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-744	Multiport fuel injection (MFI) <2.4L engine>.....	13C-803
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-655	DTC U0141: ETACS-ECU time-out	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-736	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-814
DTC P2135: throttle position sensor (main and sub) range/performance problem		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-695
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-748	Multiport fuel injection (MFI) <2.4L engine>.....	13C-806
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-659	DTC U0167: immobilizer communication error	
Multiport fuel injection (MFI) <2.4L engine> .....	13A-748	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-817
DTC P2138: accelerator pedal position sensor (main and sub) range/performance problem		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-699
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-754	Multiport fuel injection (MFI) <2.4L engine>.....	13C-810
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-665		

DTC U1180: combination meter time-out			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-819	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-752
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-701	Multiport fuel injection (MFI) <2.4L engine>.....	13C-859
Multiport fuel injection (MFI) <2.4L engine> .....	13C-812	Inspection procedure 18: transient, mass emission tailpipe test failure	
Fail-safe function reference table		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-868
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-48	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-755
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-46	Multiport fuel injection (MFI) <2.4L engine>.....	13C-862
Multiport fuel injection (MFI) <2.4L engine> .....	13C-46	Inspection procedure 19: purge flow test of the evaporative emission canister failure	
General scan tool (gst) mode 01 reference table		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-872
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-930	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-759
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-828	Multiport fuel injection (MFI) <2.4L engine>.....	13A-872
Multiport fuel injection (MFI) <2.4L engine> .....	13C-921	Inspection procedure 2: the malfunction indicator lamp (service engine soon or check engine lamp) does not illuminate right after the ignition switch is turned to the "ON" position	
Inspection procedure using an oscilloscope		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-827
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-945	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-711
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-843	Multiport fuel injection (MFI) <2.4L engine>.....	13C-820
Multiport fuel injection (MFI) <2.4L engine> .....	13C-935	Inspection procedure 20: pressure test of the evaporative system failure	
Symptom chart		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-873
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-55	Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-760
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-56	Multiport fuel injection (MFI) <2.4L engine>.....	13A-873
Multiport fuel injection (MFI) <2.4L engine> .....	13C-53	Inspection procedure 21: generator output voltage is low (approximately 12.3 volts).....	13B-761
Symptom procedures		Inspection procedure 21: power supply system and ignition switch-IG system	
Inspection procedure 1: communication with ECM only is not possible		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-875
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-823	Multiport fuel injection (MFI) <2.4L engine>.....	13C-868
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-705	Inspection procedure 22: fuel pump system	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-816	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-881
Inspection procedure 10: when the engine is cold, it stalls at idle (die out)		Multiport fuel injection (MFI) <2.4L engine>.....	13C-874
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-849	Inspection procedure 22: power supply system and ignition switch-IG system.....	13B-764
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-735	Inspection procedure 23: fuel pump system .....	13B-775
Multiport fuel injection (MFI) <2.4L engine> .....	13C-843	Inspection procedure 23: ignition switch-st system and starter relay system <M/T>	
Inspection procedure 11: when the engine is hot, it stalls at idle (die out).....	13B-738	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-887
Inspection procedure 11: when the engine is hot, it stalls at idle (die out)		Multiport fuel injection (MFI) <2.4L engine>.....	13C-880
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-851	Inspection procedure 24: ignition switch-st system and starter relay system.....	13B-789
Multiport fuel injection (MFI) <2.4L engine> .....	13C-845	Inspection procedure 24: ignition switch-st system and starter relay system <CVT>	
Inspection procedure 12: the engine stalls accelerating (pass out)		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-894
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-854	Multiport fuel injection (MFI) <2.4L engine>.....	13C-887
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-741	Inspection procedure 25: ignition circuit system	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-848	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-900
Inspection procedure 13: the engine stalls decelerating		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-801
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-856	Multiport fuel injection (MFI) <2.4L engine>.....	13C-893
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-743	Inspection procedure 26: A/C system	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-850	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-905
Inspection procedure 14: hesitation, sag, stumble, poor acceleration or surge		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-807
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-858	Multiport fuel injection (MFI) <2.4L engine>.....	13C-898
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-745	Inspection procedure 27: engine oil pressure switch system	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-852	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-908
Inspection procedure 15: acceleration shock		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-809
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-862	Multiport fuel injection (MFI) <2.4L engine>.....	13A-908
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-749	Inspection procedure 3: the malfunction indicator lamp (service engine soon or check engine lamp) remains illuminated and never goes out	
Multiport fuel injection (MFI) <2.4L engine> .....	13A-862	Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-827
Inspection procedure 16: knocking		Multiport fuel injection (MFI) <2.0l engine turbo>.....	13B-712
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-863	Multiport fuel injection (MFI) <2.4L engine>.....	13A-827
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-750		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-857		
Inspection procedure 17: too high co and hc concentration when idling			
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-866		

Inspection procedure 4: cranks, won't start		On-vehicle service .....	13A-955
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-829	On-vehicle service	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-713	A/C compressor clutch test .....	55A-173
Multiport fuel injection (MFI) <2.4L engine> .....	13C-822	Accuracy check of occupant classification sensor .....	52B-410
Inspection procedure 5: starts up and dies		ACD bleeding .....	22C-513
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-834	ACD control fluid check .....	22C-511
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-720	ACD operation check .....	22C-514
Multiport fuel injection (MFI) <2.4L engine> .....	13C-828	All sensor calibration (G and yaw rate sensor, steering wheel sensor, brake fluid pressure sensor) .....	35C-292
Inspection procedure 6: hard starting		Antenna communication test .....	42B-212
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-838	Auto-tensioner check	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-724	Engine mechanical <2.0l engine non-turbo> .....	11A-8
Multiport fuel injection (MFI) <2.4L engine> .....	13C-832	Engine mechanical <2.0l engine turbo> .....	11C-8
Inspection procedure 7: unstable idle (rough idle, hunting)		Engine mechanical <2.4L engine> .....	11E-9
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-842	Ball joint dust cover check	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-729	Front suspension .....	33-10
Multiport fuel injection (MFI) <2.4L engine> .....	13C-836	Power steering .....	37-22
Inspection procedure 8: idle speed is high (improper idle speed)		Bleeding .....	35A-19
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-846	Brake booster operation check .....	35A-16
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-733	Brake drag force check .....	35A-32
Multiport fuel injection (MFI) <2.4L engine> .....	13A-846	Brake fluid level switch check .....	35A-19
Inspection procedure 9: idle speed is low (improper idle speed)		Brake fluid pressure sensor calibration .....	35C-298
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-848	Brake pad check .....	35A-20
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-734	Brake pad replacement <except ralliart> .....	35A-21
Multiport fuel injection (MFI) <2.4L engine> .....	13A-848	Brake pad replacement <ralliart> .....	35A-25
Troubleshooting strategy		Brake pedal check and adjustment .....	35A-14
Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-11	Charging .....	55A-174
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-10	Check valve operation check .....	35A-19
Multiport fuel injection (MFI) <2.4L engine> .....	13C-10	Clutch bleeding .....	21A-3
		Clutch pedal check and adjustment .....	21A-2
		Clutch switch check <vehicles with cruise control> .....	21A-4
		Component location	
		Multiport fuel injection (MFI) <2.0l engine non-turbo>	13A-955
		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-852
		Multiport fuel injection (MFI) <2.4L engine> .....	13C-946
		Compression pressure check	
		Engine mechanical <2.0l engine non-turbo> .....	11A-16
		Engine mechanical <2.0l engine turbo> .....	11C-15
		Engine mechanical <2.4L engine> .....	11E-16
		Compressor drive belt adjustment .....	55A-174
		Compressor noise check .....	55A-177
		Configuration function .....	42C-119
		Cooling fan motor check <2.0l engine non-turbo, 2.4L engine>	14-31
		Cooling fan motor check <2.0l engine turbo> .....	14-32
		Cooling fan relay continuity check <2.0l engine non-turbo, 2.4L engine> .....	14-28
		Cooling fan relay continuity check <2.0l engine turbo> .	14-30
		Costomization function .....	42B-214
		Curb idle speed check	
		Engine mechanical <2.0l engine non-turbo> .....	11A-13
		Engine mechanical <2.0l engine turbo> .....	11C-12
		Engine mechanical <2.4L engine> .....	11E-13
		CVT control component check	
		Accelerator pedal position sensor (aps) check .....	23A-142
		CVT control relay check .....	23A-143
		Paddle shift switch check .....	23A-145
		Solenoid valve check .....	23A-143
		Stoplight switch check .....	23A-142
		Transmission fluid temperature sensor check .....	23A-144
		Transmission range switch check .....	23A-142

## O

Oil cooler	
Removal and installation .....	22C-542
Oil filter	
Removal and installation .....	22C-544
Oil pan	
Inspection	
Engine mechanical <2.0l engine non-turbo> .....	11A-52
Engine mechanical <2.0l engine turbo> .....	11A-52
Engine mechanical <2.4L engine> .....	11E-51
Removal and installation	
Engine mechanical <2.0l engine non-turbo> .....	11A-49
Engine mechanical <2.0l engine turbo> .....	11C-52
Engine mechanical <2.4L engine> .....	11E-48
Twin clutch-sportronic shift transmission (TC-SST)...	22C-531
Oil pan and timing chain case	
Removal and installation	
Engine overhaul <2.0l engine non-turbo> .....	11B-27
Engine overhaul <2.0l engine turbo> .....	11D-26
Engine overhaul <2.4L engine> .....	11F-26
Oil pump <2.0l engine>	
Removal and installation .....	12-15
Oil pump chain	
Inspection .....	11D-62
Removal and installation	
Engine overhaul <2.0l engine non-turbo> .....	11B-56
Engine overhaul <2.0l engine turbo> .....	11D-57
Oil pump chain <2.0l engine>	
Removal and installation .....	12-13

CVT control component layout .....	23A-135	Multiport fuel injection (MFI) <2.4L engine> .....	13A-967
Differential carrier oil seal replacement .....	27B-17	Fuel tank pump operation check .....	
Disc brake rotor check .....	35A-29	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-964
Drive belt tension check .....		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-862
Engine mechanical <2.0l engine non-turbo> .....	11A-8	Multiport fuel injection (MFI) <2.4L engine> .....	13C-955
Engine mechanical <2.0l engine turbo> .....	11C-8	G and yaw rate sensor calibration .....	35C-292
Engine mechanical <2.4L engine> .....	11E-9	Gear oil level check .....	27B-15
Power steering .....	37-24	Gear oil replacement .....	27B-15
EGR valve check .....	13C-965	Heated oxygen sensor check .....	
EGR valve check <california> .....	13A-977	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-969
Engine coolant change <2.0l engine non-turbo, 2.4L engine> .....	14-25	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-869
Engine coolant change <2.0l engine turbo> .....	14-26	Multiport fuel injection (MFI) <2.4L engine> .....	13C-958
Engine coolant concentration test .....	14-28	How to reduce pressurized fuel pressure .....	
Engine coolant leak check .....	14-24	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-964
Engine coolant temperature sensor check .....		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-861
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-969	Multiport fuel injection (MFI) <2.4L engine> .....	13C-955
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-868	Hub bolt replacement .....	
Multiport fuel injection (MFI) <2.4L engine> .....	13C-958	Front axle .....	26-10
Engine oil check .....	12-4	Rear axle <FWD> .....	27A-5
Engine oil control valve check .....		Rear axle <AWD> .....	27B-16
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-976	Hydraulic pressure check .....	22C-514
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-873	Hydraulic unit check .....	35C-289
Multiport fuel injection (MFI) <2.4L engine> .....	13A-976	Id codes registration procedure .....	42C-106
Engine oil filter replacement <2.0l engine non-turbo, 2.4L engine> .....	12-6	Id codes registration procedures .....	42B-203
Engine oil filter replacement <2.0l engine turbo> .....	12-7	Idle mixture check .....	
Engine oil replacement <2.0l engine non-turbo, 2.4L engine> .....	12-5	Engine mechanical <2.0l engine non-turbo> .....	11A-14
Engine oil replacement <2.0l engine turbo> .....	12-5	Engine mechanical <2.0l engine turbo> .....	11C-13
Essential service .....		Engine mechanical <2.4L engine> .....	11E-14
Flushing coolers and tubes .....	23A-139	Idle-up operation check .....	55A-179
Oil cooler flow check .....	23A-140	Ignition timing check .....	
Transmission fluid check .....	23A-137	Engine mechanical <2.0l engine non-turbo> .....	11A-11
Transmission fluid replacement .....	23A-138	Engine mechanical <2.0l engine turbo> .....	11C-10
Transmission range switch and control cable adjustment .....	23A-141	Engine mechanical <2.4L engine> .....	11E-11
Transmission range switch continuity check .....	23A-141	In the event of a discharged battery .....	35C-292
Evaporative emission purge solenoid check .....		Injector check .....	
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-977	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-975
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-874	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-871
Multiport fuel injection (MFI) <2.4L engine> .....	13A-977	Multiport fuel injection (MFI) <2.4L engine> .....	13C-963
Evaporative emission ventilation solenoid check .....		Injector relay and throttle actuator control motor relay continuity check .....	
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-977	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-968
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-874	Multiport fuel injection (MFI) <2.4L engine> .....	13C-957
Multiport fuel injection (MFI) <2.4L engine> .....	13A-977	Injector relay continuity check .....	13B-866
Fluid level check .....	37-24	Inspection of keyless entry timer lock function .....	
Fluid replacement .....	37-24	Keyless operation system (KOS) .....	42B-213
Front wheel alignment check and adjustment .....	33-8	Wireless control module (WCM) .....	42C-118
Fuel level sensor (sub) replacement <2.0l engine turbo> .....	13D-12	Intake air temperature sensor check .....	
Fuel level sensor check .....	13D-8	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-968
Fuel pressure test .....		Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-867
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-961	Multiport fuel injection (MFI) <2.4L engine> .....	13C-957
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-858	Intake charge pressure check .....	15-6
Multiport fuel injection (MFI) <2.4L engine> .....	13C-952	Intake charge pressure control system check .....	15-7
Fuel pump circuit resistor check .....	13B-867	Key interlock mechanism check .....	22C-510
Fuel pump module replacement .....		Key interlock mechanism check/adjustment .....	23A-146
<2.0l engine non-turbo, 2.4L engine> .....	13D-8	Keyless entry system check .....	
Fuel pump module replacement <2.0l engine turbo> ....	13D-10	Keyless operation system (KOS) .....	42B-212
Fuel pump operation check .....	13D-8	Wireless control module (WCM) .....	42C-118
Fuel pump relay continuity check .....		Lower arm ball joint end play check .....	33-9
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-967	Manifold vacuum check .....	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-864	Engine mechanical <2.0l engine non-turbo> .....	11A-17

Engine mechanical <2.0l engine turbo> .....	11C-16	Wireless control module (WCM) .....	42C-118
Engine mechanical <2.4L engine> .....	11E-17	Transaxle oil level check .....	22A-8
Multiport fuel injection (MFI) relay continuity check .....		Transaxle oil replacement .....	22A-8
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-966	Transfer oil change .....	22C-508
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-863	Transfer oil check .....	22C-508
Multiport fuel injection (MFI) <2.4L engine> .....	13C-955	Transmission fluid change .....	22C-507
Oil pressure check .....	12-8	Transmission fluid leakage check .....	22C-506
Oil pump pressure test .....	37-28	Transmission fluid level check .....	22C-506
Parking brake lever stroke check and adjustment .....	36-8	Turbocharger bypass valve check .....	15-8
Parking brake lining seating procedure .....	36-9	Turbocharger wastegate actuator check .....	15-6
Parking brake switch check .....	36-8	Turbocharger wastegate solenoid check .....	
Performance test .....	55A-175	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-874
Power door locks with selective unlocking inspection .....		Intake and exhaust .....	15-8
Keyless operation system (KOS) .....	42B-213	Valve clearance check and adjustment .....	
Wireless control module (WCM) .....	42C-118	Engine mechanical <2.0l engine non-turbo> .....	11A-11
Power relay check .....	55A-178	Engine mechanical <2.0l engine turbo> .....	11C-10
Power steering pressure switch check .....	37-29	Engine mechanical <2.4L engine> .....	11E-11
Power steering system air bleeding .....	37-25	Water pump coolant leak check .....	14-27
Propeller shaft universal joint check .....	25-6	Wheel bearing end play check .....	
Radiator cap opening pressure check .....	14-24	Front axle .....	26-10
Rear axle total backlash check .....	27B-15	Rear axle <FWD> .....	27A-5
Rear hub rotary-sliding resistance check .....	27A-5	Rear axle <AWD> .....	27B-16
Rear wheel alignment check and adjustment .....	34-8	Wheel runout check .....	31-8
Refrigerant leak repair procedure .....	55A-176	Other devices .....	70-7
Refrigerant level test .....	55A-173	Other parts .....	
Replace the clean air filter .....	55A-180	Other parts maintenance service points .....	55B-22
Selector lever operation check .....	23A-146	Output shaft .....	
Shift lever operation check .....	22C-509	Disassembly and assembly .....	22B-30
Shift lock mechanism check .....		Overall configuration diagram <non-turbo> .....	
Twin clutch-sportronic shift transmission (TC-SST) ...	22C-511	Configuration diagrams .....	80A-2
CVT .....	23A-148	Configuration diagrams .....	80A-2
Simple inspection of the A/C pressure sensor .....	55A-173	Overall configuration diagram <turbo> .....	
Stabilizer link ball joint dust cover inspection .....	34-9	Configuration diagrams .....	80A-3
Stationary steering effort check .....	37-23	Configuration diagrams .....	80A-3
Steering angle check .....	37-17		
Steering column shaft assembly shock absorbing mechanism check .....	37-30		
Steering wheel free play check .....	37-16		
Steering wheel return to center check .....	37-23		
Steering wheel sensor calibration .....	35C-294		
Throttle actuator control motor check .....			
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-975		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-872		
Multiport fuel injection (MFI) <2.4L engine> .....	13C-963		
Throttle actuator control motor relay continuity check ...	13B-866		
Throttle body (throttle valve area) cleaning .....			
Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-961		
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-858		
Multiport fuel injection (MFI) <2.4L engine> .....	13A-961		
Tie rod end ball joint rotation torque check .....	37-22		
Tie-rod looseness check .....	37-17		
Timing chain elongation visual check .....	11C-17		
Tire inflation pressure check .....	31-8		
Tire wear check .....	31-8		
TPMS transmitter check .....			
Keyless operation system (KOS) .....	42B-212		
Wireless control module (WCM) .....	42C-118		
TPMS transmitter id check .....			
Keyless operation system (KOS) .....	42B-212		

## P

Paddle shift assembly	
Inspection	
Paddle shift switch check .....	22C-546
Removal and installation .....	22C-546
Parking brake cable	
Removal and installation .....	36-12
Parking brake diagnosis	
Introduction .....	36-3
Symptom chart .....	36-4
Symptom procedures	
Inspection procedure 1: insufficient parking brake function	36-4
Inspection procedure 2: when the parking brake lever is pulled, the brake warning light does not illuminate .....	36-5
Troubleshooting strategy .....	36-3
Parking brake lever	
Removal and installation .....	36-10
Parking brake lining and drum	
Inspection .....	36-20
Removal and installation <except ralliart> .....	36-14
Removal and installation <ralliart> .....	36-17
Parking brake reminder tone alarm .....	90-410

## TSB Revision

Symptom procedures	
Inspection procedure 1: power of the radio and CD player does not turn on when the ignition switch is in the "ACC" position or "ON" position. ....	54A-378
Inspection procedure 10: broadcasts can be heard but both AM and FM have a lot of noise. ....	54A-415
Inspection procedure 11: there is more noise on either AM or FM. ....	54A-415
Inspection procedure 12: noise sometimes appears on FM during traveling. ....	54A-416
Inspection procedure 13: there is noise when starting the engine. ....	54A-417
Inspection procedure 14: some noise appears when there is vibration or shocks during traveling. ....	54A-419
Inspection procedure 15: ever-present noise. ....	54A-420
Inspection procedure 16: noise comes out, but neither AM nor FM sounds. ....	54A-421
Inspection procedure 17: poor reception. ....	54A-421
Inspection procedure 18: distortion on AM or on both AM and FM. ....	54A-422
Inspection procedure 19: distortion on FM only. ....	54A-423
Inspection procedure 2: No sound is heard. <vehicles with audio amplifier> ....	54A-383
Inspection procedure 20: using the auto select function, too few automatic stations are selected. ....	54A-423
Inspection procedure 21: preset stations are erased. ....	54A-424
Inspection procedure 22: CD can not be inserted. ....	54A-424
Inspection procedure 23: No sound. (CD only).....	54A-425
Inspection procedure 24: CD sound skips. ....	54A-425
Inspection procedure 25: sound quality is poor. ....	54A-426
Inspection procedure 26: CD can not be ejected.....	54A-426
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles with audio amplifier>.....	54A-395
Inspection procedure 3: No sound is heard from one of the speakers. <vehicles without audio amplifier>.....	54A-389
Inspection procedure 4: the audio does not operate normally by operating the radio and CD player of the center panel unit. ....	54A-402
Inspection procedure 5: audio illuminations does not work normally. ....	54A-406
Inspection procedure 6: the sound of external input are not played. ....	54A-411
Inspection procedure 7: noise appears at certain places when traveling (AM). ....	54A-413
Inspection procedure 8: noise is present while moving (FM). ....	54A-413
Inspection procedure 9: sound mixed with noise, only at night (AM). ....	54A-414
Trouble symptom chart.....	54A-377
Rear axle diagnosis	
Introduction.....	27B-5
Introduction to rear axle diagnosis.....	27A-3
Rear axle diagnostic troubleshooting strategy.....	27A-3
Symptom chart	
Rear axle <FWD>.....	27A-3
Rear axle <AWD>.....	27B-5
Symptom procedures	
Inspection procedure 1: abnormal noise.....	27A-3
Inspection procedure 1: noise during wheel rotation <driveshaft>.....	27B-5
Inspection procedure 2: constant noise <differential>.....	27B-6
Inspection procedure 3: gear noise while driving <differential>.....	27B-8
Inspection procedure 4: gear noise while coasting <differential>.....	27B-9
Inspection procedure 5: bearing noise while driving or coasting <differential>.....	27B-9
Inspection procedure 6: noise while turning <differential>.....	27B-9
Inspection procedure 7: heat <differential>.....	27B-10
Inspection procedure 8: oil leakage <differential>.....	27B-10
Troubleshooting strategy.....	27B-5
Rear axle hub assembly	
Inspection	
Rear axle <FWD>.....	27A-8
Rear axle <AWD>.....	27B-21
Removal and installation	
Rear axle <FWD>.....	27A-7
Rear axle <AWD>.....	27B-18
Rear bumper assembly	
Removal and installation.....	51-7
Rear combination light	
Diagnosis	
Diagnostic function.....	54A-232
Standard flow of diagnostic troubleshooting.....	54A-232
Diagnostic trouble code chart.....	54A-234
Diagnostic trouble code procedures	
DTC B16A0: taillight (RH) circuit open <open circuit in the position light (RH) circuit, the taillight (RH) circuit and the rear side marker light (RH) circuit>DTC B16A7: taillight (RH) circuit short <short circuit in the position light>.....	54A-235
DTC B16A1: taillight (LH) circuit open <open circuit in the position light (LH) circuit, the taillight (LH) circuit, the rear side marker light (LH) circuit and the license plate light circuit>DTC B16A8: taillight (LH) circuit short <s>.....	54A-242
General information.....	54A-230
Rear combination light removal and installation.....	54A-255
Special tools.....	54A-231
Symptom procedures	
Inspection procedure 1: none of taillights illuminates. ....	54A-249
Inspection procedure 2: one of the taillights does not illuminate.....	54A-251
Taillight removal and installation.....	54A-256
Trouble symptom chart.....	54A-248
Rear disc brake assembly	
Disassembly and assembly <14-inch rear disc brake>.....	35A-56
Disassembly and assembly <16-inch rear disc brake (except ralliart)>.....	35A-59
Disassembly and assembly <ralliart>.....	35A-62
Inspection.....	35A-65
Removal and installation <except ralliart>.....	35A-54
Removal and installation <ralliart>.....	35A-55
Rear roll stopper and crossmember <2.0l engine turbo> ..	32-21
Rear roll stopper and crossmember <2.0l engine turbo>	
Removal and installation.....	32-21
Rear seat assembly	
Disassembly and assembly.....	52A-31
Removal and installation.....	52A-28
Rear seat belt	
Removal and installation.....	52A-36
Rear spoiler	
Removal and installation.....	51-16
Rear suspension crossmember	
Inspection.....	34-31
Removal and installation.....	34-30
Rear suspension diagnosis	
Introduction to rear suspension diagnosis.....	34-5
Rear suspension diagnostic troubleshooting strategy ...	34-5
Symptom chart.....	34-5
Symptom procedures	
Inspection procedure 1: squeaks or other abnormal noise	34-5

Inspection procedure 2: poor ride .....	34-6
Inspection procedure 3: body tilting .....	34-6
Rear window defogger .....	90-284
Recommended lubricants and lubricant capacities table ..	00-58
Reduction gear	
Disassembly and assembly .....	23B-61
Inspection .....	23B-63
Reduction gear sub-assembly	
Assembly .....	23B-64
Refrigerant line	
Removal and installation .....	55A-202
Relay .....	70-21
Remote controlled door mirror .....	90-288
Rework dimensions .....	11F-4

## S

Satellite radio tuner	
Diagnosis .....	54A-638
Diagnosis	
Diagnosis function .....	54A-638
Introduction to satellite radio diagnosis .....	54A-638
Standard flow of diagnostic troubleshooting .....	54A-638
Diagnostic trouble code chart .....	54A-640
Diagnostic trouble code procedures	
DTC B2222: radio receiver internal fail .....	54A-640
DTC U0019: bus off (CAN-B) .....	54A-642
DTC U0141: ETACS CAN timeout .....	54A-644
DTC U0151: SRS-ECU CAN timeout .....	54A-646
DTC U0154: ocm (occupant classification-ECU) CAN timeout .....	54A-648
DTC U0155: meter CAN timeout .....	54A-650
DTC U0164: A/C CAN timeout .....	54A-652
DTC U0168: WCM/KOS CAN timeout .....	54A-654
DTC U0184: audio CAN timeout .....	54A-656
DTC U0197: hands free module CAN timeout .....	54A-659
General information .....	54A-635
On-vehicle service	
How to read sirius id .....	54A-670
Removal and installation .....	54A-670
Special tools .....	54A-636
Symptom procedures	
Inspection procedure 1: a satellite radio cannot be received .....	54A-661
Inspection procedure 2: check the satellite radio tuner power supply circuit .....	54A-665
Inspection procedure 3: the error code "antenna error" is displayed on the display .....	54A-669
Trouble symptom chart .....	54A-661
Scheduled maintenance table	
<2.0l engine non-turbo, 2.4L engine> .....	00-62
<2.0l engine turbo> .....	00-65
Sealant	
Engine lubrication .....	12-3
Engine cooling .....	14-3
Propeller shaft .....	25-3
Sealant and adhesive	
Multiport fuel injection (MFI) <2.0l engine non-turbo> ...	13A-8
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-7
Multiport fuel injection (MFI) <2.4L engine> .....	13C-7

Rear axle <AWD> .....	27B-4
Sealant(s) and adhesive(s) .....	23B-6
Sealants	
Engine mechanical <2.0l engine non-turbo> .....	11A-4
Engine mechanical <2.0l engine turbo> .....	11C-4
Engine mechanical <2.4L engine> .....	11E-4
Engine overhaul <2.4L engine> .....	11F-7
Sealants and adhesives	
Engine overhaul <2.0l engine non-turbo> .....	11B-7
Engine overhaul <2.0l engine turbo> .....	11D-7
Manual transaxle overhaul .....	22B-5
Twin clutch sst overhaul .....	22D-3
Seat belt warning tone alarm .....	90-406
Seat belts with pre-tensioner	
Inspection .....	52B-462
Removal and installation .....	52B-458
Select lever	
Disassembly and assembly .....	22B-36
Sensor .....	70-8
Sensor, switch and relay	
Inspection	
AWC switch check .....	22C-549
Electric pump relay check .....	22C-548
Removal and installation .....	22C-547
Sensors	
Inspection .....	55B-21
Removal and installation .....	55B-21
Service precautions	
Supplemental restraint system (SRS) .....	52B-25
Controller area network (CAN) .....	54C-7
Service precautions	
Caution labels .....	55A-5
Service specification	
Fuel supply .....	13D-3
Propeller shaft .....	25-3
Service specification(s)	
Engine lubrication .....	12-2
Multiport fuel injection (MFI) <2.0l engine non-turbo> ...	13A-8
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-7
Multiport fuel injection (MFI) <2.4L engine> .....	13C-7
Continuously variable transaxle overhaul .....	23B-3
Service specifications	
Engine mechanical <2.0l engine non-turbo> .....	11A-3
Engine overhaul <2.0l engine non-turbo> .....	11B-2
Engine mechanical <2.0l engine turbo> .....	11C-3
Engine overhaul <2.0l engine turbo> .....	11D-2
Engine mechanical <2.4L engine> .....	11E-3
Engine overhaul <2.4L engine> .....	11F-2
Engine cooling .....	14-3
Intake and exhaust .....	15-2
Clutch .....	21A-2
Manual transaxle overhaul .....	22B-2
Twin clutch-sportronic shift transmission (TC-SST) .....	22C-19
CVT .....	23A-13
Front axle .....	26-5
Rear axle <AWD> .....	27B-3
Wheel and tire .....	31-2
Basic brake .....	35A-4
Active stability control system (ASC) .....	35C-8

Parking brakes.....	36-3	Front suspension .....	33-7
Interior .....	52A-2	Rear suspension.....	34-7
Heater, air conditioning and ventilation.....	55A-5	Active stability control system (ASC).....	35C-288
Shift lock mechanism <CVT>.....	90-96	Power steering.....	37-14
Shift lock mechanism <TC-SST> .....	90-97	Keyless operation system (KOS).....	42B-8
Shock absorber assembly		Supplemental restraint system (SRS).....	52B-401
Disassembly and assembly .....	34-25	Local interconnect network (LIN) .....	54B-3
Inspection .....	34-24	Controller area network (CAN) .....	54C-5
Removal and installation .....	34-23	Heater, air conditioning and ventilation.....	55A-171
Side air dam		Automatic air conditioning.....	55B-19
Removal and installation .....	51-14	Specification(s)	
Side impact sensor		Adhesive .....	51-2
Inspection .....	52B-445	Fastener tightening specifications .....	21B-2
Removal and installation .....	52B-443	General specifications .....	21B-2
Side turn-signal light		Lubricant.....	51-2
Removal and installation .....	54A-280	Lubricants .....	21B-2
Side-airbag module(s) <except ralliart>		Service specifications	
Inspection .....	52B-449	Clutch overhaul .....	21B-2
Side-airbag module(s) removal and installation .....	52B-446	Rear axle <FWD> .....	27A-2
Side-airbag module(s) <ralliart>		Exterior.....	51-2
Inspection .....	52B-453	Specifications	
Removal and installation .....	52B-450	Fastener tightening specifications	
Snap ring, spacer and thrust washer for adjustment.....	23B-5	Front suspension .....	33-2
Solenoid and solenoid valve.....	70-18	Rear suspension.....	34-3
Speaker		General specifications	
General information .....	54A-628	Front suspension .....	33-3
On-vehicle service		Rear suspension.....	34-4
Speaker test <vehicles with MMCS> .....	54A-631	Power steering.....	37-3
Speaker test <vehicles with radio and CD player> ....	54A-630	Lubricant.....	33-3
Removal and installation .....	54A-631	Lubricants .....	37-4
Special tool		Sealant.....	37-4
Multiport fuel injection (MFI) <2.0l engine non-turbo> ...	13A-9	Service specifications	
Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-8	Front suspension .....	33-3
Multiport fuel injection (MFI) <2.4L engine> .....	13C-8	Rear suspension.....	34-4
Propeller shaft .....	25-5	Power steering.....	37-3
Power plant mount.....	32-3	Splash shield	
Basic brake.....	35A-13	Removal and installation.....	42A-14
Wireless control module (WCM).....	42C-6	SRS air bag diagnosis	
Interior .....	52A-2	Accuracy check of occupant classification sensor.....	52B-400
Special tool(s).....	23B-7	Actuator test reference table.....	52B-400
Special tools		Data list reference table.....	52B-399
Engine mechanical <2.0l engine non-turbo> .....	11A-4	Diagnostic function .....	52B-28
Engine overhaul <2.0l engine non-turbo> .....	11B-8	Diagnostic trouble code chart <occupant classification-ECU>.....	52B-319
Engine mechanical <2.0l engine turbo> .....	11C-4	Diagnostic trouble code chart <SRS-ECU> .....	52B-32
Engine overhaul <2.0l engine turbo> .....	11D-8	Diagnostic trouble code procedures <occupant classification-ECU>	
Engine mechanical <2.4L engine> .....	11E-4	DTC B1B78: passenger seat weight sensor (front: LH) perfor-	
Engine overhaul <2.4L engine>.....	11F-8	manceDTC B1B7D: passenger seat weight sensor (front: RH) per-	
Engine lubrication .....	12-4	formanceDTC B1B82: passenger seat weight sensor (rear: LH)	
Fuel supply .....	13D-7	performanceDTC B1B87: passenger seat weight	
Engine cooling .....	14-22	sensor ( .....	52B-321
Intake and exhaust .....	15-5	DTC B1B79: passenger seat weight sensor (ground side) short-cir-	
Manual transaxle .....	22A-3	cued (front: LH)DTC B1B7E: passenger seat weight sensor	
Manual transaxle overhaul .....	22B-6	(ground side) short-circuited (front: RH)DTC B1B83: passenger seat	
Twin clutch-sportronic shift transmission (TC-SST).....	22C-20	weight sensor (ground side) short-circuited (rea .....	52B-325
Twin clutch sst overhaul .....	22D-5	DTC B1B7A: passenger seat weight sensor (power supply side)	
CVT .....	23A-133	short-circuited or open (front: LH)DTC B1B7F: passenger seat	
Front axle.....	26-7	weight sensor (power supply side) short-circuited or open (front:	
Rear axle <FWD>.....	27A-4	RH)DTC B1B84: passenger seat weight sensor (power ...	52B-329
Rear axle <AWD> .....	27B-11	DTC B1B8C: driver seat slide sensor circuit performance	52B-334
		DTC B1B8D: driver seat slide sensor open circuit.....	52B-339
		DTC B1B8E: seat slide sensor (power supply side) short	
		circuit.....	52B-343

DTC B1B91: driver seat slide sensor configuration mismatch .....	52B-347	DTC B1B10: driver's knee air bag (squib) system (shorted to squib circuit ground) .....	52B-94
DTC B1BA7: occupant classification system verification required .....	52B-349	DTC B1B11: driver's knee air bag (squib) system (shorted to squib circuit power supply) .....	52B-98
DTC B1BA8: occupant classification-ECU out of calibration/not calibrated .....	52B-350	DTC B1B12: driver's knee air bag (squib) system (squib circuit open) .....	52B-103
DTC B1BBA: passenger seat weight sensor power supply circuit .....	52B-352	DTC B1B13: driver's knee air bag (squib) system (short circuit between squib circuit terminals) .....	52B-108
DTC B1BBC: occupant classification system negative system weight .....	52B-354	DTC B1B18: curtain air bag module (LH) (squib) system (shorted to squib circuit ground) .....	52B-114
DTC B1BBD: occupant classification-ECU current configuration table unprogrammed .....	52B-356	DTC B1B19: curtain air bag module (LH) (squib) system (shorted to squib circuit power supply) .....	52B-121
DTC B1C23: passenger seat weight sensor (front: LH) configuration mismatchDTC B1C24: passenger seat weight sensor (front: RH) configuration mismatchDTC B1C25: passenger seat weight sensor (rear: LH) configuration mismatchDTC B1C2 .....	52B-357	DTC B1B1A: curtain air bag module (LH) (squib) system (squib circuit open) .....	52B-129
DTC B1CB2: occupant classification-ECU parameter table incompatibleDTC B2212: occupant classification-ECU internal failureDTC B2250: occupant classification-ECU not parameter flash required-DTC B2262: occupant classification-ECU e .....	52B-359	DTC B1B1B: curtain air bag module (LH) (squib) system (short circuit between squib circuit terminals) .....	52B-137
DTC B210D: battery voltage lowDTC B210E: battery voltage high .....	52B-361	DTC B1B20: curtain air bag module (RH) (squib) system (shorted to squib circuit ground) .....	52B-144
DTC B2206: chassis number does not match .....	52B-365	DTC B1B21: curtain air bag module (RH) (squib) system (shorted to squib circuit power supply) .....	52B-151
DTC U0020: CAN-B bus off performanceDTC U0021: CAN-B bus (hi) circuit openDTC U0022: CAN-B bus (hi) shorted to circuit groundDTC U0023: CAN-B bus (hi) shorted to circuit power supply-DTC U0024: CAN-B bus (lo) circuit open .....	52B-367	DTC B1B22: curtain air bag module (RH) (squib) system (squib circuit open) .....	52B-158
DTC U0141: ETACS CAN timeout .....	52B-369	DTC B1B23: curtain air bag module (RH) (squib) system (short circuit between squib circuit terminals) .....	52B-166
DTC U0151: SRS-ECU CAN timeout .....	52B-371	DTC B1B54: seat belt buckle switch (RH) circuit (ground side) shorted DTC B1B55: seat belt buckle switch (RH) circuit (power supply side) shortedDTC B1B56: seat belt buckle switch (RH) circuit open .....	52B-173
DTC U0155: combination meter CAN timeout .....	52B-373	DTC B1B70: malfunction of G-sensor inside front impact sensor (LH)DTC B1B71: malfunction of G-sensor inside front impact sensor (RH) .....	52B-178
DTC U0164: A/C-ECU CAN timeout .....	52B-375	DTC B1B72: malfunction of G-sensor inside side impact sensor (LH)DTC B1B75: malfunction of G-sensor inside side impact sensor (RH) .....	52B-179
DTC U0168: KOS-ECU or WCM CAN timeout .....	52B-377	DTC B1BA3: driver's seat slide sensor malfunction (occupant classification-ECU) .....	52B-181
DTC U0184: audio CAN timeout .....	52B-379	DTC B1BA5: SRS-ECU squib count mismatch .....	52B-183
DTC U0195: satellite radio tuner CAN timeout .....	52B-381	DTC B1BAA: occupant classification-ECU configuration mismatch .....	52B-185
DTC U0197: hands free module CAN timeout .....	52B-383	DTC B1BC7: SRS-ECU (record data full) system .....	52B-187
DTC U0245: audio visual navigation unit CAN timeout .....	52B-385	DTC B1C27: side-airbag module (LH) (squib) system (shorted to squib circuit ground) .....	52B-188
DTC U1419: the signal from a weight sensor (front: LH) is unusualDTC U141A: the signal from a weight sensor (front: RH) is unusualDTC U141B: the signal from a weight sensor (rear: LH) is unusualDTC U141C: the signal from a weight .....	52B-387	DTC B1C28: side-airbag module (LH) (squib) system (shorted to squib circuit power supply) .....	52B-193
Diagnostic trouble code procedures <SRS-ECU>			
DTC B1206: passenger's air bag off indicator light (open circuit) .....	52B-35	DTC B1C29: side-airbag module (LH) (squib) system (squib circuit open) .....	52B-198
DTC B1207: passenger's air bag off indicator light (short circuit between circuit terminal) .....	52B-39	DTC B1C2A: side-airbag module (LH) (squib) system (short circuit between squib circuit terminals) .....	52B-204
DTC B1B00: driver's air bag module (1st squib) system (shorted to squib circuit ground)DTC B1B04: driver's air bag module (2nd squib) system (shorted to squib circuit ground) .....	52B-43	DTC B1C2B: side-airbag module (RH) (squib) system (shorted to squib circuit ground) .....	52B-209
DTC B1B01: driver's air bag module (1st squib) system (shorted to squib circuit power supply)DTC B1B05: driver's air bag module (2nd squib) system (shorted to squib circuit power supply) .....	52B-50	DTC B1C2C: side-airbag module (RH) (squib) system (shorted to squib circuit power supply) .....	52B-214
DTC B1B02: driver's air bag module (1st squib) system (squib circuit open)DTC B1B06: driver's air bag module (2nd squib) system (squib circuit open) .....	52B-57	DTC B1C2D: side-airbag module (RH) (squib) system (squib circuit open) .....	52B-219
DTC B1B03: driver's air bag module (1st squib) system (short circuit between squib circuit terminals)DTC B1B07: driver's air bag module (2nd squib) system (short circuit between squib circuit terminals) .....	52B-64	DTC B1C2E: side-airbag module (RH) (squib) system (short circuit between squib circuit terminals) .....	52B-225
DTC B1B08: passenger's (front) air bag module (1st squib) system (shorted to squib circuit ground)DTC B1B0C: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit ground) .....	52B-72	DTC B1C38: driver's seat belt pre-tensioner (squib) system (shorted to squib circuit ground) .....	52B-230
DTC B1B09: passenger's (front) air bag module (1st squib) system (shorted to squib circuit power supply)DTC B1B0D: passenger's (front) air bag module (2nd squib) system (shorted to squib circuit power supply) .....	52B-77	DTC B1C39: driver's seat belt pre-tensioner (squib) system (shorted to squib circuit power supply) .....	52B-236
DTC B1B0A: passenger's (front) air bag module (1st squib) system (squib circuit open)DTC B1B0E: passenger's (front) air bag module (2nd squib) system (squib circuit open) .....	52B-82	DTC B1C3A: driver's seat belt pre-tensioner (squib) system (squib circuit open) .....	52B-241
DTC B1B0B: passenger's (front) air bag module (1st squib) system (short circuit between squib circuit terminals)DTC B1B0F: passenger's (front) air bag module (2nd squib) system (short circuit between squib circuit terminals) .....	52B-88	DTC B1C3B: driver's seat belt pre-tensioner (squib) system (short circuit between squib circuit terminals) .....	52B-245
		DTC B1C47: front seat belt passenger's pre-tensioner (squib) system (shorted to squib circuit ground) .....	52B-251
		DTC B1C48: front seat belt passenger's pre-tensioner (squib) system (shorted to squib circuit power supply) .....	52B-255
		DTC B1C49: front seat belt passenger's pre-tensioner (squib) system (squib circuit open) .....	52B-260

DTC B1C4A: front seat belt passenger's pre-tensioner (squib) system (short circuit between squib circuit terminals).....	52B-266	Inspection	
DTC B210D: battery abnormal low voltage .....	52B-272	Engine electrical.....	16-41
DTC B212C: open circuit to ig1 power supply (fuse No.12 circuit).....	52B-278	Engine electrical.....	16-45
DTC B212D: open circuit to ig1 power supply (fuse No.18 circuit).....	52B-278	Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	16-39
DTC B2207: occupant restraint controller internal 1DTC B2208: occupant restraint controller internal 2DTC B2209: occupant restraint controller internal 3DTC B220A: occupant restraint controller internal 4DTC B220B: occupant .....	52B-283	Removal and installation <2.0l engine turbo> .....	16-40
DTC B223D: ocm (occupant classification-ECU) DTC present.....	52B-285	Starting system diagnosis .....	16-36
DTC U0019: bus off (CAN-B) .....	52B-286	Starting system <CVT> .....	90-45
DTC U0141: ETACS CAN timeout.....	52B-287	Starting system <M/T> .....	90-44
DTC U0154: occupant classification-ECU CAN timeout .....	52B-289	Starting system <TC-SST> .....	90-46
DTC U0155: combination meter CAN timeout.....	52B-291	Steering column.....	80B-6
DTC U0164: A/C-ECU CAN timeout.....	52B-293	Steering column shaft assembly	
DTC U0168: KOS-ECU or WCM CAN timeout.....	52B-295	Disassembly and assembly .....	37-40
DTC U0170: front impact sensor (LH) communication error.....	52B-297	Removal and installation.....	37-37
DTC U0171: front impact sensor (RH) communication error.....	52B-301	Steering wheel	
DTC U0172: side impact sensor (LH) communication error.....	52B-304	Removal and installation.....	37-32
DTC U0175: side impact sensor (RH) communication error.....	52B-307	Steering wheel audio remote control switch	
DTC U0184: audio CAN timeout.....	52B-310	Diagnosis	
DTC U0195: satellite radio tuner CAN timeout .....	52B-312	Standard flow of diagnostic troubleshooting .....	54A-541
DTC U0197: hands free module CAN timeout.....	52B-314	Trouble symptom chart .....	54A-541
DTC U1414: defective coding data.....	52B-316	General information .....	54A-539
DTC U1415: coding not completed/data fail.....	52B-317	Removal and installation.....	54A-554
Fail-safe function reference table .....	52B-400	Service data.....	54A-554
Introduction to diagnosis.....	52B-28	Special tools.....	54A-540
Passenger's air bag off indicator light check .....	52B-30	Steering wheel audio remote control switch inspection .	54A-555
Passenger's seat belt warning light check.....	52B-30	Symptom procedures	
SRS warning light check.....	52B-30	Inspection procedure 1: steering wheel audio remote control switch does not function. <vehicles without MMCS> .....	54A-542
Symptom procedures		Inspection procedure 2: steering wheel audio remote control switch does not function. <vehicles with MMCS> .....	54A-547
Inspection procedure 1: communication between the scan tool and the SRS-ECU is not possible.....	52B-388	Inspection procedure 3: steering wheel audio remote control switch illumination does not come on. ....	54A-551
Inspection procedure 2: power supply circuit system .....	52B-390	Steering wheel sensor	
Inspection procedure 3: the SRS warning light does not illuminate.....	52B-394	Removal and installation.....	35C-310
Inspection procedure 4: the SRS warning light does not go out.....	52B-396	Stoplight.....	90-176
Trouble symptom chart.....	52B-388	Strut assembly	
Troubleshooting strategy .....	52B-28	Disassembly and assembly .....	33-13
SRS control unit (SRS-ECU)		Inspection	
Inspection .....	52B-418	Front suspension .....	33-12
Removal and installation .....	52B-416	Front suspension .....	33-16
Stabilizer bar		Removal and installation.....	33-11
Inspection		Strut tower bar	
Front suspension .....	33-23	Removal and installation.....	42A-16
Rear suspension.....	34-29	Sunroof .....	90-388
Removal and installation		Sunroof	
Front suspension .....	33-21	Check at ECU terminal .....	42A-186
Rear suspension.....	34-28	Diagnostic trouble code procedures	
Stabilizer link ball joint dust cover check .....	34-29	Code no. L0630: s/r power supply .....	42A-159
Stabilizer link ball joint rotation torque check.....	34-29	Code no. L0632: s/r switch fail .....	42A-161
Starting system		Code no. L0634: s/r sensor signal .....	42A-163
General information .....	16-34	Code no. L0637: s/r position .....	42A-163
General specifications .....	16-35	Code no. L0640: s/r over load.....	42A-164
On-vehicle service		General information .....	42A-157
Starter relay check.....	16-38	On-vehicle service	
Service specifications .....	16-36	Learning procedures of the sunroof fully closed position	42A-190
Starter motor assembly		Sunroof check.....	42A-189
Disassembly and assembly .....	16-43	Sunroof fit adjustment.....	42A-188
		Sunroof lid glass operation current check.....	42A-190
		Sunroof operation check.....	42A-191
		Sunroof safety function check.....	42A-189

Sunroof timer function check .....	42A-189	Throttle body	
Water test .....	42A-188	Removal and installation.....	11D-14
Special tools .....	42A-187	Throttle body and EGR system	
Specification(s)		Removal and installation	
Sealant.....	42A-157	Engine overhaul <2.0l engine non-turbo> .....	11B-14
Service specification .....	42A-157	Engine overhaul <2.4L engine> .....	11F-14
Sunroof		Throttle body assembly	
Disassembly and assembly .....	42A-197	Removal and installation	
Inspection .....	42A-196	Multiport fuel injection (MFI) <2.0l engine non-turbo> .....	13A-983
Removal and installation.....	42A-194	Multiport fuel injection (MFI) <2.0l engine turbo> .....	13B-880
Sunroof diagnosis		Multiport fuel injection (MFI) <2.4L engine> .....	13C-971
Diagnostic trouble code chart .....	42A-158	Tightening torque.....	00-56
Trouble symptom chart .....	42A-158	Timing chain	
Troubleshooting strategy .....	42A-157	Inspection	
Symptom procedures		Engine overhaul <2.0l engine non-turbo> .....	11B-38
Inspection procedure 1: sunroof does not work at all. ....	42A-165	Engine overhaul <2.0l engine turbo> .....	11D-39
Inspection procedure 2: the sunroof lid glass does not tilt-down, open, and close normally). ....	42A-172	Engine overhaul <2.4L engine> .....	11F-38
Inspection procedure 3: the sunroof lid glass does not open (tilt-up, tilt-down, and close normally). ....	42A-175	Removal and installation	
Inspection procedure 4: the sunroof lid glass does not tilt-down or close (tilt-up and open normally). ....	42A-178	Engine mechanical <2.0l engine non-turbo> .....	11A-68
Inspection procedure 5: sunroof safety function does not work normally. ....	42A-181	Engine overhaul <2.0l engine non-turbo> .....	11B-33
Inspection procedure 6: the sunroof timer function does not work. ....	42A-182	Engine mechanical <2.0l engine turbo> .....	11C-70
Supplemental restraint system (SRS) .....	90-354	Engine overhaul <2.0l engine turbo> .....	11D-34
		Engine mechanical <2.4L engine> .....	11E-67
		Engine overhaul <2.4L engine> .....	11F-33
		Tire pressure monitoring system (TPMS)	
		Removal and installation.....	31-8
		Tire pressure monitoring system (TPMS) <non-turbo> ....	90-432
		Tire pressure monitoring system (TPMS) <turbo> .....	90-438
		Torque specifications .....	11F-4
		Towing and hoisting .....	00-51
		TPMS transmitter	
		Removal and installation	
		Keyless operation system (KOS) .....	42B-222
		Wireless control module (WCM) .....	42C-124
		Trailing arm.....	34-15
		Trailing arm	
		Inspection .....	34-19
		Removal and installation.....	34-15
		Trailing arm bushing replacement <AWD> .....	34-21
		Trailing arm bushing replacement <FWD> .....	34-19
		Transaxle	
		Disassembly and assembly	
		Manual transaxle overhaul.....	22B-11
		Twin clutch sst overhaul.....	22D-7
		Continuously variable transaxle overhaul .....	23B-11
		Inspection .....	22B-24
		Transaxle (transmission) mounting	
		Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	32-8
		Removal and installation <2.0l engine turbo> .....	32-10
		Transaxle assembly	
		Removal and installation	
		Manual transaxle.....	22A-13
		Twin clutch-sportronic shift transmission (TC-SST) ...	22C-525
		CVT.....	23A-155
		Transaxle case	
		Disassembly and assembly .....	22B-45
		Transaxle case oil seal	
		Removal and installation.....	22C-538

## T

Taillight, position light, rear side marker light, license plate light and lighting monitor tone alarm.....	90-148
Technical information.....	13C-2
Test equipment	
Supplemental restraint system (SRS) .....	52B-402
Controller area network (CAN) .....	54C-6
Theft alarm	
Diagnosis	
Diagnostic function .....	54A-783
Standard flow of diagnostic troubleshooting .....	54A-783
General information .....	54A-780
Inspection	
Theft-alarm indicator check .....	54A-801
On-vehicle service	
Configuration function.....	54A-801
Removal and installation .....	54A-801
Special tools .....	54A-781
Symptom procedures	
Inspection procedure 1: the theft-alarm is not armed (the theft-alarm indicator does not illuminate). ....	54A-786
Inspection procedure 2: the interior alarm does not work normally while the theft-alarm is triggered.....	54A-792
Inspection procedure 3: horns do not normally sound while the theft-alarm system is triggered.....	54A-794
Inspection procedure 4: panic alarm does not work normally. ....	54A-799
Trouble symptom chart.....	54A-785
Theft-alarm system.....	90-444
Thermostat	
Inspection .....	14-38
Removal and installation <2.0l engine non-turbo, 2.4L engine> .....	14-34
Removal and installation <2.0l engine turbo> .....	14-36

## TSB Revision

Lubricant.....	42A-17
Symptom procedures	
Inspection procedure 1: water leak through windshield/rear window glass .....	42A-19
Window glass diagnosis	
Introduction to window glass diagnosis .....	42A-19
Window glass diagnostic troubleshooting strategy ....	42A-19
Windshield	
Removal and installation.....	42A-20
Windshield wiper and washer.....	90-280
Windshield wiper and washer	
Data list reference table.....	51-73
General information .....	51-19
Lighting control sensor	
Lighting control sensor (rain sensor) adaptation.....	51-87
Removal and installation.....	51-87
On-vehicle service	
Customization function .....	51-74
Delayed finishing wipe function inspection .....	51-74
Intelligent washing function inspection .....	51-74
Lighting control sensor (rain sensor) inspection .....	51-74
Windshield intermittent wiper interval check.....	51-74
Special tools .....	51-25
Symptom procedures	
General description concerning the windshield wiper and washer .....	51-27
Inspection procedure 1: the windshield wipers do not work at all. ....	51-29
Inspection procedure 10: the windshield washer does not work normally.....	51-65
Inspection procedure 11: the intelligent washing function does not work normally.....	51-69
Inspection procedure 12: delayed finishing wipe function does not work normally.....	51-71
Inspection procedure 2: the windshield wipers do not work when the wiper switch is at the "INT", "washer" or "mist" position. however, the wipers work at low speed when the switch is at the "lo" or "hi" position. ....	51-36
Inspection procedure 3: windshield wipers do not stop at the specified park position.....	51-39
Inspection procedure 4: windshield wipers do not work normally. ....	51-43
Inspection procedure 5: the windshield intermittent wiper interval cannot be adjusted by operating the windshield intermittent wiper interval control switch. ....	51-49
Inspection procedure 6: the windshield intermittent wiper interval is not changed according to the vehicle speed. ....	51-51
Inspection procedure 7: the rain sensitive auto wiper function does not work at all <vehicles with lighting control sensor>. ....	51-54
Inspection procedure 8: the rain sensitive auto wiper function works even though there is no rainfall <vehicles with lighting control sensor>.....	51-59
Inspection procedure 9: sometimes the rain sensitive auto wiper function works even though there is no rainfall < vehicles with lighting control sensor>. ....	51-62
Windshield washer	
Inspection .....	51-83
Removal and installation.....	51-82
Windshield wiper	
Inspection .....	51-80
Removal and installation.....	51-76
Windshield wiper and washer diagnosis	
Trouble symptom chart .....	51-26
Troubleshooting strategy .....	51-26