

11A ENGINE GENERAL <4G9>

CONTENTS

GENERAL INFORMATION

SERVICE SPECIFICATIONS

SEALANTS

SPECIAL TOOLS

ON-VEHICLE SERVICE

DRIVE BELT TENSION CHECK AND
ADJUSTMENT

VALVE CLEARANCE CHECK AND
ADJUSTMENT

IGNITION TIMING CHECK

IDLE SPEED CHECK

IDLE MIXTURE CHECK

COMPRESSION PRESSURE CHECK

MANIFOLD VACUUM CHECK

TIMING BELT TENSION ADJUSTMENT

CRANKSHAFT PULLEY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

CAMSHAFT AND CAMSHAFT OIL SEAL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

OIL PAN

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

CRANKSHAFT OIL SEAL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

CYLINDER HEAD GASKET

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

TIMING BELT

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

ENGINE ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS