

13A MULTIPPOINT FUEL INJECTION (MPI) <4G9>

CONTENTS

GENERAL

OUTLINE OF CHANGES

GENERAL INFORMATION

SERVICE SPECIFICATIONS

SEALANT

SPECIAL TOOLS

TROUBLESHOOTING

ON-VEHICLE SERVICE

THROTTLE BODY (THROTTLE VALVE AREA)
CLEANING

THROTTLE POSITION SENSOR ADJUSTMENT

FIXED SAS ADJUSTMENT

BASIC IDLE SPEED ADJUSTMENT

FUEL PRESSURE TEST

FUEL PUMP CONNECTOR DISCONNECTION
(HOW TO REDUCE THE FUEL PRESSURE)

FUEL PUMP OPERATION CHECK

COMPONENT LOCATION

ENGINE CONTROL RELAY CONTINUITY
CHECK

FUEL PUMP RELAY CONTINUITY CHECK

INTAKE AIR TEMPERATURE SENSOR CHECK

ENGINE COOLANT TEMPERATURE SENSOR
CHECK

THROTTLE POSITION SENSOR CHECK

OXYGEN SENSOR CHECK

INJECTOR CHECK

IDLE SPEED CONTROL (ISC) SERVO
(STEPPER MOTOR) CHECK

PURGE CONTROL SOLENOID VALVE CHECK

EGR CONTROL SOLENOID VALVE CHECK

INJECTOR

THROTTLE BODY

ENGINE-ECU <M/T>, ENGINE-A/T-ECU <A/T>