

17 ENGINE & EMISSION CONTROL

CONTENTS

AUTO-CRUISE CONTROL SYSTEM

GENERAL

GENERAL INFORMATION

SPECIAL TOOL

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING

DIAGNOSIS FUNCTION

INDICATION OF DIAGNOSIS CODE BY
AUTO-CRUISE CONTROL INDICATOR LAMP

METHOD OF ERASING THE DIAGNOSIS CODES

INSPECTION USING MUT-II DATA LIST

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

INSPECTION CHART FOR TROUBLE SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE
SYMPTOMS

DATA LIST REFERENCE TABLE

CHECK AT ECU TERMINALS

ON-VEHICLE SERVICE

AUTO-CRUISE CONTROL SWITCH CHECK

AUTO-CRUISE CONTROL COMPONENT CHECK

AUTO-CRUISE CONTROL

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: Front impact sensors, SRS-ECU, SRS warning lamp, air bag module, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).