

22B MANUAL TRANSMISSION OVERHAUL

CONTENTS

GENERAL INFORMATION

SPECIFICATIONS

TRANSMISSION MODEL TABLE – MODEL 2001

GEAR RATIO TABLE

SERVICE SPECIFICATIONS

SEALANTS AND ADHESIVES

LUBRICANTS

SNAP RINGS, SPACERS AND THRUST PLATE
ADJUSTMENT

TORQUE SPECIFICATIONS

SPECIAL TOOLS

ON-VEHICLE SERVICE

INPUT SHAFT <F5M42, W5M42>

OUTPUT SHAFT <F5M42, W5M42>

REVERSE IDLER GEAR <F5M42, W5M42>

SPEEDOMETER GEAR

SELECT LEVER

CONTROL HOUSING

CLUTCH HOUSING

TRANSMISSION CASE

DIFFERENTIAL
<F5M41, F5M42>

WARNING REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).