

23A AUTOMATIC TRANSMISSION

CONTENTS

GENERAL

SPECIFICATIONS

SERVICE SPECIFICATIONS

LUBRICANT

SPECIAL TOOLS

TROUBLESHOOTING <A/T>

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING

DIAGNOSIS FUNCTION

ROAD TEST

SHIFT PATTERN

INSPECTION CHART FOR DIAGNOSIS CODE

INSPECTION PROCEDURES FOR DIAGNOSIS
CODES

INSPECTION CHART FOR TROUBLE
SYMPTOMS

INSPECTION PROCEDURES FOR TROUBLE
SYMPTOMS

DATA LIST REFERENCE TABLE

ACTUATOR TEST JUDGMENT VALUE

INVECS-II CANCEL COMMAND

CHECK AT A/T-ECU TERMINALS

OSCILLOSCOPE INSPECTION PROCEDURE

ON-VEHICLE SERVICE

ESSENTIAL SERVICE

AUTOMATIC TRANSMISSION FLUID (ATF)
CHECK

AUTOMATIC TRANSMISSION FLUID (ATF)
REPLACEMENT

AUTOMATIC TRANSMISSION FLUID COOLER
LINE FLUSHING

THROTTLE POSITION SENSOR (TPS)
ADJUSTMENT

INHIBITOR SWITCH CONTINUITY CHECK

INHIBITOR SWITCH AND CONTROL CABLE
ADJUSTMENT

SELECTOR LEVER OPERATION CHECK
<VEHICLES WITH SPORT MODE>

WARNING REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring, and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

A/T CONTROL COMPONENT LOCATION
A/T CONTROL COMPONENT CHECKS
CRANK ANGLE SENSOR CHECK <MPI>
IGNITION COIL CHECK <CARBURETTOR>
THROTTLE POSITION SENSOR (TPS) CHECK
INHIBITOR SWITCH CHECK
STOP LAMP SWITCH CHECK
A/T FLUID TEMPERATURE SENSOR CHECK
A/T CONTROL RELAY CHECK
A/T CONTROL SOLENOID VALVE ASSEMBLY
CHECK
DUAL PRESSURE SWITCH CHECK
TORQUE CONVERTER STALL TEST
TORQUE CONVERTER STALL TEST
JUDGMENT RESULTS

HYDRAULIC PRESSURE TEST
HYDRAULIC CIRCUIT
LINE PRESSURE ADJUSTMENT
SELECTOR LEVER OPERATION CHECK
TRANSMISSION CONTROL CABLE
ADJUSTMENT

TRANSMISSION CONTROL

INSTALLATION SERVICE POINT
SELECTOR LEVER ASSEMBLY
SELECTOR LEVER ASSEMBLY <VEHICLES
WITH SPORT MODE>
SHIFT SWITCH ASSEMBLY CONTINUITY
CHECK

TRANSMISSION ASSEMBLY

ENGINE-A/T-ECU