

# 23B AUTOMATIC TRANSMISSION OVERHAUL

## CONTENTS

### GENERAL INFORMATION

#### SPECIFICATIONS

TRANSMISSION MODEL TABLE

GENERAL SPECIFICATIONS

SERVICE SPECIFICATIONS

VALVE BODY SPRING IDENTIFICATION TABLE

SNAP RING, SPACER, THRUST WASHER,  
THRUST RACE AND PRESSURE PLATE FOR  
ADJUSTMENT

TORQUE SPECIFICATIONS

SEALANTS

#### SPECIAL TOOLS

#### TRANSMISSION

#### OIL PUMP

#### UNDERDRIVE CLUTCH AND INPUT SHAFT

#### REVERSE AND OVERDRIVE CLUTCH

OVERDRIVE PLANETARY CARRIER  
<F4A41, F4A42 without ONE-WAY CLUTCH>

PLANETARY CARRIER ASSEMBLY  
<F4A42 with ONE-WAY CLUTCH, F4A51>

#### LOW-REVERSE BRAKE

#### SECOND BRAKE

#### OUTPUT SHAFT

TRANSFER DRIVE GEAR  
<F4A41 up to Dec 1997, F4A42 up to Dec  
1997>

#### DIFFERENTIAL

#### VALVE BODY

#### SPEEDOMETER GEAR

#### DRIVE SHAFT OIL SEAL

#### WARNING REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).