

# 37A STEERING

## CONTENTS

### GENERAL INFORMATION

### SERVICE SPECIFICATIONS

### LUBRICANTS

### SEALANT

### SPECIAL TOOLS

### ON-VEHICLE SERVICE

STEERING WHEEL FREE PLAY CHECK

STEERING ANGLE CHECK

TIE ROD END BALL JOINT STARTING  
TORQUE CHECK

STATIONARY STEERING EFFORT CHECK

CHECKING STEERING WHEEL RETURN TO  
CENTRE

DRIVE BELT TENSION CHECK

POWER STEERING FLUID LEVEL CHECK

POWER STEERING FLUID REPLACEMENT

POWER STEERING SYSTEM BLEEDING

OIL PUMP PRESSURE TEST

POWER STEERING OIL PRESSURE SWITCH  
CHECK

BALL JOINT DUST COVER CHECK

### STEERING WHEEL AND SHAFT

### POWER STEERING GEAR BOX AND LINKAGE

### POWER STEERING OIL PUMP

### POWER STEERING OIL HOSES

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).