

## GENERAL


### OUTLINE OF CHANGE

Due to the following changes, service procedures have been established. <Vehicles with side and curtain air bag module>

- Due to the adoption of the curtain air bag, the front pillar trim, centre pillar trim and the rear pillar trim have been changed.
- Due to the adoption of the side air bag, the front seat has been changed.

## TRIMS

### REMOVAL AND INSTALLATION

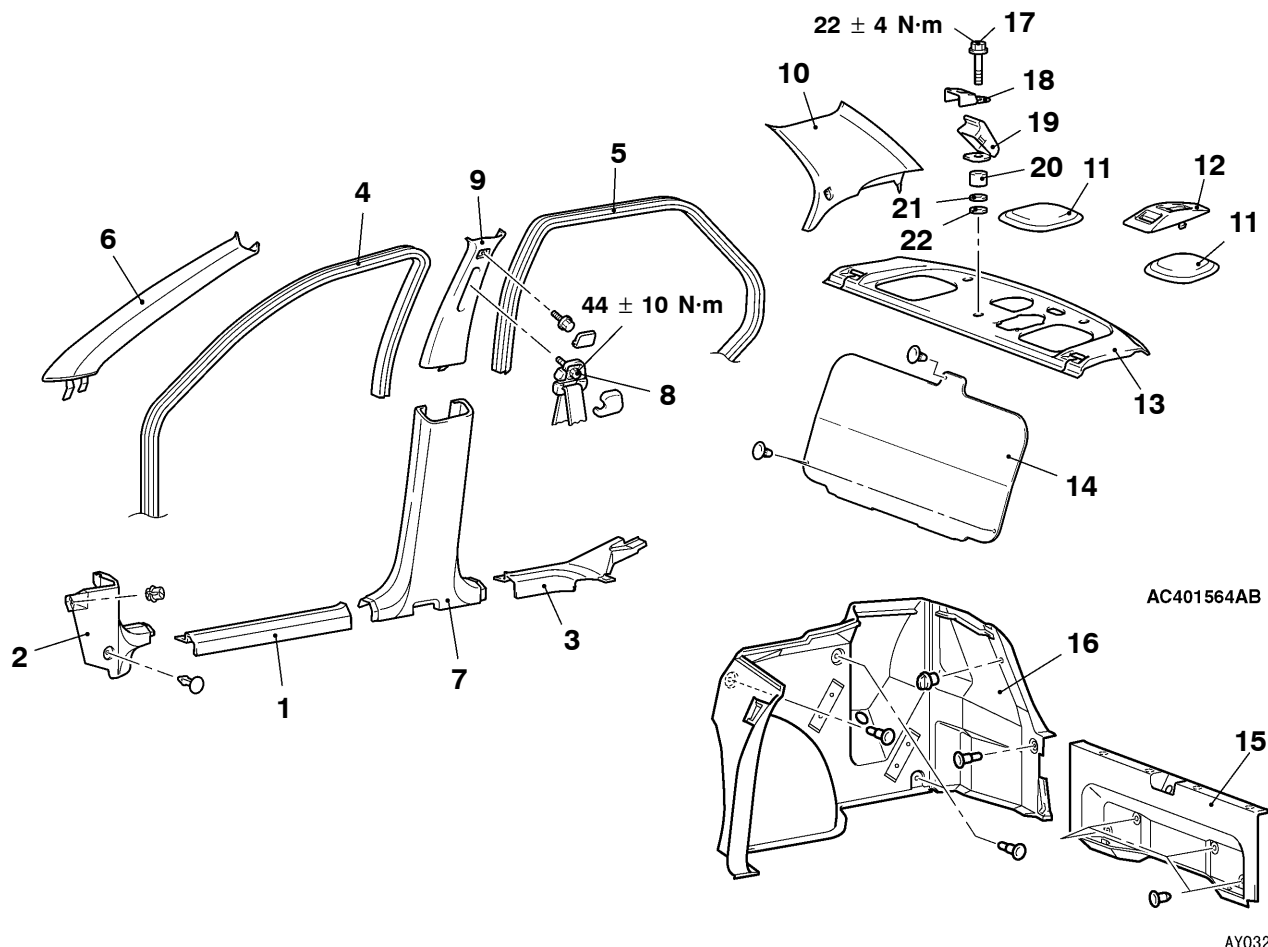

1. Front scuff plate
2. Cowl side trim
3. Rear scuff plate
4. Front door opening trim
5. Rear door opening trim
6. Front pillar trim
7. Centre pillar trim lower
8. Front seat belt connection
9. Centre pillar trim upper
10. Rear pillar trim
11. Speaker garnish
12. Retractor cover

13. Rear shelf trim
14. Partition board
15. Rear end trim
16. Trunk side trim

#### Upper tether anchor removal steps


17. Washer assembled bolt
18. Child restraint fitting
19. Cover
20. Spacer
21. Plain washer
22. Fiber washer

# CLIP AND CLAW POSITIONS

Main  
Index

Group  
Index


Group  
TOC

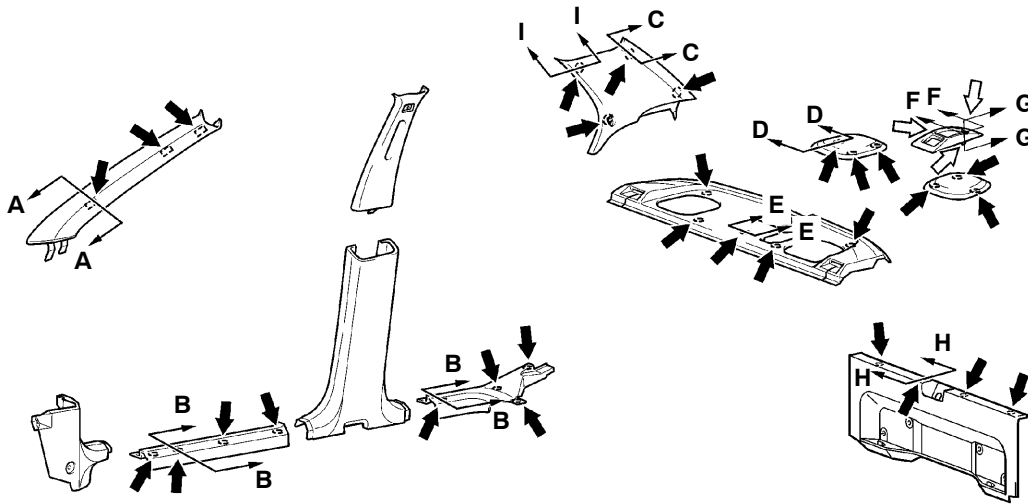


## NOTE

- (1) : Clip positions  
(2) : Claw positions


### Section A - A

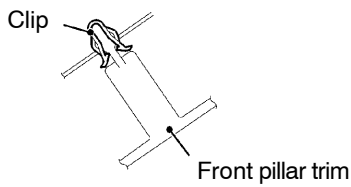


### Section B - B

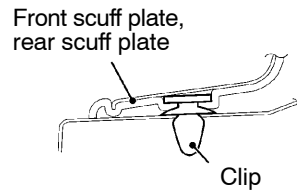


### Section C - C

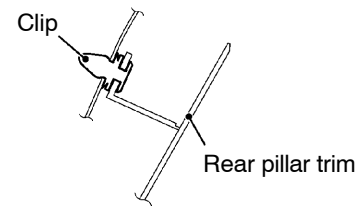


### Section D - D

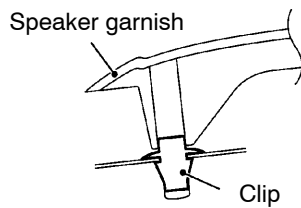


### Section E - E

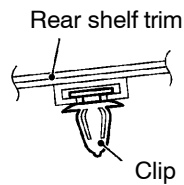


### Section F - F

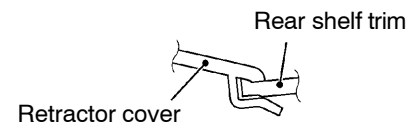


### Section G - G

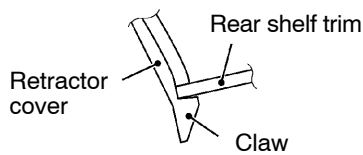

### Section H - H

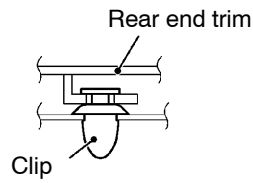

### Section I - I

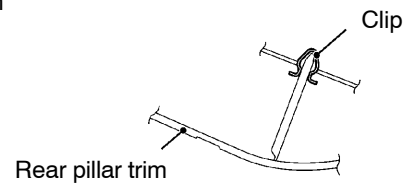

AAC411573

# SEAT

## FRONT SEAT

### REMOVAL AND INSTALLATION

The following caution has been added.


#### Caution

Refer to GROUP 52B – [SRS Service Precautions](#) and [Air Bag Modules](#) and Clock Spring\* before removing the front seat assembly of the vehicles with side air bag.

#### NOTE

\*: Refer to 2003 LANCER Workshop Manual (Pub. No. PWME0021-4).

### DISASSEMBLY AND REASSEMBLY

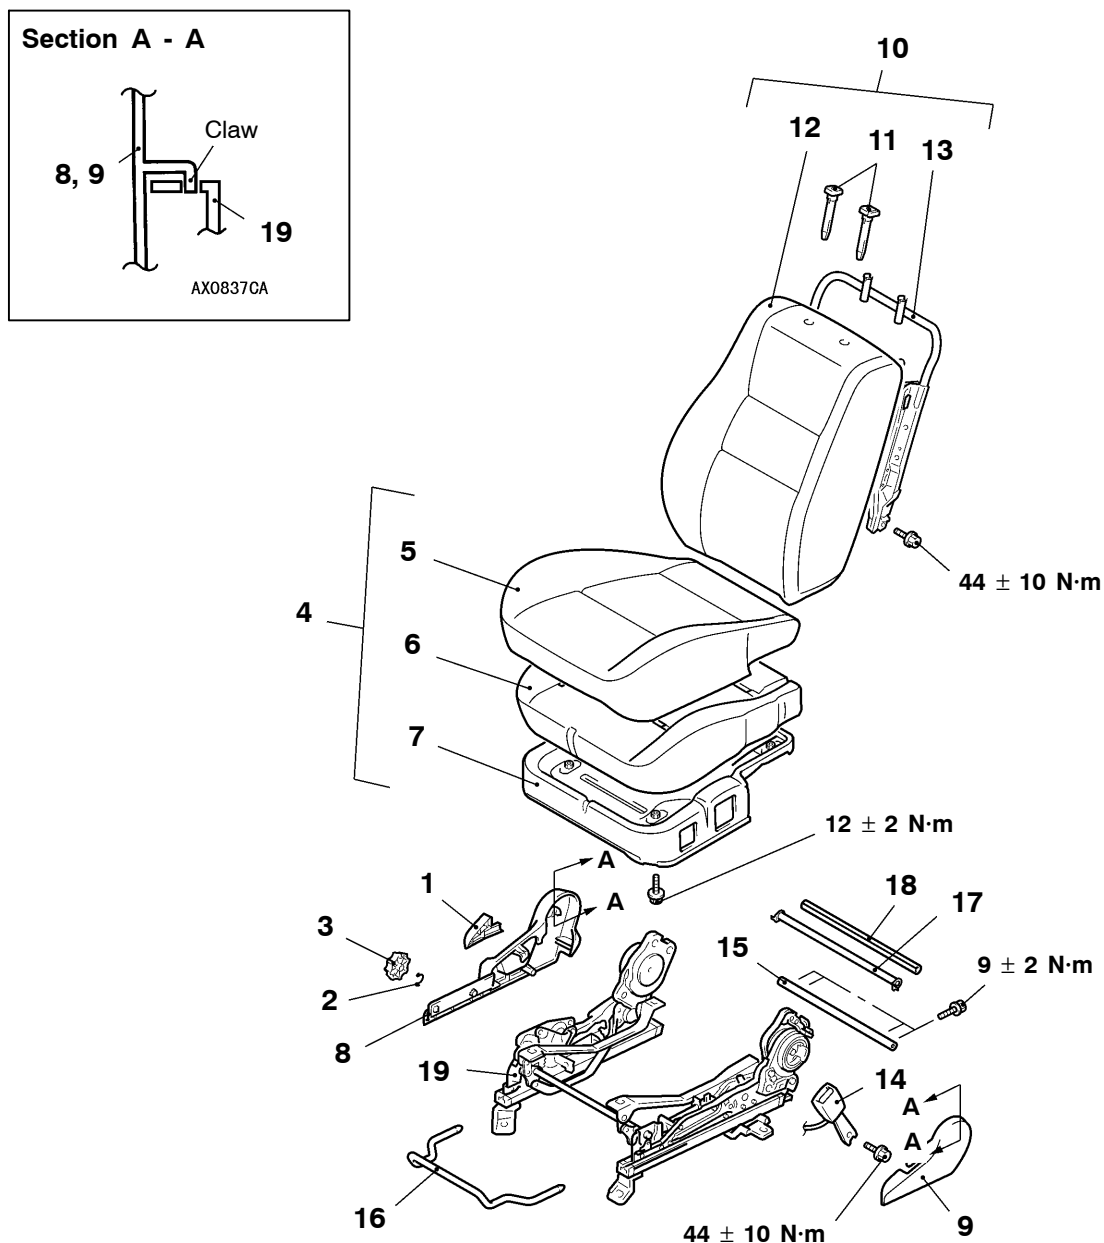

### Disassembly steps

1. Reclining knob
2. Pin <Vehicles with height adjuster>
3. Height adjuster knob <Vehicles with height adjuster>
4. Front seat cushion assembly
5. Front seat cushion cover
6. Front seat cushion pad
7. Front seat cushion frame
8. Reclining cover
9. Shield cover



10. Front seatback assembly
11. Headrest guide
12. Front seatback cover and pad
13. Front seatback frame
14. Inner seat belt
15. Shaft
16. Seat slide handle
17. Shaft
18. Shaft protector
19. Seat slide adjuster

## DISASSEMBLY SERVICE POINT

### ◀A▶ HEADREST GUIDE REMOVAL

