

52B

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

GENERAL	2	INDIVIDUAL COMPONENT SERVICE	62
SRS SERVICE PRECAUTIONS	2	WARNING/CAUTION LABELS	62
SPECIAL TOOLS	5	SRS CONTROL UNIT (SRS-ECU)	63
TEST EQUIPMENT	6	SIDE CURTAIN AIRBAG MODULE	64
TROUBLESHOOTING	6	SIDE IMPACT SENSOR	69
SRS MAINTENANCE	59	AIRBAG MODULE DISPOSAL PROCEDURES	72
POST-COLLISION DIAGNOSIS	60		

CAUTION

- Carefully read and observe the information in the SRS SERVICE PRECAUTIONS (P.52B-2) prior to any service.
- For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting (P.52B-6) section.
- If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the INDIVIDUAL COMPONENT SERVICE section (P.52B-62) for the components involved.
- If you have any questions about the SRS, please contact your local distributor.