 
 
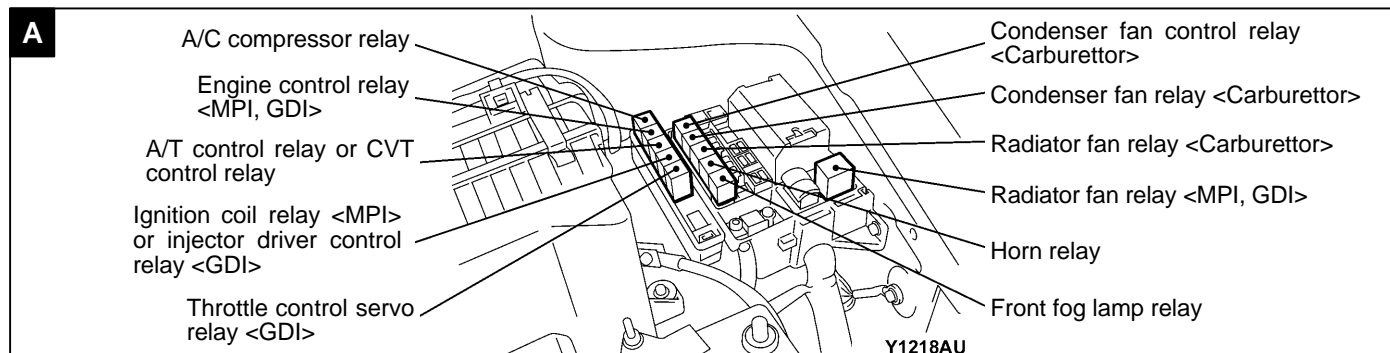 
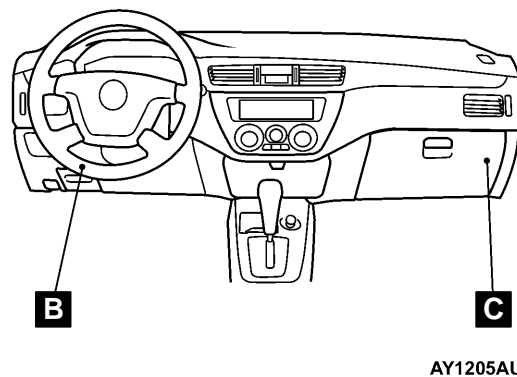 


## RELAY

 
Name	Symbol	Name	Symbol
ABS warning lamp relay	B	Fuel pump relay (2) <MPI, GDI>	B
A/C compressor relay	A	Horn relay	A
A/T control relay	A	Ignition coil relay <MPI>	A
Blower relay	B	Ignition timer relay <Carburettor>	C
Condenser fan control relay <Carburettor>	A	Injector driver control relay <GDI>	A
Condenser fan relay <Carburettor>	A	Power window relay	B
CVT control relay	A	Radiator fan relay <Carburettor>	A
Defogger relay	B	Radiator fan relay <MPI, GDI>	A
Engine control relay <MPI, GDI>	A	Rear fog lamp relay	B
Front fog lamp relay	A	Throttle control servo relay <GDI>	A
Fuel pump relay (1) <MPI, GDI>	B		

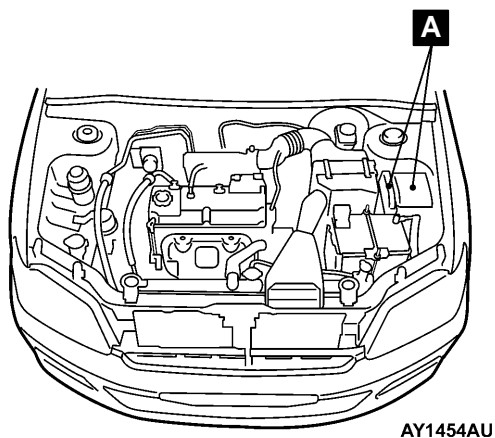


## B <LHD>

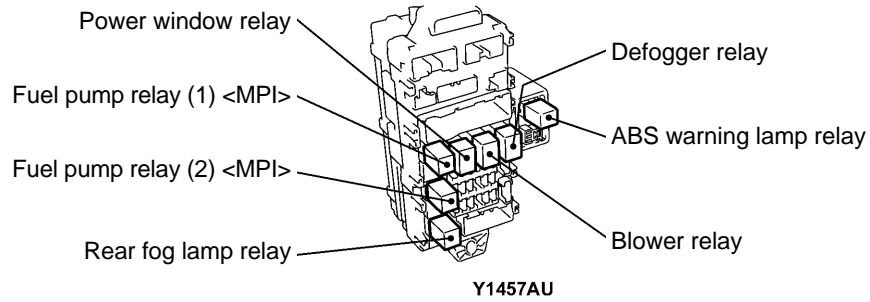


## B <RHD>

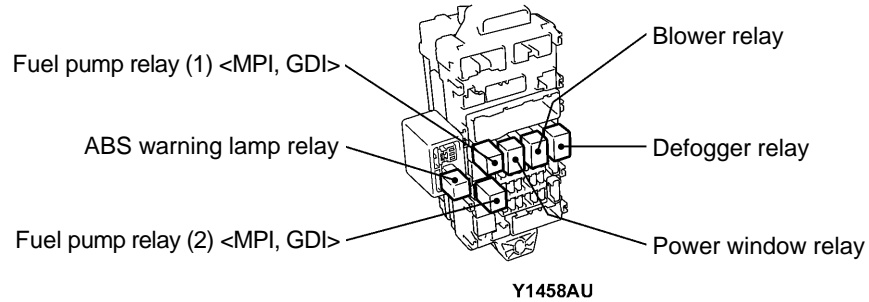

## C <LHD>

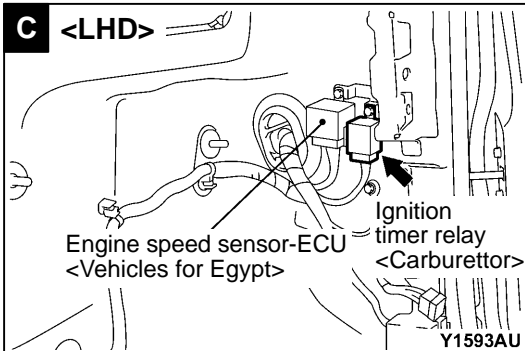 

## C <RHD>

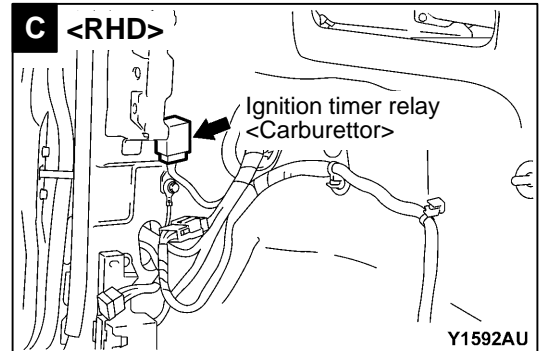 

# ECU

 
MAIN

Group  
54




54C


Name	Symbol	Name	Symbol
ABS-ECU	A	Heater control unit <without A/C>	F
A/C-ECU	F	Immobilizer-ECU <Vehicles for GCC>	H
A/T-ECU <Carburettor-A/T>	J	Injector driver	C
Column switch <incorporating column-ECU>	E	Power window main switch <incorporating ECU>	M
Engine-A/T-ECU <MPI-A/T>	J	Power window motor (Front) <incorporating ECU>	O
Engine-CVT-ECU <MPI-CVT, GDI>	J	Power window motor (Rear) <incorporating ECU>	P
Engine-ECU <MPI-M/T>	J	SRS-ECU	I
Engine speed sensor-ECU <Vehicles for Egypt>	K	Sunroof motor assembly <incorporating ECU>	N
ETACS-ECU	G	Throttle valve controller <GDI>	L
Fan controller <MPI, GDI>	D		
Front-ECU	B		

&lt;LHD&gt;

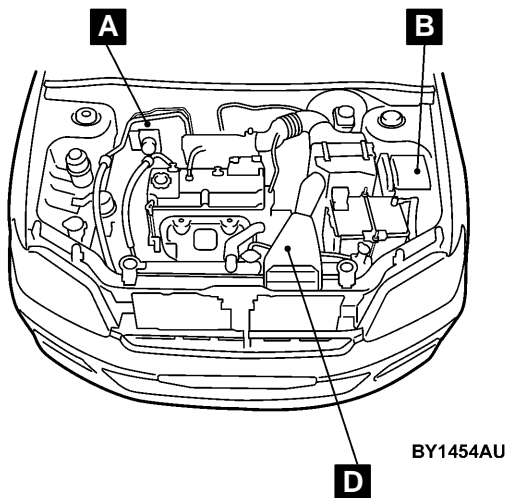







&lt;RHD&gt;

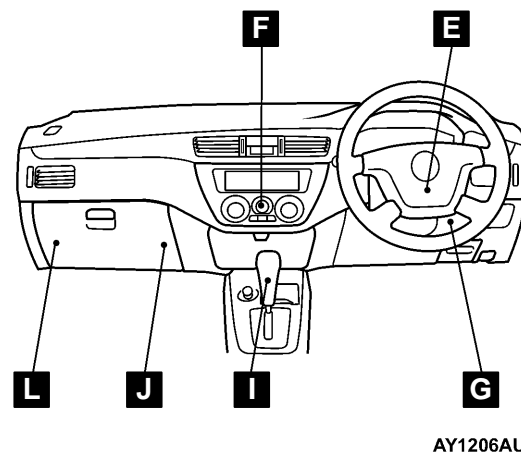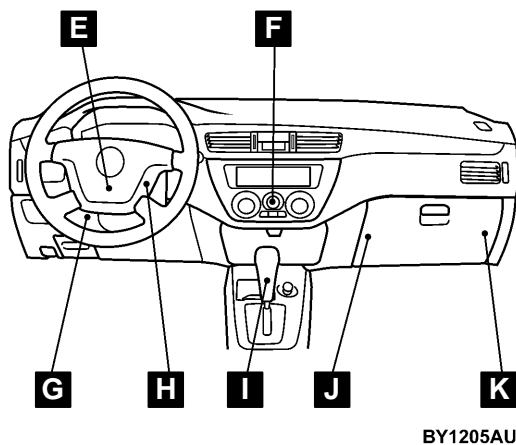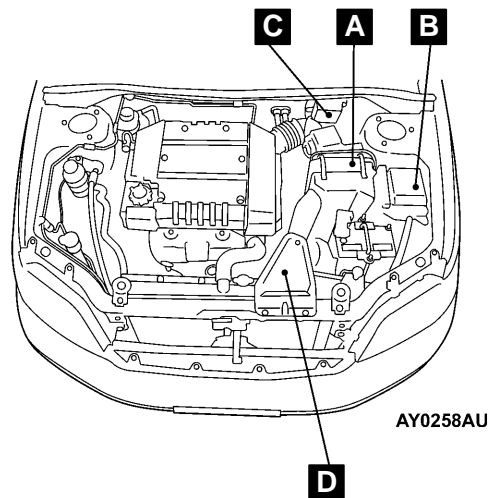   

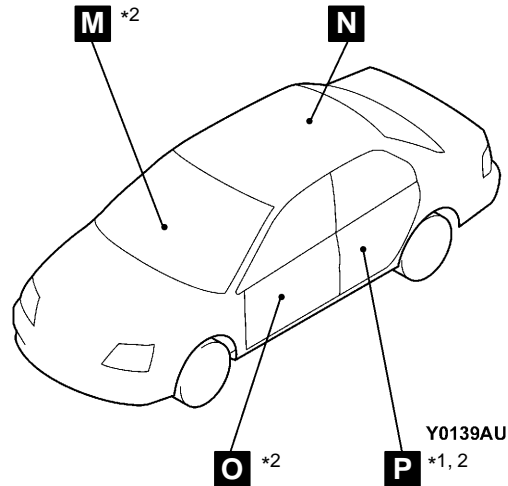 

## NOTE

      - \*1: also equipped at the right side.
- \*2: vehicles for Hong Kong.





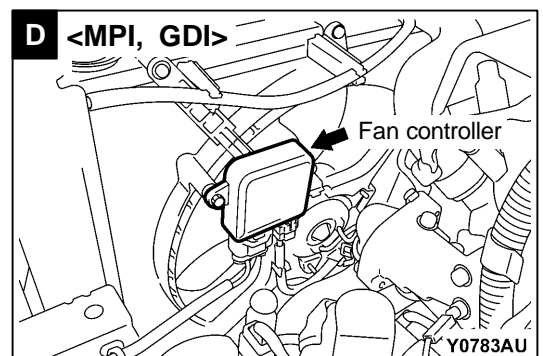
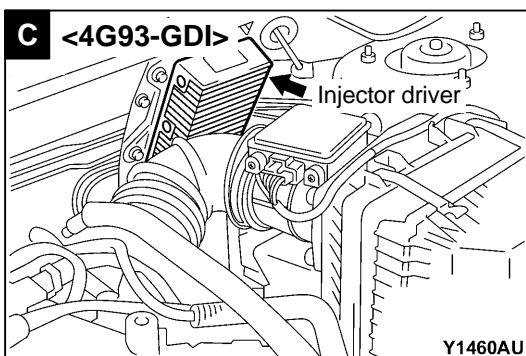
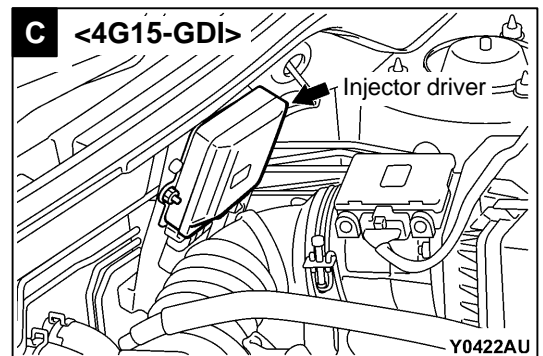
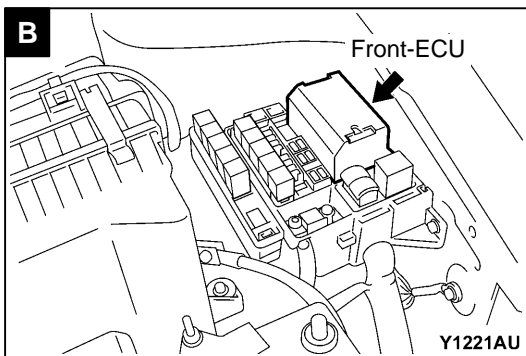
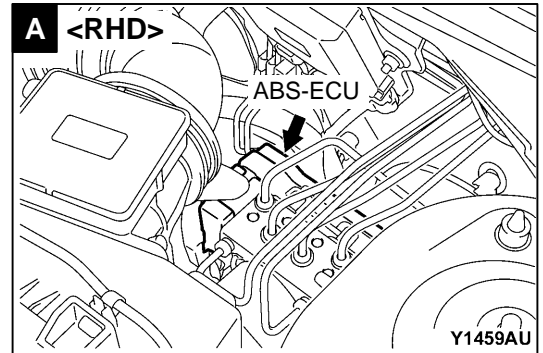
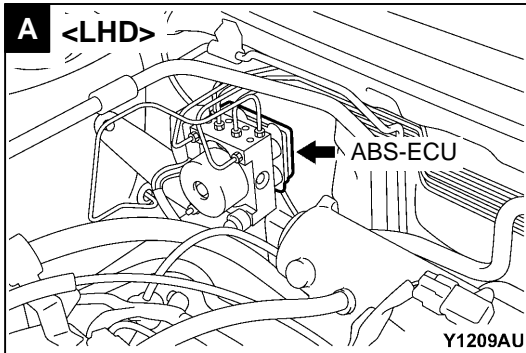


# 54C SINGLE PART INSTALLATION POSITION BASE – ECU

MAIN

Group  
54

          54C

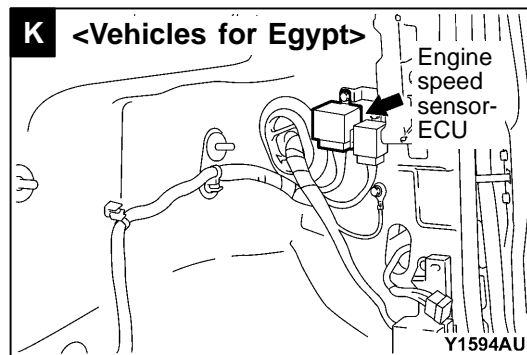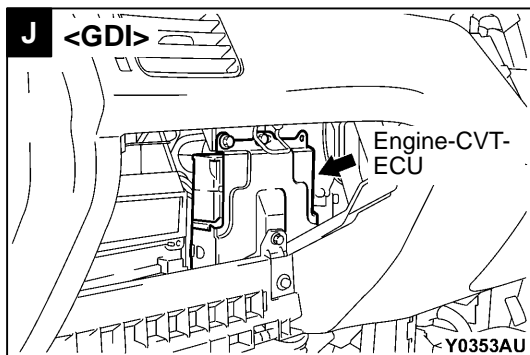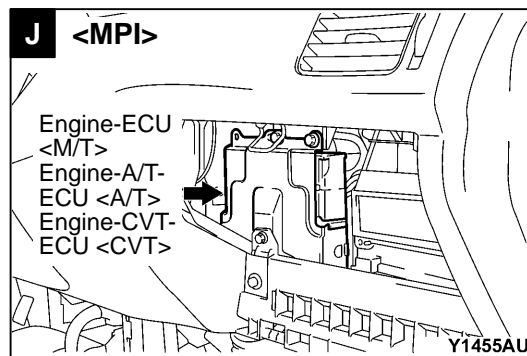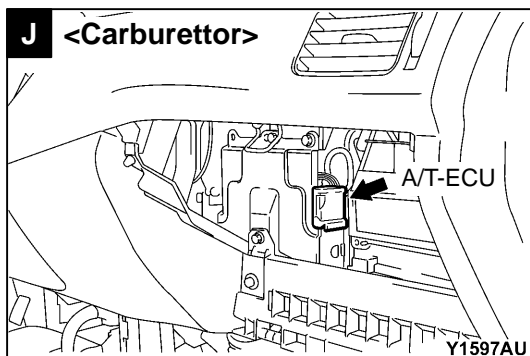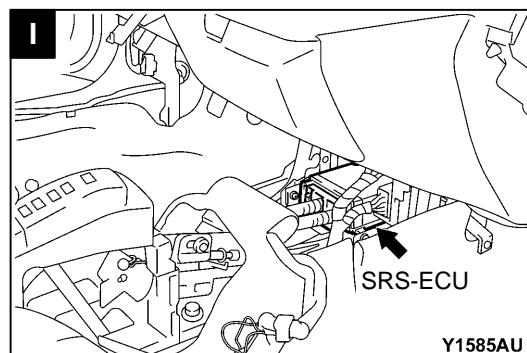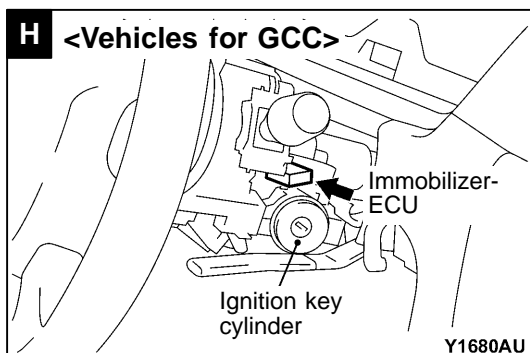
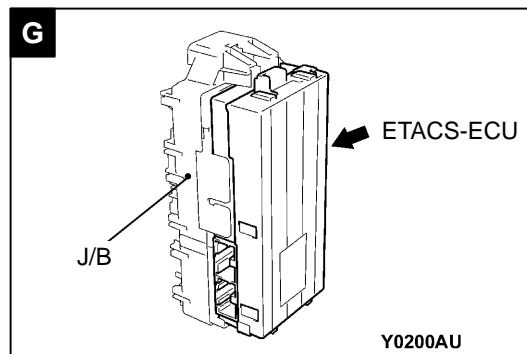
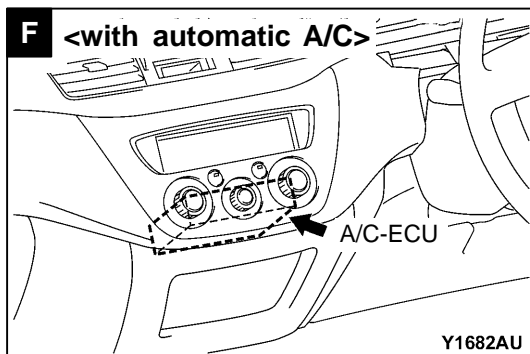
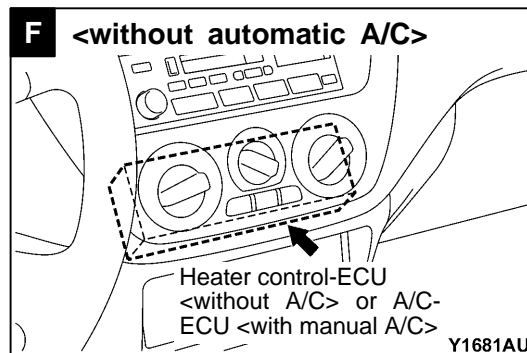
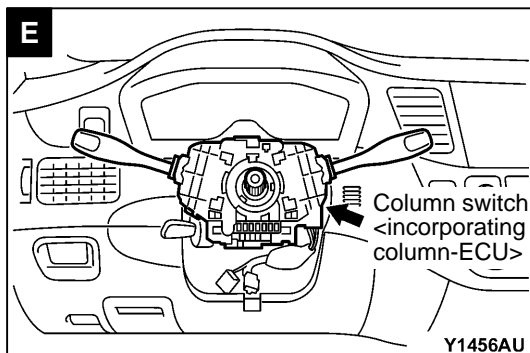


## 54C SINGLE PART INSTALLATION POSITION BASE – ECU

MAIN

Group  
54

     54C

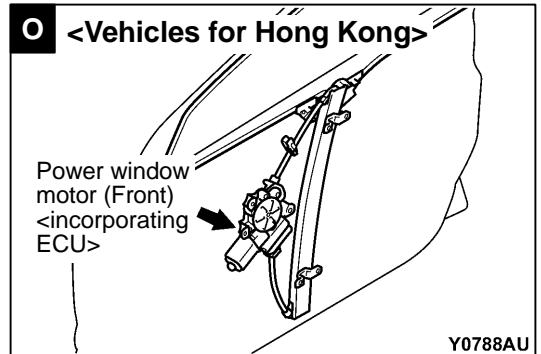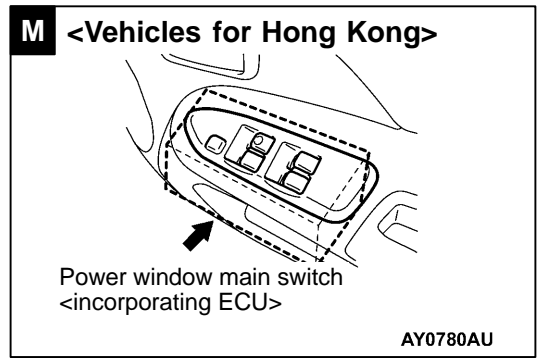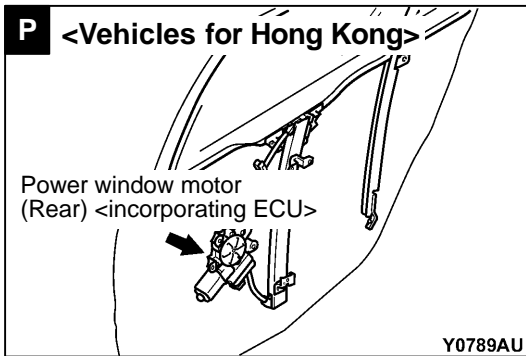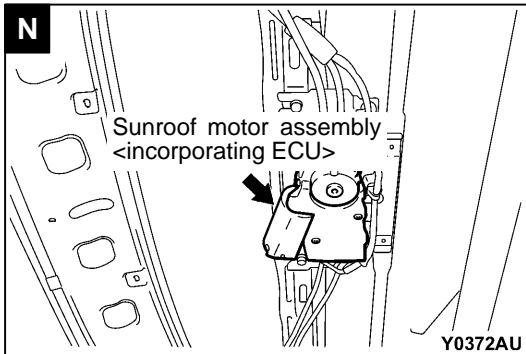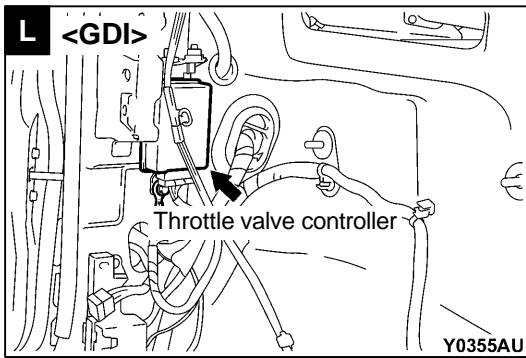



# SENSOR

MAIN


Group  
54

54C

   
Name	Symbol	Name	Symbol
Air flow sensor	B	Output shaft speed sensor <A/T>	E
Air thermo sensor <Automatic A/C, where fitted>	L	Oxygen sensor (Front) <MPI>	O
Camshaft position sensor <MPI>	F	Oxygen sensor (Rear) <MPI>	N
Crank angle sensor <MPI>	H	Photo sensor <where fitted>	J
Detonation Sensor <MPI>	A	Throttle position sensor <MPI>	C
Engine coolant temperature sensor <MPI>	G	Vacuum sensor <MPI>	C
Heater water temperature sensor <Automatic A/C, where fitted>	L	Vehicle speed sensor <M/T>	D
Input shaft speed sensor <A/T>	E	Wheel speed sensor (Front) <ABS>	P
Inside air temperature sensor <Automatic A/C, where fitted>	K	Wheel speed sensor (Rear) <ABS>	M

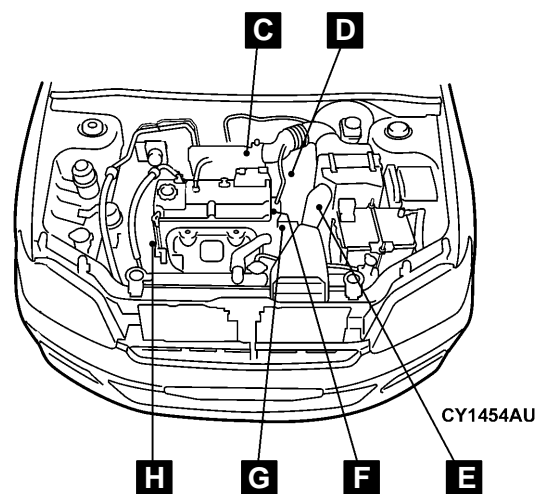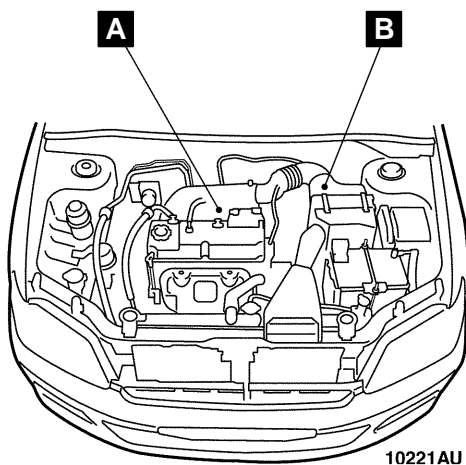



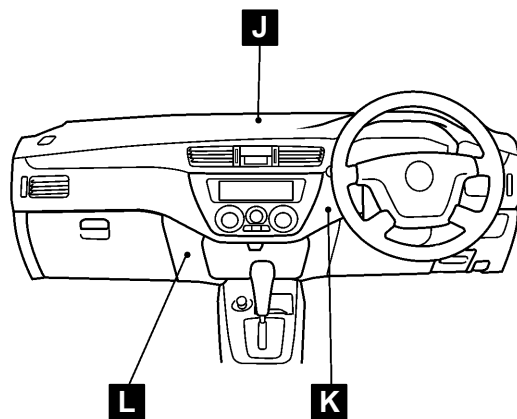


BY1206AU

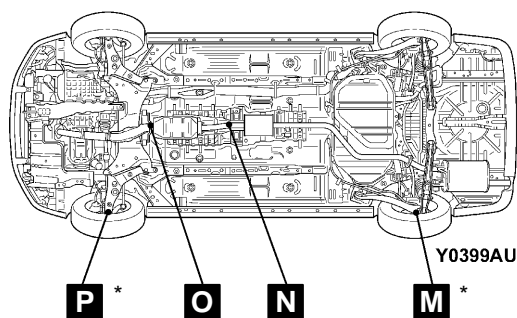 


Y0399AU

## NOTE

 
\*: also equipped at the right side.

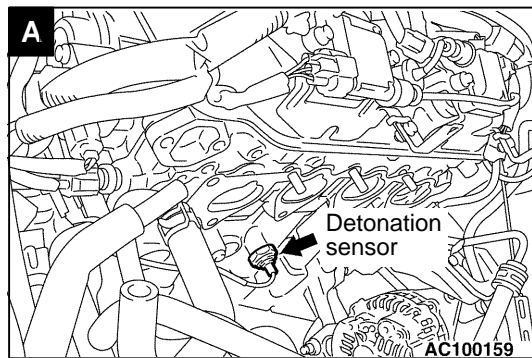


AC100159

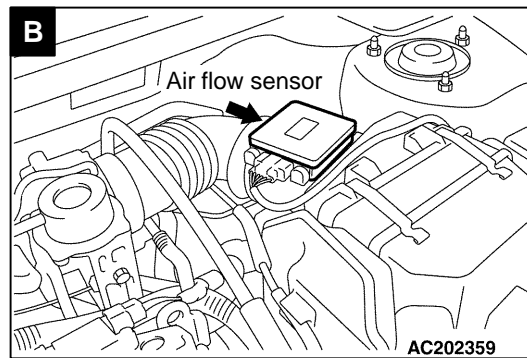 

AC202359

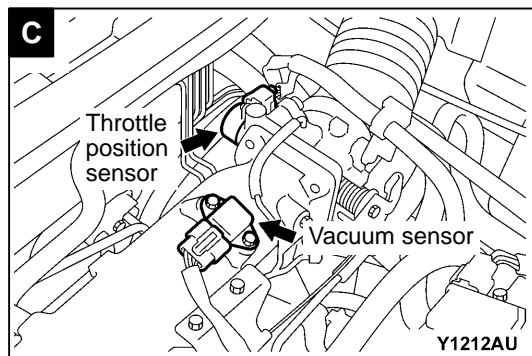 

Y1212AU

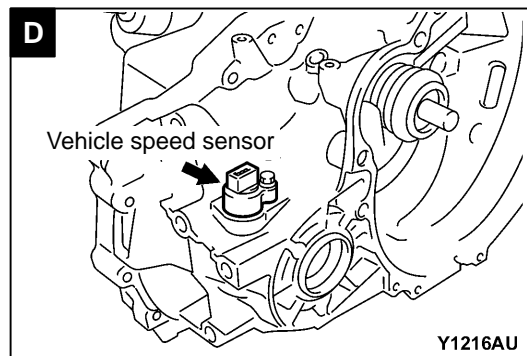 

Y1216AU














# 54C SINGLE PART INSTALLATION POSITION BASE – Sensor

           MAIN

Group  
54

54C

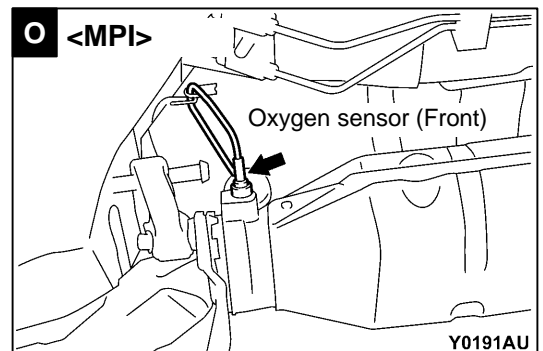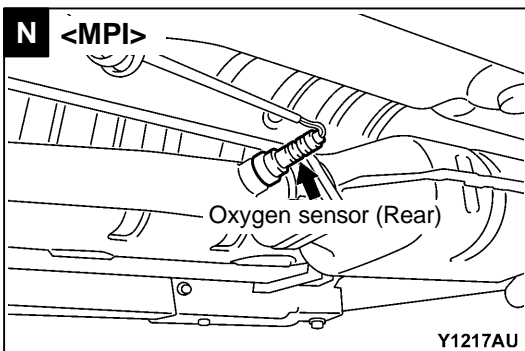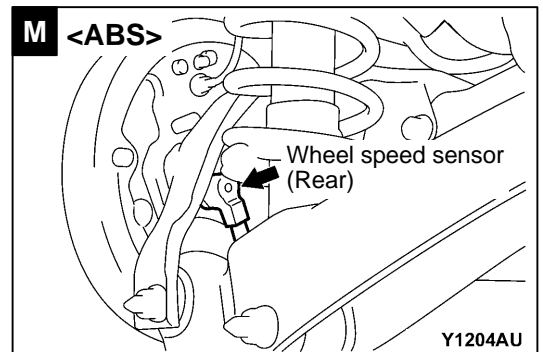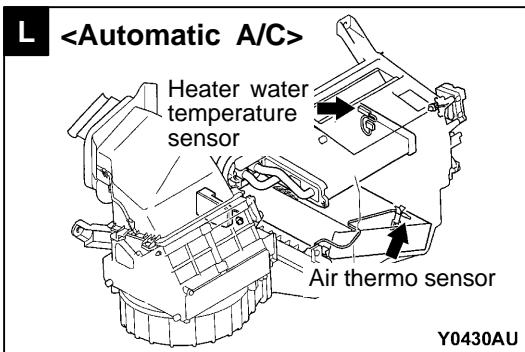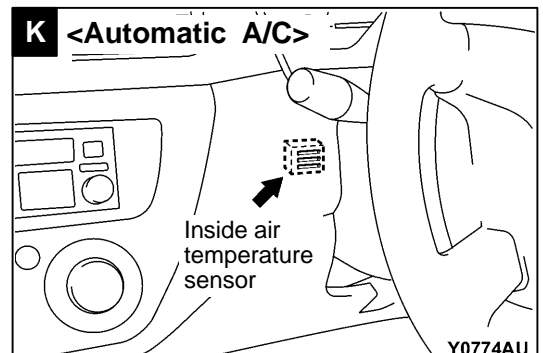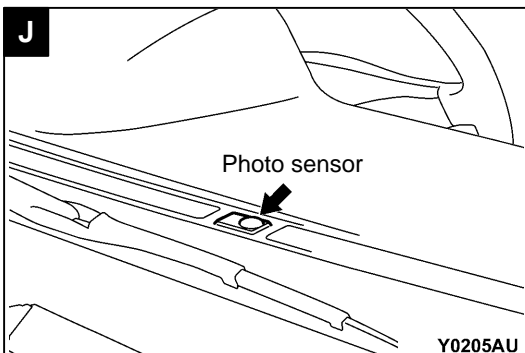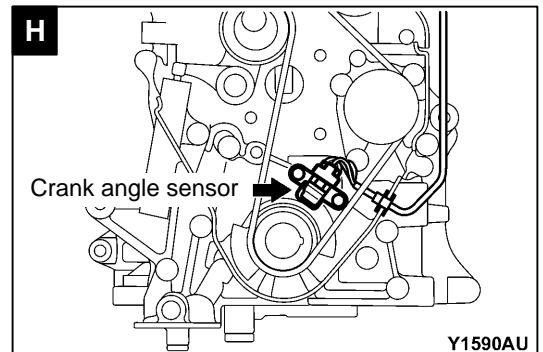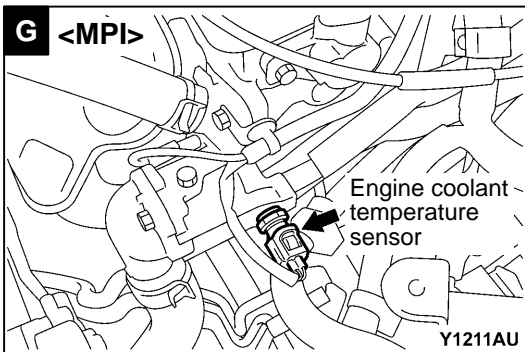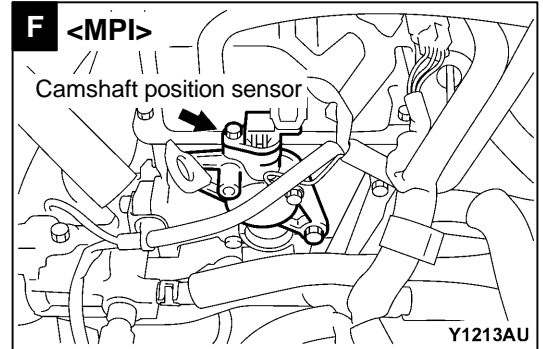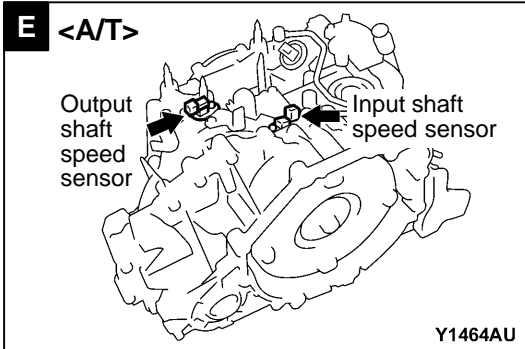

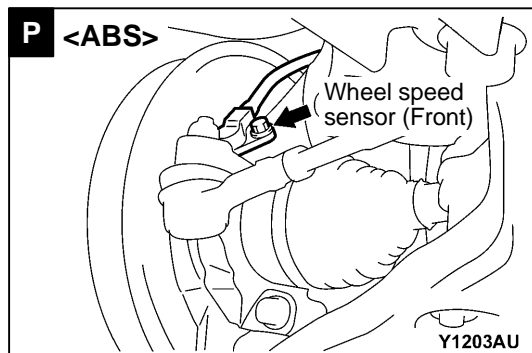

SOLENOID VALVE


MAIN

Group  
54


54C

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	G	Idle up solenoid valve <Carburettor>	F
CVT control solenoid valve assembly	G	Outer vent valve <Carburettor-A/C>	D
EGR solenoid valve <MPI>	C	Purge control solenoid valve <MPI-except for GCC>	C
Fuel shut-off solenoid valve <Carburettor>	B		
Hydraulic unit <incorporating solenoid valve>	A	Purge control solenoid valve <GDI>	E


 
<CARBURETTOR>

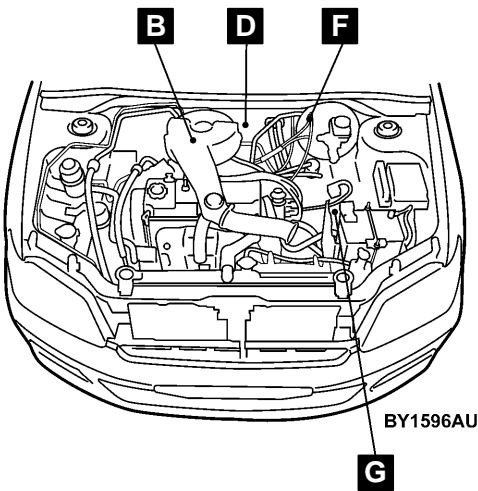

<MPI>

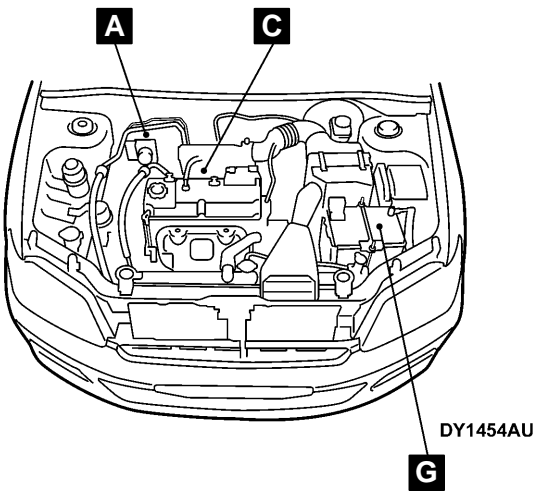 

<GDI>








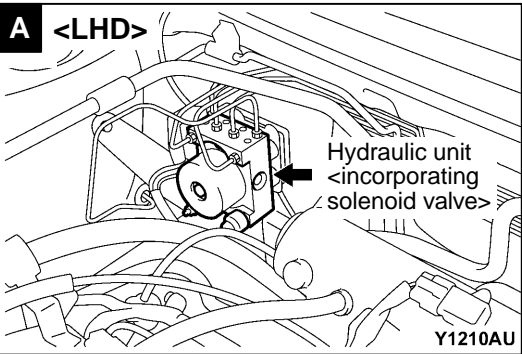 
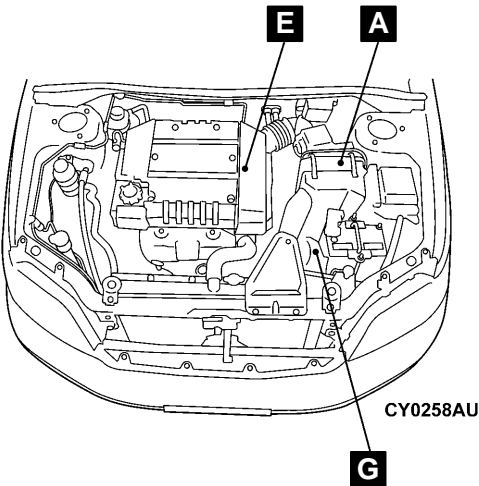 


# 54C SINGLE PART INSTALLATION POSITION BASE – Solenoid Valve



MAIN

Group  
54

         54C

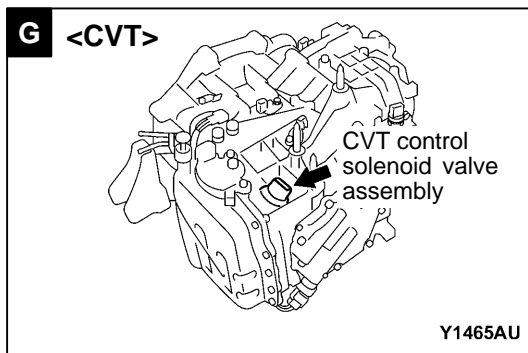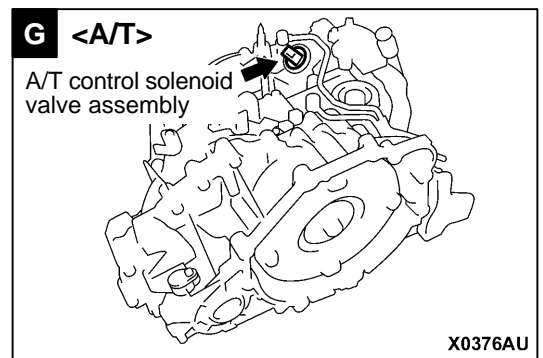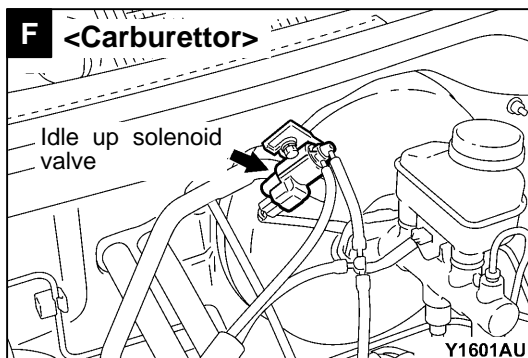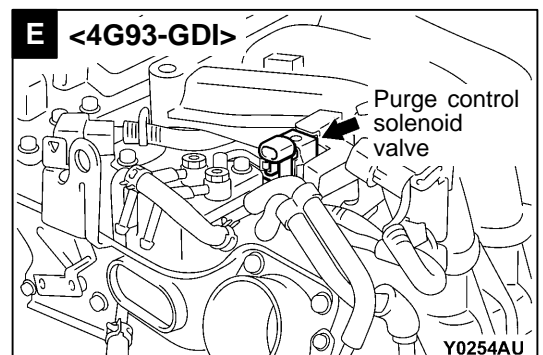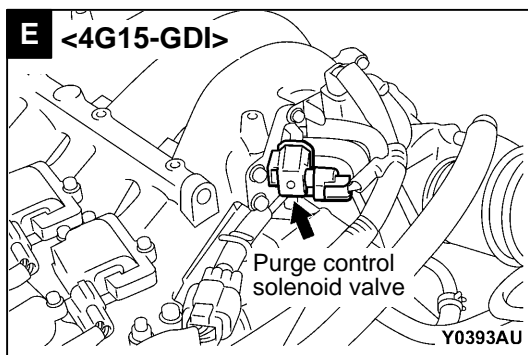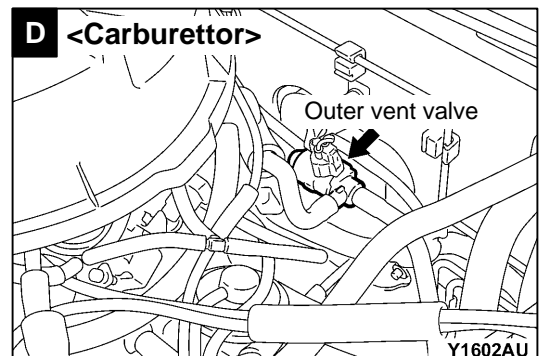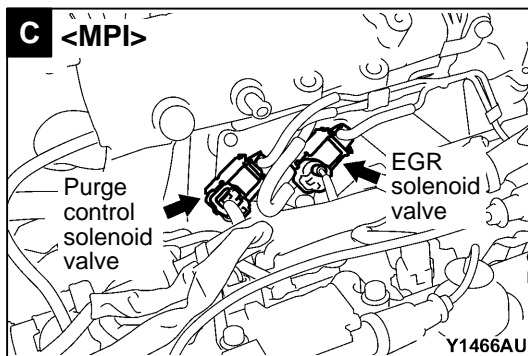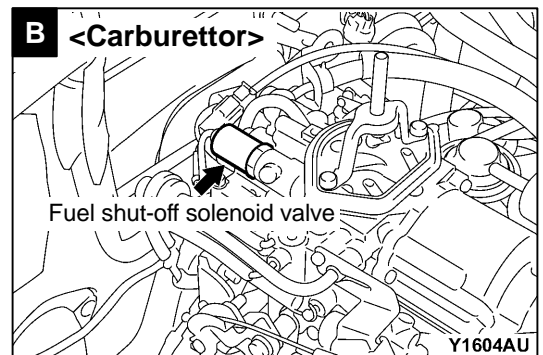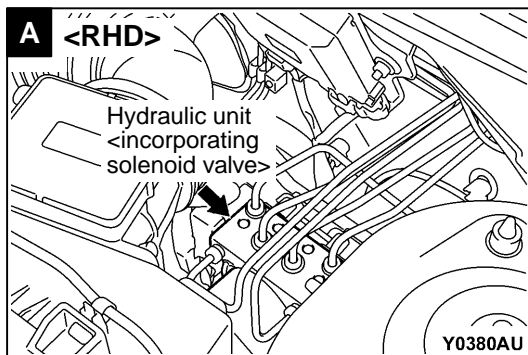


## DIODE

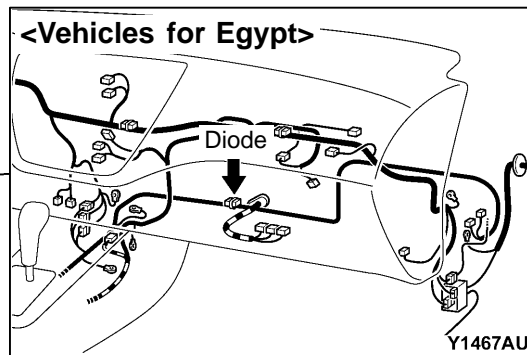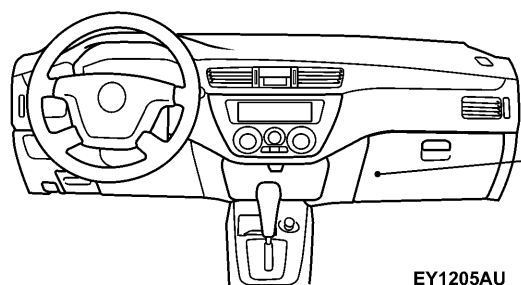  




## INSPECTION CONNECTOR AND SPARE CONNECTOR








Name	Symbol	Name	Symbol
Diagnosis connector	F	Engine speed detection connector <Carburettor-M/T (without A/C)>	A
Engine speed detection connector <MPI, GDI, carburettor-A/T and M/T (with A/C)>	B	Spare connector (for front fog lamp)	C, E
		Spare connector (for automatic lamp)	D, G

 &lt;LHD&gt;

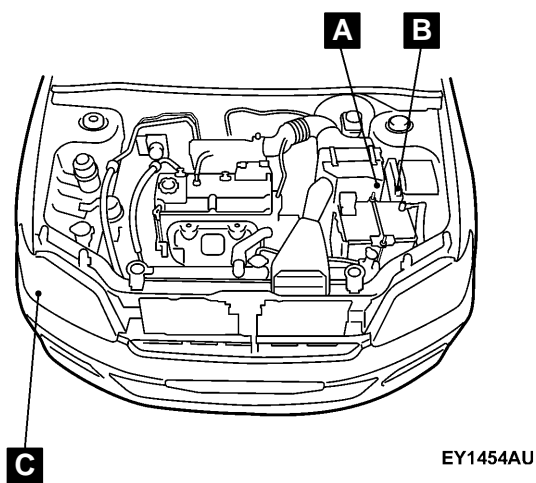

&lt;RHD&gt;

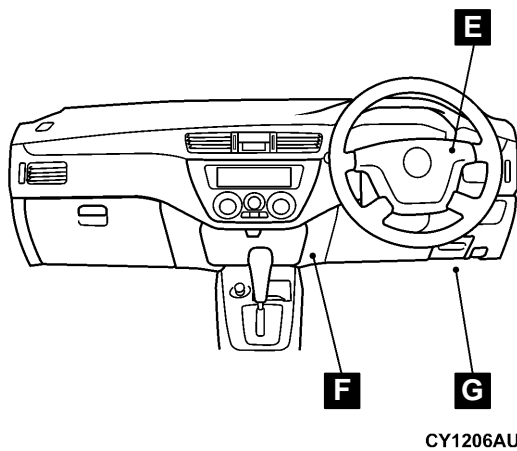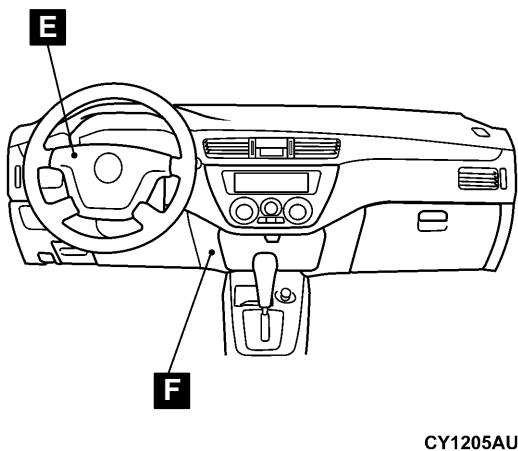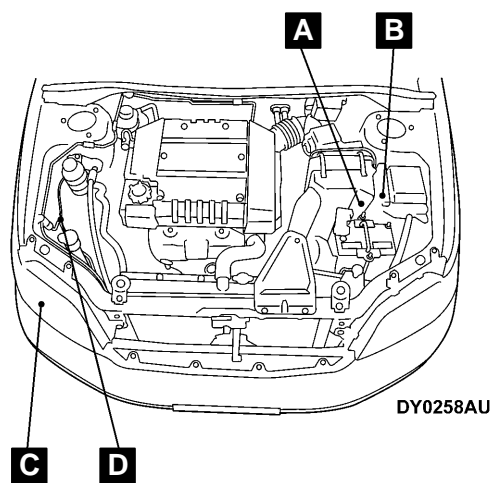   

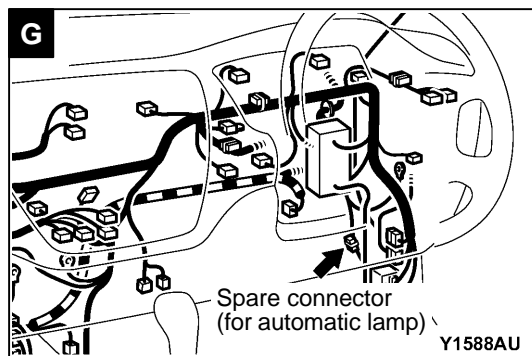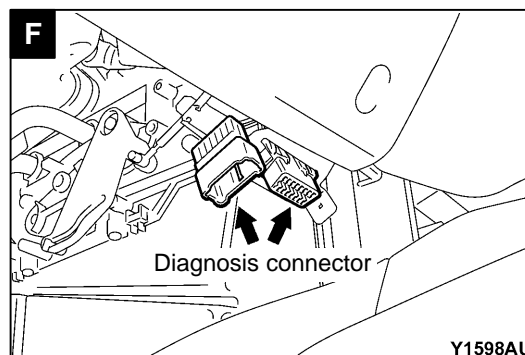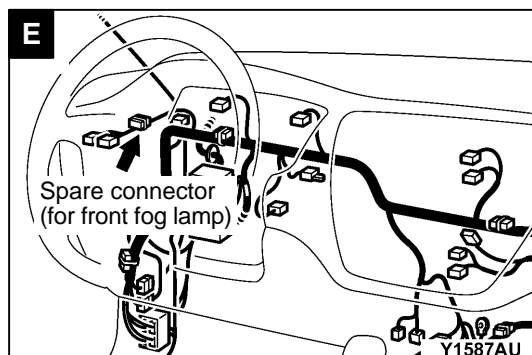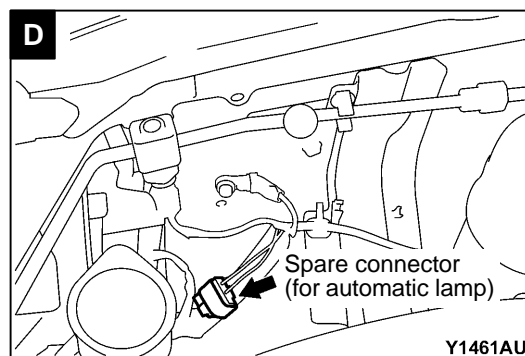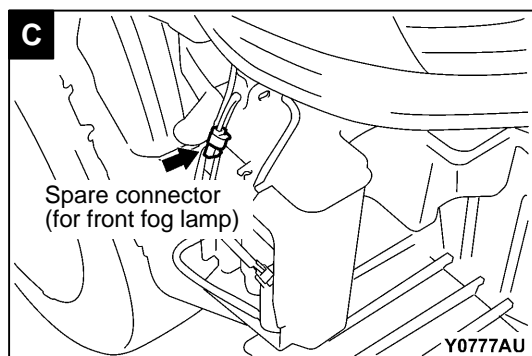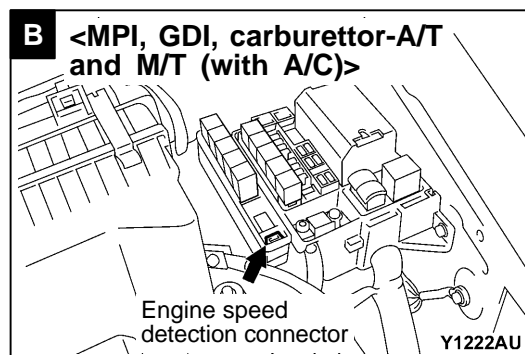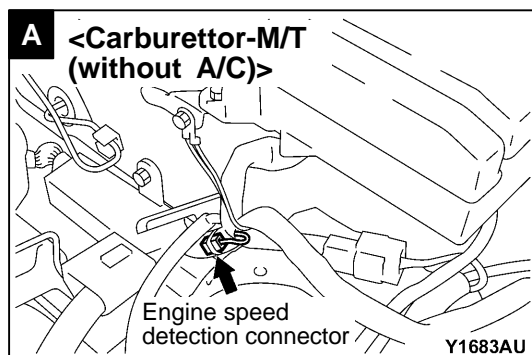       




## FUSIBLE LINK AND FUSE

MAIN


Group  
54

54C

 
Name	Symbol	Name	Symbol
Dedicated fuses (No. 1 – 19)	B	Fusible links (No. 6)	A
Dedicated fuse (No. 23)	C	Multi-purpose fuses	C
Fusible links (No. 1 – 5)	B		

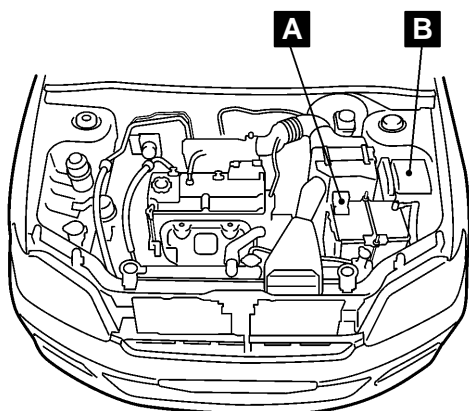


FY1454AU

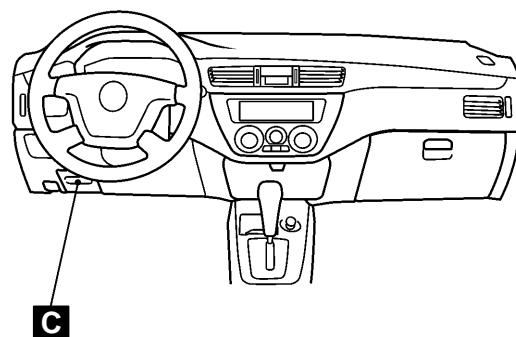 


DY1205AU

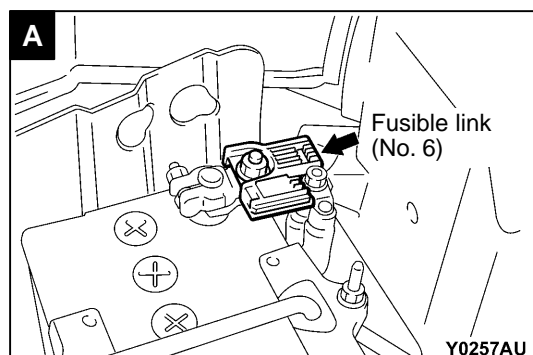 


Y0257AU

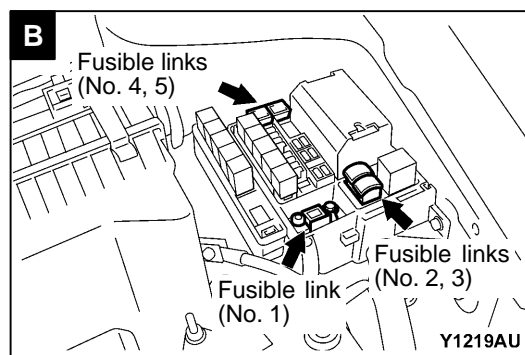 


Y1219AU

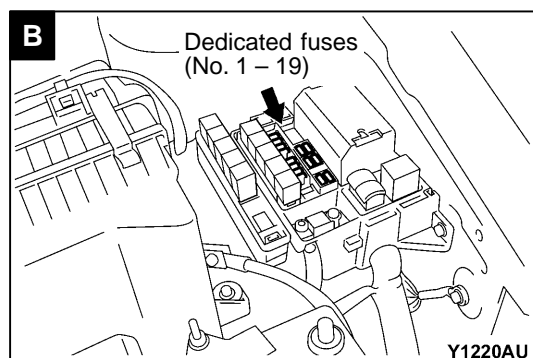 

Y1220AU

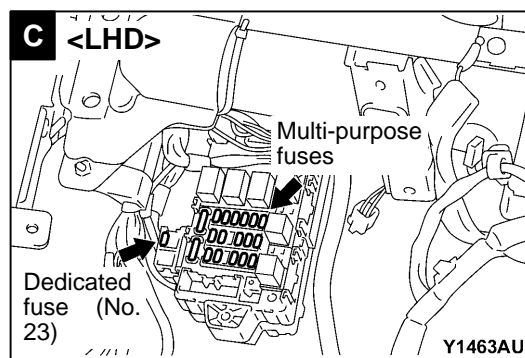 

Y1463AU

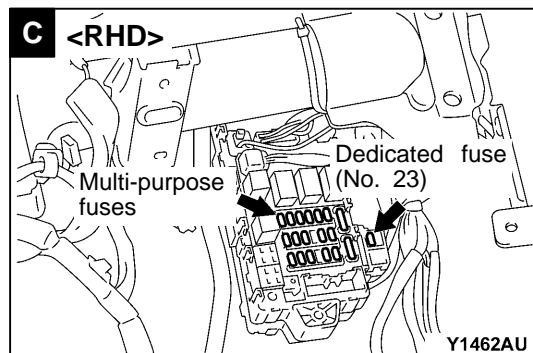 

Y1462AU




## EARTH CABLE

 MAIN

Group  
54


54C

<CARBURETTOR>

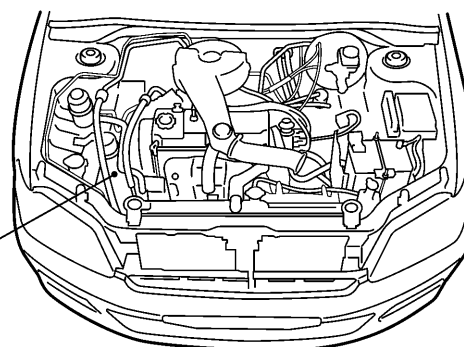


CY1596AU
 
<MPI>

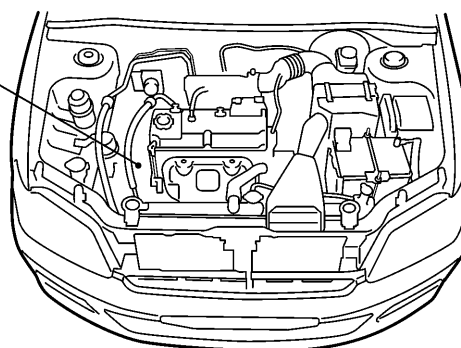


GY1454AU
 
<GDI>

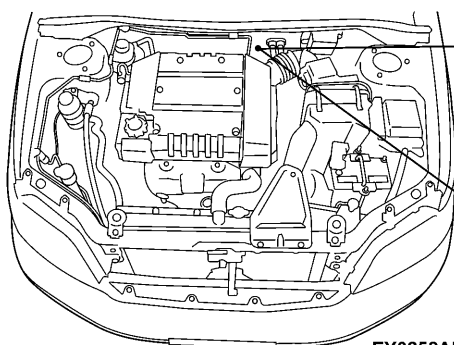


EY0258AU
 
<4G15>

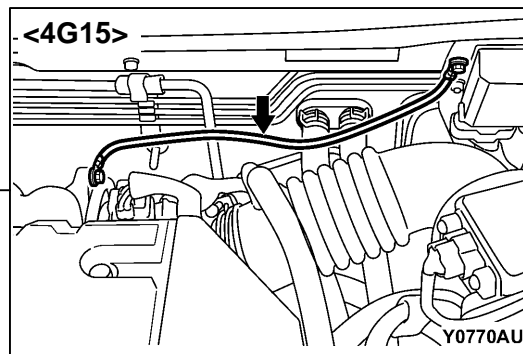


Y0770AU
 
<4G93>

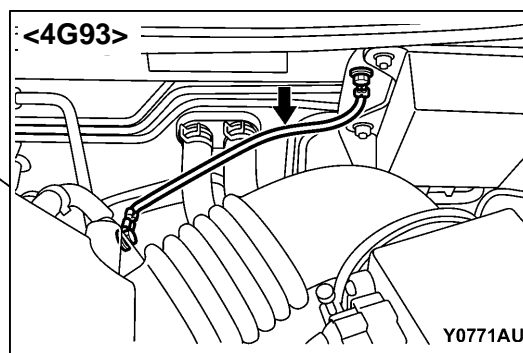


Y0771AU

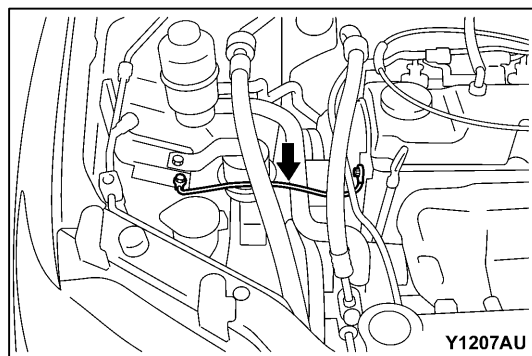 


Y1207AU

**EARTH**

 L.H. drive vehicles

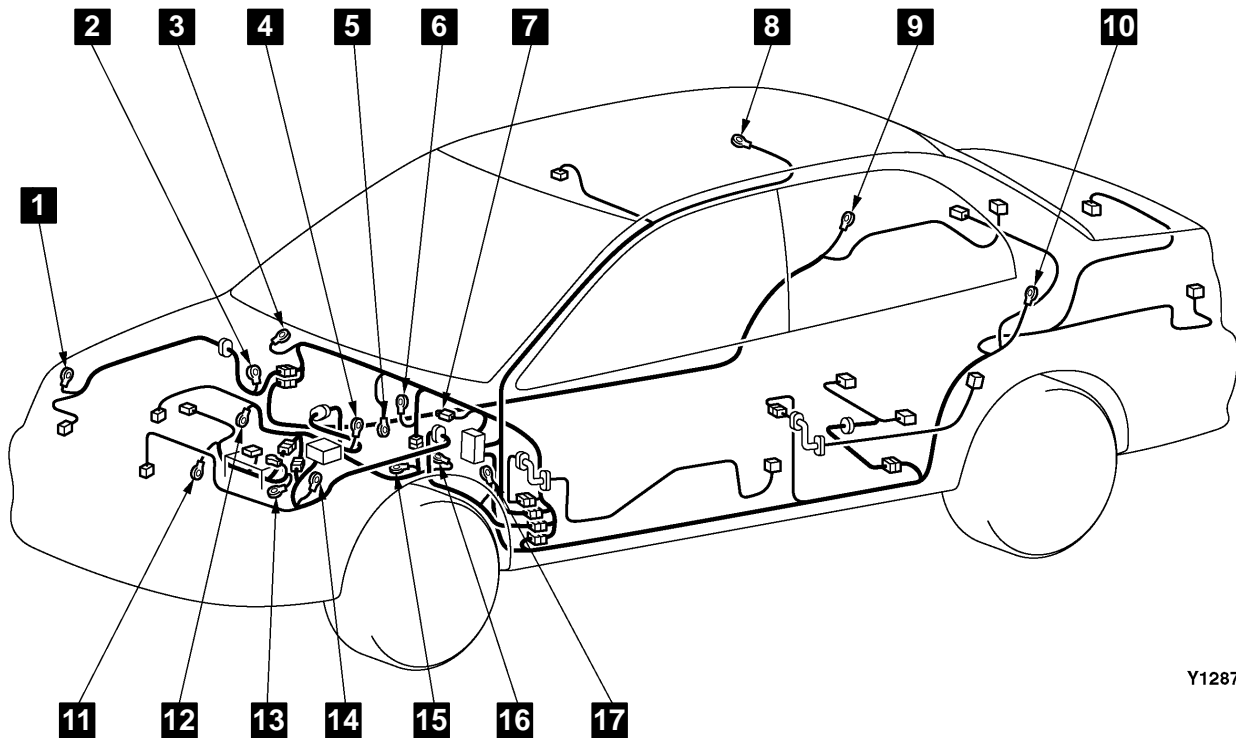

R.H. drive vehicles










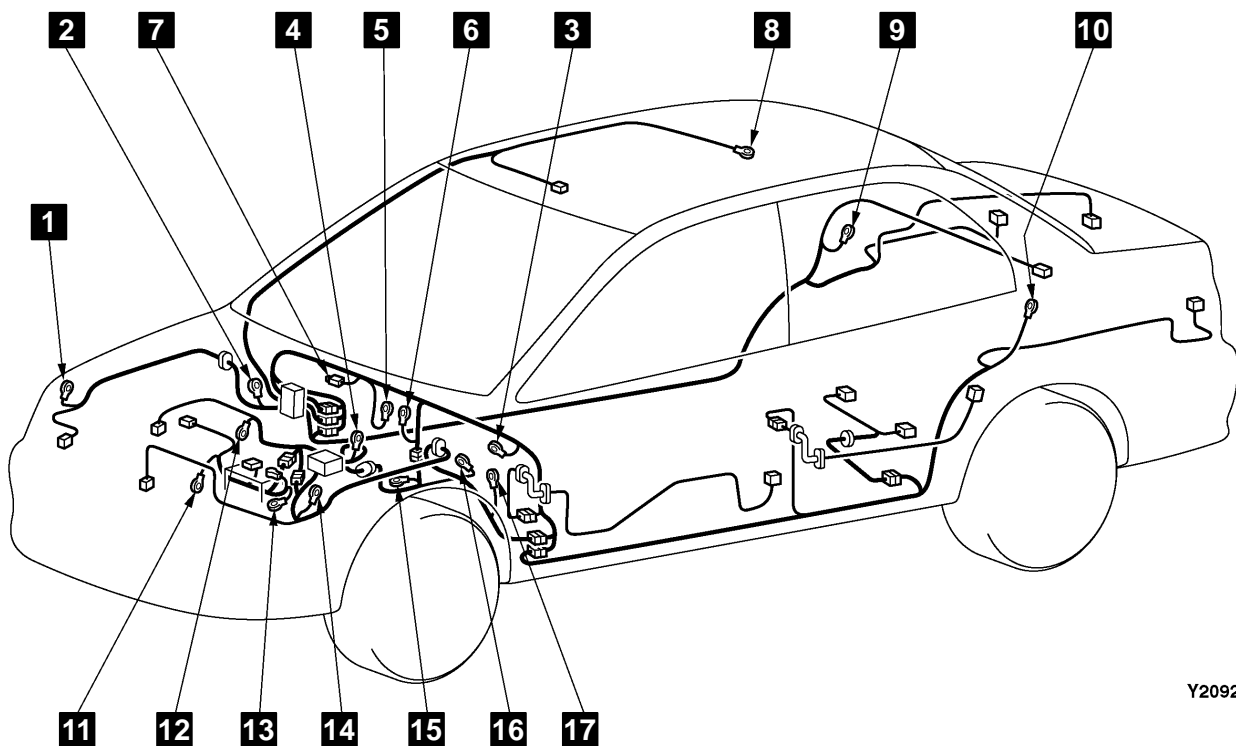 


# 54C SINGLE PART INSTALLATION POSITION BASE – Earth

MAIN

Group  
54

          54C

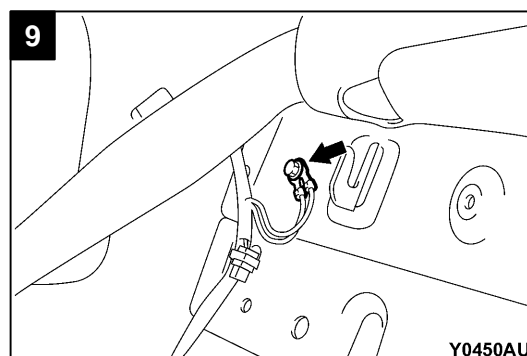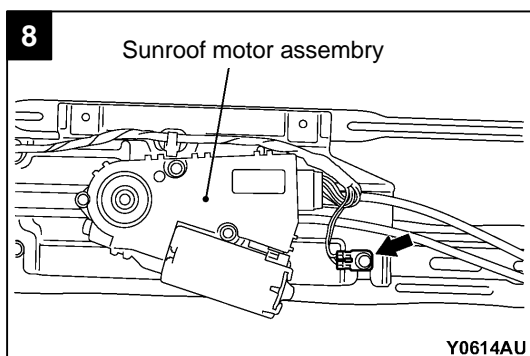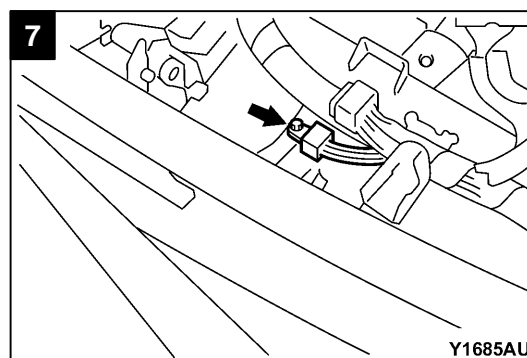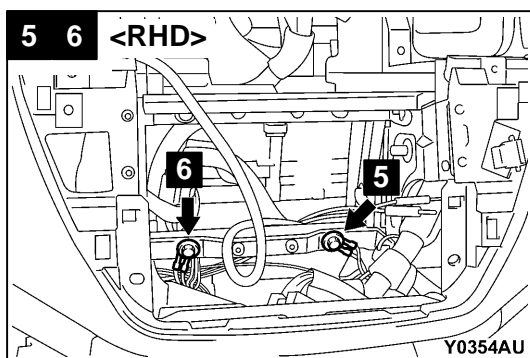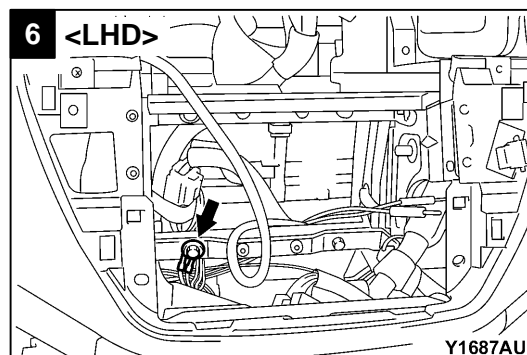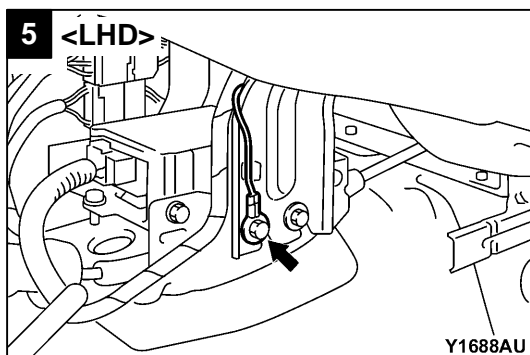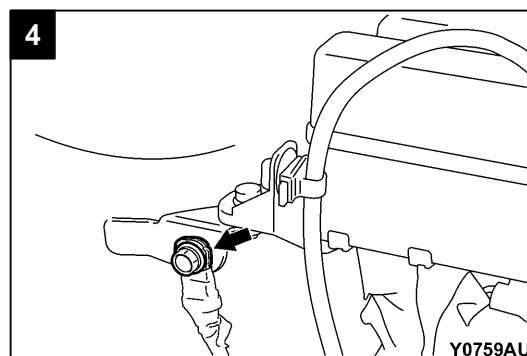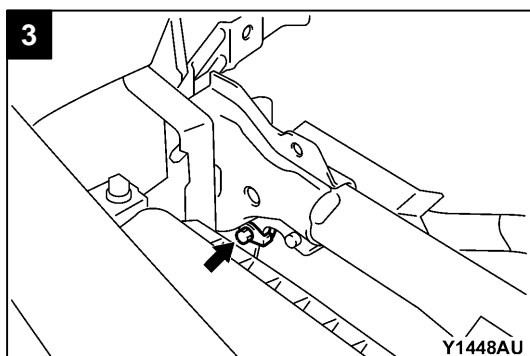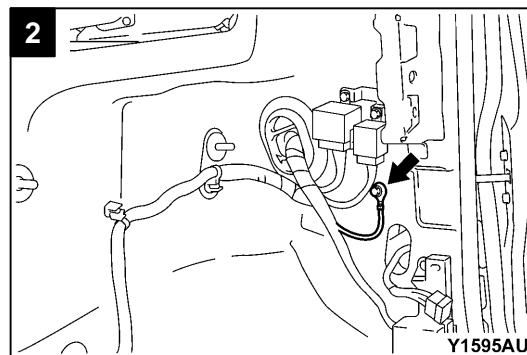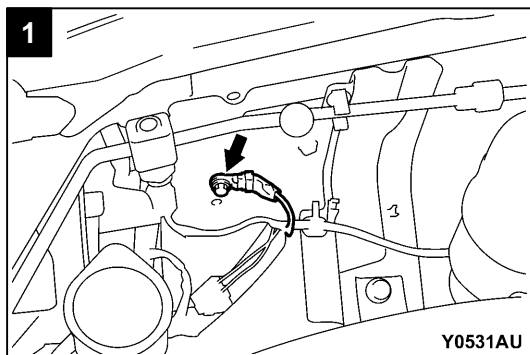

## 54C SINGLE PART INSTALLATION POSITION BASE – Earth

MAIN

Group  
54

54C

