

54E CIRCUIT DIAGRAMS

CONTENTS

J/B

J/C

CENTRALIZED JUNCTION

POWER DISTRIBUTION SYSTEM

STARTING SYSTEM <MPI-M/T>

STARTING SYSTEM <MPI-A/T>

IGNITION SYSTEM <MPI-M/T>

IGNITION SYSTEM <MPI-A/T>

CHARGING SYSTEM <MPI-M/T>

CHARGING SYSTEM <MPI-A/T>

ENGINE CONTROL SYSTEM

<4G94-MPI-M/T>

ENGINE CONTROL SYSTEM

<4G94-MPI-A/T>

COOLING SYSTEM <MPI>

INVECS-II 4A/T <4G94-MPI>

HEADLAMP

TAIL LAMP, POSITION LAMP, LICENCE
PLATE LAMP AND LIGHTING MONITOR
BUZZER

ROOM LAMP AND LUGGAGE
COMPARTMENT LAMP

FRONT FOG LAMP

TURN-SIGNAL LAMP AND HAZARD
WARNING LAMP

BACK-UP LAMP AND REVERSE (R)
POSITION WARNING BUZZER

STOP LAMP

HORN

METER AND GAUGE <STANDARD METER>

FUEL WARNING, OIL PRESSURE AND
BRAKE WARNING LAMPS

SEAT BELT WARNING LAMP

POWER WINDOWS

CENTRAL DOOR LOCKING SYSTEM

HEATER

MANUAL AIR CONDITIONER <MPI-M/T AND
A/T>

WINDSHIELD WIPER AND WASHER

DEFOGGER

REMOTE CONTROL MIRROR

AUDIO SYSTEM

CLOCK

CIGARETTE LIGHTER AND ASHTRAY
ILLUMINATION LAMP

ABS

SUPPLEMENTAL RESTRAINT SYSTEM
(SRS)

SUNROOF

KEY REMINDER BUZZER

RHEOSTAT

IMMOBILISER SYSTEM

SPARE CONNECTOR (FOR FRONT FOG
LAMP) <WHERE FITTED>