

# 55A HEATER, AIR CONDITIONER AND VENTILATION <MANUAL A/C>

## CONTENTS

### SERVICE SPECIFICATIONS

### LUBRICANTS

### SPECIAL TOOLS

### TROUBLESHOOTING

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE  
SYMPTOM

CHECK AT THE A/C-ECU TERMINAL

### ON-VEHICLE SERVICE

REFRIGERANT LEVEL TEST THROUGH  
PERFORMANCE TEST

MAGNETIC CLUTCH TEST

RECEIVER DRIER TEST

COMPRESSOR DRIVE BELT ADJUSTMENT

DUAL PRESSURE SWITCH CHECK

A/C PRESSURE SENSOR CHECK

CHARGING

CORRECTING LOW REFRIGERANT LEVEL

DISCHARGING SYSTEM

REFILLING OF OIL IN THE A/C SYSTEM

PERFORMANCE TEST

REFRIGERANT LEAK REPAIR

COMPRESSOR NOISE

BLOWER RELAY CONTINUITY CHECK

A/C COMPRESSOR RELAY CONTINUITY  
CHECK

FAN CONTROLLER CHECK

IDLE-UP OPERATION CHECK

### HEATER CONTROL ASSEMBLY (A/C-ECU) AND A/C SWITCH

REMOVAL AND INSTALLATION

INSPECTION

DISASSEMBLY AND REASSEMBLY

### HEATER UNIT AND BLOWER ASSEMBLY

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

### RESISTOR, BLOWER MOTOR AND INSIDE/OUTSIDE AIR CHANGEOVER DAMPER MOTOR

REMOVAL AND INSTALLATION

INSPECTION

### EVAPORATOR AND AIR THERMO SENSOR

REMOVAL AND INSTALLATION

INSPECTION

**COMPRESSOR**

REMOVAL AND INSTALLATION

INSPECTION

DISASSEMBLY AND REASSEMBLY

COOLING TEMPERATURE SWITCH

**CONDENSER ASSEMBLY AND CONDENSER  
FAN ASSEMBLY**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

**REFRIGERANT LINES**

REMOVAL AND INSTALLATION

**DUCTS**

REMOVAL AND INSTALLATION

**VENTILATION**

REMOVAL AND INSTALLATION