

# 52A INTERIOR 1996

## CONTENTS

### ADHESIVE

### SPECIAL TOOL

### INSTRUMENT PANEL

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

### FLOOR CONSOLE

REMOVAL AND INSTALLATION

### TRIMS

REMOVAL AND INSTALLATION

### HEADLINING

INSTALLATION SERVICE POINT

### INSIDE REAR VIEW MIRROR

REMOVAL SERVICE POINT

### FRONT SEAT

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

DISASSEMBLY AND REASSEMBLY

### REAR SEAT

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

### FRONT SEAT BELT

REMOVAL AND INSTALLATION

INSPECTION

### REAR SEAT BELT

REMOVAL AND INSTALLATION

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its **GROUP 52B – Supplemental Restraint System (SRS)** before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).