

 
RELAY

MAIN


Group
54

54A
1996

Name		Symbol	Name	Symbol
ABS motor relay	LHD	B	Defogger relay	F
	RHD	C	Engine control relay <MPI>	H
ABS valve relay	LHD	B	Fuel pump relay <MPI>	H
	RHD	C	Headlamp relay	D
A/C compressor relay		A	Horn relay <SRS>	D
Alternator relay		D	Power window relay	G
A/T relay		I	Radiator fan relay	D
Blower relay		F	Rear intermittent wiper relay	G
Condenser fan control relay <A/C>		A	Turn signal and hazard warning flasher unit	F
Condenser fan relay <A/C>		A	Windshield intermittent wiper relay (built in column switch)	E

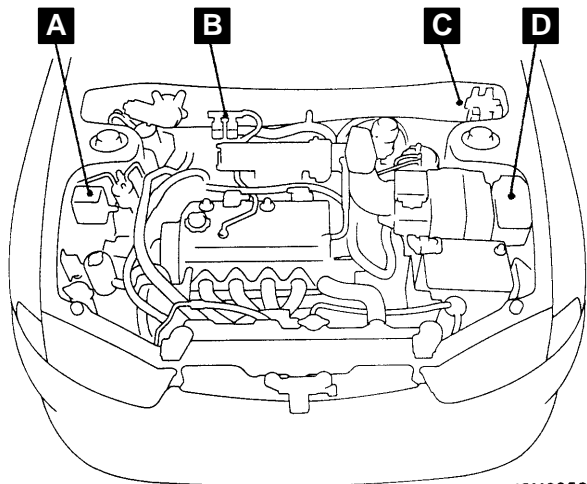


16M0258

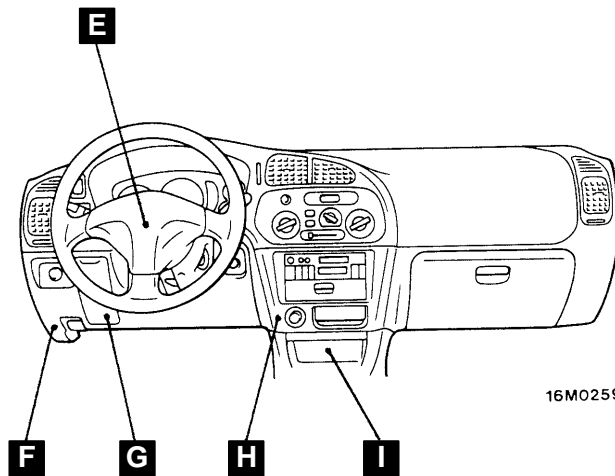 


16M0259








 
00004643

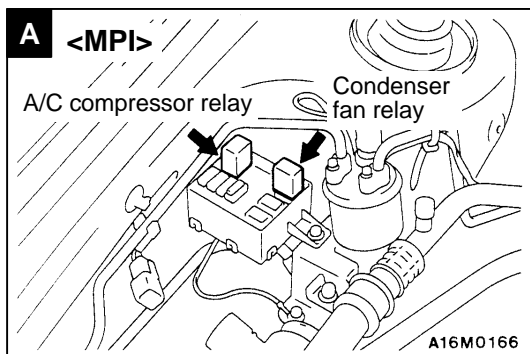

A16M0166


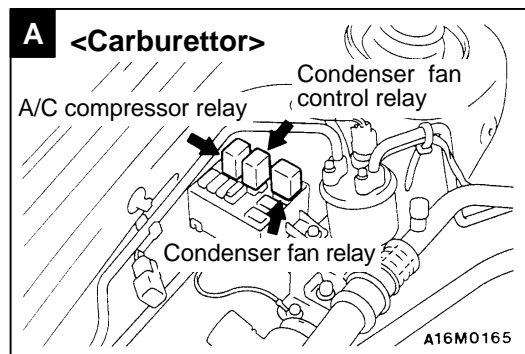 


A16M0165

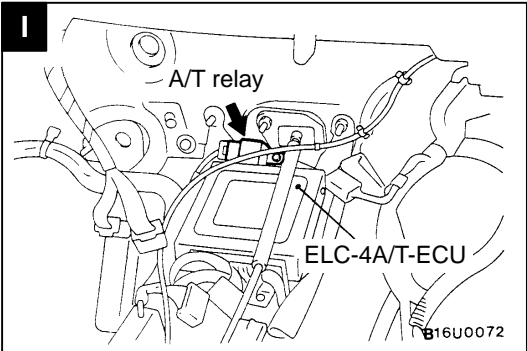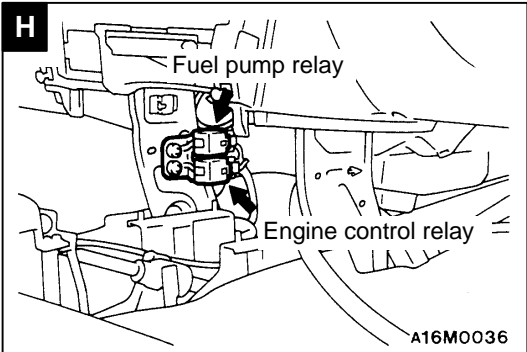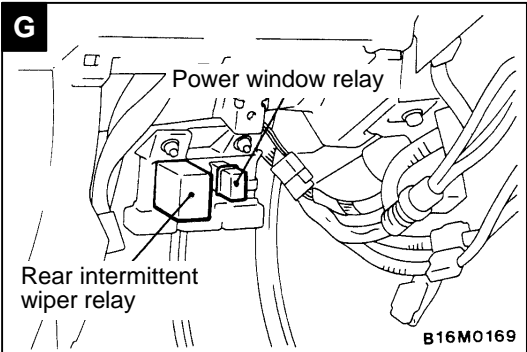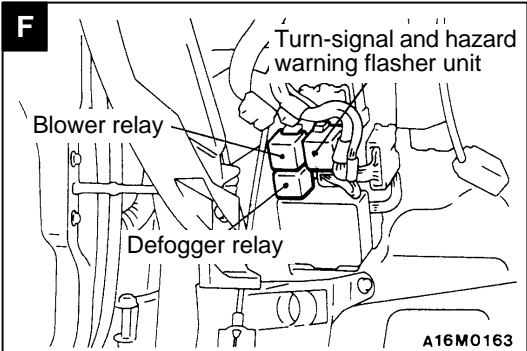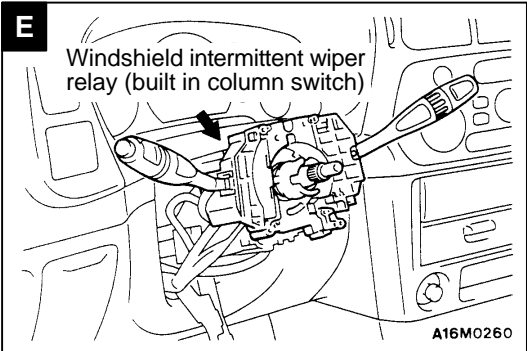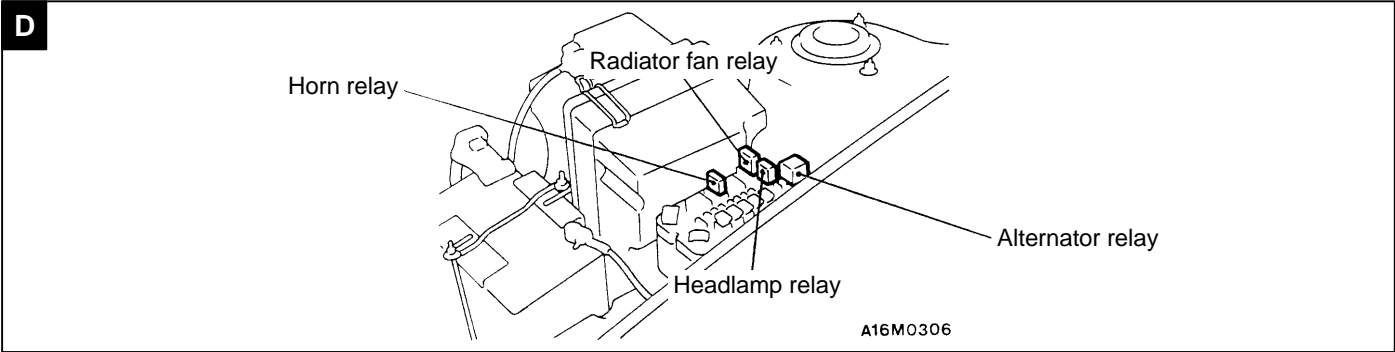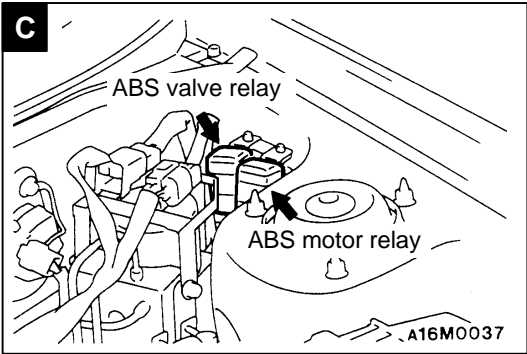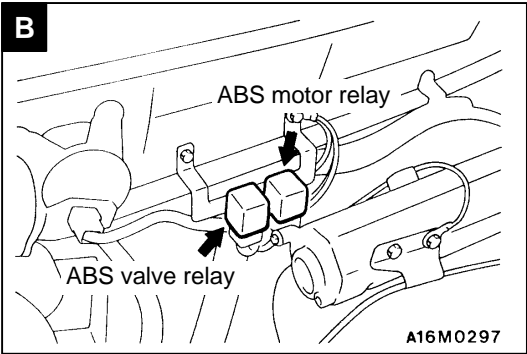        


ECU

Name	Symbol	Name	Symbol
ABS-ECU	C	ETACS-ECU	A
Buzzer-ECU	A	SRS-ECU	C
ELC-4A/T-ECU	B	Sunroof-ECU	E
Engine-ECU <MPI>	D		

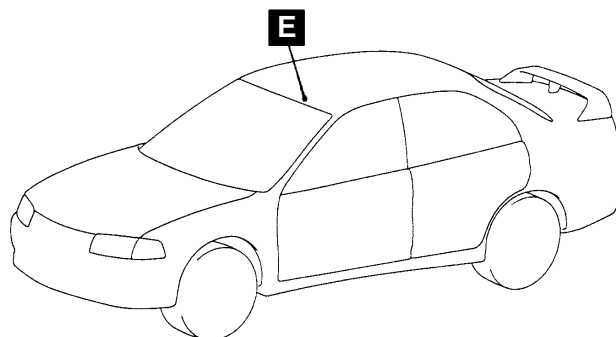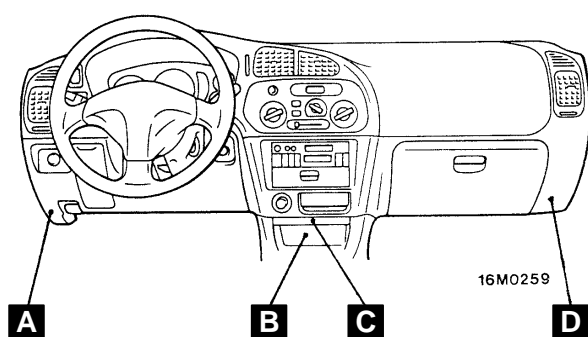  


00M0011

 
00004644

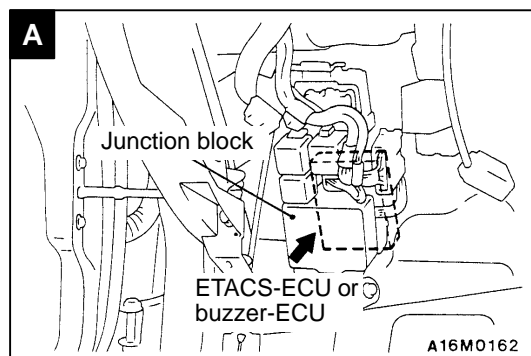


A16M0162

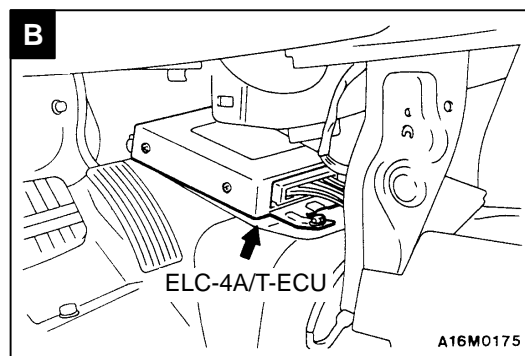 


A16M0175

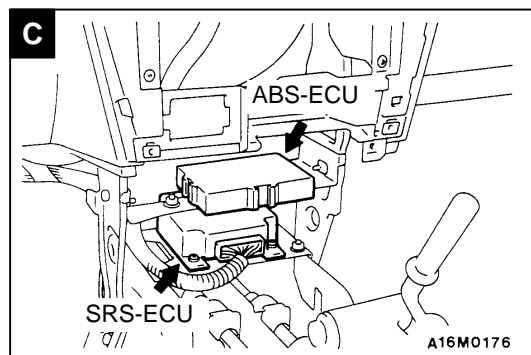 

A16M0176

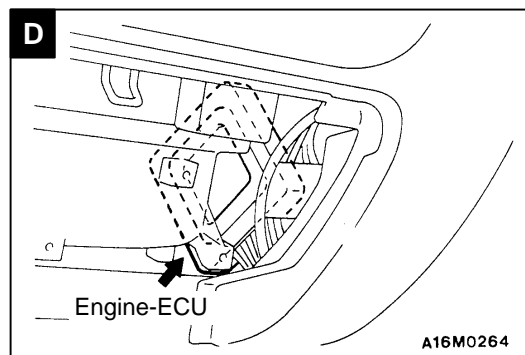 




A16M0264


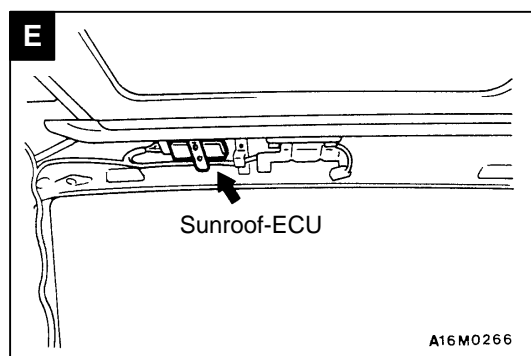 


A16M0266







SENSOR











Name	Symbol	Name	Symbol
Air flow sensor <4G92>	E	Input shaft speed sensor <A/T>	J
A/T fluid temperature sensor (built in A/T control solenoid valve assembly)	K	Intake air temperature sensor <4G13 MPI>	A
Camshaft position sensor <4G92>	I	Output shaft speed sensor <A/T>	J
Crank angle sensor <4G92>	G	Oxygen sensor <4G92>	N
Crank angle sensor <4G13 MPI> (built in distributor)	G	Oxygen sensor (front) <4G13 MPI>	M
		Oxygen sensor (rear) <4G13 MPI>	M
Detonation sensor <4G92>	H	Rear wheel speed sensor <ABS>	O
Engine coolant temperature sensor <MPI>	D	Throttle position sensor	C
Engine coolant temperature switch <Carburettor (A/C)>	F	Vacuum sensor <4G13 MPI>	B
Front wheel speed sensor <ABS>	L	Vehicle speed sensor	J

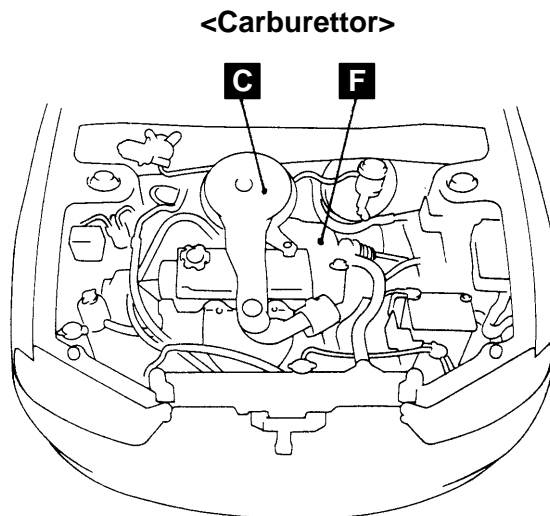 
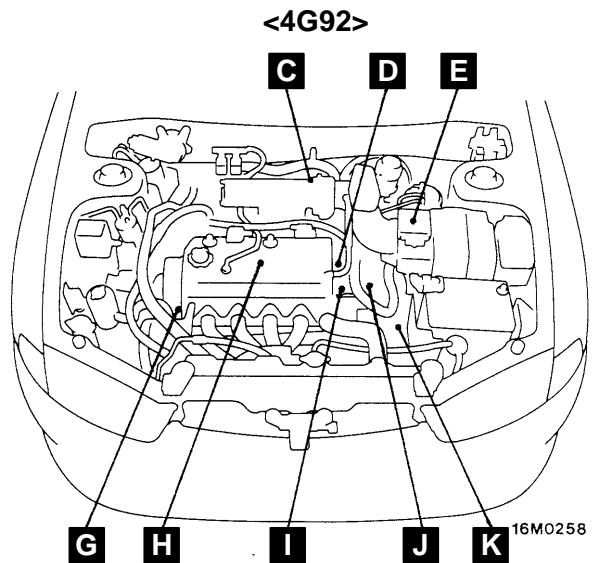 
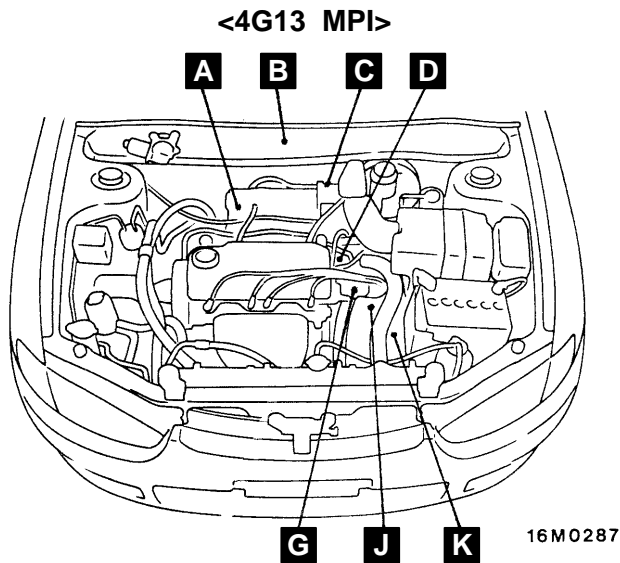 


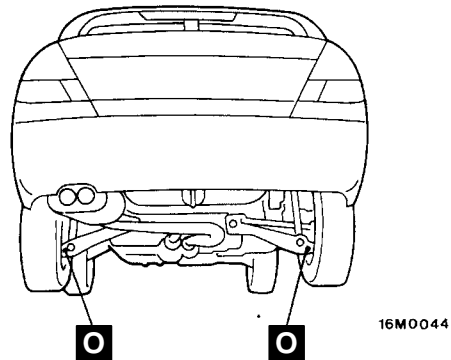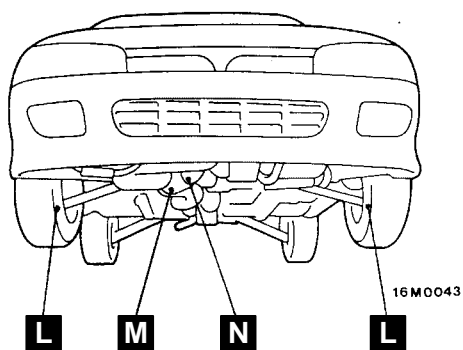  

00004646

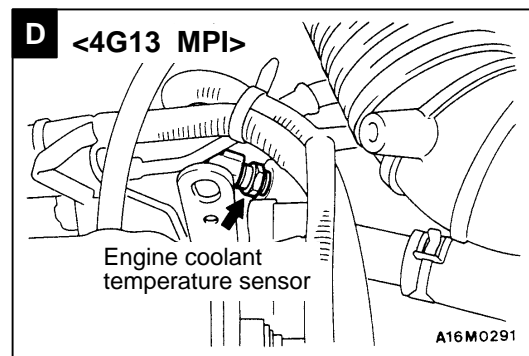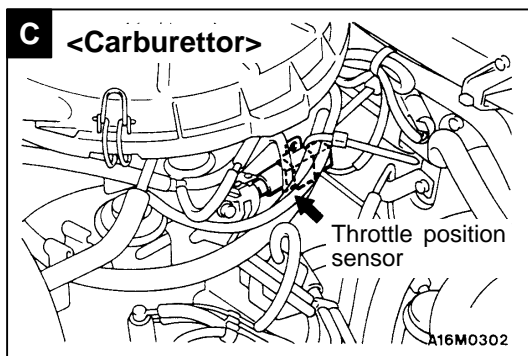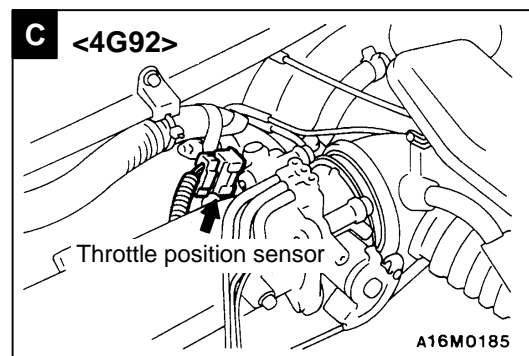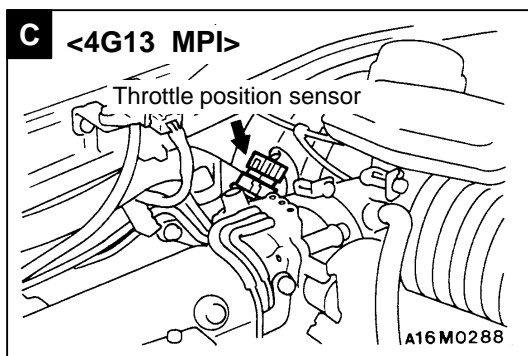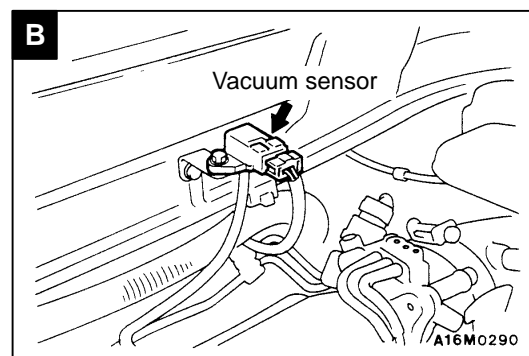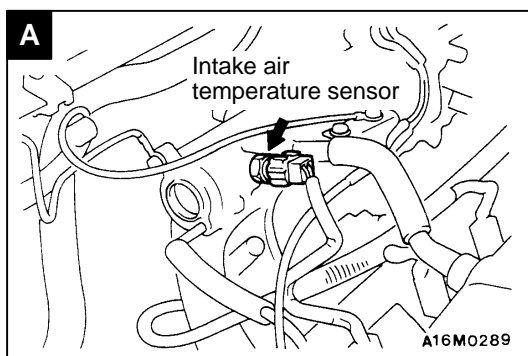      


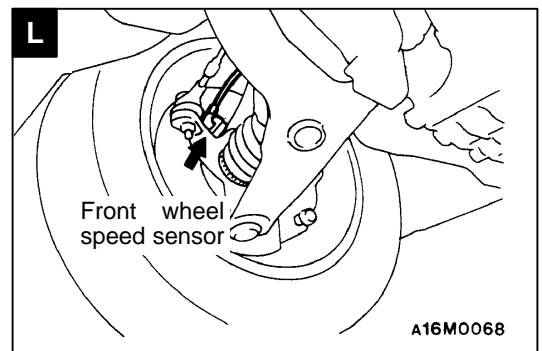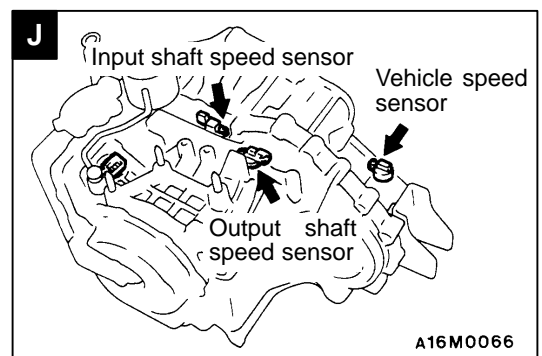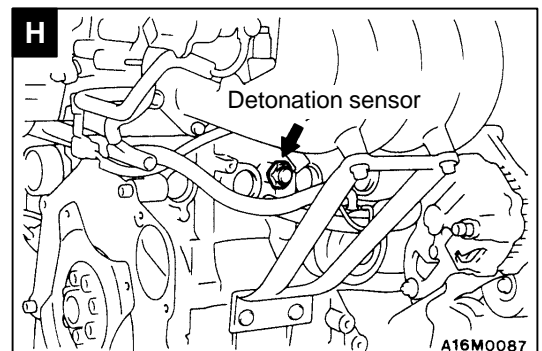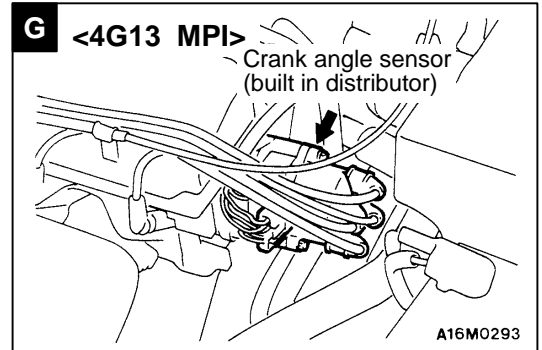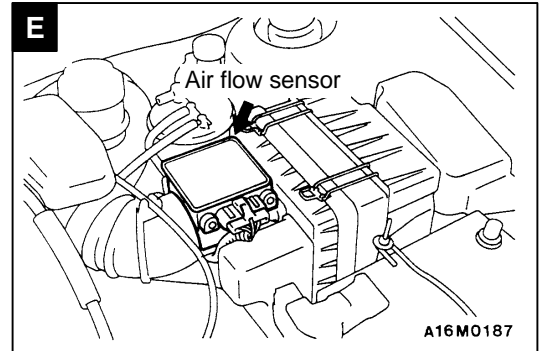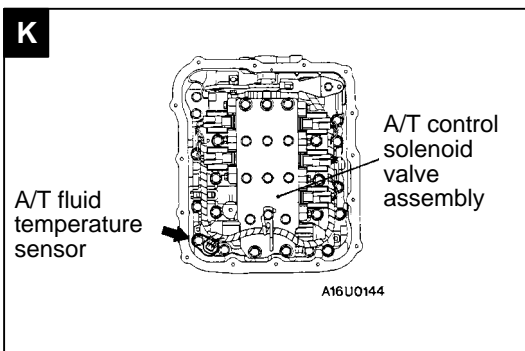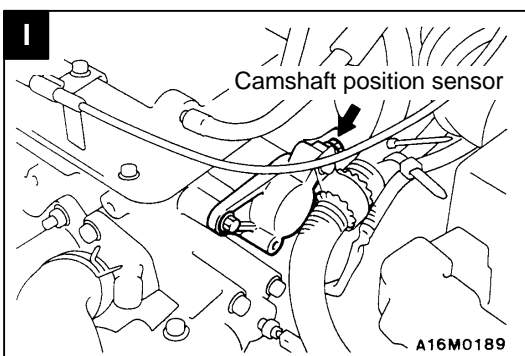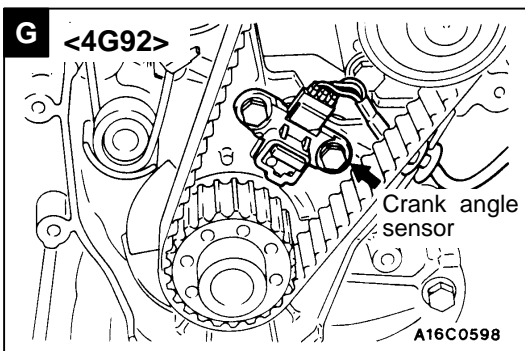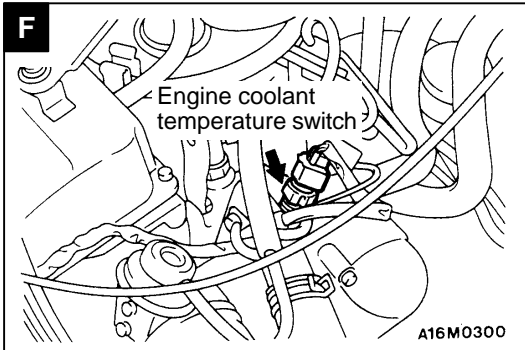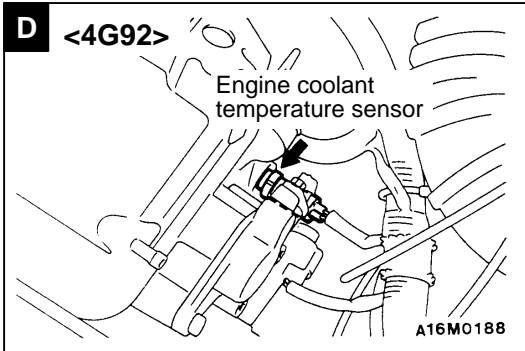          

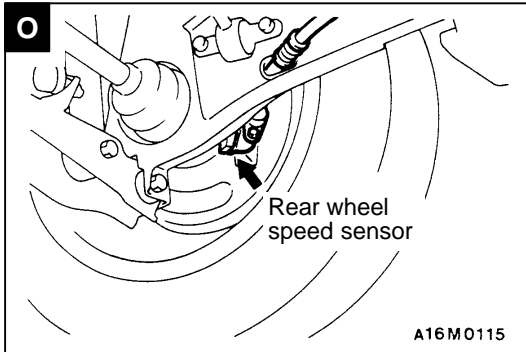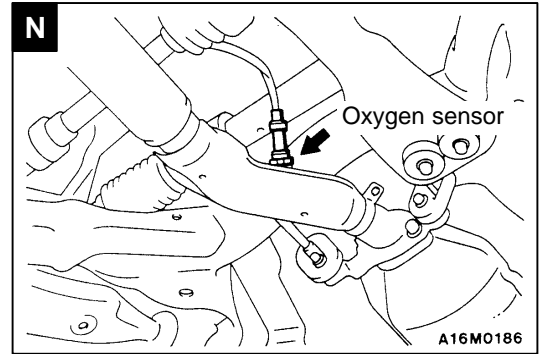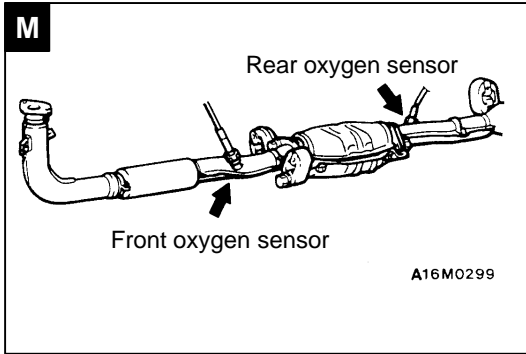   


SOLENOID AND SOLENOID VALVE

Name		Symbol	Name	Symbol
ABS solenoid valve (built in hydraulic unit)	LHD	A	Fuel cut solenoid valve <Carburettor>	C
	RHD	F		
A/T control solenoid valve assembly		E	Idle up solenoid valve <Carburettor (A/C)>	D
EGR solenoid valve <4G92>		B	Purge control solenoid valve <MPI>	B




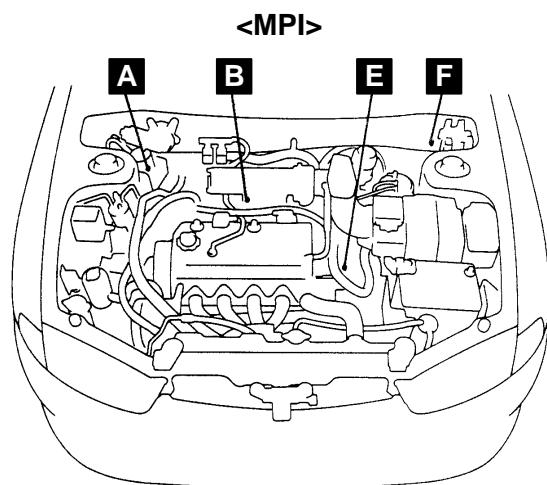 





16M0258

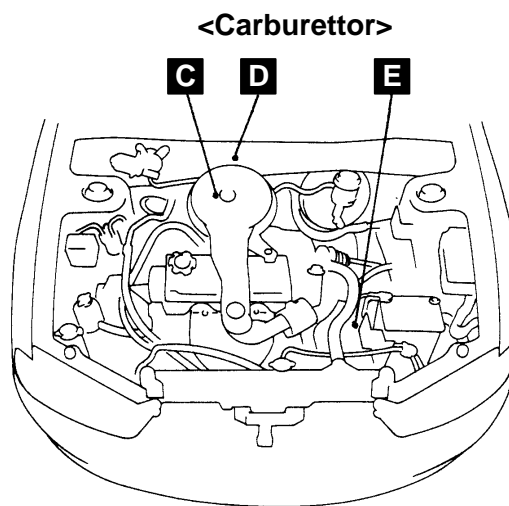 

16M0316

      
 
00004647

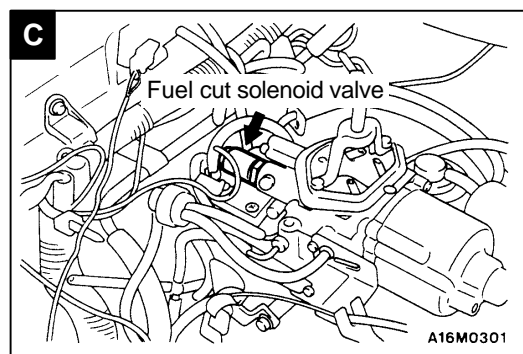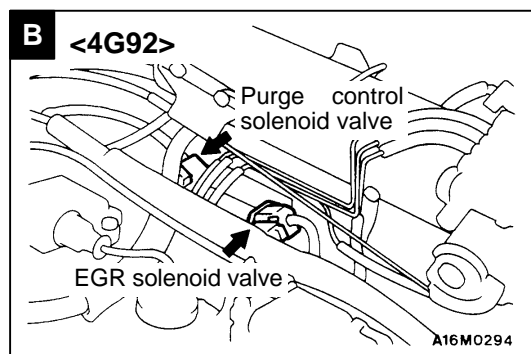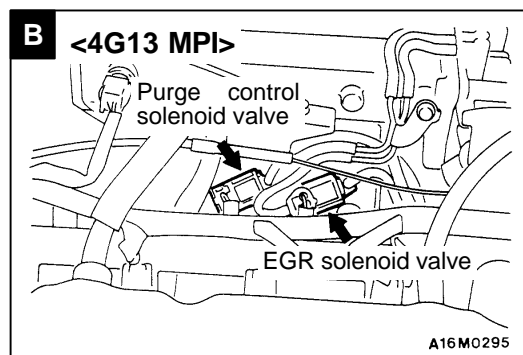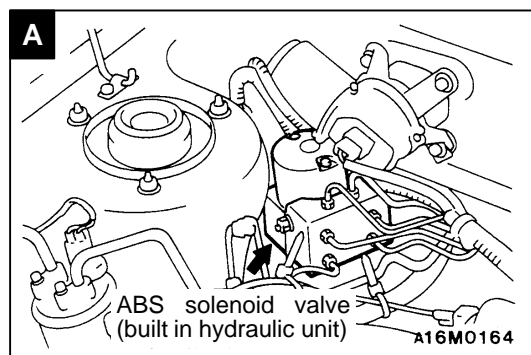

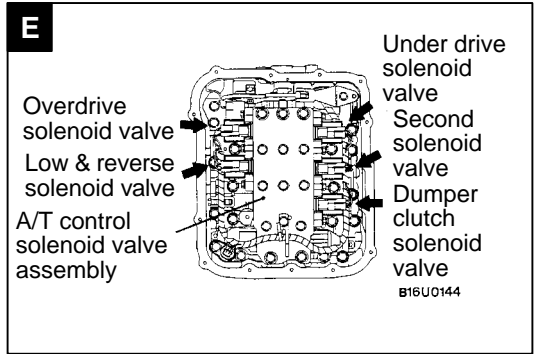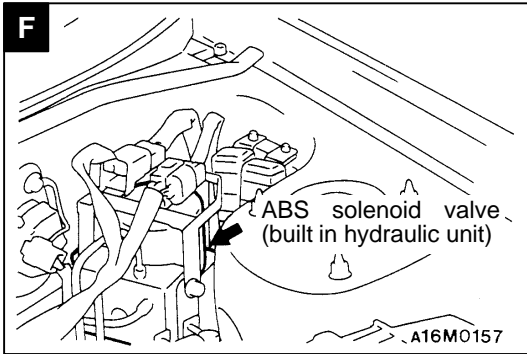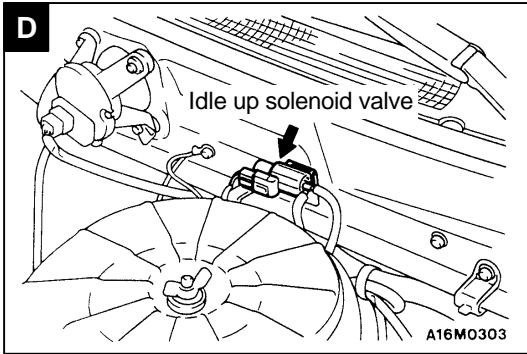

DIODE

Name	Symbol
Diode (for ABS circuit)	A

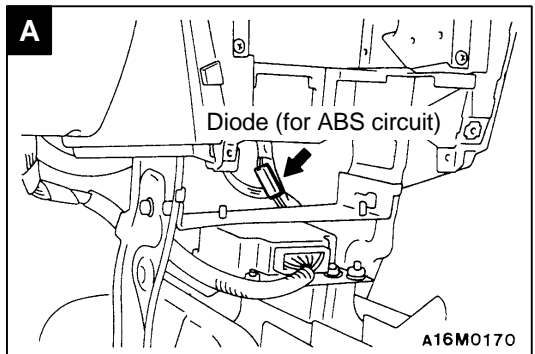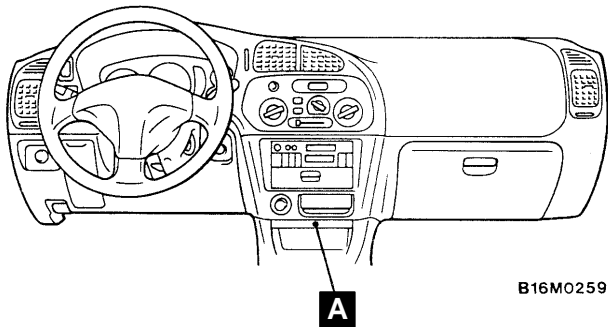  


INSPECTION CONNECTOR


MAIN

Group
5454A
1996

Name		Symbol	Name	Symbol
Diagnosis connector		C	Fuel pump check connector <MPI>	B
Engine speed detection connector	LHD	A	Ignition timing adjustment connector <4G13 MPI>	B
	RHD	B		

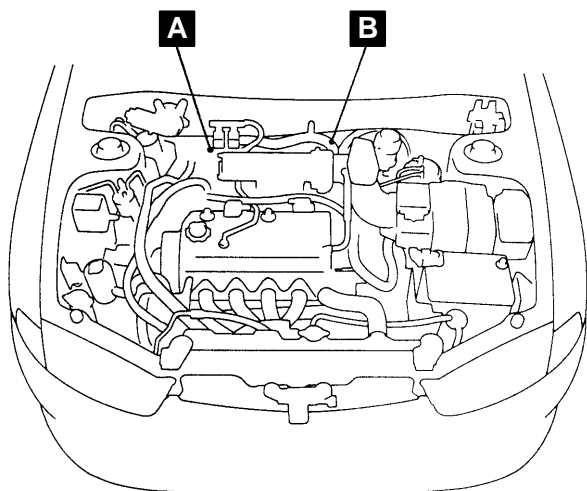 


16M0258

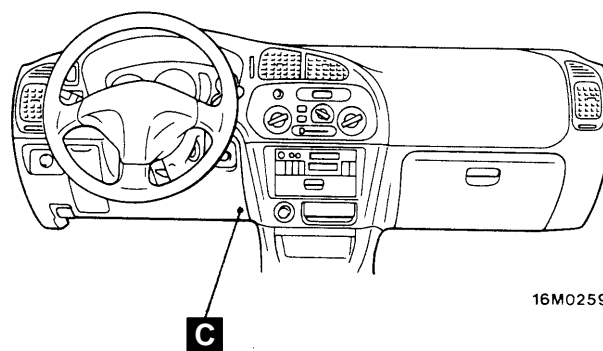 


16M0259

 
00004639

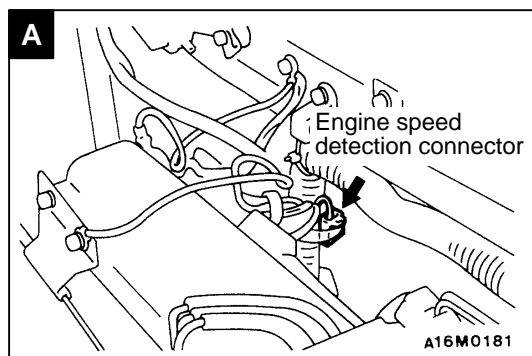


A16M0181

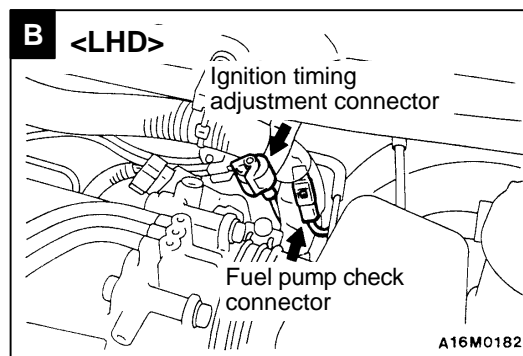 

A16M0182

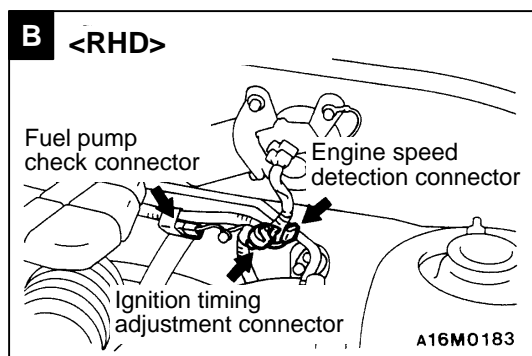 

A16M0183

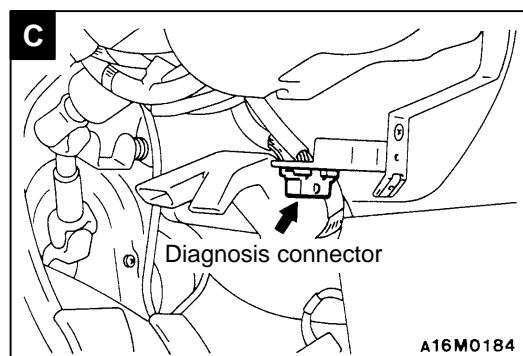 



A16M0184

FUSIBLE LINK AND FUSE





MAIN



Group
5454A
1996

Name	Symbol	Name	Symbol
Dedicated fuses (No. 1 – 11)	C	Fusible links (No. 1 – 7)	C
Dedicated fuse (No. 12)	A	Fusible link (No. 8)	B
Dedicated fuse (No. 16)	D	Multi-purpose fuses	D

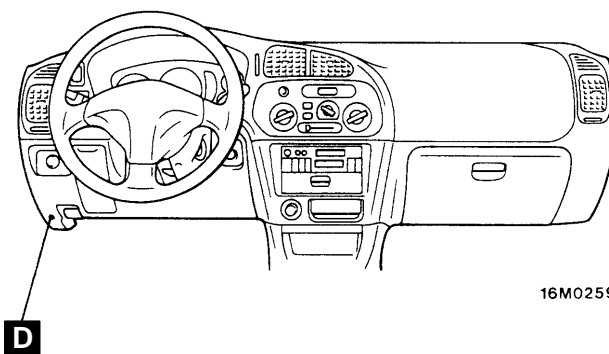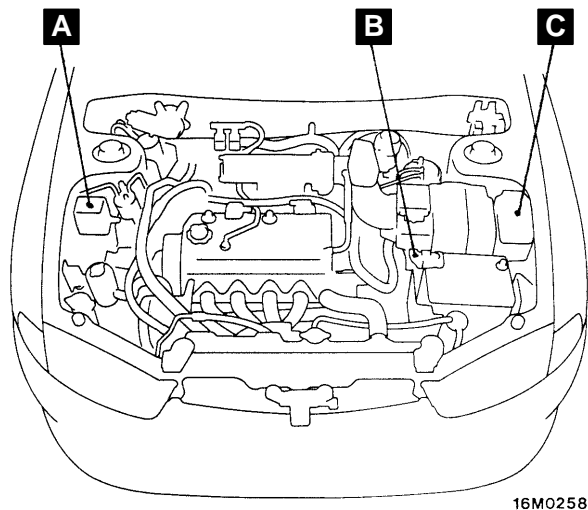  



00004640

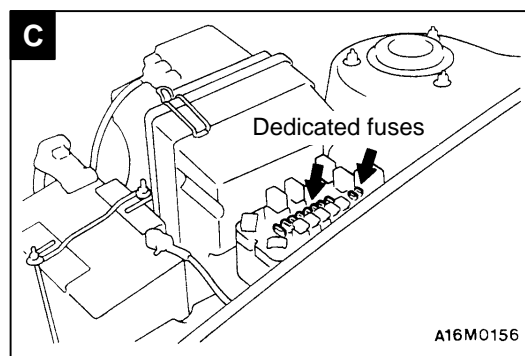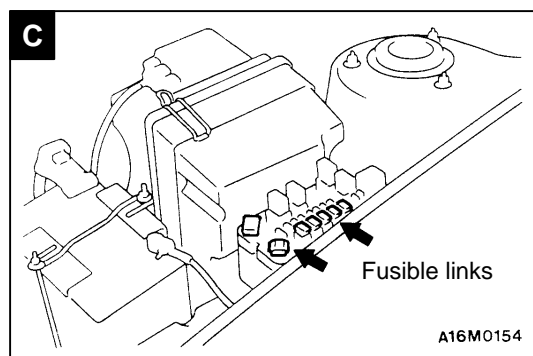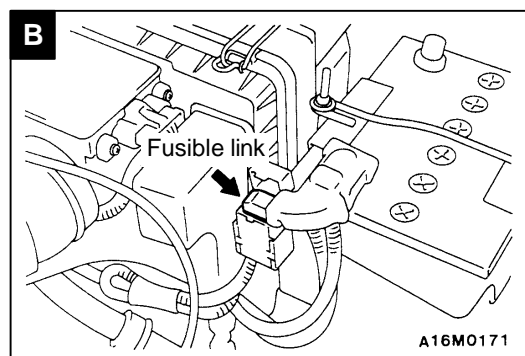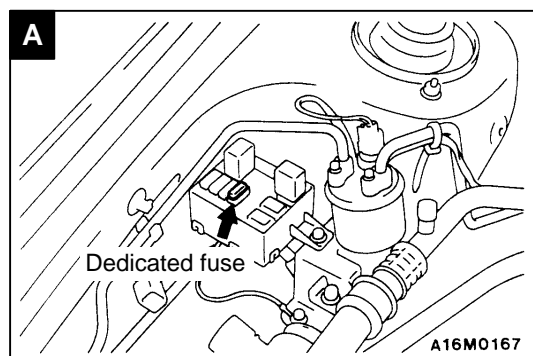    

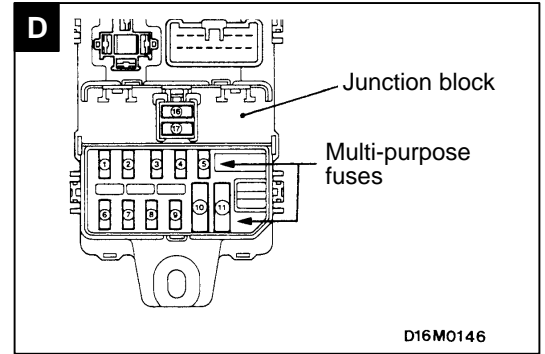 
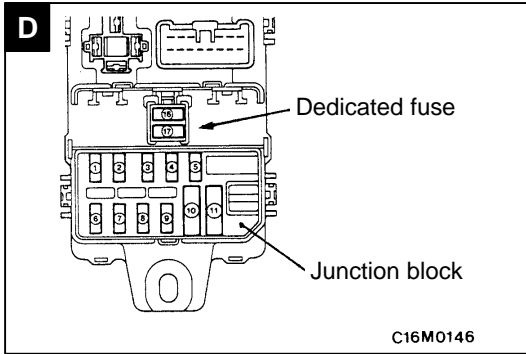 


EARTH CABLE
  
<MPI>

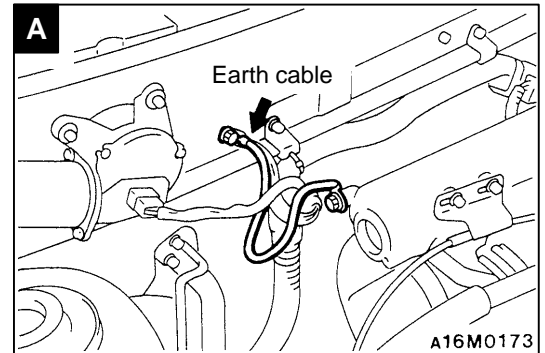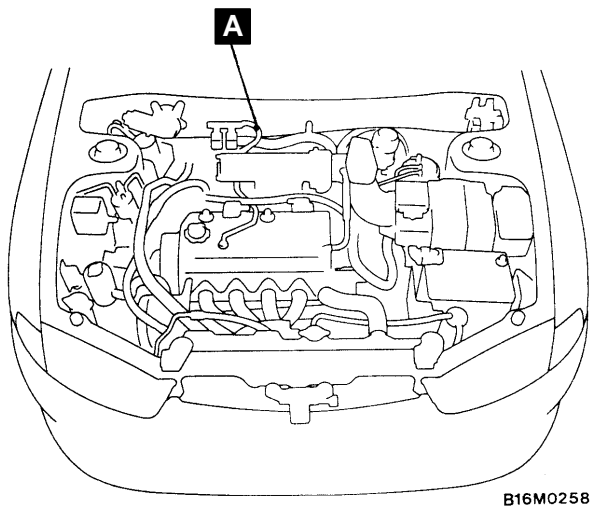


<Carburettor>

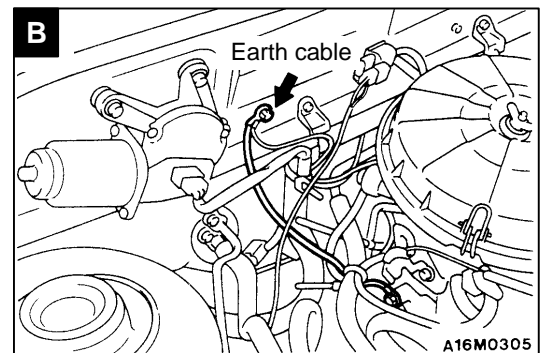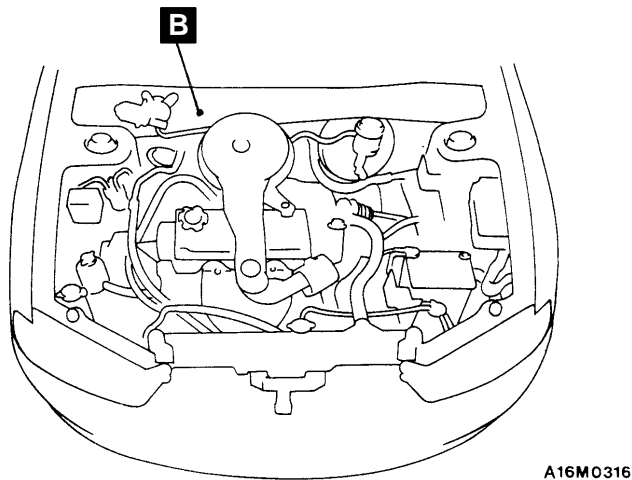  


EARTH

R.H.drive vehicles
 
<Hatchback>

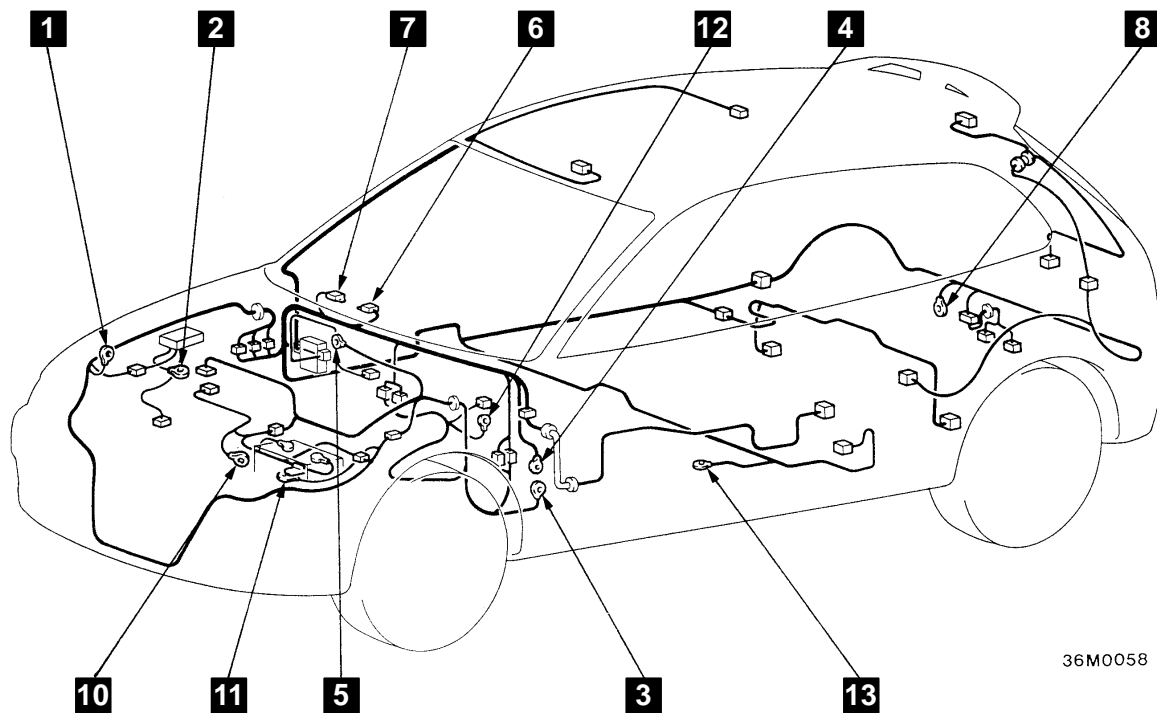

<Sedan>

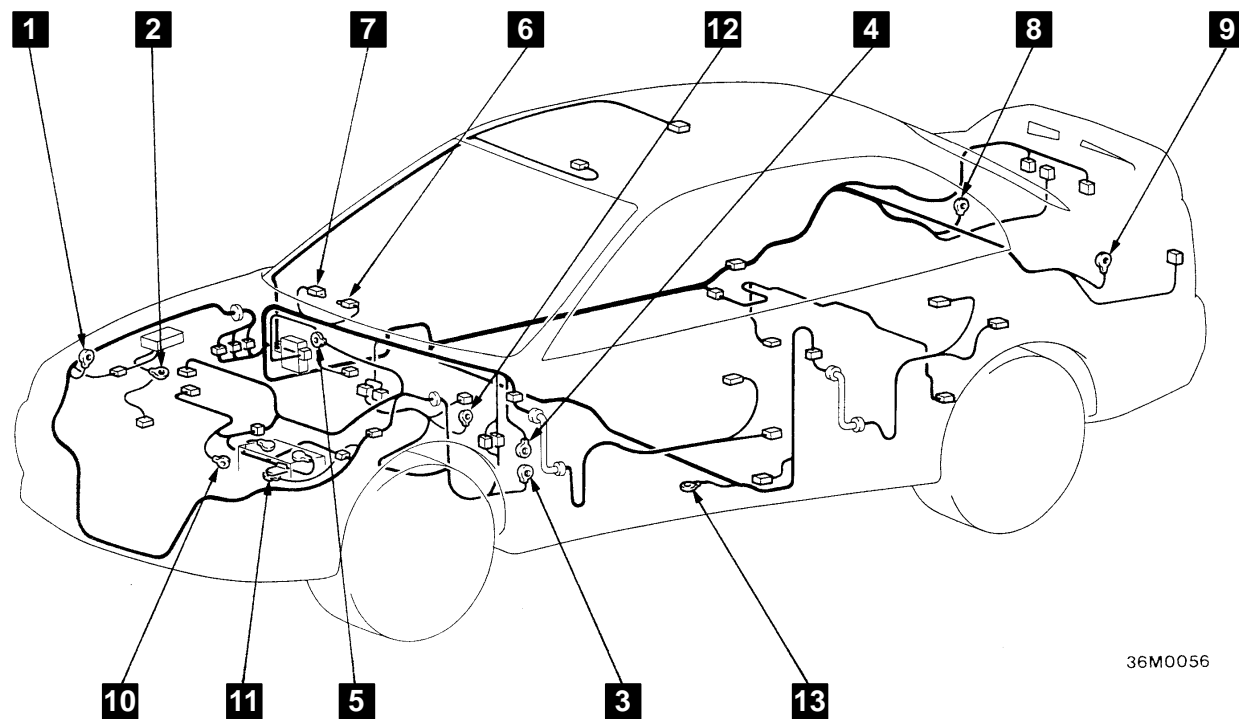 

00004642

