

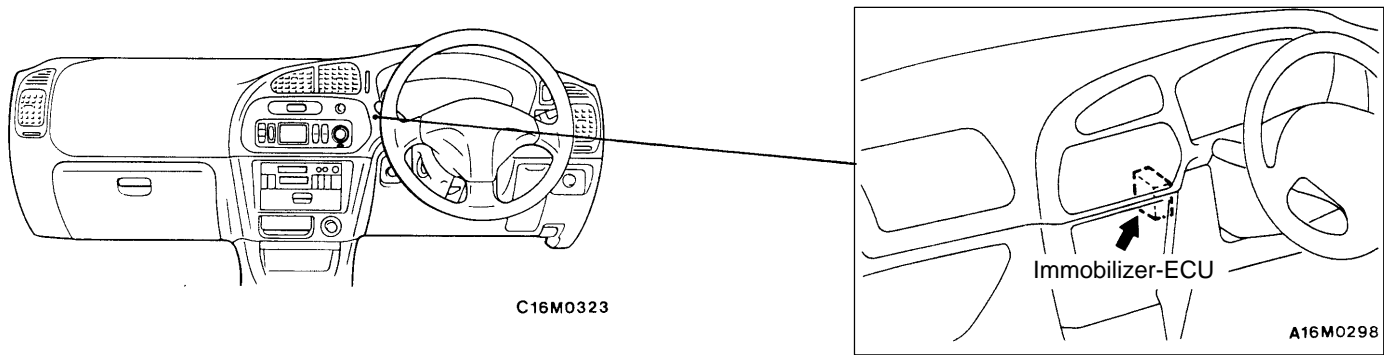












ECU


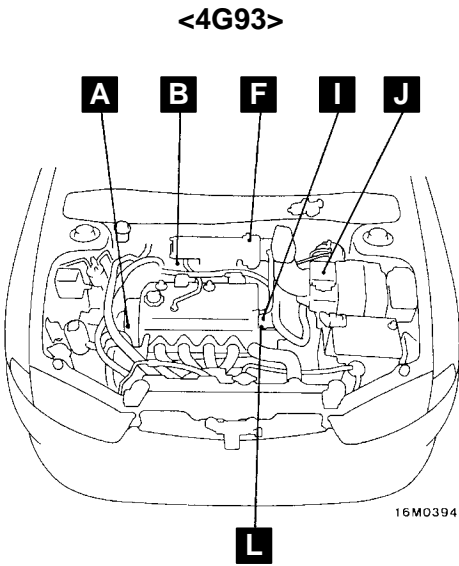


SENSOR



Name		Symbol	Name		Symbol
Air flow sensor <4G93>		J	Intake air temperature sensor <4G15>		C
Camshaft position sensor <4G93>		K	Oxygen sensor	<4G15>	L
Crank angle sensor <4G93>		A		<4G93>	B
Crank angle sensor (built in distributor assembly)		G	Throttle position sensor	<4G15>	E
Engine coolant temperature sensor	<4G16>	H		<4G93>	F
	<4G93>	I	Vacuum sensor <4G15>		D

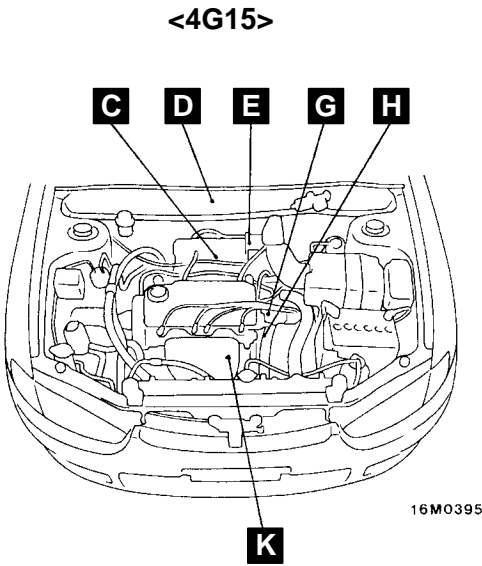

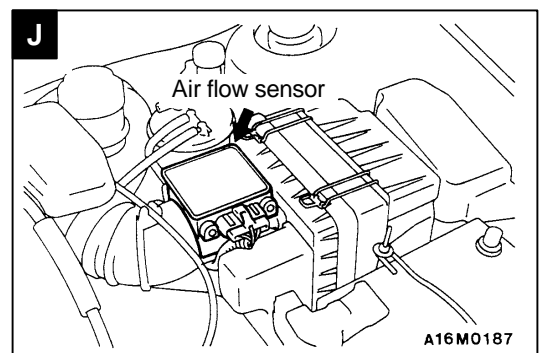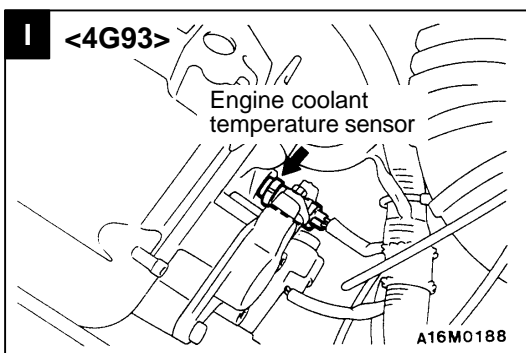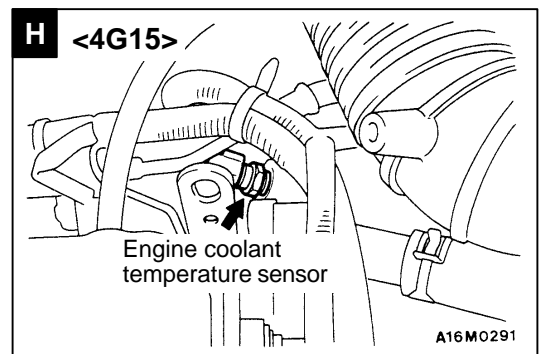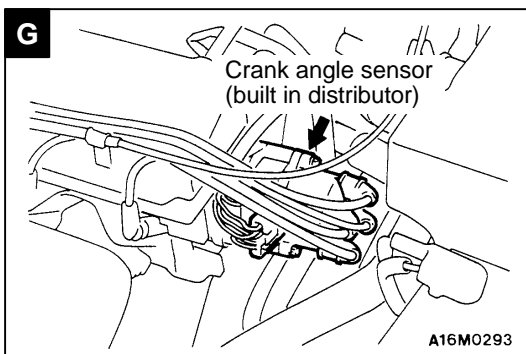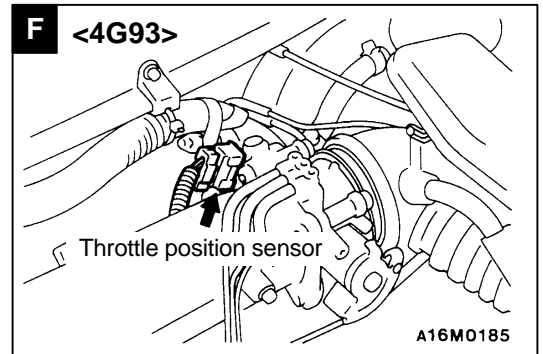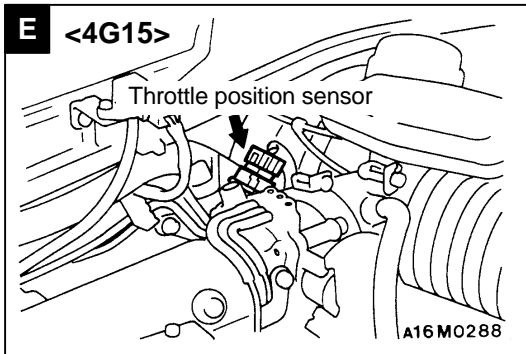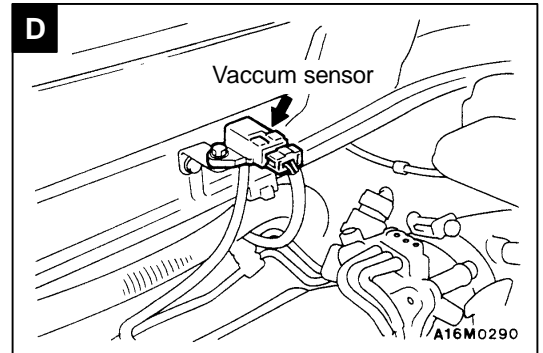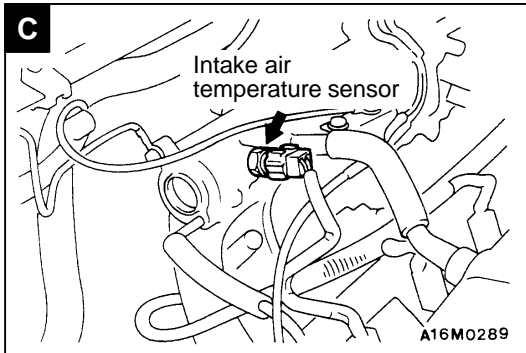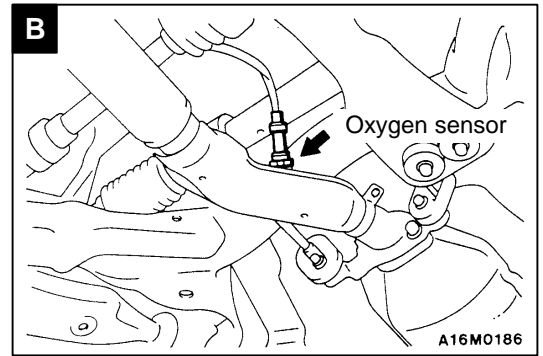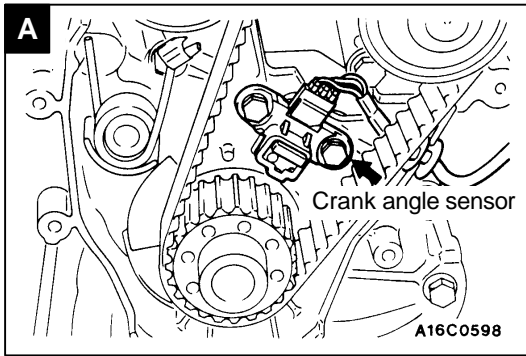

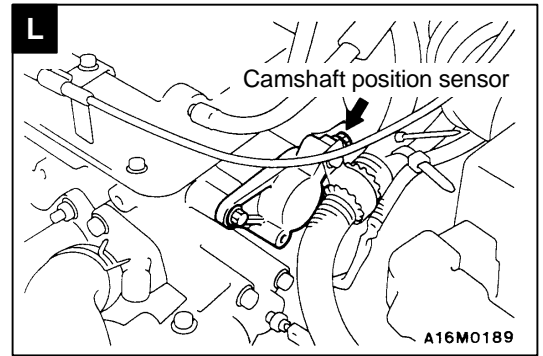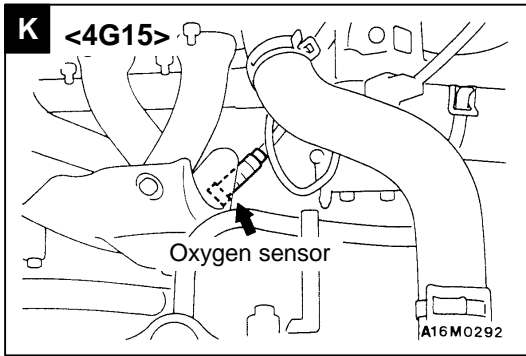

## SOLENOID AND SOLENOID VALVE

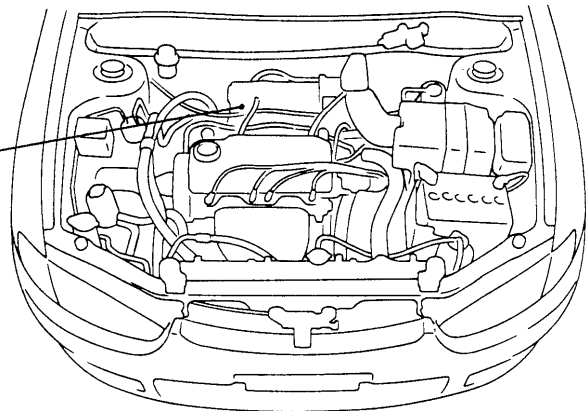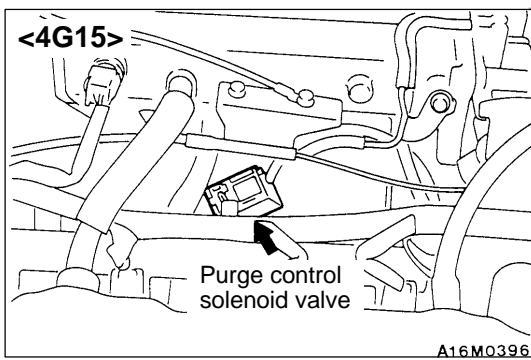

B16M0395