

# 54 CHASSIS ELECTRICAL 1996

## CONTENTS

### BATTERY

SERVICE SPECIFICATION

ON-VEHICLE SERVICE

FLUID LEVEL AND SPECIFIC GRAVITY CHECK

CHARGING

BATTERY TESTING PROCEDURE

### IGNITION SWITCH

SPECIAL TOOL <VEHICLES FOR GCC>

TROUBLESHOOTING  
<VEHICLES FOR GCC>

DIAGNOSIS FUNCTION

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE  
SYMPTOMS

#### IGNITION SWITCH

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSPECTION

### COMBINATION METERS

SERVICE SPECIFICATIONS

SEALANT

SPECIAL TOOLS

TROUBLESHOOTING

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE  
SYMPTOMS

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its [GROUP 52B – Supplemental Restraint System \(SRS\)](#) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*).

**ON-VEHICLE SERVICE**

SPEEDOMETER CHECK

TACHOMETER CHECK

FUEL GAUGE SIMPLE CHECK

FUEL GAUGE UNIT CHECK

ENGINE COOLANT TEMPERATURE GAUGE  
SIMPLE CHECKENGINE COOLANT TEMPERATURE GAUGE  
UNIT CHECK**COMBINATION METERS**

REMOVAL AND INSTALLATION

INSPECTION

**HEADLAMP AND FRONT TURN-SIGNAL LAMP****SERVICE SPECIFICATIONS****SPECIAL TOOLS****TROUBLESHOOTING**

DIAGNOSIS FUNCTION

INSPECTION CHART FOR TROUBLE  
SYMPTOMSINSPECTION PROCEDURE FOR TROUBLE  
SYMPTOMS

HEADLAMP AIMING

INTENSITY MEASUREMENT

BULB REPLACEMENT

**HEADLAMP AND FRONT TURN-SIGNAL  
LAMP**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSPECTION

**ON-VEHICLE SERVICE****SIDE TURN-SIGNAL LAMP****SPECIAL TOOL****SIDE TURN-SIGNAL LAMP**

REMOVAL

INSTALLATION

**FRONT FOG LAMP****SERVICE SPECIFICATIONS****SPECIAL TOOL****ON-VEHICLE SERVICE**

FRONT FOG LAMP AIMING

BULB REPLACEMENT

**FRONT FOG LAMP**

REMOVAL AND INSTALLATION

INSPECTION

**REAR COMBINATION LAMP**

REMOVAL AND INSTALLATION

INSPECTION

**HIGH-MOUNTED STOP LAMP**

REMOVAL SERVICE POINT

**RHEOSTAT****SPECIAL TOOL****RHEOSTAT**

REMOVAL AND INSTALLATION

INSPECTION

**HAZARD WARNING LAMP SWITCH**

SPECIAL TOOL

HAZARD WARNING LAMP SWITCH

REMOVAL AND INSTALLATION

INSPECTION

**CIGARETTE LIGHTER**

REMOVAL AND INSTALLATION

INSPECTION

**CLOCK**

SPECIAL TOOL

CLOCK

REMOVAL AND INSTALLATION

**RADIO AND TAPE PLAYER**

SPECIAL TOOL

TROUBLESHOOTING

QUICK-REFERENCE TROUBLESHOOTING  
CHART

CHART

**RADIO AND TAPE PLAYER**

REMOVAL AND INSTALLATION

**SPEAKER**

REMOVAL AND INSTALLATION

**ANTENNA**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

**REAR WINDOW DEFOGGER****ON-VEHICLE SERVICE**

PRINTED-HEATER LINE CHECK

**REAR WINDOW DEFOGGER SWITCH**

REMOVAL AND INSTALLATION

INSPECTION