

55 HEATER, AIR CONDITIONER AND VENTILATION 1996

CONTENTS

GENERAL INFORMATION

SERVICE SPECIFICATIONS

LUBRICANTS

SEALANT

SPECIAL TOOLS

TROUBLESHOOTING

TROUBLESHOOTING PROCEDURES

INSPECTION AT THE AUTOMATIC COMPRESSOR-ECU TERMINAL

ON-VEHICLE SERVICE

SIGHT GLASS REFRIGERANT LEVEL TEST

MAGNETIC CLUTCH TEST

RECEIVER DRIER TEST

DUAL PRESSURE SWITCH CHECK

COMPRESSOR DRIVE BELT ADJUSTMENT

CHARGING

PERFORMANCE TEST

REFRIGERANT LEAK REPAIR

COMPRESSOR NOISE

POWER RELAY CHECK

IDLE-UP OPERATION CHECK

VACUUM ACTUATOR CHECK <VEHICLES WITH CARBURETTOR>

IDLE-UP SOLENOID VALVE CHECK <VEHICLES WITH CARBURETTOR>

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its **GROUP 52B – Supplemental Restraint System (SRS)** before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).

HEATER CONTROL ASSEMBLY AND A/C SWITCH

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINT
INSTALLATION SERVICE POINT
INSPECTION

HEATER UNIT AND HEATER CORE

REMOVAL AND INSTALLATION

**BLOWER ASSEMBLY AND RESISTOR
<EXCEPT R.H. DRIVE VEHICLES WITH A/C>**

REMOVAL AND INSTALLATION
INSPECTION
RESISTOR CHECK

**EVAPORATOR
<L.H. DRIVE VEHICLES WITH A/C>**

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINT
INSTALLATION SERVICE POINT
DISASSEMBLY AND REASSEMBLY
DISASSEMBLY SERVICE POINT

**EVAPORATOR, BLOWER UNIT AND RESISTOR
<R.H. DRIVE VEHICLES WITH A/C>**

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINTS
INSTALLATION SERVICE POINT
INSPECTION

COMPRESSOR AND TENSION PULLEY

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINTS
INSTALLATION SERVICE POINT
INSPECTION
MAGNETIC CLUTCH
DISASSEMBLY SERVICE POINT
REASSEMBLY SERVICE POINTS

REFRIGERANT LINE

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINT
INSTALLATION SERVICE POINT

CONDENSER AND CONDENSER FAN MOTOR

REMOVAL AND INSTALLATION
REMOVAL SERVICE POINTS
INSTALLATION SERVICE POINT
INSPECTION

**ENGINE COOLANT TEMPERATURE SWITCH
<VEHICLES WITH CARBURETTOR>**

REMOVAL AND INSTALLATION
INSPECTION

IDLE-UP SYSTEM <VEHICLES WITH CARBURETTOR>

REMOVAL AND INSTALLATION

VENTILATORS

REMOVAL AND INSTALLATION