
54C CIRCUIT DIAGRAMS 1997

CONTENTS

STARTING SYSTEM

IGNITION SYSTEM

4G15

4G93

CHARGING SYSTEM

4G15

4G93

MPI SYSTEM

4G15

4G93

ELC 4-SPEED AUTOMATIC TRANSMISSION

ROOM LAMP AND LUGGAGE COMPARTMENT LAMP

<Hatchback>

<Sedan>

METER AND GAUGE

FUEL WARNING LAMP / SEAT BELT WARNING LAMP

POWER WINDOWS

<2-door sedan>

IMMOBILIZER SYSTEM
