

54 CHASSIS ELECTRICAL 1997

CONTENTS

GENERAL

OUTLINE OF CHANGES

IGNITION SWITCH AND IMMOBILIZER SYSTEM

SPECIAL TOOL

TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS
TROUBLESHOOTING

DIAGNOSIS FUNCTION

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

INSPECTION CHART FOR TROUBLE
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE
SYMPTOMS

CHECK AT IMMOBILIZER-ECU

IGNITION SWITCH AND IMMOBILIZER SYSTEM

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

INSPECTION

ID CODE REGISTRATION METHOD

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its [GROUP 52B – Supplemental Restraint System \(SRS\)](#) and [GROUP 00 – Maintenance Service](#) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.