

MITSUBISHI LANCER WORKSHOP MANUAL



MITSUBISHI

FOREWORD

This Service Manual has been prepared with the latest service information available at the time of publication. It is subdivided into various group categories and each section contains diagnostic, disassembly, repair and installation procedures along with complete specifications and tightening references. Please read this manual carefully before proceeding, as incorrect service procedures may result in injury or death to service personnel or to the operator's of the vehicle.

COPYRIGHT 2002

**TECHNICAL PUBLICATIONS
TONSLEY PARK
SOUTH AUSTRALIA**

© Mitsubishi Motors Australia Ltd. August 2002

Mitsubishi Motors Australia Limited reserves the right to make changes in design or to make additions to or improvements in its products without imposing any obligations upon itself to install them on its products previously manufactured.

General	00
Engine	11
Lubrication	12
Fuel	13
Engine Cooling	14
Intake and Exhaust	15
Engine Electrical	16
Engine and Emission Control .	17
Clutch	21
Manual Transmission	22
Automatic Transmission	23
Front Axle	26
Rear Axle	27
Wheel and Tyre	31
Power Plant Mount	32
Front Suspension	33
Rear Suspension	34
Service Brakes	35
Parking Brakes	36
Steering	37
Body	42
Exterior	51
Interior	52
Chassis Electrical	54
Heater, Air Conditioning and Ventilation	55