

# **MITSUBISHI Colt / Lancer WORKSHOP MANUAL**



## **FOREWORD**

This Service Manual has been prepared with the latest service information available at the time of publication. It is subdivided into various group categories and each section contains diagnostic, disassembly, repair and installation procedures along with complete specifications and tightening references. Please read this manual carefully before proceeding, as incorrect service procedures may result in injury or death to service personnel or to the operator's of the vehicle.

**COPYRIGHT 2001**

**SERVICE DIVISION  
TONSLEY PARK  
SOUTH AUSTRALIA**



© Mitsubishi Motors Corporation

|   |           |
|---|-----------|
| <b>General</b> .....                                  | <b>00</b> |
| <b>Engine</b> .....                                   | <b>11</b> |
| <b>Lubrication</b> .....                              | <b>12</b> |
| <b>Fuel</b> .....                                     | <b>13</b> |
| <b>Engine Cooling</b> .....                           | <b>14</b> |
| <b>Intake and Exhaust</b> .....                       | <b>15</b> |
| <b>Engine Electrical</b> .....                        | <b>16</b> |
| <b>Engine and Emission Control</b> .                  | <b>17</b> |
| <b>Clutch</b> .....                                   | <b>21</b> |
| <b>Manual Transmission</b> .....                      | <b>22</b> |
| <b>Automatic Transmission</b> .....                   | <b>23</b> |
| <b>Front Axle</b> .....                               | <b>26</b> |
| <b>Rear Axle</b> .....                                | <b>27</b> |
| <b>Wheel and Tyre</b> .....                           | <b>31</b> |
| <b>Power Plant Mount</b> .....                        | <b>32</b> |
| <b>Front Suspension</b> .....                         | <b>33</b> |
| <b>Rear Suspension</b> .....                          | <b>34</b> |
| <b>Service Brakes</b> .....                           | <b>35</b> |
| <b>Parking Brakes</b> .....                           | <b>36</b> |
| <b>Steering</b> .....                                 | <b>37</b> |
| <b>Body</b> .....                                     | <b>42</b> |
| <b>Exterior</b> .....                                 | <b>51</b> |
| <b>Interior</b> .....                                 | <b>52</b> |
| <b>Chassis Electrical</b> .....                       | <b>54</b> |
| <b>Heater, Air Conditioning and Ventilation</b> ..... | <b>55</b> |