
GROUP 70

COMPONENT LOCATIONS


CONTENTS

SENSOR.....	70-2	FUSIBLE LINK AND FUSE	70-12
RELAY	70-6	EARTH CABLE.....	70-13
ECU	70-7	DIODE.....	70-14
SOLENOID VALVE	70-10	EARTH	70-14
INSPECTION CONNECTOR AND SPARE CONNECTOR.....	70-11		

SENSOR







M1701000600932










Name	Symbol	Name	Symbol
Accelerator pedal position sensor	M	Outside air temperature sensor <Automatic A/C>	H
Air cleaner air flow sensor	D	Oxygen sensor <Front>	G
Air thermo sensor	K	Oxygen sensor <Rear>	N
Camshaft position sensor	I	Photo sensor <Automatic A/C>	L
Detonation sensor	B	Side impact sensor (Front)	O
Engine crank angle sensor	F	Side impact sensor (Rear)	P
Electronic-controlled throttle valve (incorporating throttle position sensor)	C	Vehicle speed sensor <M/T>	E
Input shaft speed sensor <A/T>	J	Water temperature sensor unit	I
Manifold absolute pressure sensor	A	Wheel speed sensor (Front)	Q
Output shaft speed sensor <A/T>	J	Wheel speed sensor (Rear)	R




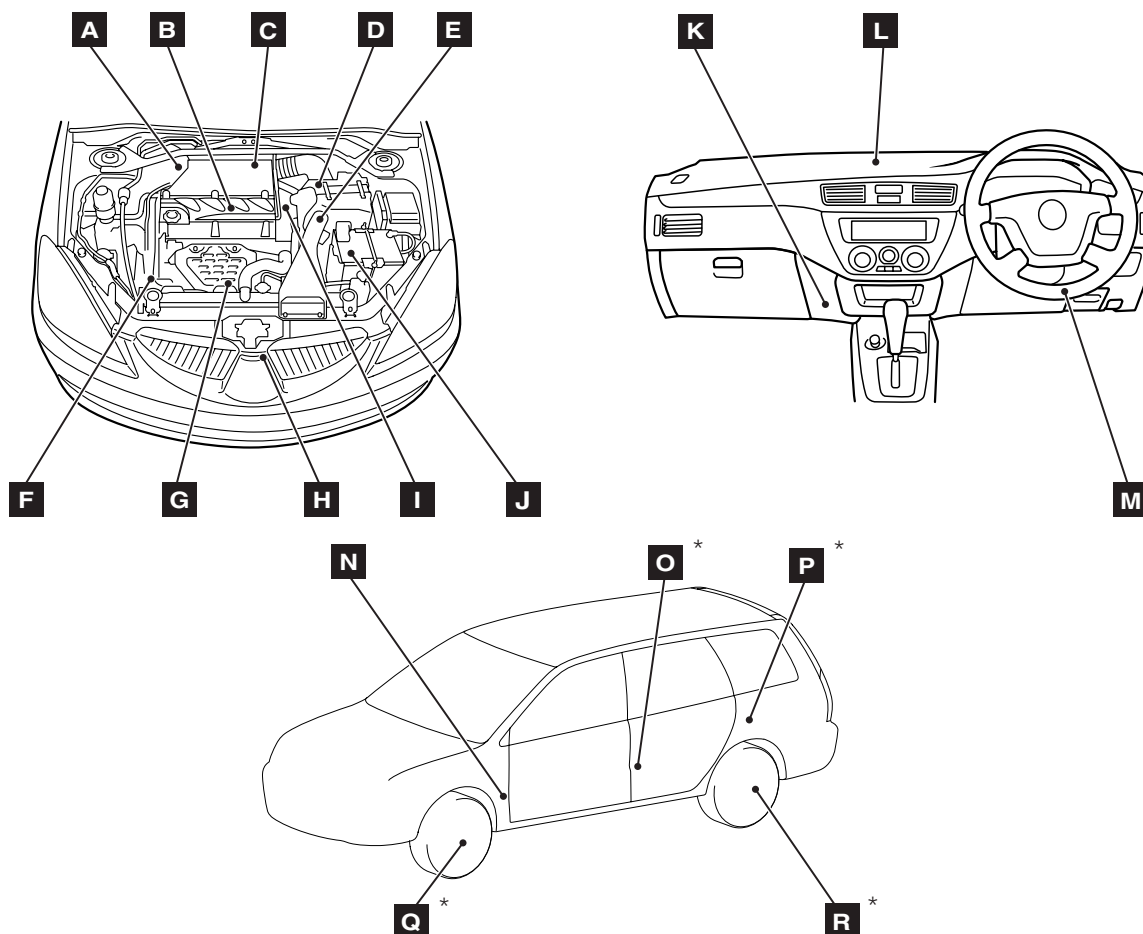


AC503508AB

NOTE: *: also equipped at the right side.

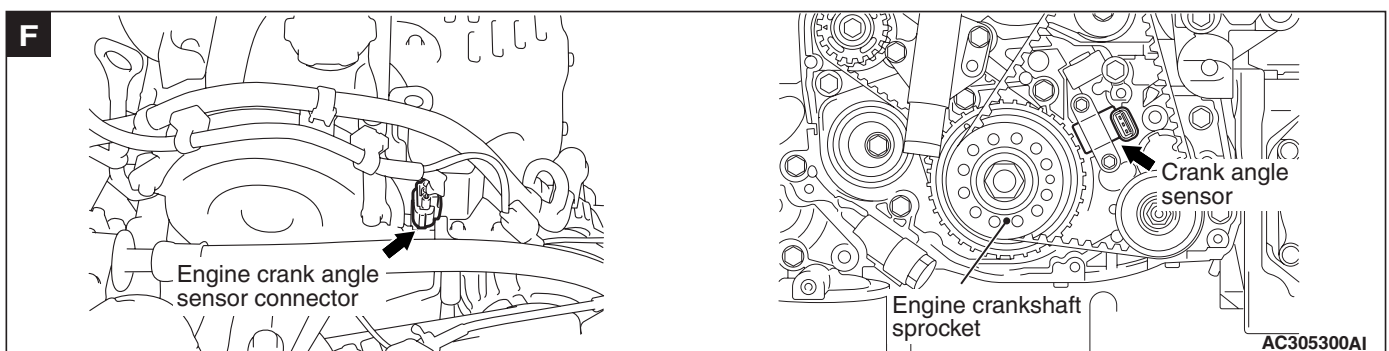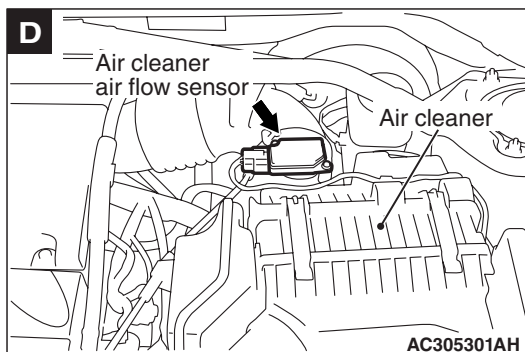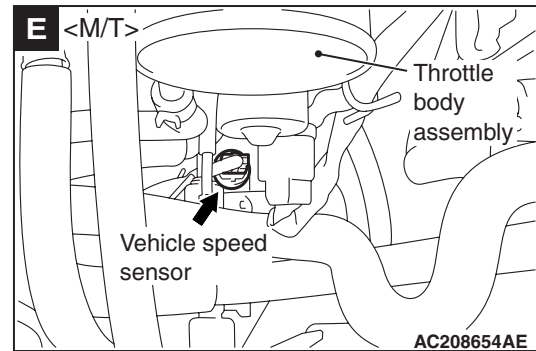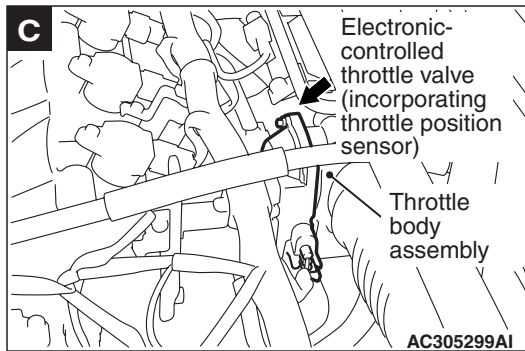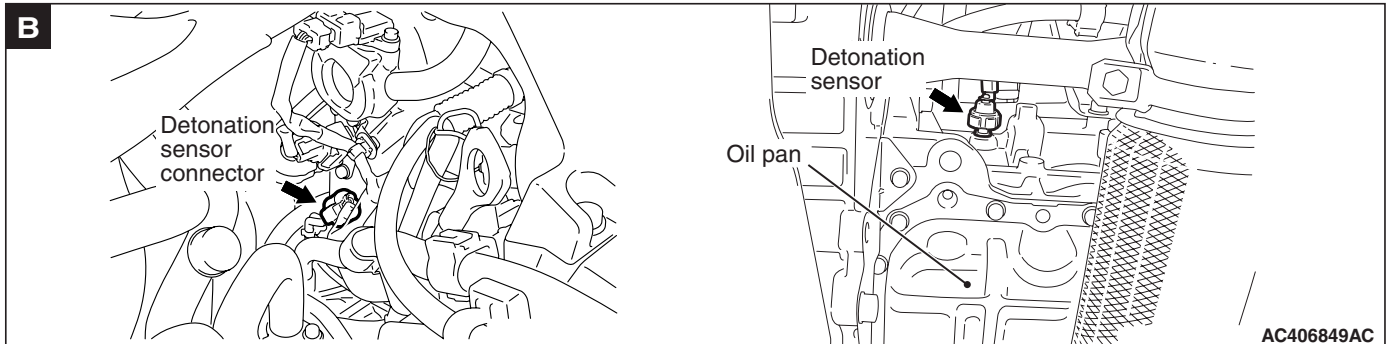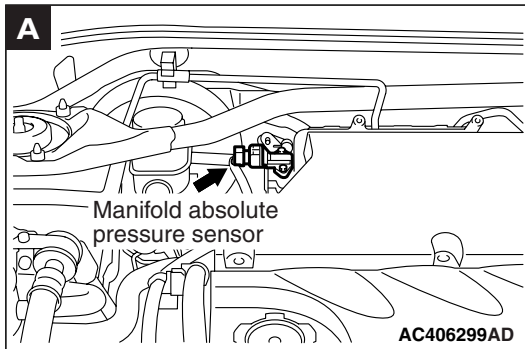

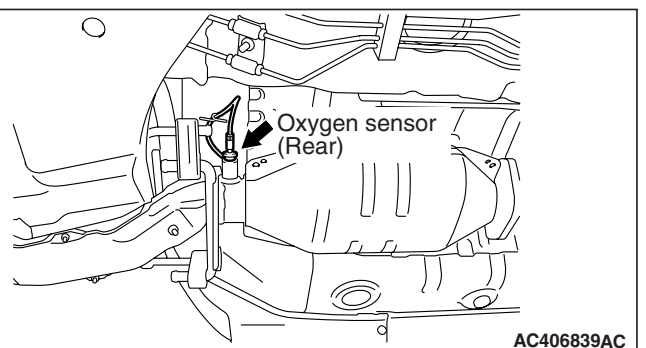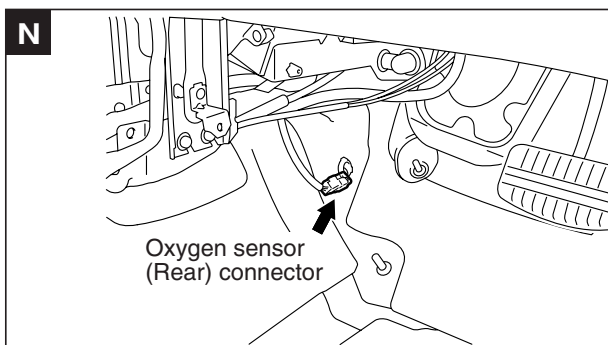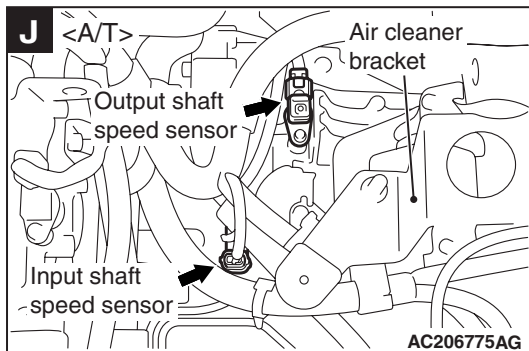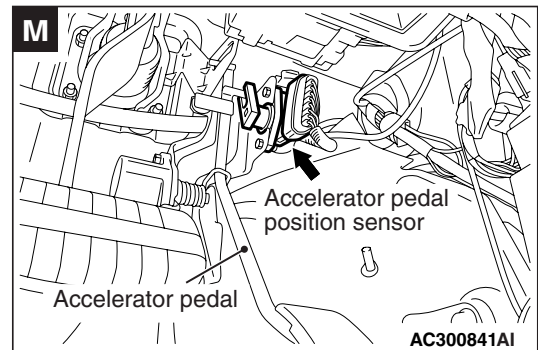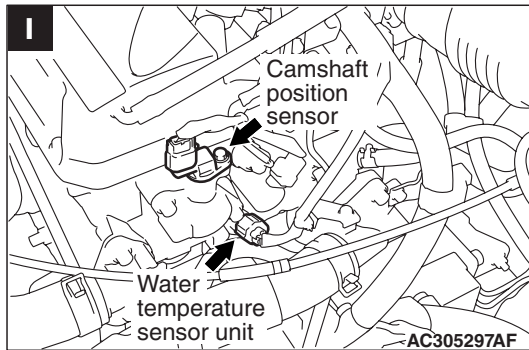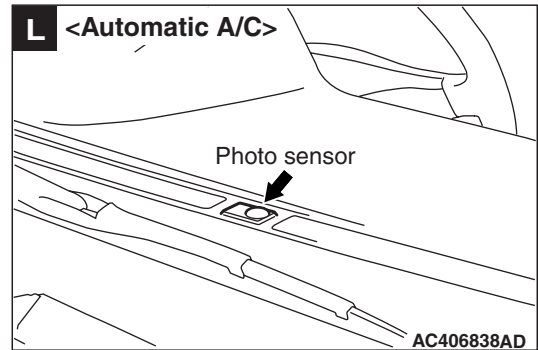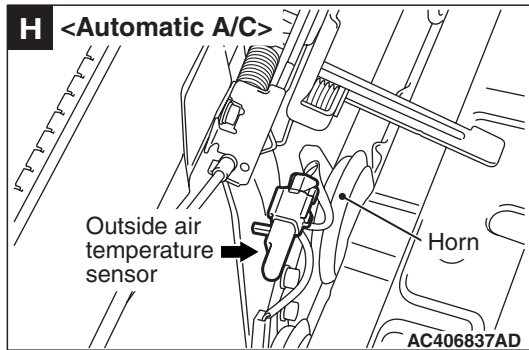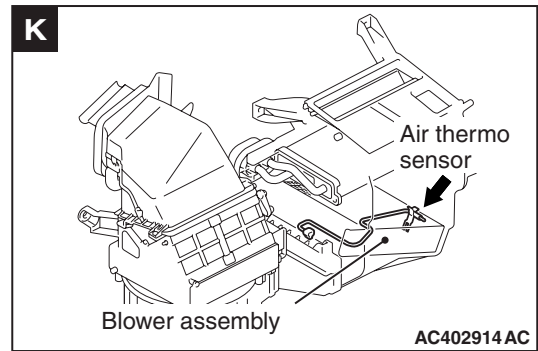
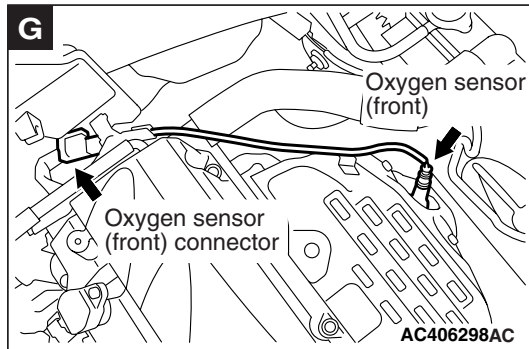


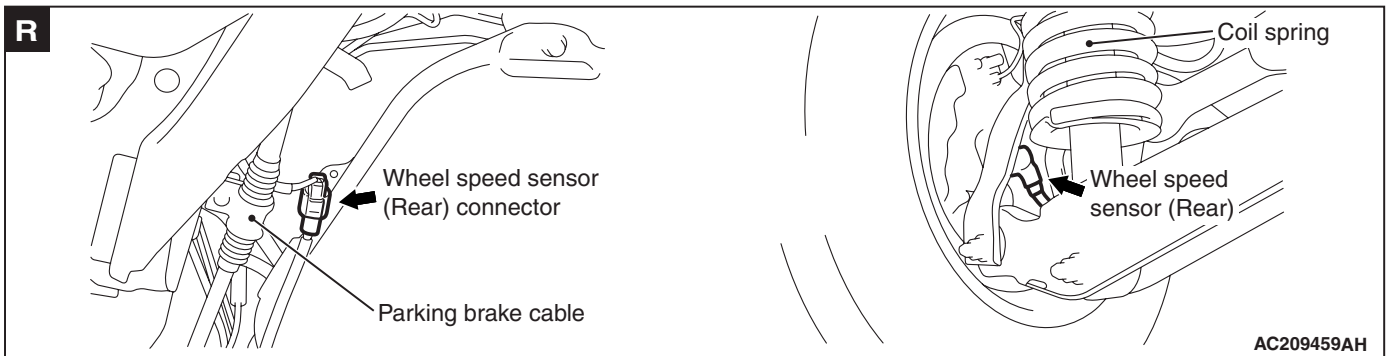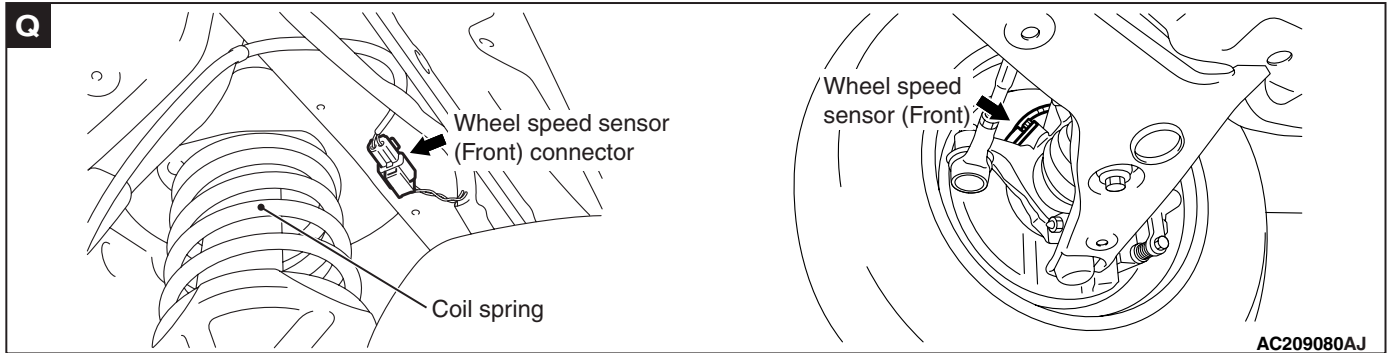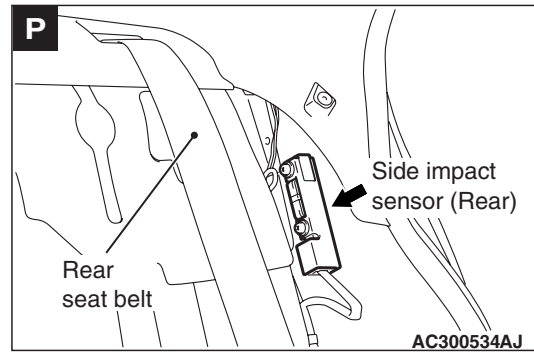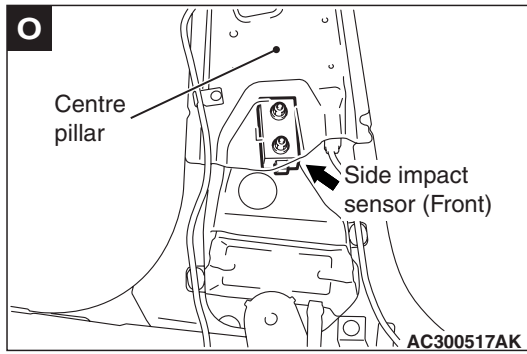


RELAY

M1701000400767


Name	Symbol	Name	Symbol
ABS warning lamp relay	B	Fuel pump relay (2)	B
A/C compressor relay	A	Horn relay	A
A/T control relay	A	Ignition coil relay	A
Accessory socket relay	B	Power window relay	B
Blower relay	B	Radiator fan relay	A
Engine control relay	A	Rear window defogger relay	B
Fog lamp relay	A	Throttle control servo relay	A
Fuel pump relay (1)	B		

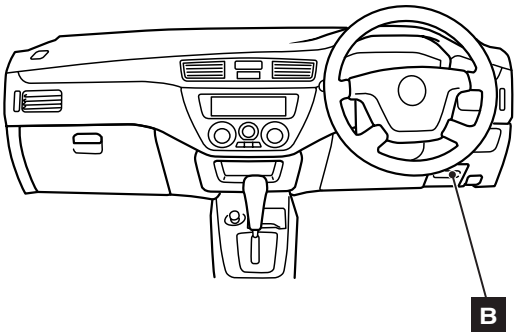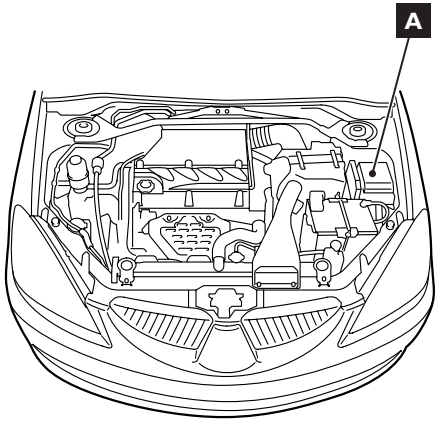

AC500426AC

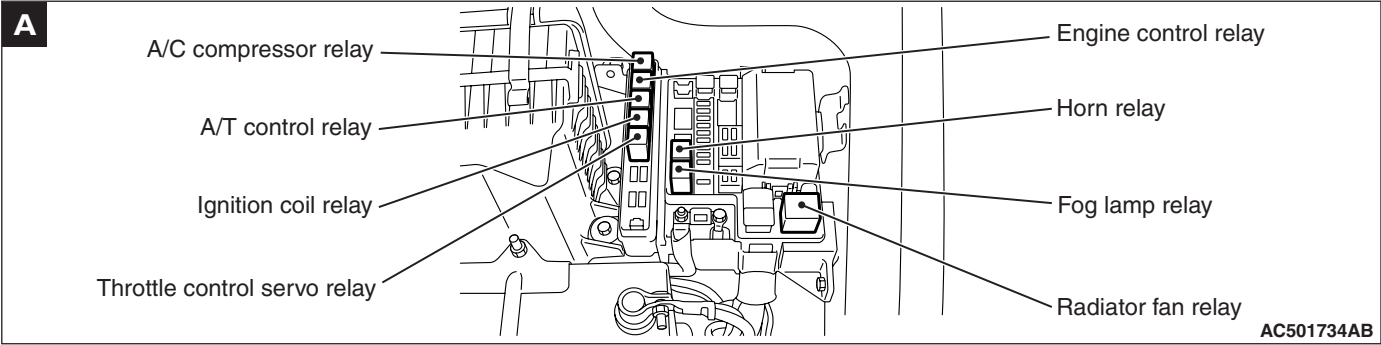


AC501734AB

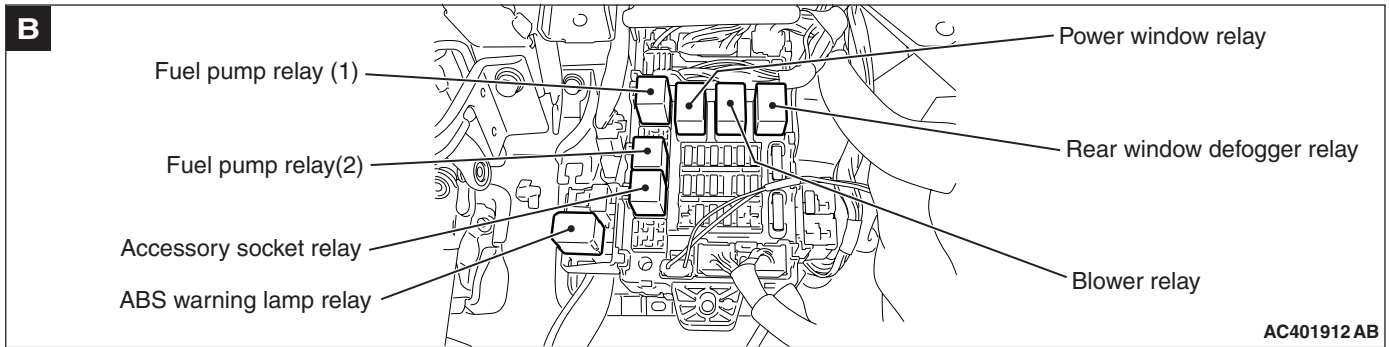





ECU







M1701000500333

Name	Symbol	Name	Symbol
A/C-ECU	D	ETACS-ECU	H
ABS-ECU	A	Front-ECU	B
Column switch (incorporating Column-ECU)	E	Immobiliser-ECU	I
Cooling fan motor drive control unit	C	SRS-ECU	G
Engine-A/T-ECU <A/T>	F	Sunroof motor assembly (incorporating sunroof-ECU)	J
Engine-ECU <M/T>	F		

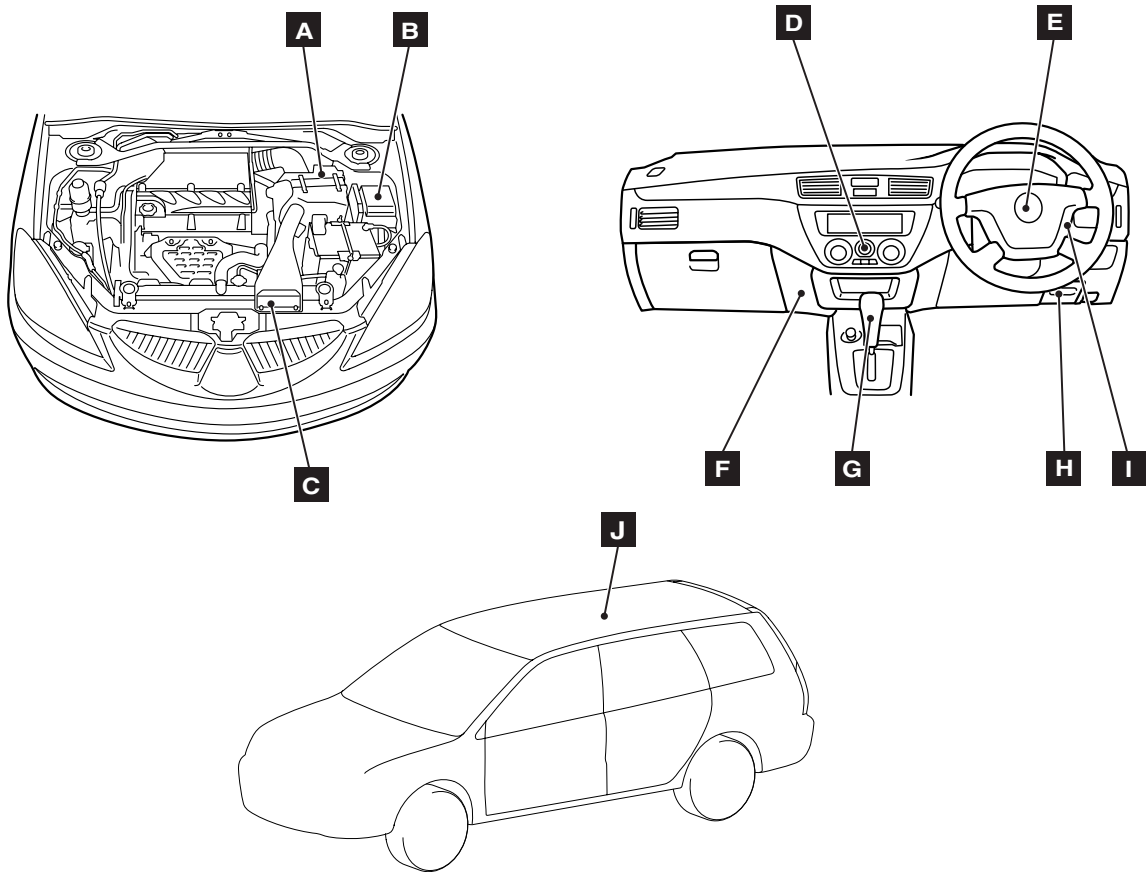

AC503508AC

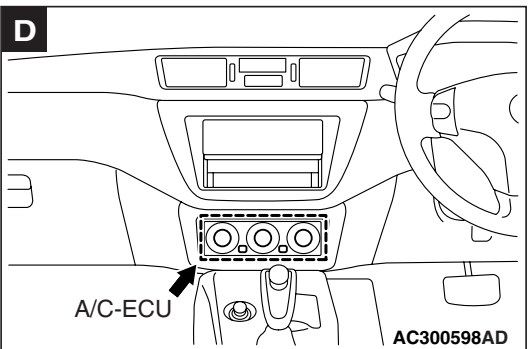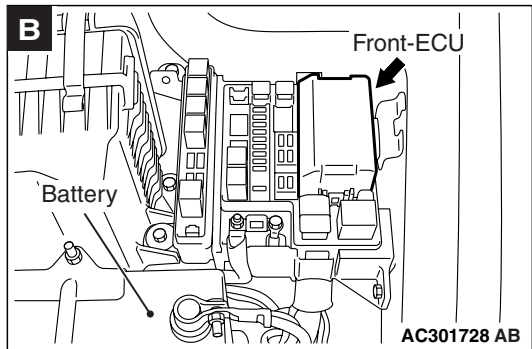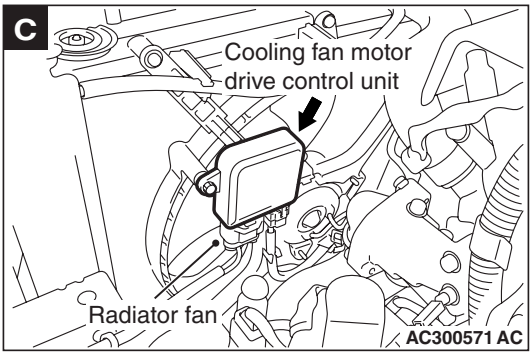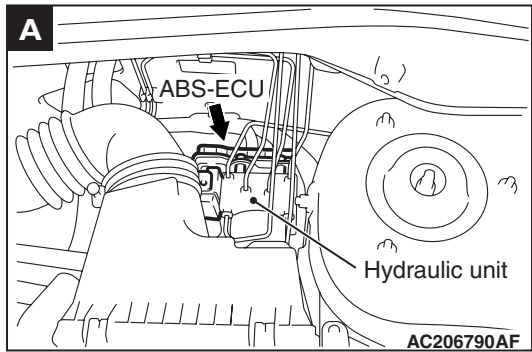


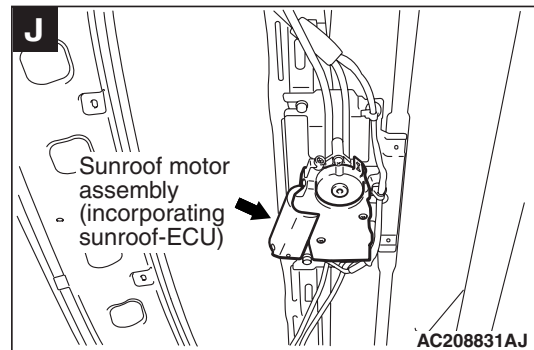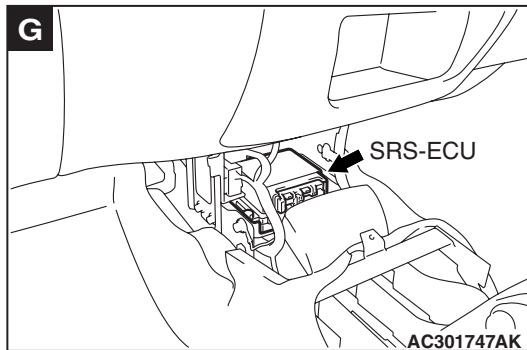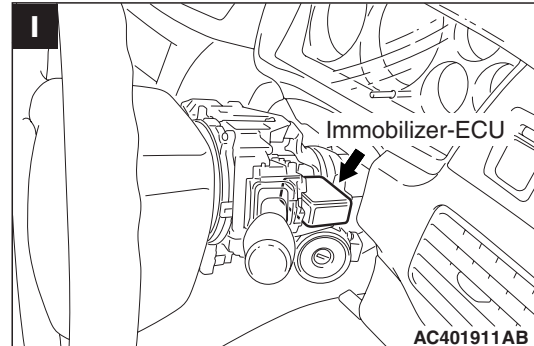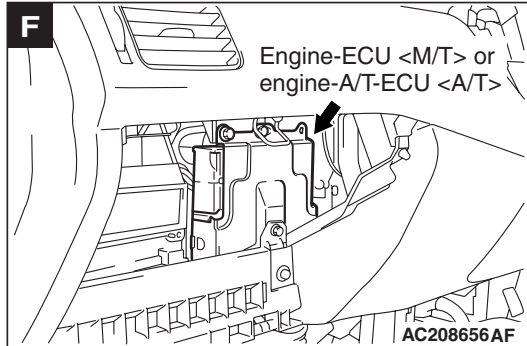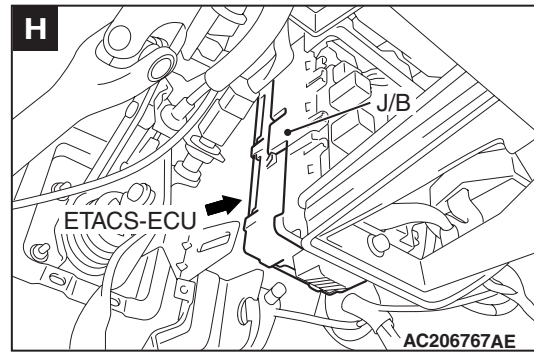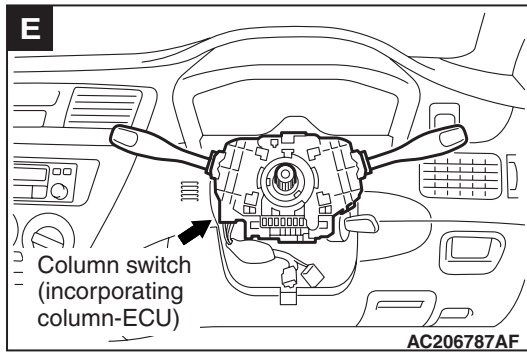




SOLENOID VALVE


M1701000800776

Name	Symbol	Name	Symbol
A/T control solenoid valve assembly	D	Hydraulic unit (incorporating solenoid valve)	C
Emission solenoid valve (Purge control system)	A	Oil control valve	B

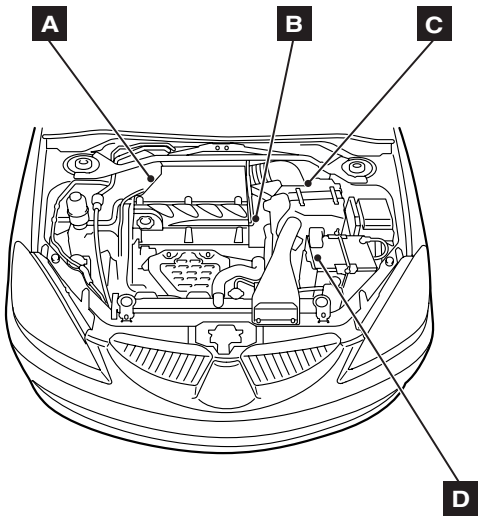

AC500429AC

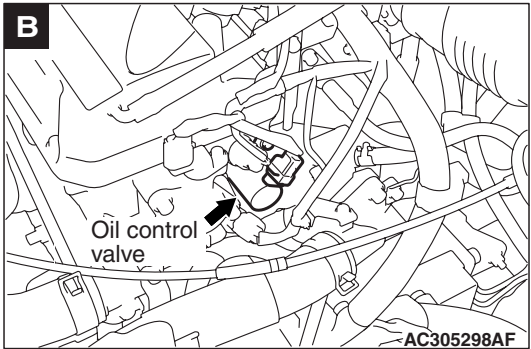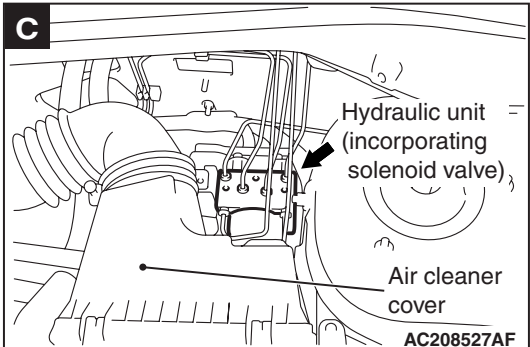
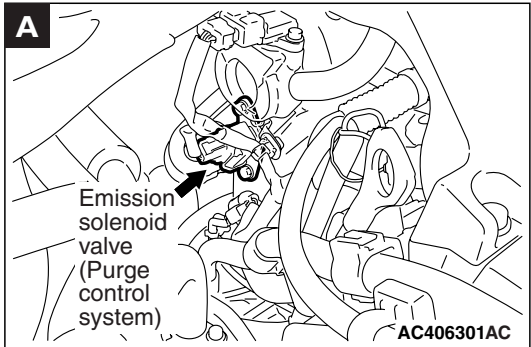


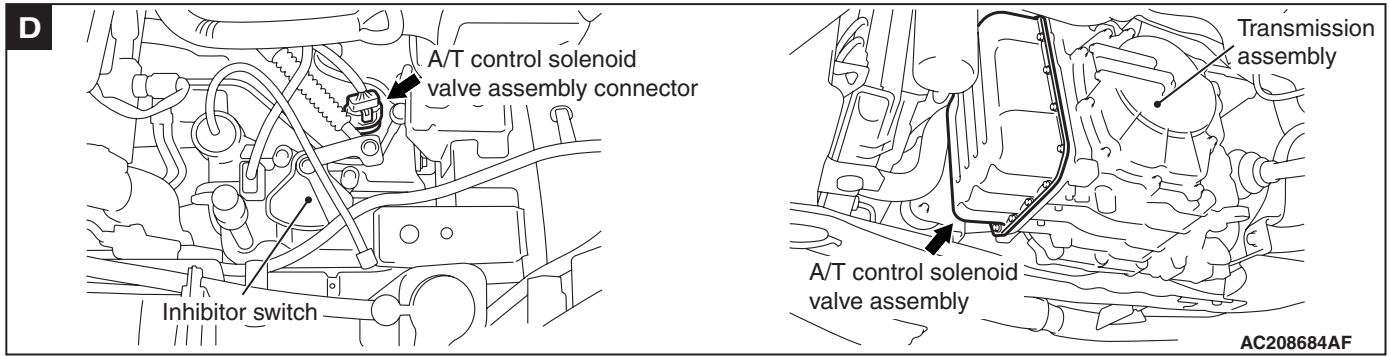



INSPECTION CONNECTOR AND SPARE CONNECTOR




M1701000200666

Name	Symbol	Name	Symbol
Diagnosis connector	E	Spare connector (for fog lamp relay)	B
Engine speed detection connector	B	Spare connector (for fog lamp switch)	D
Spare connector (for fog lamp)	A	Spare connector (for audio)	C

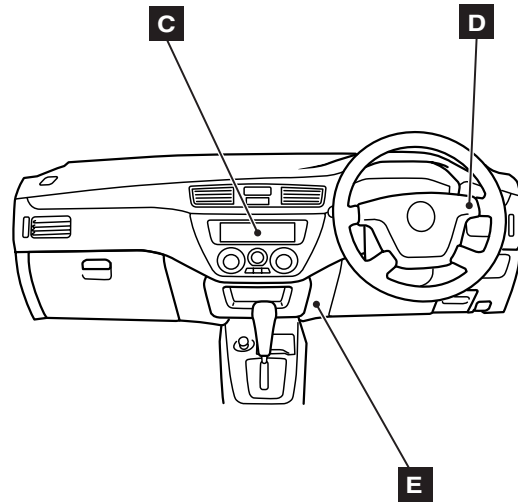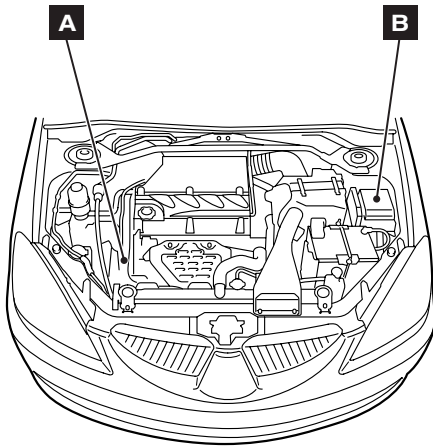

AC500426AD

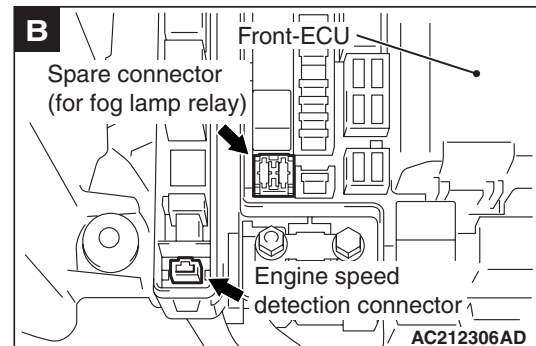
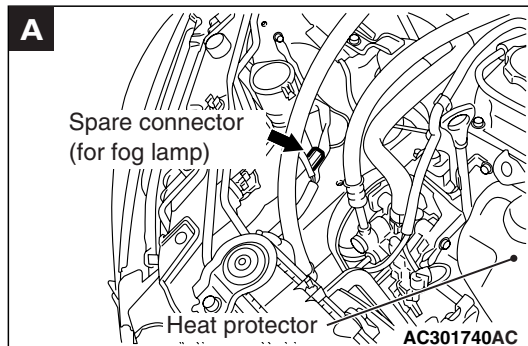



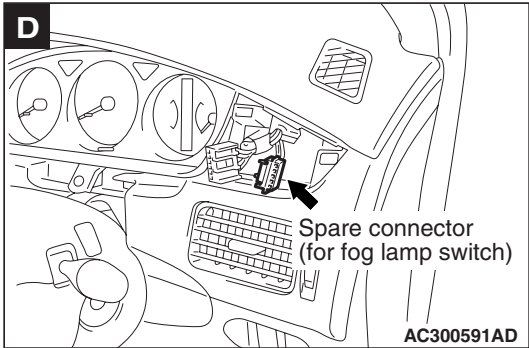
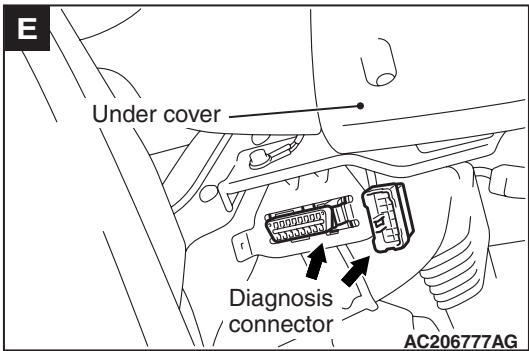
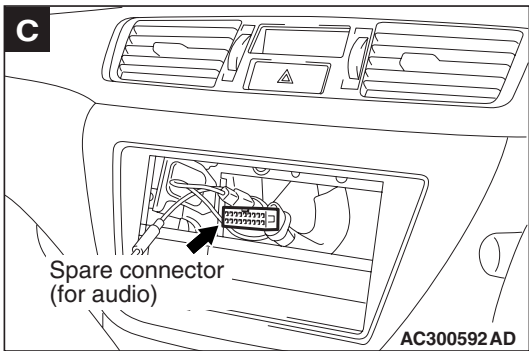


FUSIBLE LINK AND FUSE

M1701000100766



Name	Symbol	Name	Symbol
Fuse Nos.1 to 21 (Passenger compartment)	C	Fusible link Nos.1 to 5 (Engine compartment)	B
Fuse Nos.6 to 25 (Engine compartment)	B	Fusible link No.26 (Battery positive terminal)	A

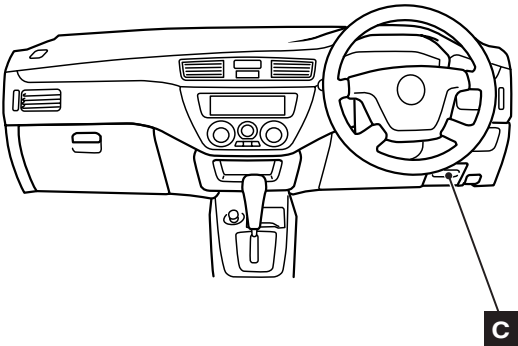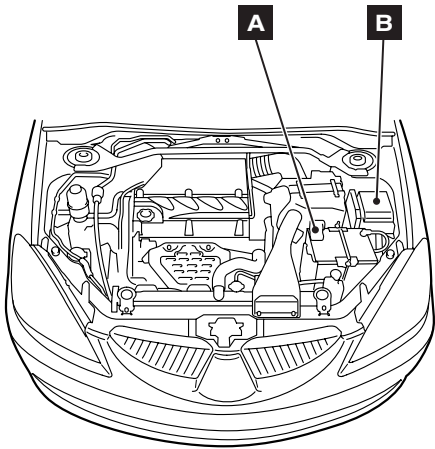

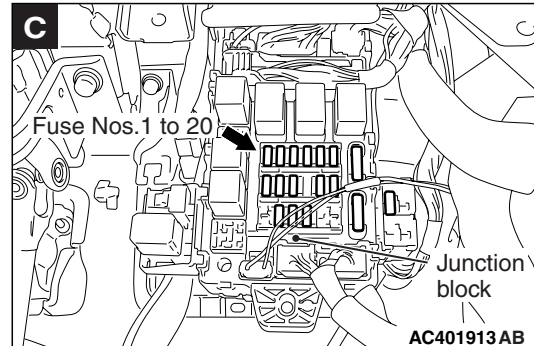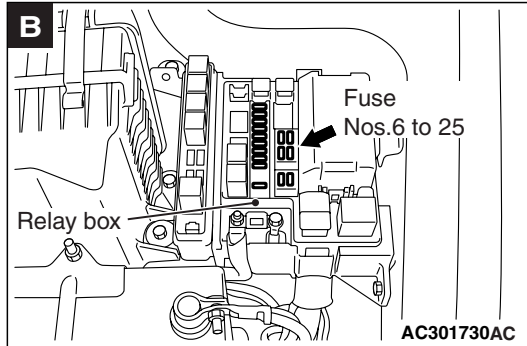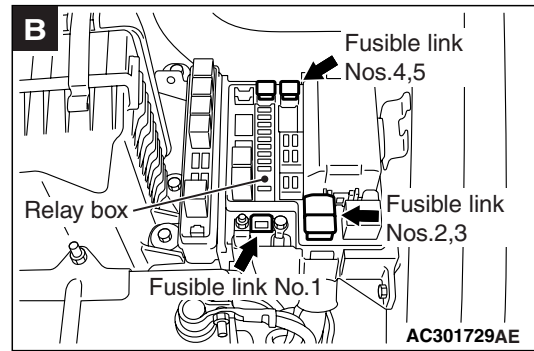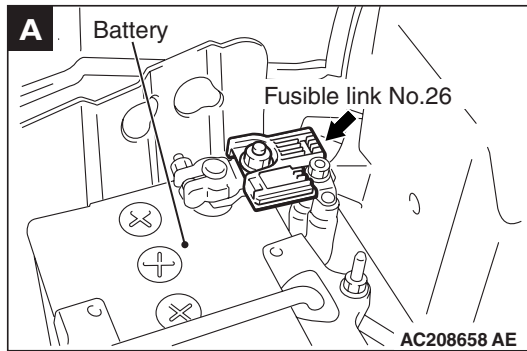


EARTH CABLE

M1701001000610

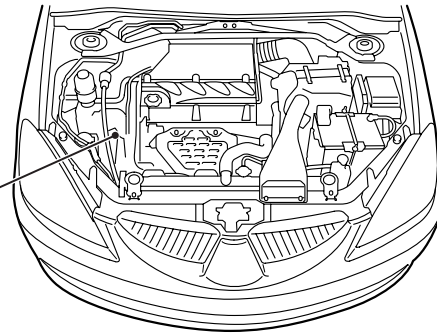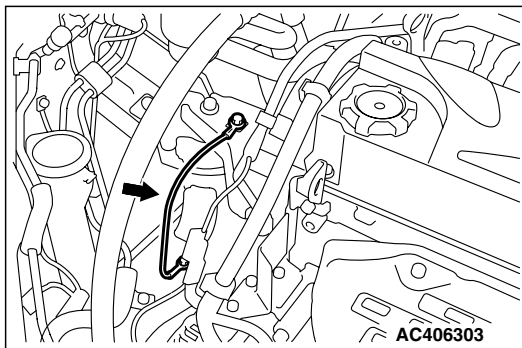

DIODE


M1701000900256

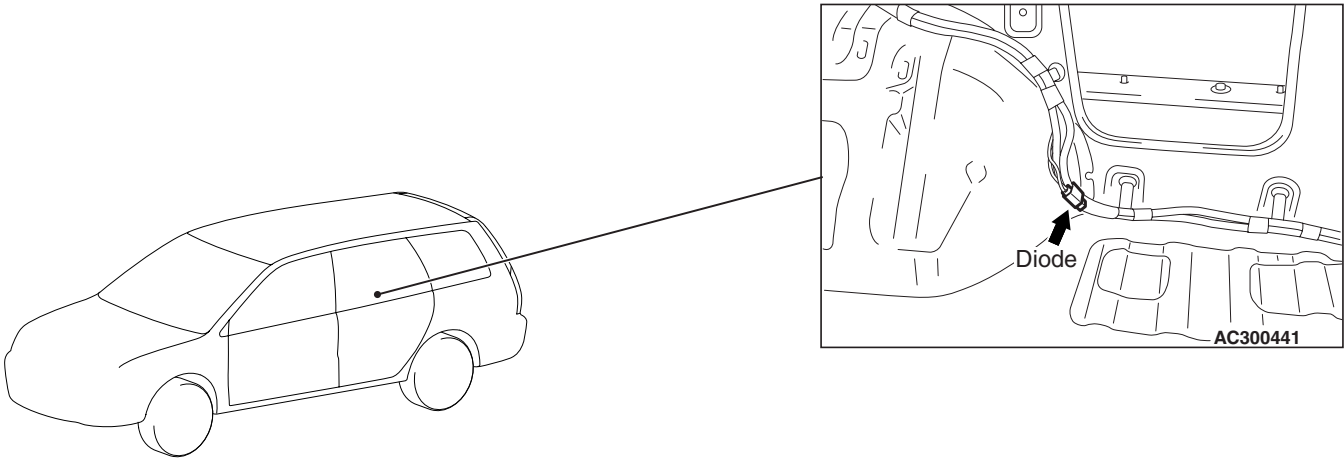

AC301240AE

EARTH

M1701000300759

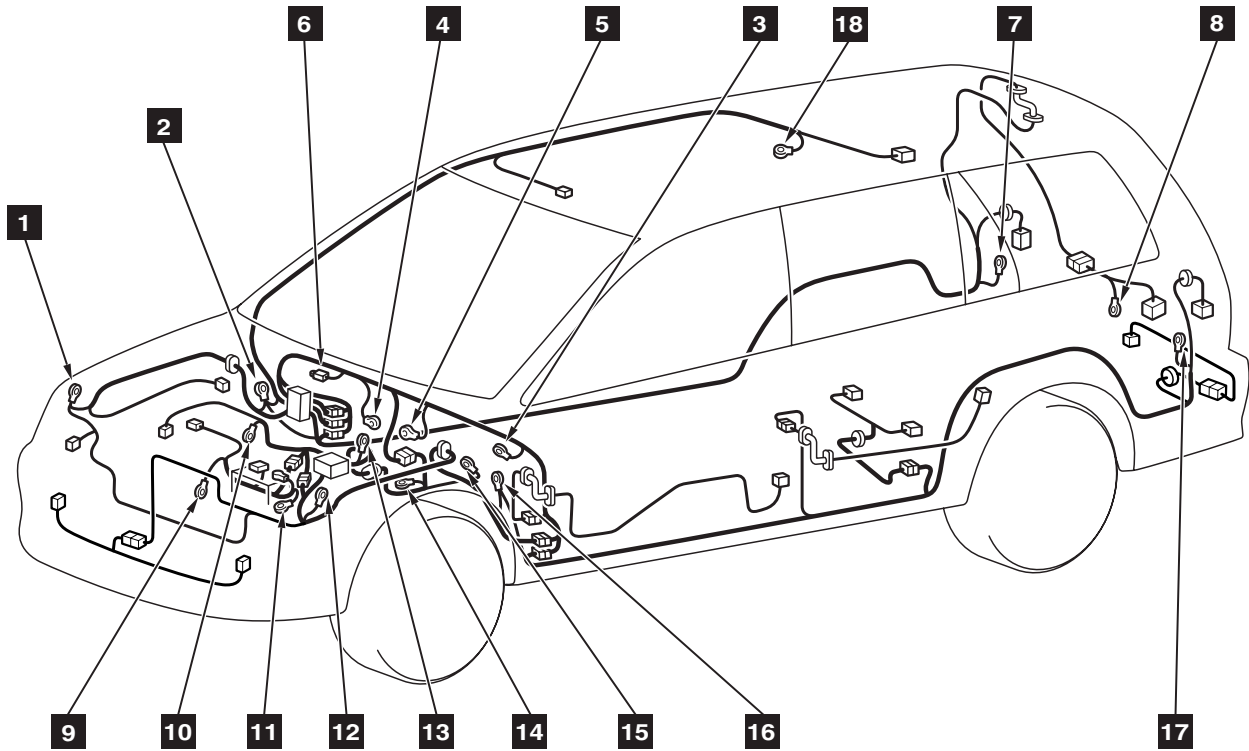

AC402165AC

NOTE: Same earth numbers are used in the circuit diagram.

