

00 GENERAL

CONTENTS

HOW TO USE THIS MANUAL

MAINTENANCE, REPAIR AND
SERVICING EXPLANATIONS
ON VEHICLE SERVICE
INSPECTION
DEFINITION OF TERMS
INDICATION OF TIGHTENING TORQUE
ABBREVIATIONS
EXPLANATION OF MANUAL CONTENTS

HOW TO USE TROUBLESHOOTING/ INSPECTION SERVICE POINTS

TROUBLESHOOTING CONTENTS
DIAGNOSIS FUNCTION
HOW TO USE THE INSPECTION
PROCEDURES
CONNECTOR MEASUREMENT SERVICE
POINTS
CONNECTOR INSPECTION

INSPECTION SERVICE POINTS FOR A
BLOWN FUSE

POINTS TO NOTE FOR INTERMITTENT
MALFUNCTIONS

VEHICLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER (VIN)
COMPLIANCE PLATE
DATA PLATE
AUSTRALIAN DESIGN RULES
ENGINE MODEL NUMBER

OPTION CODES

DATA PLATE

MAJOR SPECIFICATIONS

<VEHICLES FOR AUSTRALIA>
<VEHICLES FOR NEW ZEALAND>
<VEHICLES FOR PACIFIC REGION & BRUNEI>

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

HOW TO DIAGNOSE

TROUBLESHOOTING STEPS
INFORMATION FOR DIAGNOSIS
INSPECTION
INSPECTION INSTRUMENTS
CHECKING SWITCHES
CHECKING RELAYS
CHECKING FUSES
CABLES AND WIRES CHECK
BATTERY HANDLING
GENERAL ELECTRICAL SYSTEM CHECK

SERVICE PRECAUTIONS

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)
ENGINE-A/T ECU AND BEM/IMMOBILISER
SERVICE REQUIREMENTS
SERVICING THE ELECTRICAL SYSTEM
VEHICLE WASHING
MUT-II

TOWING AND HOISTING (2WD)

TOWING RECOMMENDATION

TOWING AND HOISTING (AWD)

TOWING RECOMMENDATION
LIFTING, JACKING SUPPORT LOCATION

TIGHTENING TORQUE
