


DASH PANEL

Connector
symbol
B
-59
thru
-129

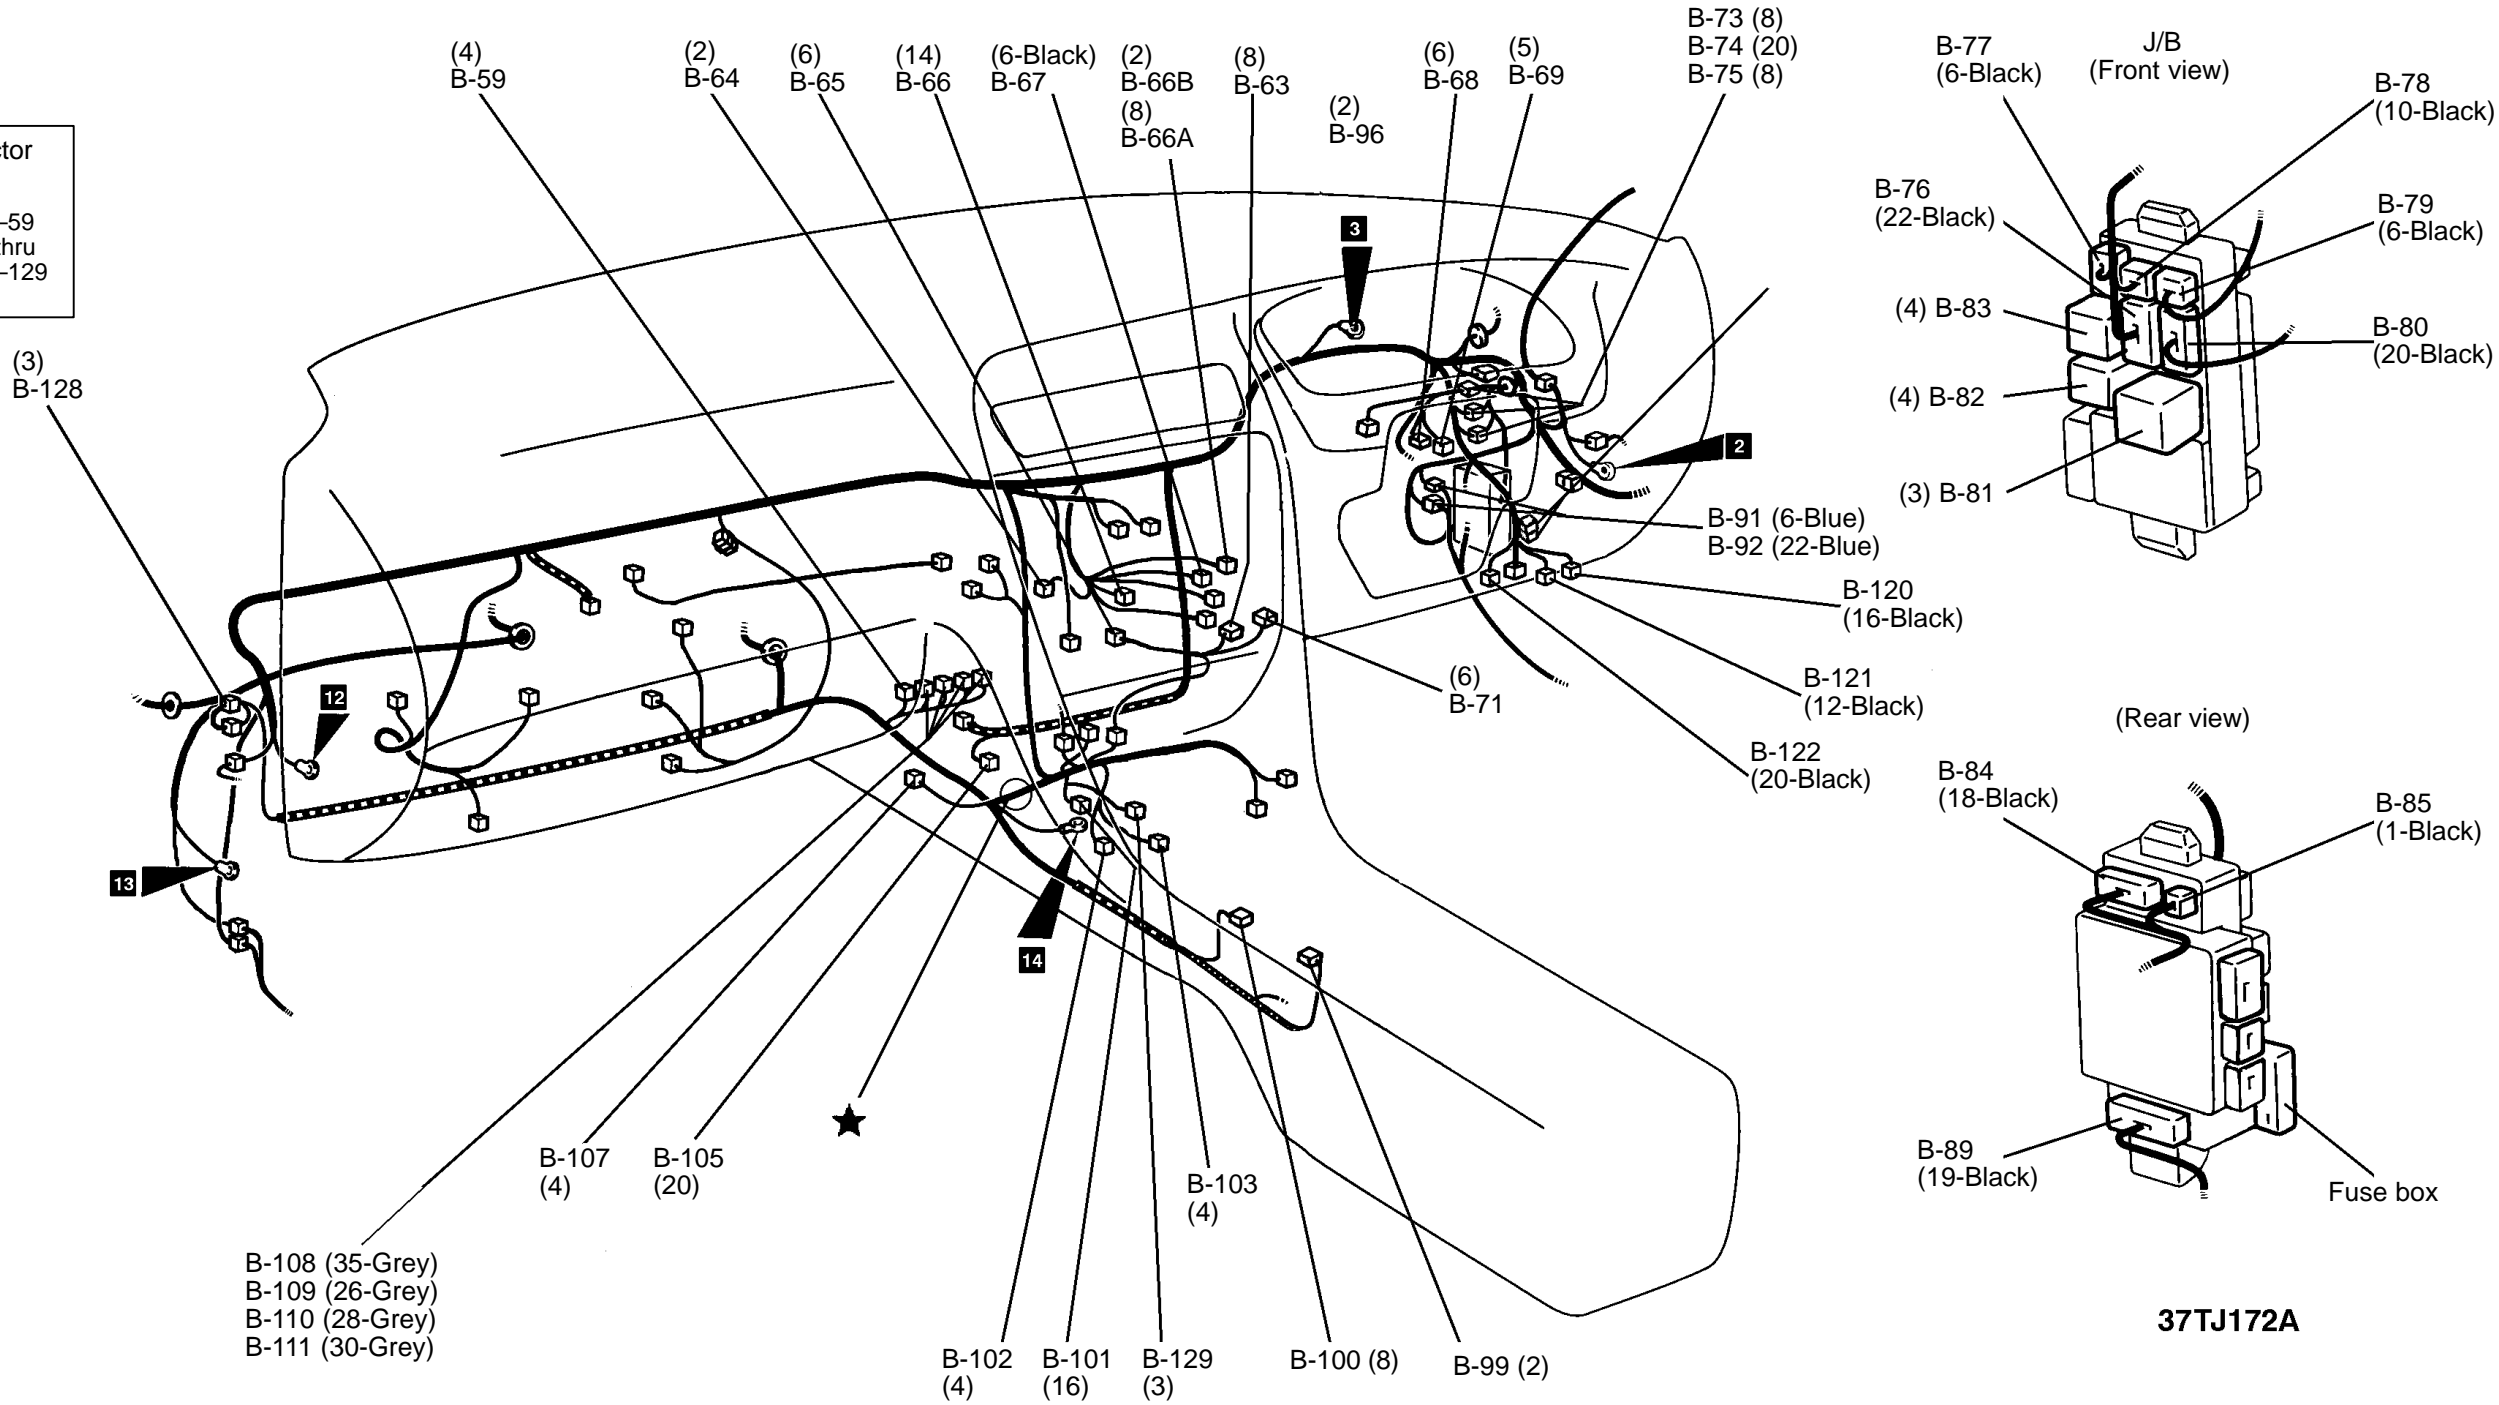

B-59 A/T control relay
B-63 Blower switch
B-64 Illumination
B-65 Mode selector damper motor/potentiometer
B-66 Radio and tape player
B-66A Radio and tape player
B-66B Radio and tape player
B-67 Radio and tape player
B-68 Ignition switch
B-69 Key reminder switch
B-71 Rear defogger switch

B-73 Connection of front and dash harnesses
B-74 Connection of front and dash harnesses
B-75 Connection of front and dash harnesses
B-76 Connection of dash harness and J/B
B-77 Connection of dash harness and J/B
B-78 Connection of dash harness and J/B
B-79 Connection of roof harness and J/B
B-80 Connection of instrument panel harness and J/B
B-81 Turn/hazard flasher unit
B-82 Defogger relay
B-83 Blower relay

B-84 Connection of front harness and J/B
B-85 Connection of front harness and J/B
B-89 Connection of floor harness (RH) and J/B
B-91 Connection of floor (RH) and dash harnesses
B-92 Connection of floor (RH) and dash harnesses
B-96 Clutch switch
B-99 Position indicator lamp assembly (SPORTS)
B-100 Manual control switch assembly
B-101 Cruise ECU
B-102 Fuel pump relay
B-103 Engine control relay

B-105 Connection of instrument panel and control harness
B-107 O2 sensor
B-120 Body electronics module
B-121 Body electronics module
B-122 Body electronics module
B-128 Connection of control harness and ABS harness (AWD)
B-129 G-Sensor

Main
Index


54
Index

54B
AWD

REAR FLOOR LOWER SECTION

Connector
symbol

H

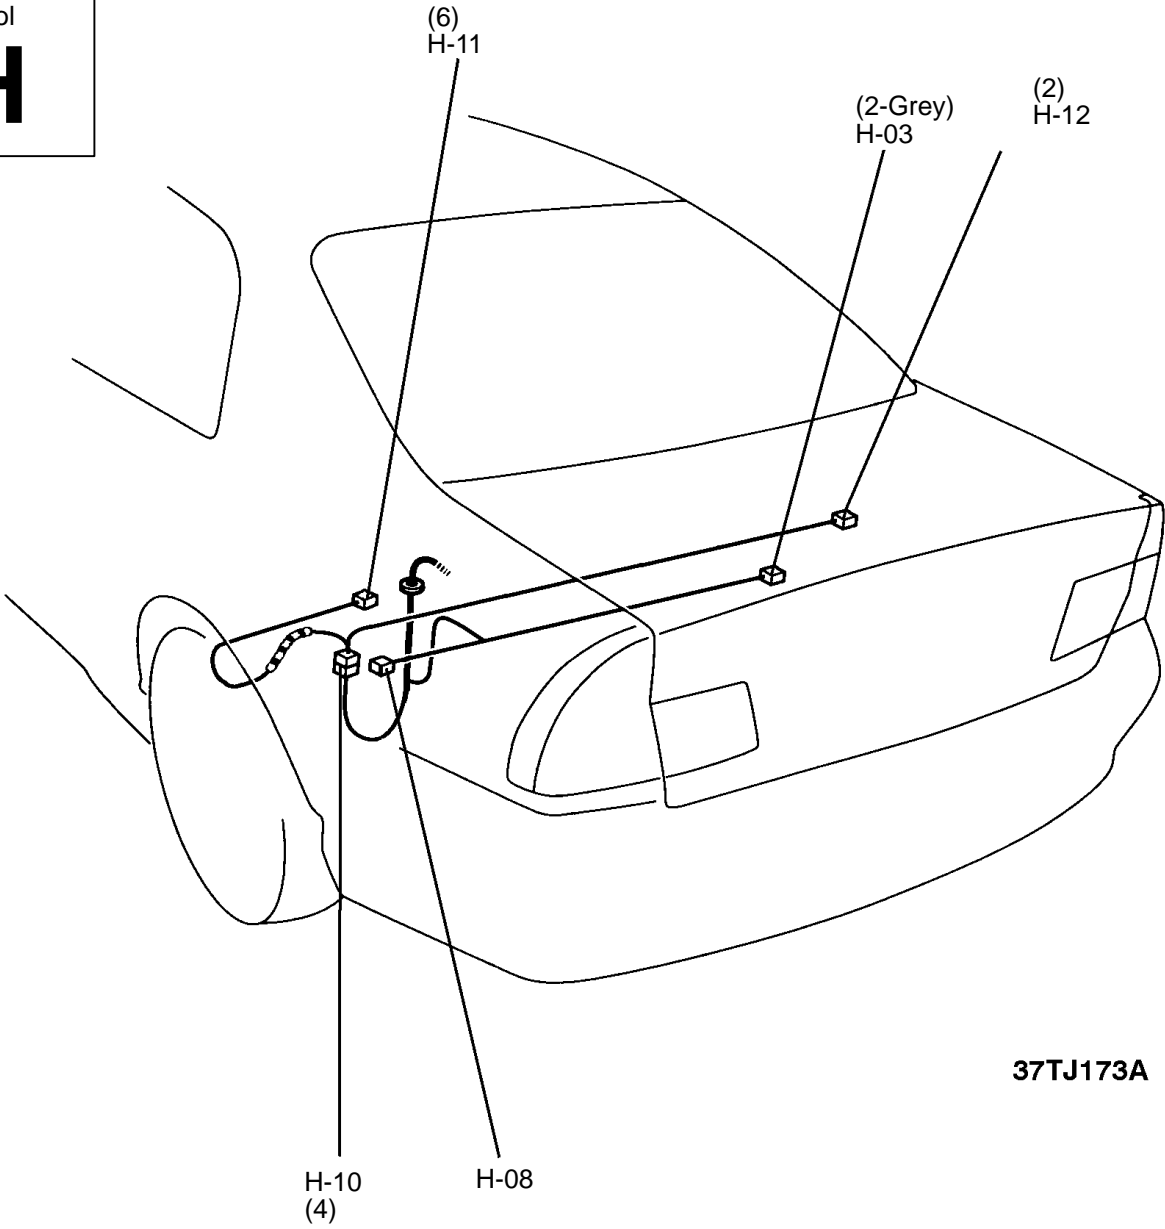

37TJ173A

- H-03 Rear speed sensor (RH) <ABS>
- H-08 Rear speed sensor (LH) <ABS>
- H-10 Connection of floor (LH) and fuel harnesses
- H-11 Fuel gauge and pump unit
- H-12 Fuel gauge unit

Main
Index

54
Index

54B
AWD