

# 00 GENERAL <AWD>

## CONTENTS

### HOW TO USE THIS MANUAL

MAINTENANCE, REPAIR AND  
SERVICING EXPLANATIONS

ON VEHICLE SERVICE

INSPECTION

DEFINITION OF TERMS

INDICATION OF TIGHTENING TORQUE

ABBREVIATIONS

### VEHICLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER (VIN)

### OPTION CODES

DATA PLATE

### MAJOR SPECIFICATIONS

<VEHICLES FOR AUSTRALIA>

<VEHICLES FOR NEW ZEALAND>

<VEHICLES FOR PACIFIC REGION & BRUNEI>

### TOWING AND HOISTING

TOWING RECOMMENDATION

LIFTING, JACKING SUPPORT LOCATION

### TIGHTENING TORQUE

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.