

# ENGINE

## <3.0 & 3.5L>

# 6G72/74 SERIES

### CONTENTS

#### GENERAL INFORMATION

#### SERVICE SPECIFICATIONS

#### SEALANT

#### SPECIAL TOOLS

#### TROUBLESHOOTING

#### ON VEHICLE SERVICE

DRIVE BELT TENSION CHECK AND  
ADJUSTMENT

IGNITION TIMING CHECK

CURB IDLE SPEED CHECK

IDLE MIXTURE CHECK

COMPRESSION PRESSURE CHECK

MANIFOLD VACUUM CHECK

LASH ADJUSTER CHECK

BLEEDING THE LASH ADJUSTER SYSTEM

#### ENGINE ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

#### CAMSHAFT OIL SEAL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

#### CRANKSHAFT OIL SEALS

FRONT OIL SEAL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINT

REAR OIL SEAL

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

#### OIL PAN, LOWER

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINT

#### OIL PAN, UPPER

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINT

INSPECTION

---

## **CYLINDER HEAD GASKET**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS