

# 13H TRACTION CONTROL SYSTEM (TCL)

## CONTENTS

### GENERAL DESCRIPTION

### SPECIAL TOOLS

### SERVICE SPECIFICATIONS

### DIAGNOSIS

DIAGNOSTIC TROUBLESHOOTING FLOW

DIAGNOSIS FUNCTION

INSPECTION CHART FOR DIAGNOSIS  
TROUBLE CODES

INSPECTION PROCEDURES FOR DIAGNOSIS  
CODES

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

DATA LIST REFERENCE TABLE

### CHECK AT ECU TERMINALS

### ON-VEHICLE SERVICE

INDICATOR LAMP CHECK

TCL SYSTEM OPERATION CHECK

STOP LAMP SWITCH CHECK

WHEEL SPEED SENSOR CHECK

VACUUM SOLENOID VALVE CHECK

VENTILATION SOLENOID VALVE CHECK

VACUUM TANK CHECK

VACUUM ACTUATOR CHECK

ACCELERATOR PEDAL POSITION SENSOR  
(APS) CHECK

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

#### NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (\*)

---

**TCL SWITCH**

REMOVAL AND INSTALLATION

INSPECTION

**STEERING WHEEL SENSOR**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSPECTION

**TCL-ECU**

REMOVAL AND INSTALLATION

INSPECTION