

ENGINE COOLING

CONTENTS

GENERAL INFORMATION

CONSTRUCTION DIAGRAM

SERVICE SPECIFICATIONS

LUBRICANT

SEALANT

ON-VEHICLE SERVICE

ENGINE COOLANT LEAK CHECK

RADIATOR CAP VALVE OPENING PRESSURE
CHECK

ENGINE COOLANT REPLACEMENT

CONCENTRATION MEASUREMENT

THERMOSTAT

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

INSPECTION

WATER PUMP

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

WATER HOSE AND WATER PIPE

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

INSPECTION

RADIATOR

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINT

INSPECTION
