

# 17 ENGINE AND EMISSION CONTROL

## CONTENTS

### ENGINE CONTROL SYSTEM

#### GENERAL INFORMATION

#### SERVICE SPECIFICATIONS

#### ON-VEHICLE SERVICE

#### ACCELERATOR CABLE AND PEDAL

#### INSTALLATION SERVICE POINT

#### CRUISE CONTROL SYSTEM

#### GENERAL INFORMATION

##### CONSTRUCTION DIAGRAM

#### SERVICE SPECIFICATIONS

#### SPECIAL TOOLS

#### TROUBLESHOOTING

#### DATA LIST REFERENCE TABLE

#### ON-VEHICLE SERVICE

##### CRUISE CONTROL SYSTEM OPERATION CHECK

##### CRUISE CONTROL COMPONENT CHECK

#### CRUISE CONTROL

### EMISSION CONTROL SYSTEM

#### GENERAL INFORMATION

#### EMISSION CONTROL DEVICE REFERENCE TABLE

#### SERVICE SPECIFICATIONS

#### SPECIAL TOOL

#### VACUUM HOSE

##### VACUUM HOSE PIPING DIAGRAM

##### VACUUM CIRCUIT DIAGRAM

##### VACUUM HOSE INSTALLATION

##### VACUUM HOSE INSPECTION

### CRANKCASE EMISSION CONTROL SYSTEM

#### GENERAL INFORMATION

#### SYSTEM DIAGRAM

#### COMPONENT LOCATION

#### POSITIVE CRANKCASE VENTILATION SYSTEM CHECK

#### POSITIVE CRANKCASE VENTILATION (PCV) VALVE CHECK

## **EVAPORATIVE EMISSION CONTROL SYSTEM**

GENERAL INFORMATION  
SYSTEM DIAGRAM  
COMPONENT LOCATION  
PURGE CONTROL SYSTEM CHECK  
PURGE PORT VACUUM CHECK  
EVAPORATIVE EMISSION PURGE SOLENOID  
CHECK  
VOLUME AIR FLOW SENSOR, ENGINE  
COOLANT TEMPERATURE SENSOR AND  
INTAKE AIR  
TEMPERATURE SENSOR CHECK  
AIR CONDITIONING SWITCH CHECK  
CANISTER AND TWO WAY VALVE  
REMOVAL AND INSTALLATION  
INSPECTION

## **EXHAUST GAS RECIRCULATION (EGR) SYSTEM**

GENERAL INFORMATION  
OPERATION  
SYSTEM DIAGRAM  
COMPONENT LOCATION  
EGR SYSTEM CHECK  
VACUUM CONTROL VALVE CHECK  
EGR VALVE CHECK  
EGR PORT VACUUM CHECK  
EGR SOLENOID CHECK

## **CATALYTIC CONVERTER**

GENERAL INFORMATION  
REMOVAL AND INSTALLATION  
REMOVAL SERVICE POINT  
INSPECTION

---