

# 22A MANUAL TRANSMISSION OVERHAUL

## CONTENTS

### SECTIONAL VIEW

### GENERAL SPECIFICATIONS

### SERVICE SPECIFICATIONS

### LUBRICANTS

### SEALANTS

### TORQUE SPECIFICATIONS

### FORM-IN-PLACE GASKET

### DISASSEMBLY

### SURFACE PREPARATION

### FORM-IN-PLACE GASKET APPLICATION (FIG)

### SNAP RINGS, SPACERS AND THRUST PLATE ADJUSTMENT

### SPECIAL TOOLS

TRANSMISSION

REMOVAL SERVICE POINTS

INSPECTION

PRE-ASSEMBLY ADJUSTMENTS

INSTALLATION SERVICE POINTS

INPUT SHAFT

REMOVAL SERVICE POINTS

INSPECTION

INSTALLATION SERVICE POINTS

OUTPUT SHAFT

REMOVAL SERVICE POINTS

INSPECTION

INSTALLATION SERVICE POINTS

### REVERSE IDLER GEAR

DISASSEMBLY AND REASSEMBLY

INSPECTION

### SPEEDOMETER GEAR

DISASSEMBLY AND REASSEMBLY

### SELECTOR LEVER

DISASSEMBLY AND REASSEMBLY

INSTALLATION SERVICE POINTS

### CONTROL HOUSING

DISASSEMBLY AND REASSEMBLY

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

### CLUTCH HOUSING

DISASSEMBLY AND REASSEMBLY

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

TRANSMISSION CASE

INSTALLATION SERVICE POINTS

DIFFERENTIAL

REMOVAL SERVICE POINTS

PRE-ASSEMBLY ADJUSTMENTS

INSTALLATION SERVICE POINTS