

# AUTOMATIC TRANSMISSION

## CONTENTS

### SERVICE SPECIFICATIONS

### LUBRICANT

### SPECIAL TOOLS

### TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS  
TROUBLESHOOTING

DIAGNOSIS FUNCTION

ROAD TEST

SHIFT PATTERN

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURES FOR DIAGNOSIS  
CODES

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

INSPECTION PROCEDURE FOR TROUBLE  
SYMPTOMS

SERVICE DATA REFERENCE TABLE

ACTUATOR TEST JUDGEMENT VALUE

INVECS-II CANCEL COMMAND

CHECK AT ENGINE A/T-ECU TERMINALS

OSCILLOSCOPE INSPECTION PROCEDURE

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

#### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.

## **ON-VEHICLE SERVICE**

AUTOMATIC TRANSMISSION FLUID CHECK  
OIL FILTER REPLACEMENT  
AUTOMATIC TRANSMISSION FLUID  
REPLACEMENT  
THROTTLE POSITION SENSOR ADJUSTMENT  
INHIBITOR SWITCH CONTINUITY CHECK  
INHIBITOR SWITCH AND CONTROL CABLE  
ADJUSTMENT  
A/T CONTROL COMPONENT LOCATION  
A/T CONTROL COMPONENT CHECK  
TORQUE CONVERTER STALL TEST  
HYDRAULIC PRESSURE TEST

HYDRAULIC CIRCUIT

LINE PRESSURE ADJUSTMENT

SELECTOR LEVER OPERATION CHECK

## **TRANSMISSION CONTROL**

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

SELECTOR LEVER ASSEMBLY <4 A/T>

SELECTOR LEVER ASSEMBLY <SPORTS>

## **TRANSMISSION ASSEMBLY**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

---