

# 34B REAR SUSPENSION <AWD>

## CONTENTS

### GENERAL INFORMATION

- COIL SPRING
- SHOCK ABSORBER
- CONSTRUCTION DIAGRAM

### SERVICE SPECIFICATIONS

### SPECIAL TOOLS

### ON-VEHICLE SERVICE

- REAR WHEEL ALIGNMENT CHECK AND ADJUSTMENT

### REAR SUSPENSION ASSEMBLY

- REMOVAL AND INSTALLATION
- REMOVAL SERVICE POINT
- INSPECTION
- INSTALLATION SERVICE POINT

### UPPER ARM ASSEMBLY

- REMOVAL AND INSTALLATION
- INSTALLATION SERVICE POINT
- INSPECTION

### TRAILING ARM ASSEMBLY

- REMOVAL AND INSTALLATION

### INSPECTION

### LOWER ARM AND TOE CONTROL ARM ASSEMBLIES

- REMOVAL AND INSTALLATION
- REMOVAL SERVICE POINTS
- INSPECTION
- BALL JOINT DUST COVER REPLACEMENT

### SHOCK ABSORBER ASSEMBLY

- REMOVAL AND INSTALLATION
- INSPECTION
- DISASSEMBLY AND REASSEMBLY
- DISASSEMBLY SERVICE POINT
- REASSEMBLY SERVICE POINTS

### STABILIZER BAR

- REMOVAL AND INSTALLATION
- INSTALLATION SERVICE POINTS
- INSPECTION
- BALL JOINT DUST COVER REPLACEMENT