

# 54 CHASSIS ELECTRICAL

## CONTENTS

### HOW TO READ CONFIGURATION DIAGRAMS

### HOW TO READ CIRCUIT DIAGRAMS

MARKINGS FOR CONNECTOR EARTHING

WIRE COLOUR CODES

### ABBREVIATION SYMBOLS

### SPECIAL TOOLS

### BATTERY

ON-VEHICLE SERVICE

FLUID LEVEL AND SPECIFIC GRAVITY CHECK

BATTERY INSPECTION

BATTERY CHARGING

### IGNITION SWITCH

REMOVAL AND INSTALLATION

### BODY ELECTRONICS MODULE (BEM)

### SPECIAL TOOLS

### TROUBLESHOOTING

STANDARD FLOW OF DIAGNOSIS  
TROUBLESHOOTING

DIAGNOSIS FUNCTION

### BASIC TEST MODE (BTM) PROCEDURE

FLASH CODE REFERENCE TABLE

OUTPUT TEST CHECKLIST

INPUT TEST CHECKLIST

INSPECTION CHART FOR TROUBLE  
SYMPTOMS

### IMMOBILISER

DIAGNOSIS FUNCTION

DIAGNOSIS CODES

INSPECTION CHART FOR IMMOBILISER  
SYSTEM DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS  
CODES

BEM PINOUT REFERENCE TABLE

ON-VEHICLE SERVICE

IMMOBILISER TEACHING OPTIONS

MUT-II IMMOBILISER MENU

### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

#### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

#### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.

**CRASH DETECT SENSOR - NON SRS**

REMOVAL AND INSTALLATION

**INSTALLATION SERVICE POINT**

"AACRASH DETECT SENSOR.

CRASH DETECT SENSOR TESTING

**RF TRANSMITTER**

BATTERY TESTING

BATTERY REPLACEMENT

PROGRAMMING RF TRANSMITTERS

SPEEDOMETER CHECK

TACHOMETER CHECK

FUEL GAUGE SIMPLE CHECK

FUEL GAUGE UNIT CHECK

ENGINE COOLANT TEMPERATURE GAUGE  
SIMPLE CHECKENGINE COOLANT TEMPERATURE GAUGE  
UNIT CHECK**COMBINATION METERS**

REMOVAL AND INSTALLATION

**CENTRE MESSAGE DISPLAY**

SERVICE SPECIFICATIONS

SPECIAL TOOLS

PRELIMINARY TROUBLE SYMPTOM CHECKS  
<MAGNA AND SPORTS>PRELIMINARY TROUBLE SYMPTOM CHECKS  
<VERADA>INSPECTION CHART FOR TROUBLE  
SYMPTOMS

CENTRE MESSAGE DISPLAY

REMOVAL AND INSTALLATION

CENTRE DISPLAY SETTING PROCEDURE

**EXTERIOR LAMPS**

HEADLAMPS

ON-VEHICLE SERVICE

HEADLAMP AIMING

LUMINOUS INTENSITY MEASUREMENT

HEADLAMP, POSITION LAMP ASSEMBLY AND  
FRONT TURN SIGNAL LAMP ASSEMBLY

REMOVAL AND INSTALLATION

SIDE TURN SIGNAL LAMP

REMOVAL AND INSTALLATION

FOG LAMP

FOG LAMP AIMING

REMOVAL AND INSTALLATION

REAR COMBINATION LAMP AND REAR LID  
LAMP

REMOVAL AND INSTALLATION

HIGH MOUNTED STOP LAMP

REMOVAL AND INSTALLATION

**RHEOSTAT**

REMOVAL AND INSTALLATION

**HAZARD WARNING LAMP SWITCH**

REMOVAL AND INSTALLATION

**HORN****CIGARETTE LIGHTER**

REMOVAL AND INSTALLATION

ACCESSORY SOCKET &lt;VERADA&gt;

REMOVAL AND INSTALLATION

**RADIO, TAPE PLAYER AND CD PLAYER**QUICK-REFERENCE TROUBLESHOOTING  
CHART

RADIO WITH TAPE PLAYER AND CD PLAYER

REMOVAL AND INSTALLATION

SPEAKERS

REMOVAL AND INSTALLATION

ANTENNA

REMOVAL AND INSTALLATION

ANTENNA POLE REPLACEMENT

**REAR WINDOW DEFOGGER**

ON-VEHICLE SERVICE

PRINTED-HEATER LINE CHECK

**STEERING REMOTE CONTROL AND SLIP  
RING**

REMOVAL AND INSTALLATION