

55 HEATER, AIR CONDITIONING AND VENTILATION

CONTENTS

GENERAL INFORMATION

SAFETY PRECAUTIONS

SERVICE SPECIFICATIONS

LUBRICANTS

SPECIAL TOOLS

AUTOMATIC AIR CONDITIONING

TROUBLESHOOTING

DIAGNOSIS FUNCTION

ERASING DIAGNOSIS CODES

INSPECTION CHART FOR DIAGNOSIS CODES

INSPECTION PROCEDURE FOR DIAGNOSIS
CODES

INSPECTION CHART BY TROUBLE SYMPTOM

INSPECTION PROCEDURE FOR TROUBLE
SYMPTOMS

SERVICE DATA REFERENCE TABLE

ACTUATOR TEST REFERENCE TABLE

CHECK AT THE A/C-ECU TERMINALS

MANUAL AIR CONDITIONING

TROUBLESHOOTING PROCEDURES

ON-VEHICLE SERVICE

SIGHT GLASS REFRIGERANT LEVEL TEST

MAGNETIC CLUTCH TEST

RECEIVER DRIER TEST

DUAL PRESSURE SWITCH CHECK

COMPRESSOR DRIVE BELT ADJUSTMENT

CHARGING

PERFORMANCE TEST

REFRIGERANT LEAK REPAIR

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

COMPRESSOR NOISE CHECK

POWER RELAY CHECK

IDLE-UP OPERATION CHECK

**MANUAL AIR CONDITIONING, HEATER UNIT,
HEATER CORE, BLOWER ASSEMBLY AND
COOLING UNIT**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSPECTION

BLOWER MOTOR ASSEMBLY

REMOVAL AND INSTALLATION

INSPECTION

AIR CONDITIONING CONTROLS

REMOVAL AND INSTALLATION

**AUTOMATIC AIR CONDITIONING, HEATER
UNIT, HEATER CORE, BLOWER ASSEMBLY
AND COOLING UNIT**

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSPECTION

BLOWER MOTOR ASSEMBLY

REMOVAL AND INSTALLATION

**AIR CONDITIONING CONTROL UNIT
ASSEMBLY**

REMOVAL AND INSTALLATION

INSPECTION

**DAMPER CONTROL MOTOR ASSEMBLY
AND POWER TRANSISTOR**

REMOVAL AND INSTALLATION

INSPECTION

COMPRESSOR AND TENSION PULLEY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINT

INSPECTION

DISASSEMBLY AND REASSEMBLY

DISASSEMBLY SERVICE POINTS

REASSEMBLY SERVICE POINTS

INSPECTION

REFRIGERANT LINE

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

**CONDENSER AND CONDENSER FAN
MOTOR**

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

INSPECTION

SENSORS

PHOTO SENSORS

REMOVAL AND INSTALLATION

INSPECTION

OUTSIDE AIR TEMPERATURE SENSOR

REMOVAL AND INSTALLATION

INSPECTION

HEATER WATER TEMPERATURE SENSOR

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINT

INSPECTION

VENTILATORS

REMOVAL AND INSTALLATION

VENTILATORS (AIR OUTLET)

REMOVAL AND INSTALLATION