

# GENERAL

## CONTENTS

### HOW TO USE THIS MANUAL

MAINTENANCE, REPAIR AND  
SERVICING EXPLANATIONS  
ON VEHICLE SERVICE  
INSPECTION  
DEFINITION OF TERMS  
INDICATION OF TIGHTENING TORQUE  
ABBREVIATIONS  
EXPLANATION OF MANUAL CONTENTS

### HOW TO USE TROUBLESHOOTING/INSPECTION SERVICE POINTS

TROUBLESHOOTING CONTENTS  
DIAGNOSIS FUNCTION  
HOW TO USE THE INSPECTION  
PROCEDURES  
CONNECTOR MEASUREMENT SERVICE  
POINTS

### CONNECTOR INSPECTION

INSPECTION SERVICE POINTS FOR A  
BLOWN FUSE  
POINTS TO NOTE FOR INTERMITTENT  
MALFUNCTIONS

### VEHICLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER (VIN)  
COMPLIANCE PLATE  
DATA PLATE  
AUSTRALIAN DESIGN RULES  
ENGINE MODEL NUMBER

### MAJOR SPECIFICATIONS

<VEHICLES FOR AUSTRALIA>  
<VEHICLES FOR NEW ZEALAND>  
<VEHICLES FOR PACIFIC REGION  
& BRUNEI>  
<VEHICLES FOR BRUNEI>

#### WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

##### WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

##### NOTE

Section titles with the asterisk (\*) in the table of contents in each group indicate operations requiring warnings.

## **HOW TO DIAGNOSE**

TROUBLESHOOTING STEPS  
INFORMATION FOR DIAGNOSIS  
INSPECTION  
INSPECTION INSTRUMENTS  
CHECKING SWITCHES  
CHECKING RELAYS  
CHECKING FUSES  
CABLES AND WIRES CHECK  
BATTERY HANDLING  
GENERAL ELECTRICAL SYSTEM CHECK

## **SERVICE PRECAUTIONS**

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)  
ENGINE-A/T ECU AND BEM  
SERVICE REQUIREMENTS  
SERVICING THE ELECTRICAL SYSTEM  
VEHICLE WASHING  
MUT-II

## **TOWING AND HOISTING**

TOWING RECOMMENDATION  
LIFTING, JACKING SUPPORT LOCATION

## **TIGHTENING TORQUE**

---