

00 GENERAL

CONTENTS

HOW TO USE THIS MANUAL

MAINTENANCE, REPAIR AND
SERVICING EXPLANATIONS

ON VEHICLE SERVICE

INSPECTION

DEFINITION OF TERMS

INDICATION OF TIGHTENING TORQUE

ABBREVIATIONS

EXPLANATION OF MANUAL CONTENTS

HOW TO USE TROUBLESHOOTING/ INSPECTION SERVICE POINTS

TROUBLESHOOTING CONTENTS

DIAGNOSIS FUNCTION

HOW TO USE THE INSPECTION
PROCEDURES

CONNECTOR MEASUREMENT SERVICE
POINTS

CONNECTOR INSPECTION

INSPECTION SERVICE POINTS FOR A
BLOWN FUSE

POINTS TO NOTE FOR INTERMITTENT
MALFUNCTIONS

VEHICLE IDENTIFICATION

VEHICLE IDENTIFICATION NUMBER (VIN)

COMPLIANCE PLATE

DATA PLATE

AUSTRALIAN DESIGN RULES

ENGINE MODEL NUMBER

OPTION CODES

DATA PLATE

MAJOR SPECIFICATIONS

<VEHICLES FOR AUSTRALIA>

<VEHICLES FOR NEW ZEALAND>

<VEHICLES FOR PACIFIC REGION & BRUNEI>

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

HOW TO DIAGNOSE

TROUBLESHOOTING STEPS

INFORMATION FOR DIAGNOSIS

INSPECTION

INSPECTION INSTRUMENTS

CHECKING SWITCHES

CHECKING RELAYS

CHECKING FUSES

CABLES AND WIRES CHECK

BATTERY HANDLING

GENERAL ELECTRICAL SYSTEM CHECK

SERVICE PRECAUTIONS

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

ENGINE-A/T ECU AND BEM/IMMOBILISER
SERVICE REQUIREMENTS

SERVICING THE ELECTRICAL SYSTEM

VEHICLE WASHING

MUT-II

TOWING AND HOISTING (2WD)

TOWING RECOMMENDATION

TOWING AND HOISTING (AWD)

TOWING RECOMMENDATION

LIFTING, JACKING SUPPORT LOCATION

TIGHTENING TORQUE
