

13A MULTIPPOINT FUEL INJECTION (MPI)

CONTENTS

GENERAL INFORMATION

GENERAL SPECIFICATIONS

MULTIPPOINT FUEL INJECTION (MPI) SYSTEM
DIAGRAM

MULTIPPOINT FUEL INJECTION (MPI) SYSTEM
DIAGRAM <WITH TCL>

SERVICE SPECIFICATIONS

SEALANT

SPECIAL TOOLS

TROUBLESHOOTING

DIAGNOSIS TROUBLESHOOTING FLOW

DIAGNOSIS FUNCTION

FAIL-SAFE FUNCTION REFERENCE TABLE

TROUBLESHOOTING

INSPECTION CHART FOR DIAGNOSIS

INSPECTION CHART FOR TROUBLE
SYMPTOMS

PROBLEM SYMPTOMS TABLE
(FOR YOUR INFORMATION)

INSPECTION PROCEDURE FOR
TROUBLE SYMPTOMS

DATA LIST REFERENCE TABLE

ACTUATOR TEST REFERENCE TABLE

CHECK AT THE ENGINE A/T-ECU TERMINALS

ON-VEHICLE SERVICE

THROTTLE BODY (THROTTLE VALVE AREA)
CLEANING

CLOSED THROTTLE POSITION SWITCH AND
THROTTLE POSITION SENSOR ADJUSTMENT
<Vehicles without TCL>

THROTTLE POSITION SENSOR ADJUSTMENT
<Vehicles with TCL>

CLOSED THROTTLE POSITION SWITCH AND
ACCELERATOR PEDAL POSITION SENSOR
ADJUSTMENT
<Vehicles with TCL>

FIXED SAS ADJUSTMENT

BASIC IDLE SPEED ADJUSTMENT

FUEL PRESSURE TEST

FUEL PUMP CONNECTOR DISCONNECTION
(HOW TO REDUCE PRESSURISED FUEL
LINES)

FUEL PUMP OPERATION CHECK

INSPECTION OF MPI COMPONENTS

COMPONENT LOCATION

MPI CONTROL RELAY AND FUEL PUMP
RELAY CONTINUITY CHECK

INTAKE AIR TEMPERATURE SENSOR CHECK

ENGINE COOLANT TEMPERATURE SENSOR
CHECK

THROTTLE POSITION SENSOR CHECK

ACCELERATOR PEDAL POSITION SENSOR
CHECK (Vehicles with TCL)

CLOSED THROTTLE POSITION SWITCH
CHECK <Vehicles without TCL>

CLOSED THROTTLE POSITION SWITCH
CHECK (Vehicles with TCL)

OXYGEN SENSOR CHECK

INJECTOR CHECK

IDLE SPEED CONTROL (ISC) SERVO
(STEPPER MOTOR) CHECK

CHECKING COIL RESISTANCE AND
OPERATION

PURGE CONTROL SOLENOID VALVE CHECK

EGR CONTROL SOLENOID VALVE CHECK

VENTILATION CONTROL SOLENOID VALVE
CHECK <Vehicles with TCL>

VACUUM CONTROL SOLENOID VALVE CHECK
<Vehicles with TCL>

VACUUM TANK CHECK
<Vehicles with TCL>

VACUUM ACTUATOR CHECK
<Vehicles with TCL>

THROTTLE VALVE OPERATION CHECK
<Vehicles with TCL>

NEGATIVE PRESSURE CHECK DURING
TRACTION CONTROL OPERATION
<Vehicles with TCL>

INJECTOR

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

THROTTLE BODY

REMOVAL AND INSTALLATION
<Vehicles without traction control, with cruise
control>

<Vehicles with traction control and cruise control>

INSTALLATION SERVICE POINT

DISASSEMBLY AND REASSEMBLY
<Vehicles without traction control, with cruise
control>

<Vehicles with traction control, and cruise
control>

CLEANING THROTTLE BODY PARTS

REASSEMBLY SERVICE POINT

IDLE SPEED CONTROL (ISC) SERVO
(STEPPER MOTOR)

CHECKING THE COIL RESISTANCE

OPERATIONAL CHECK