

# 17 ENGINE AND EMISSION CONTROL

## CONTENTS

### ENGINE CONTROL SYSTEM

#### GENERAL INFORMATION

#### SERVICE SPECIFICATIONS

#### ON-VEHICLE SERVICE

#### ACCELERATOR CABLE AND PEDAL

#### INSTALLATION SERVICE POINT

#### CRUISE CONTROL SYSTEM

#### GENERAL INFORMATION

##### CONSTRUCTION DIAGRAM

#### SERVICE SPECIFICATIONS

#### SPECIAL TOOLS

#### TROUBLESHOOTING

#### DATA LIST REFERENCE TABLE

#### ON-VEHICLE SERVICE

##### CRUISE CONTROL SYSTEM OPERATION CHECK

##### CRUISE CONTROL COMPONENT CHECK

#### CRUISE CONTROL

### EMISSION CONTROL SYSTEM

#### GENERAL INFORMATION

#### EMISSION CONTROL DEVICE REFERENCE TABLE

#### SERVICE SPECIFICATIONS

### SPECIAL TOOL

#### VACUUM HOSE

##### VACUUM HOSE PIPING DIAGRAM

##### VACUUM CIRCUIT DIAGRAM

##### VACUUM HOSE INSTALLATION

##### VACUUM HOSE INSPECTION

### CRANKCASE EMISSION CONTROL SYSTEM

#### GENERAL INFORMATION

#### SYSTEM DIAGRAM

#### COMPONENT LOCATION

##### POSITIVE CRANKCASE VENTILATION SYSTEM CHECK

##### POSITIVE CRANKCASE VENTILATION (PCV) VALVE CHECK

### EVAPORATIVE EMISSION CONTROL SYSTEM

#### GENERAL INFORMATION

#### SYSTEM DIAGRAM

#### COMPONENT LOCATION

##### PURGE CONTROL SYSTEM CHECK

##### PURGE PORT VACUUM CHECK

##### EVAPORATIVE EMISSION PURGE SOLENOID CHECK

##### VOLUME AIR FLOW SENSOR, ENGINE COOLANT TEMPERATURE SENSOR AND INTAKE AIR TEMPERATURE SENSOR CHECK

CANISTER AND TWO WAY VALVE  
REMOVAL AND INSTALLATION  
INSPECTION

**EXHAUST GAS RECIRCULATION (EGR)  
SYSTEM**

GENERAL INFORMATION  
OPERATION  
SYSTEM DIAGRAM  
COMPONENT LOCATION  
EGR SYSTEM CHECK

VACUUM CONTROL VALVE CHECK  
EGR VALVE CHECK  
EGR PORT VACUUM CHECK  
EGR SOLENOID CHECK

**CATALYTIC CONVERTER**

GENERAL INFORMATION  
REMOVAL AND INSTALLATION <2WD>  
REMOVAL AND INSTALLATION <AWD>  
REMOVAL SERVICE POINT  
INSPECTION

---