

22B MANUAL TRANSMISSION OVERHAUL

CONTENTS

SECTIONAL VIEW

GENERAL SPECIFICATIONS

SERVICE SPECIFICATIONS

LUBRICANTS

SEALANTS

TORQUE SPECIFICATIONS

FORM-IN-PLACE GASKET

DISASSEMBLY

SURFACE PREPARATION

FORM-IN-PLACE GASKET APPLICATION (FIPG)

SNAP RINGS, SPACERS AND THRUST PLATE ADJUSTMENT

SPECIAL TOOLS

TRANSMISSION

REMOVAL SERVICE POINTS

INSPECTION

PRE-ASSEMBLY ADJUSTMENTS

INSTALLATION SERVICE POINTS

INPUT SHAFT

REMOVAL SERVICE POINTS

INSPECTION

INSTALLATION SERVICE POINTS

OUTPUT SHAFT

REMOVAL SERVICE POINTS

INSPECTION

INSTALLATION SERVICE POINTS

REVERSE IDLER GEAR

DISASSEMBLY AND REASSEMBLY

INSPECTION

SPEEDOMETER GEAR

DISASSEMBLY AND REASSEMBLY

SELECTOR LEVER

DISASSEMBLY AND REASSEMBLY

INSTALLATION SERVICE POINTS

CONTROL HOUSING

DISASSEMBLY AND REASSEMBLY

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

CLUTCH HOUSING

DISASSEMBLY AND REASSEMBLY

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

TRANSMISSION CASE

INSTALLATION SERVICE POINTS

DIFFERENTIAL

REMOVAL SERVICE POINTS

PRE-ASSEMBLY ADJUSTMENTS

INSTALLATION SERVICE POINTS