

# 23D AUTOMATIC TRANSMISSION OVERHAUL

## CONTENTS

### GENERAL INFORMATION

SECTIONAL VIEW  
HYDRAULIC CIRCUIT

### SPECIFICATIONS

GENERAL SPECIFICATIONS  
SERVICE SPECIFICATIONS  
VALVE BODY SPRING IDENTIFICATION TABLE  
SNAP RING, SPACER, THRUST WASHER,  
THRUST RACE AND PRESSURE PLATE FOR  
ADJUSTMENT  
TORQUE SPECIFICATIONS  
SEALANTS

### SPECIAL TOOLS

### FORM-IN-PLACE GASKET

### DISASSEMBLY

### SURFACE PREPARATION

### FORM-IN-PLACE GASKET APPLICATION (FIPG)

### TRANSMISSION

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY  
REASSEMBLY

### OIL PUMP

DISASSEMBLY AND REASSEMBLY  
REASSEMBLY SERVICE POINTS

### UNDERDRIVE CLUTCH AND INPUT SHAFT

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINT  
REASSEMBLY SERVICE POINTS

### REVERSE AND OVERDRIVE CLUTCH

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINT  
REASSEMBLY SERVICE POINTS

### DIRECT CLUTCH

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINT  
REASSEMBLY SERVICE POINTS

### PLANETARY CARRIER ASSEMBLY

DISASSEMBLY AND REASSEMBLY  
REASSEMBLY SERVICE POINTS

### LOW-REVERSE BRAKE

DISASSEMBLY AND REASSEMBLY  
REASSEMBLY SERVICE POINT

**SECOND BRAKE**

DISASSEMBLY AND REASSEMBLY  
REASSEMBLY SERVICE POINT

**DIRECT PLANETARY CARRIER**

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINTS  
ASSEMBLY SERVICE POINTS

**DIFFERENTIAL**

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINTS  
REASSEMBLY SERVICE POINTS

**VALVE BODY**

DISASSEMBLY AND REASSEMBLY  
DISASSEMBLY SERVICE POINT  
REASSEMBLY SERVICE POINTS

**REDUCTION BRAKE PISTON**

DISASSEMBLY AND REASSEMBLY

**SPEEDOMETER GEAR**

DISASSEMBLY AND REASSEMBLY

**DRIVE SHAFT OIL SEAL**

DISASSEMBLY AND REASSEMBLY  
REASSEMBLY SERVICE POINT