

23E AUTOMATIC TRANSMISSION W5A51 <AWD>

CONTENTS

GENERAL SPECIFICATIONS

SERVICE SPECIFICATIONS

LUBRICANT

SPECIAL TOOLS

ON-VEHICLE SERVICE

AUTOMATIC TRANSMISSION FLUID CHECK

AUTOMATIC TRANSMISSION FLUID
REPLACEMENT

TRANSFER CASE OIL CHECK

TRANSFER CASE OIL REPLACEMENT

SELECTOR LEVER OPERATION CHECK

KEY INTERLOCK STRUCTURE CHECK

SHIFT LOCK STRUCTURE CHECK

TRANSMISSION CONTROL

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

SELECTOR LEVER ASSEMBLY

CHECKING MANUAL CONTROL SWITCH
ASSEMBLY CIRCUIT.

TRANSMISSION SHIFT LOCK

REMOVAL AND INSTALLATION

TRANSMISSION SHIFT LOCK

TRANSMISSION ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

INSTALLATION SERVICE POINTS

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) If it is possible that the SRS components are subjected to heat over 93°C in baking or drying after painting, remove the SRS components (air bag module and SRS-ECU) beforehand.
- (3) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorised MITSUBISHI dealer.
- (4) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its GROUP 52B – Supplemental Restraint System (SRS) and GROUP 00 – Maintenance Service before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

Section titles with the asterisk (*) in the table of contents in each group indicate operations requiring warnings.

TRANSFER ASSEMBLY

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINTS

GENERAL INFORMATION

CONSTRUCTION DIAGRAM

POWER TRAIN